

Smarter. Greener. Together.

Industrial Automation Headquarters

Delta Electronics, Inc.

Taoyuan Technology Center No.18, Xinglong Rd., Taoyuan District,

Taoyuan City 33068, Taiwan
TEL: 886-3-362-6301 / FAX: 886-3-371-6301

Asia

Delta Electronics (Shanghai) Co., Ltd.

No.182 Minyu Rd., Pudong Shanghai, P.R.C. Post code: 201209 TEL: 86-21-6872-3988 / FAX: 86-21-6872-3996

Customer Service: 400-820-9595

Delta Electronics (Japan), Inc.

Tokyo Office

Industrial Automation Sales Department 2-1-14 Shibadaimon, Minato-ku

Tokyo, Japan 105-0012

TEL: 81-3-5733-1155 / FAX: 81-3-5733-1255

Delta Electronics (Korea), Inc.

Seoul Office

1511, 219, Gasan Digital 1-Ro., Geumcheon-gu,

Seoul, 08501 South Korea

TEL: 82-2-515-5305 / FAX: 82-2-515-5302

Delta Energy Systems (Singapore) Pte Ltd.

4 Kaki Bukit Avenue 1, #05-04, Singapore 417939

TEL: 65-6747-5155 / FAX: 65-6744-9228

Delta Electronics (India) Pvt. Ltd.

Plot No.43, Sector 35, HSIIDC Gurgaon,

PIN 122001, Haryana, India

TEL: 91-124-4874900 / FAX : 91-124-4874945

Delta Electronics (Thailand) PCL.

909 Soi 9, Moo 4, Bangpoo Industrial Estate (E.P.Z),

Pattana 1 Rd., T.Phraksa, A.Muang,

Samutprakarn 10280, Thailand TEL: 66-2709-2800 / FAX: 662-709-2827

Delta Electronics (Australia) Pty Ltd.Unit 20-21/45 Normanby Rd., Notting Hill Vic 3168, Australia

TEL: 61-3-9543-3720

Americas

Delta Electronics (Americas) Ltd.

Raleigh Office

P.O. Box 12173, 5101 Davis Drive,

Research Triangle Park, NC 27709, U.S.A.

TEL: 1-919-767-3813 / FAX: 1-919-767-3969

Delta Greentech (Brasil) S/A

São Paulo Office

Rua Itapeva, 26 – 3° Andar - Bela Vista CEP: 01332-000 – São Paulo – SP - Brasil

TEL: 55-11-3530-8643 / 55-11-3530-8640

Delta Electronics International Mexico S.A. de C.V.

Mexico Office

Gustavo Baz No. 309 Edificio E PB 103 Colonia La Loma, CP 54060

Tlalnepantla, Estado de México

TEL: 52-55-3603-9200

DELTA_IA-MDS_VFD-EL-W_UM_EN_20200729

*We reserve the right to change the information in this catalogue without prior notice.

EMEA

Headquarters: Delta Electronics (Netherlands) B.V.

Sales: Sales.IA.EMEA@deltaww.com

Marketing: Marketing.IA.EMEA@deltaww.com

Technical Support: iatechnicalsupport@deltaww.com Customer Support: Customer-Support@deltaww.com

Service: Service.IA.emea@deltaww.com

TEL: +31(0)40 800 3900

BENELUX: Delta Electronics (Netherlands) B.V.

De Witbogt 20, 5652 AG Eindhoven, The Netherlands

Mail: Sales.IA.Benelux@deltaww.com

TEL: +31(0)40 800 3900

DACH: Delta Electronics (Netherlands) B.V.

Coesterweg 45, D-59494 Soest, Germany Mail: Sales.IA.DACH@deltaww.com

TEL: +49(0)2921 987 0

France: Delta Electronics (France) S.A.

ZI du bois Challand 2,15 rue des Pyrénées,

Lisses, 91090 Evry Cedex, France Mail: Sales.IA.FR@deltaww.com

TEL: +33(0)1 69 77 82 60

Iberia: Delta Electronics Solutions (Spain) S.L.U

Ctra. De Villaverde a Vallecas, 265 1º Dcha Ed.

Hormigueras – P.I. de Vallecas 28031 Madrid

TEL: +34(0)91 223 74 20

Carrer Llacuna 166, 08018 Barcelona, Spain Mail: Sales.IA.Iberia@deltaww.com

Wall. Gales.i/ Liberia@deltaww.som

Italy: Delta Electronics (Italy) S.r.l. Via Meda 2–22060 Novedrate(CO)

Piazza Grazioli 18 00186 Roma Italy

Mail: Sales.IA.Italy@deltaww.com

TEL: +39 039 8900365

Russia: Delta Energy System LLC

Vereyskaya Plaza II, office 112 Vereyskaya str.

17 121357 Moscow Russia

Mail: Sales.IA.RU@deltaww.com

TEL: +7 495 644 3240

Turkey: Delta Greentech Elektronik San. Ltd. Sti. (Turkey)

Şerifali Mah. Hendem Cad. Kule Sok. No:16-A

34775 Ümraniye – İstanbul

Mail: Sales.IA.Turkey@deltaww.com

TEL: + 90 216 499 9910

GCC: Delta Energy Systems AG (Dubai BR)

P.O. Box 185668, Gate 7, 3rd Floor, Hamarain Centre

Dubai, United Arab Emirates

Mail: Sales.IA.MEA@deltaww.com

TEL: +971(0)4 2690148

Egypt + North Africa: Delta Electronics

Unit 318, 3rd Floor, Trivium Business Complex, North 90 street,

New Cairo, Cairo, Egypt

Mail: Sales.IA.MEA@deltaww.com





Delta Sensorless Vector Control Compact Drive VFD-EL-W Series User Manual





Copyright notice

©Delta Electronics, Inc. All rights reserved.

All information contained in this user manual is the exclusive property of Delta Electronics Inc. (hereinafter referred to as "Delta") and is protected by copyright law and all other laws. Delta retains the exclusive rights of this user manual in accordance with the copyright law and all other laws. No parts in this manual may be reproduced, transmitted, transcribed, translated or used in any other ways without the prior consent of Delta.

Limitation of Liability

The contents of this user manual are only for the use of the AC motor drives manufactured by Delta. Except as defined in special mandatory laws, Delta provides this user manual "as is" and does not offer any kind of warranty through this user manual for using the product, either express or implied, including but not limited to the following: (i) this product will meet your needs or expectations; (ii) the information contained in the product is current and correct; (iii) the product does not infringe any rights of any other person. You shall bear your own risk to use this product.

In no event shall Delta, its subsidiaries, affiliates, managers, employees, agents, partners and licensors be liable for any direct, incidental, special, derivative or consequential damages (including but not limited to the damages for loss of profits, goodwill, use or other intangible losses) unless the laws contains special mandatory provisions to the contrary.

Delta reserves the right to make changes to the user manual and the products described in the user manual without prior notice and afterwards.

Thank you for choosing DELTA's sensorless vector control compact drive VFD-EL-W series. The VFD-EL-W series are manufactured with high-quality components and materials and incorporate the latest microprocessor technology available.

Use this manual for the AC Motor Drive installation, parameter setting, troubleshooting, and daily maintenance. To guarantee safe operation, read the following safety guidelines before connecting power to the AC motor drive. Keep this user manual at hand and distribute to all users for reference.

To ensure the safety of operators and equipment, only qualified personnel familiar with AC motor drive are to do installation, start-up and maintenance. Always read this manual thoroughly before using VFD-EL-W series AC Motor Drive, especially the DANGER, WARNING and CAUTION notes. Failure to comply may result in personal injury and equipment damage. If you have any questions, please contact your dealer.

PLEASE READ PRIOR TO INSTALLATION FOR SAFETY.



- ☑ Disconnect AC input power before connecting any wiring to the AC motor drive.
- ☑ Even if the power has been turned off, a charge may still remain in the DC-link capacitors with hazardous voltages before the indicator on the digital keypad is OFF. Do NOT touch the internal circuits and components.
- ☐ There are highly sensitive CMOS IC components on the motor drive's printed circuit boards. These components are especially sensitive to static electricity. Take anti-static measure before touching these components or the circuit boards.
- ☑ Never modify the internal components or wiring.
- ☑ Ground the AC motor drive by using the ground terminal. The grounding method must comply with the laws of the country where the AC motor drive is to be installed.
- ☑ Use the VFD-EL-W series to control only variable speed three-phase induction motors. The VFD-EL-W is NOT for controlling one-phase motors or for other purposes.
- ☑ Do NOT use the VFD-EL-W series for life support equipment or any life safety situation.
- ☑ To prevent personal injury, keep children and unqualified people away from the equipment.



- ✓ Never connect the AC motor drive output terminals U/T1, V/T2, and W/T3 directly to the AC mains circuit power supply.
- ☑ DO NOT use a Hi-Pot test for internal components. The semiconductors used in the AC motor drive are easily damaged by high-voltage.
- ☑ Even if the three-phase AC motor is stopped, a charge with hazardous voltages may still remain in the main circuit terminals of the AC motor drive
- ☑ Only qualified persons are allowed to install, wire and maintain the AC motor drives.
- ☑ When the AC motor drive uses the external terminal as the source of the operation command, the motor may run immediately after applying power. At this time, it is dangerous if people are at the scene.

į



- ☑ DO NOT install the AC motor drive in a location subject to high temperature, direct sunlight, high humidity, or splash of water droplets.
- ☑ Use the AC motor drives only within specification. Failure to comply may result in fire, explosion or electric shock.
- When the motor cable between AC motor drive and motor is too long, the insulation layer of the motor may be damaged. Use a frequency inverter-duty motor or add an AC output reactor to prevent damage to the motor. Refer to Appendix B "Reactor" for details.
- The rated voltage of power system to install motor drives is listed below. Ensure that the installation voltage is in the correct range when installing a motor drive.
 - 1. For 230V models, the range is between 180V~264V
 - 2. For 460V models, the range is between 342V~528V
- The performance of electrolytic capacitor will degrade if it is not charged for a long time. It is recommended to charge the drive which is stored in no charge condition every 2 years for 3~4 hours to restore the performance of electrolytic capacitor in the motor drive. Note: When power up the motor drive, use adjustable AC power source (ex. AC autotransformer) to charge the drive at 70%~80% of rated voltage for 30 minutes (do not run the motor drive). Then charge the drive at 100% of rated voltage for an hour (do not run the motor drive). By doing these, restore the performance of electrolytic capacitor before starting to run the motor drive. Do NOT run the motor drive at 100% rated voltage right away.
- ☑ Pay attention to the following precautions when transporting and installing this package (including wooden crate and wood stave)
 - If you need to deworm the wooden crate, do NOT use fumigation or you will damage the drive. Any damage to the drive caused by using fumigation voids the warranty.
 - 2. Use other methods, such as heat treatment or any other non-fumigation treatment, to deworm the wood packaging material.
 - 3. If you use heat treatment to deworm, leave the packaging materials in an environment of over 56°C for a minimum of thirty minutes.
- ☐ If the motor drive generates leakage current goes over AC 3.5 mA or over DC 10 mA on a protective earth (PE) conductor, the PE conductor must be a copper wire with a cross section of minimum 10mm² or an aluminum wire with a cross section of at least 16mm². You can also install an earth-leakage circuit breaker (ELCB).

NOTE

- In order to explain the details of the product, the outer casing or the safety cover is removed and described as a figure. During operation, it is necessary to install the casing and wiring in accordance with the regulations, and operate according to the instructions to ensure safety.
- The figures shown in the manual, for the convenience of explanation, may be slightly different from the product. This is normal and does not affect your customer rights.
- The content of this manual may be revised without prior notice. Please consult our distributors or download the latest version at http://www.deltaww.com/iadownload_acmotordrive

ii

Table of Contents

Preface	i
Table of Contents	iii
Chapter 1 Introduction	1-1
1.1 Receiving and Inspection	1-1
1.1.1 Nameplate Information	1-1
1.1.2 Model Name	
1.1.3 Serial Number	
1.1.4 Drive Frames and Appearances	1-3
1.2 Preparation for Installation and Wiring	1-7
1.2.1 Ambient Conditions	1-7
1.3 Dimensions	1-11
Chapter 2 Installation and Wiring	2-1
2.1 Wiring	2-2
2.2 External Wiring	
2.3 Main Circuit	2-7
2.3.1 Main Circuit Connection	2-7
2.3.2 Main Circuit Terminals	2-8
2.4 Control Terminals	2-9
2.5 NPN / PNP Mode	2-12
Chapter 3 Keypad and Start Up	3-1
3.1 Description of the Digital Keypad	
3.2 Operation Method	
3.3 Trial Run	
Chapter 4 Parameters	4-1
4.1 Summary of Parameter Settings	4-2
4.2 Parameter Settings for Applications	4-23
4.3 Description of Parameter Settings	4-27
Chapter 5 Troubleshooting	5-1
5.1 Over-Current (oc)	
5.2 Over-Voltage (ov)	5-3
5.3 Low Voltage (Lv)	5-4
5.4 Overheat (oH1)	5-5
5.5 Overload (oL)	
5.6 Keypad Display is Abnormal	5-7
5.7 Phase Loss (PHL)	5-7
5.8 Motor Does Not Run	5-8
5.9 Motor Speed Cannot be Changed	5-9

5.10 Motor Stalls During Acceleration	5-10
5.11 The Motor Does Not Run as Expected	5-10
5.12 Electromagnetic/Induction Noise	5-11
5.13 Operating Environment Condition	5-11
5.14 Affecting Other Machines	5-12
Chapter 6 Fault Code Information and Maintenance	6-1
6.1 Fault Code Information	6-2
6.2 Maintenance and Inspections	6-6
Appendix A Specifications	A-1
Appendix B Accessories	B-1
B.1 Non-fuse Circuit Breaker Chart	B-1
B.2 Reactor	B-2
B.2.1 AC Reactor	B-2
B.2.2 Zero Phase Reactor	B-4
B.3 Digital Keypad	B-5
B.3.1 VFD-PU06	B-5
B.3.2 VFD-PU08 and VFD-PU08V	B-8
B.4 Optional Fan Kit	B-10
Appendix C How to Select the Right AC Motor Drive	C-1
C.1 Capacity Formulas	C-2
C.2 General Precaution	C-4
C.3 How to Choose a Suitable Motor	C-5

Application

Firmware V2.00 Issue Date 2020/07

This page intentionally left blank

٧

- 1.1 Receiving and Inspection
- 1.2 Preparation for Installation and Wiring
- 1.3 Dimensions

Keep the AC motor drive in the shipping carton or crate before installation. In order to retain the warranty coverage, properly store the AC motor drive when it is not to be used for an extended period of time. The proper storage conditions are listed below.



- 1. Store in a clean and dry location without any direct sunlight or corrosive fumes.
- 2. Store in an ambient temperature range between -20°C to +60°C.
- 3. Store in a relative humidity range between 0% to 90% and non-condensing environment.
- 4. DO NOT place directly on the ground. If the surrounding environment is humid, you should put a desiccant in the carton or crate.
- 5. DO NOT store in an area with rapid changes in temperature that may cause condensation or frost to form.
- 6. If the AC motor drive is stored for more than three months, the temperature should not be higher than 30°C. Storage for longer than one year is not recommended; it could result in the degradation of the electrolytic capacitors.
- 7. When the AC motor drive is not used for long time after installation in an environment with humidity and dust, it's best to move the AC motor drive to a better environment as stated above.


1.1 Receiving and Inspection

This VFD-EL-W AC motor drive has gone through rigorous quality control tests at the factory before shipment. After receiving the AC motor drive, please check for the following:


- Inspect the unit to ensure it was not damaged during shipment.
- Make sure that the part number indicated on the nameplate matches the part number of your order.

1.1.1 Nameplate Information


Example for 1 HP/0.75 kW three-phase 230V AC motor drive

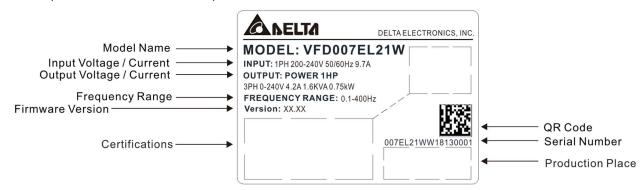

1.1.2 Model Name

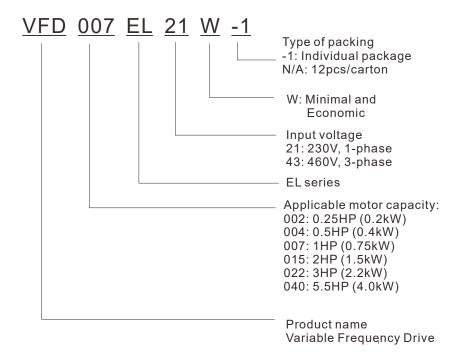


1.1.3 Serial Number

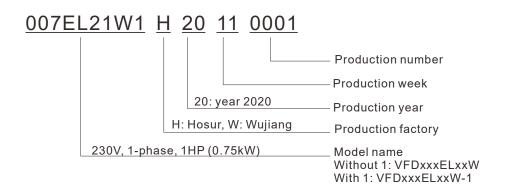


If the nameplate information does not match your purchase order or if there are any problems, please contact your distributor.

1.1.4 Drive Frames and Appearances


Frame A1

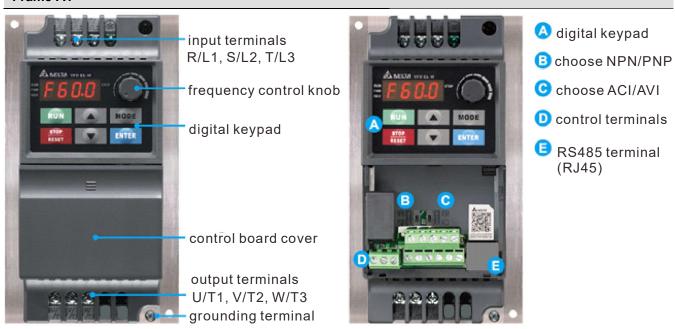

Frame A2

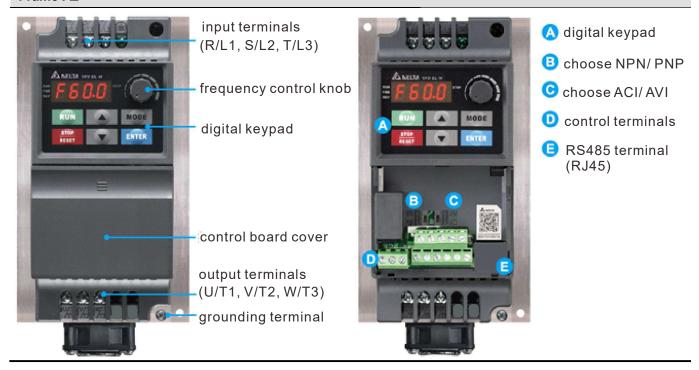

Frame B

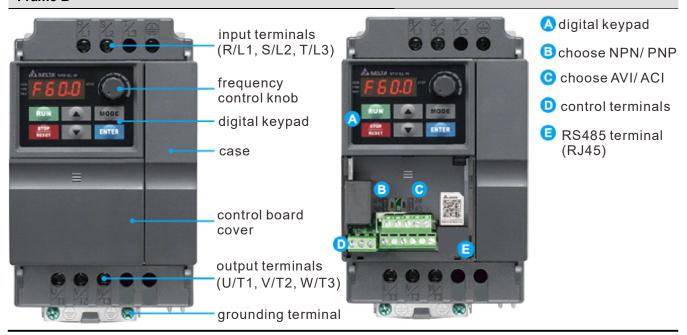

RFI Jumper Location





If it is required by the grounding system or the current leakage is too big and causes tripping, you can remove RFI jumper which is near the input terminals (R/L1, S/L2, T/L3) by loosing screws. Once you remove the RFI jumper, retighten the screws to keep good grounding to prevent electric shock.

Frame	Power Range	Models
A 1	0.25 - 1hp (0.2 - 0.75kW)	VFD002EL21W(-1), VFD004EL21W(-1) / 43W(-1), VFD007EL21W(-1) / 43W(-1),
A2	2 HP (1.5 kW)	VFD015EL43W(-1)
В	2–5.5 HP (1.5–4 kW)	VFD015EL21W(-1), VFD022EL21W / 43W(-1), VFD040EL43W(-1)

RFI Jumper

- (1) In the drive there are Varistor / MOVs, which are connected from phase to phase and from phase to ground, to protect the drive against mains surges or voltage spikes.
 Because the Varistors / MOVs from phase to ground are connected to ground via the RFI jumper, the protection will be ineffective when the RFI jumper is removed.
- (2) In the models with built-in EMC filter the RFI jumper connects the filer capacitors to ground to form a return path for high frequency noise to isolate the noise from contaminating the main power. Removing the RFI jumper strongly reduces the effect of the built-in EMC filter.

Isolating main power from ground:

When the power distribution system for the motor drive is a floating ground system (IT) or an asymmetric ground system (TN), you must remove the RFI jumper. Removing the RFI jumper disconnects the internal capacitors from ground to avoid damaging the internal circuits and to reduce the ground leakage current.

Important points regarding ground connection

- ☑ Do not remove RFI jumper while the power is ON.
- ☑ Make sure that main power is OFF before removing the RFI jumper.
- ☑ Removing the RFI jumper also cuts off the built-in EMC filter capacitors. Compliance with the EMC specifications is no longer guaranteed.

If you remove the RFI jumper, you remove the reliable electrical isolation. In other words, all controlled inputs and outputs become low-voltage terminals with basic electrical isolation. Also, when you remove the internal RFI jumper, the motor drive is no longer electromagnetic compatible (EMC).

- ☑ Do not remove the RFI jumper if the main power is a grounded power system to make EMC filter effective
- ☑ You must remove the RFI jumper when conducting high voltage tests. When conducting a high voltage test for the entire facility, disconnect the main power and the motor if the leakage current is too high.
- $\ensuremath{\square}$ To prevent damage to the drive, you must remove the RFI jumper connected to ground if the AC motor drive is installed on an ungrounded power system or a high resistance-grounded (greater than 30 Ω) power system or a corner grounded TN system.

Remove the control board cover

As shown in Step 1 below, gently press the control board cover. Then,

as shown in Step 2, pull it down slowly to remove it.



Step 1



Step2

Remove cooling fan:

To remove the cooling fan of Frame B, gently release the clips on both sides of the cooling fan.




1.2 Preparation for Installation and Wiring


1.2.1 Ambient Conditions

Install the AC motor drive in an environment with the following conditions.

	Temperature	-10°C to 50°C (VFD007EL21W & VFD007EL21W-1, fan required). After you install an optional cooling fan, you can increase the operating temperature of these two models up to 50°C without derating.	
	Relative Humidity	< 90%, non-condensing	
Operation	Atmospheric pressure	86–106 kPa	
	Installation Site Altitude	<1000 m	
	Vibration	1.0 mm, peak-to-peak value: from 2–13.2 Hz; 0.7–1.0 G, from 13.2–55 Hz; 1.0 G, from 55–512 Hz; compliance with IEC 60068-2-6 standard.	
	Temperature	-20°C to 60°C (-4°F to 140°F)	
0.	Relative Humidity	< 90%, non-condensing	
Storage and	Atmospheric pressure	86–106 kPa	
Transportation	Vibration	1.0 mm, peak-to-peak value: from 2–13.2 Hz; 0.7–1.0 G, from 13.2–55 Hz; 1.0 G, from 55–512 Hz; compliance with IEC 60068-2-6 standard.	
Pollution Degree	2: good for a factory type environment.		


Minimum Mounting Clearance

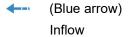


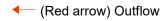



← (Black) Distance


Single Drive Installation

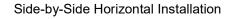

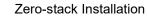

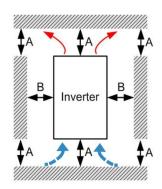

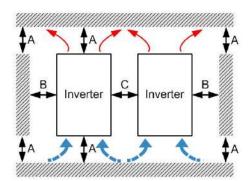

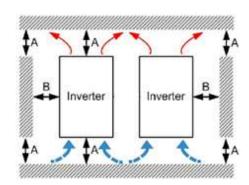


		Minimu	ım Distano	e (mm)	Tempera	ature °C
Model Name	Installation Method	A	В	C Note 1	Max.(Derating is not required) Note 3	Max.(Derating is required)
VFD002EL21W(-1)	Single Drive	120	50	-	50	60
VFD004EL21W(-1)	Side-by-Side Horizontal	120	50	30	50	60
VFD004EL43W(-1)	Zero-stack Note 2	-	-	-	-	-
	Single Drive	120	50	-	50 Note 4	60
VFD007EL21W(-1)	Side-by-Side Horizontal	120	50	30	50 Note 4	60
	Zero-stack Note 2		-	-	-	-
	Single Drive	120	50	-	50	60
VFD007EL43W(-1) VFD015EL43W(-1)	Side-by-Side Horizontal	120	50	30	50	60
	Zero-stack	-	-	-	-	-
VFD015EL21W(-1)	Single Drive	150	50	-	50	60
VFD022EL21W(-1) VFD022EL43W(-1)	Side-by-Side Horizontal	150	50	30	50	60
VFD040EL43W(-1)	Zero-stack	150	50	0	40	50



- 1. Due to a small protruding part of the heat-sink at the bottom of the Frame A1/ A2, we calculate the distance C for the side-by-side horizontal installation according to the main part of the motor drive only.
- 2. Frame A1 and A2 does not support zero-stack installation, whereas Frame B supports zero-stack installation.
- 3. Running the drive continuously with full load by the ambient temperature listed in the "Max. (Derating is not requiered)" column reduces the drive's life span.
- 4. After installing a cooling fan to VFD007EL21W(-1), the operating temperature of this model is as shown in the table above. When VFD007EL21W(-1) doesn't have cooling fan, its operating temperature should be 10 °C lower than the temperature shown above (See Cooling Fan Installation in Appendix B.4).



- Mount the AC motor drive vertically on a flat vertical surface with screws. Other mounting directions are not allowed
- 2. The AC motor drive generates heat during operation. Allow sufficient space around the unit for heat dissipation. When you install the AC motor drive in a confined space (for example a cabinet), the surrounding temperature must be meet specifications of operation (as shown in chapter 1.2.1) with good ventilation. DO NOT install the AC motor drive in a space with poor ventilation.
- 3. The heat sink temperature may rise to 90°C when running. The metallic material on which the AC motor drive is mounted must be noncombustible, be excellent at thermal dissipation and be able to withstand this high temperature.
- 4. When installing multiple AC motor drives in the same cabinet, mount them in a row with enough space between for ventilation. When installing one AC motor drive below another one, use a metal separator between the AC motor drives to prevent mutual heating.

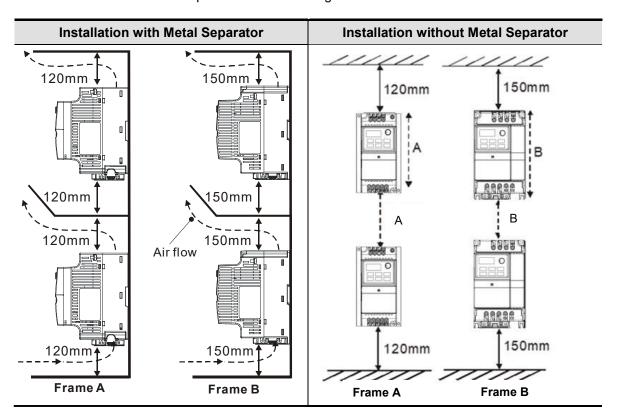




- ☑ Prevent fiber particles, scraps of paper, shredded wood, sawdust, metal particles, etc. from adhering to the heat sink.
- ☐ Install the AC motor drive in a metal cabinet to prevent the risk of fire accident.

1.3 Dimensions


Frame A1
VFD002EL21W(-1), VFD004EL21W(-1), VFD004EL43W(-1), VFD007EL21W(-1), VFD007EL43W(-1)

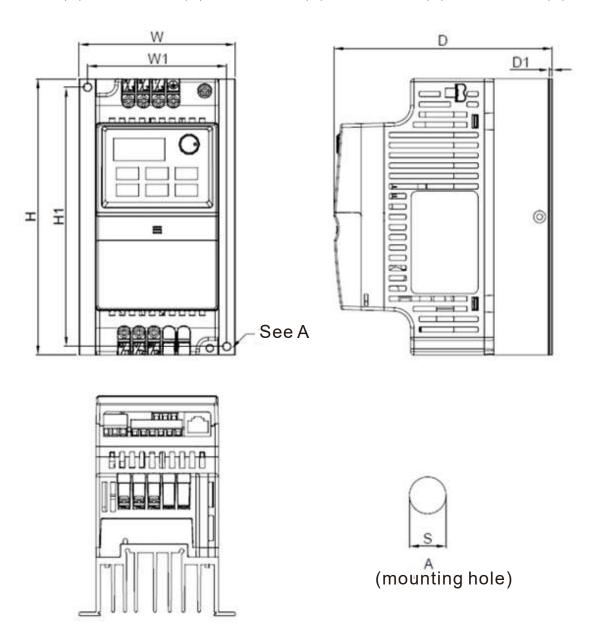

Unit: mm [inch]

Frame	W	W1	Н	H1	D	D1	S1
A 1	92.0	82.0	162.0	152	128.7	5.4	5.4
AI	[3.62]	[3.23]	[6.38]	[5.98]	[5.07]	[0.21]	[0.21]


Frame A2

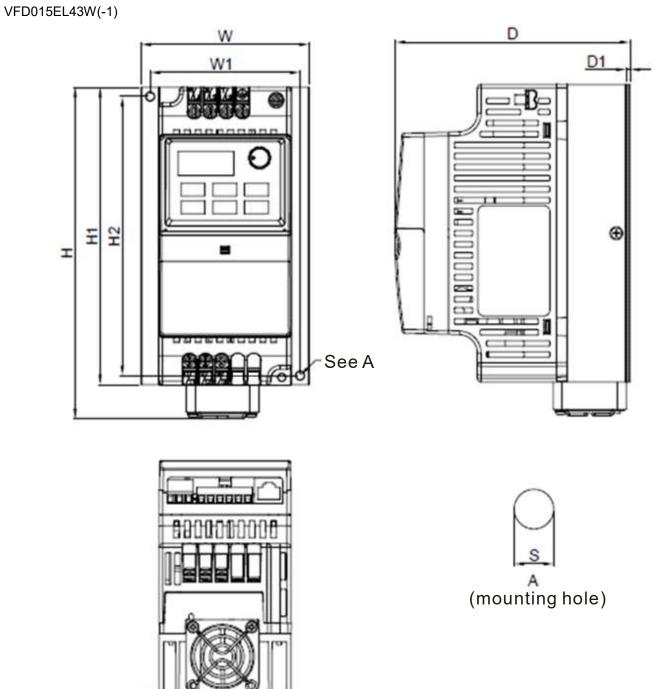



Unit: mm [inch]


Frame	W	W1	Н	H1	H2	D	D1	S1
A 2	92.0	82.0	180.5	162.0	152	128.7	2.0	5.4
A2	[3.62]	[3.23]	[7.11]	[6.38]	[5.98]	[5.07]	[80.0]	[0.21]

Frame B VFD015EL21W(-1), VFD022EL21W(-1), VFD022EL43W(-1), VFD040EL43W(-1)

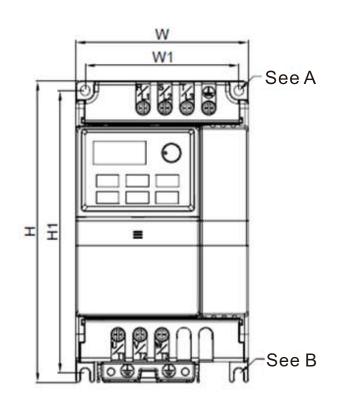

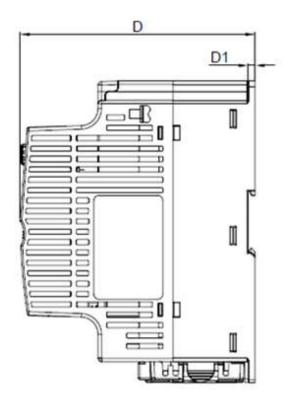

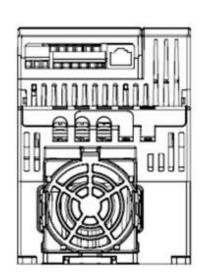

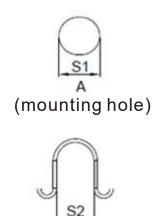

(mounting hole)

Unit: mm [inch]

Frame	W	W1	Н	H1	D	D1	S1	S2
В	100.0	89.0	174.0	162.9	136.0	4.0	5.9	5.4
В	[3.94]	[3.50]	[6.86]	[6.42]	[5.36]	[0.16]	[0.23]	[0.21]

This page intentionally left blank

Chapter 2 Installation and Wiring

- 2.1 Wiring
- 2.2 External Wiring
- 2.3 Main Circuit
- 2.4 Control Terminals
- 2.5 NPN / PNP Mode

After removing the covers of input/output side terminals and control board terminals, verify the main circuit terminals and control circuit terminals are clear. Be sure to observe the following precautions when wiring.



- ✓ Turn off the AC motor drive power before installing any wiring. A hazardous charge may still remain in the DC bus capacitors after the power has been turned off. For your safety, wait until the digital keypad indictor turns off and measure the DC voltage with the voltmeter. Makes sure the voltage drops to a safe level < 25 V_{DC} before wiring. Performing a wiring installation while voltage remains may cause sparks and short circuits.
- Only qualified personnel familiar with AC motor drives are allowed to do the wiring. Make sure the power is turned off before wiring to prevent electric shock.
- ☑ Make sure that power is only applied to the R/L1, S/L2, and T/L3 terminals. Failure to comply may result in damage to the equipment. The voltage and current should be in the range on the AC motor drive nameplate.(refer to Section 1-1 Receiving and Inspection for details)
- ☐ The grounding terminals must be well-grounded to prevent electric shock or fire accidents and to reduce noise interference.
- Make sure that you correctly tighten the main circuit terminal screws to prevent sparks that can be caused by screws loosened due to vibration.




- ☑ When wiring, choose wires that comply with local regulations for your safety.
- Check following items after finishing the wiring:
 - 1. Are all connections correct?
 - 2. Are there any loose wires?
 - 3. Are there any short circuits between the terminals or to ground?

2.1 Wiring

There are wirings for main circuits and control circuits. You must wire according to the following wiring diagrams.

230V One-phase


VFD002EL21W(-1), VFD004EL21W(-1), VFD007EL21W(-1), VFD015EL21W(-1), VFD022EL21W(-1)

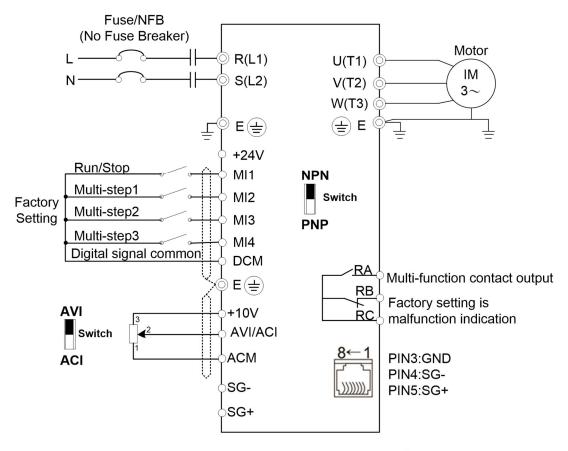

NOTE Terminal SG+,SG- are joined to PIN5,PIN4 of RJ45 Connector

■ 460V Three-phase


VFD004EL43W(-1), VFD007EL43W(-1), VFD015EL43W(-1), VFD022EL43W(-1), VFD040EL43W(-1)

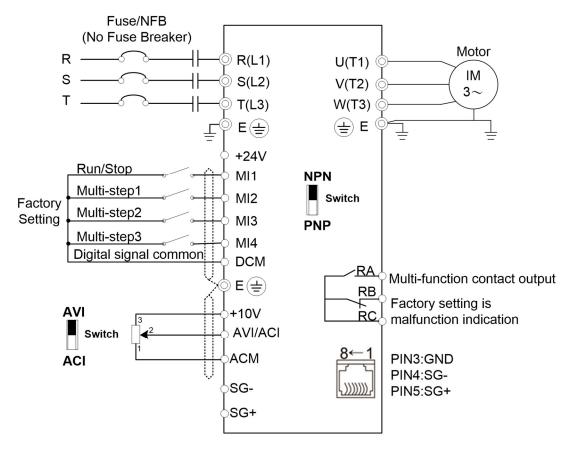

Terminal SG+,SG- are joined to PIN5,PIN4 of RJ45 Connector

Wiring for NPN and PNP mode

Internal power supply

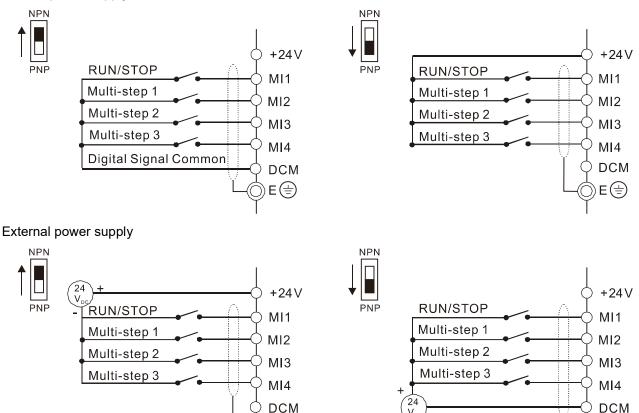



- 1. Separate the main circuit and control circuit wiring to prevent erroneous actions.
- 2. Use shielded wire for the control wiring and do not expose the peeled-off shield in front of the terminal.


E(=)

3. Use shielded wire or conduit for the power wiring and ground the two ends of the shielded wire or conduit.


E(\\

- 4. Damaged insulation of wiring may cause personal injury or damage to circuits and equipment if it comes in contact with high voltage.
- 5. The AC motor drive, motor and wiring may cause interference. To prevent equipment damage, take care of interference between the surrounding sensors and the equipment.
- 6. Connect the AC drive output terminals U/T1, V/T2, and W/T3 to the motor terminals U/T1, V/T2, and W/T3, respectively. To permanently reverse the direction of motor rotation, switch over any of the two motor leads.
- 7. With long motor cables, high capacitive switching current peaks can cause over-current, high leakage current or lower current readout accuracy. To prevent this, the motor cable should be less than 20 m for 4.0 kW models and below. The cable should be less than 50 m for 5.5 kW models and above. For longer motor cables, use an AC output reactor.
- 8. The AC motor drives, electric welding machines and the larger horsepower motors should be grounded separately.
- 9. Use ground leads that comply with local regulations and keep them as short as possible.
- 10. The VFD-EL-W series does not have a built-in brake unit, and no support for external brake unit and brake resistor.
- When grounding, choose wires that comply with local regulations for your safety.
- 12. To prevent lightning strike and electric shock, the metal grounding wire of electrical equipment should be thick and short, and connected to the dedicated grounding terminal of the inverter system.
- 13. You can install multiple VFD-EL-W units in one location. All the units should be grounded directly to a common ground terminal, as shown in the figure below. **Ensure that there are no ground loops.**


Excellent grounding method:

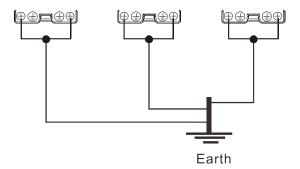


Acceptable grounding method:

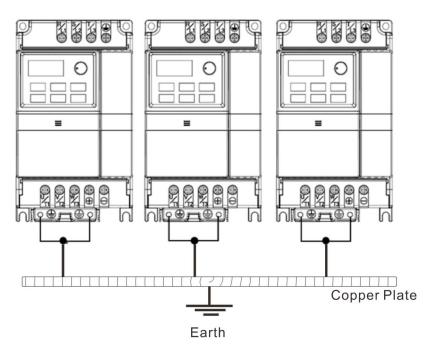

Grounding method not allowed:

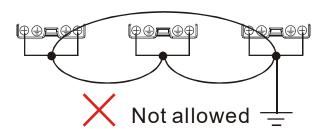


2.2 External Wiring

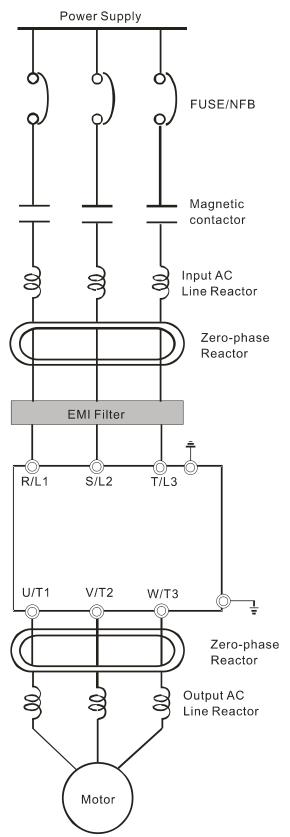

Items	Explanations		
Power supply	Please follow the specific power supply requirements in Appendix A.		
Fuse/NFB (optional)	There may be an inrush current during power- up. Please check the chart in Appendix B and select the correct fuse for the rated current. Use of an NFB is optional.		
Magnetic contactor (optional)	Do not use a magnetic contactor as the I/O switch for the AC motor drive, as it will reduce the operating life of the AC drive.		
Input AC Line Reactor (optional)	Use to improve the input power factor, reduce harmonics and provide protection from AC line disturbances (such as surges, switching spikes, short interruptions). Install an AC line reactor when the power supply capacity is 500 kVA or more, or advanced capacity is activated. The wiring distance should be ≤ 10m. Refer to Appendix B for details.		
Zero-phase Reactor (Ferrite Core Common Choke) (optional)	Use zero phase reactors to reduce radio noise, especially when audio equipment is installed near the inverter. They are effective for noise reduction on both the input and output sides. Attenuation quality is good for a wide range from the AM band to 10 MHz. Appendix B lists the specifications for zero-phase reactors (RF220X00A).		
EMI filter	Use to reduce electromagnetic interference.		
Output AC Line Reactor (optional)	Motor surge voltage amplitude depends on motor cable length. For applications with long motor cable (>20 m), install a reactor at the inverter output side.		

2.3 Main Circuit

2.3.1 Main Circuit Connection

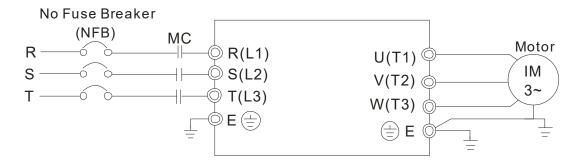

Terminal Symbol	Explanation of Terminal Function		
R/L1, S/L2, T/L3	Mains input terminals (one-phase/three-phase)		
U/T1, V/T2, W/T3	Motor drive output terminals for connecting three-phase induction motor		
(-	Ground connection. Please comply with local regulations.		



Mains power terminals (R/L1, S/L2, T/L3)


- Do NOT connect three-phase motor drives to single-phase AC power. There is no sequential order when connecting mains power terminals R/L1, S/L2, T/L3. Connect these terminals with a freely usable standard.
- Connect terminals (R/L1, S/L2, and T/L3) with a non-fuse breaker to three-phase AC power for circuit protection. It is recommended that you add a magnetic contactor (MC) in the power input wiring to cut off power quickly and reduce malfunction when activating the protection function for the AC motor drives. Both ends of the MC should have an R-C surge absorber.
- Make sure that you correctly tighten the main circuit terminal screws to prevent sparks caused by loosening screws due to vibration.
- Use voltage and current levels according to the specifications in Appendix A.
- When using a GFCI (Ground Fault Circuit Interrupter), select a current sensor with sensitivity of 200 mA or higher, and not less than 0.1 second operation time to avoid nuisance tripping. For specific GFCI of the AC motor drive, select a current sensor with sensitivity of 30 mA or higher.
- Do NOT run or stop AC motor drives by turning the power ON or OFF. Use the RUN or STOP command through the control terminals or a keypad. If you still need to run or stop the AC drives by turning the power ON or OFF, it is recommended to do so no more often than ONCE per hour.


Output terminals for main circuit (U, V, W)


- The default for the operation direction is running forward. The method to control the running direction is to set by the communication parameters. Refer to the Parameter Group 09 in Chapter 4 for details.
- When it is necessary to install the filter at the output side of terminals U/T1, V/T2, W/T3 on the AC motor drive, use an inductance filter. Do not use phase-compensation capacitors or L-C (Inductance-Capacitance) or R-C (Resistance-Capacitance), unless approved by Delta.
- DO NOT connect phase-compensation capacitors or surge absorbers at the output terminals of AC motor drives.
- Use a well-insulated motor, suitable for inverter operation.

2.3.2 Main Circuit Terminals

Frame A1

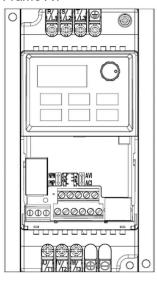

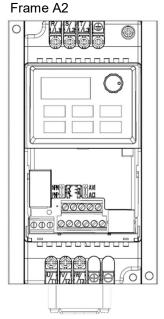

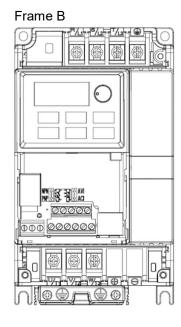


		Main Circuit Terminals R/L1, S/L2, T/L3,U/T1, V/T2, W/T3, ⊕			
Frame	Model	Maximum Wire Gauge	Minimum Wire Gauge	Screw Size Tightening Torque (±10%)	
	VFD002EL21W(-1)		0.5		
	VFD004EL21W(-1)		2.5 mm ² [14 AWG]		
۸.1	VFD004EL43W(-1)	4 mm ² [12 AWG]	[14 AVVG]	M4 screw	
A1	VFD007EL21W(-1)		4 mm ² [12 AWG]	15 kgf-cm [13 lbf-in] [1.47 N-m]	
	VFD007EL43W(-1)		2.5 mm ²	[]	
A2	VFD015EL43W(-1)		[14 AWG]		
	VFD015EL21W(-1)		10 mm ²		
В	VFD022EL21W(-1)	10 0	[8 AWG]	M4 screw	
	VFD022EL43W(-1)	10 mm² [8 AWG]	2.5 mm ² [14 AWG]	13 kgf-cm [11.4 lbf-in] [1.3 N-m]	
	VFD040EL43W(-1)			[1.5 [4-11]	

NOTE

- For installation at an ambient temperature of 50°C, select copper wires with temperature resistance of 75°C or 90°C. For installation at an ambient temperature over 50°C, select copper wires with temperature resistance of 90°C or above.
- For installation of VFD007EL21W(-1) at an ambient temperature of 40°C, select copper wires with temperature resistance of 75°C or 90°C. For installation at an ambient temperature over 40°C, select copper wires with temperature resistance of 90°C or above.
- When installing VFDxxxEL21W(-1), select wires with voltage rating of 300V_{AC} or above. When installing VFDxxxEL43W(-1), select wires with voltage rating of 600V_{AC} or above.

2.4 Control Terminals

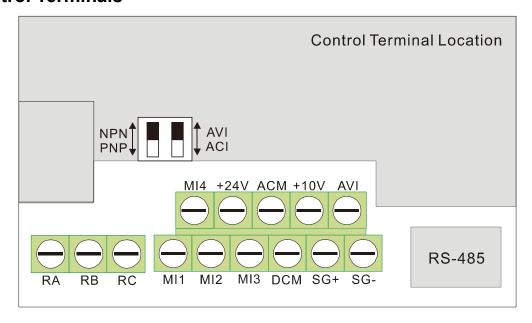

Terminal symbols and functions


Terminal Symbol	Terminal Function	Defaults (NPN mode) ON: Connect to DCM
MI1	Run-Stop Command	ON: Run in MI1 direction OFF: Stop acc. to Stop Method
MI2	Multi-function Input 2	Refer to Pr.04.06 to Pr.04.08 for programming the
MI3	Multi-function Input 3	multi-function inputs. ON: the activation current is 5.5 mA.
MI4	Multi-function Input 4	OFF: leakage current tolerance is 10 μA.
+24V	DC Voltage Source	The common terminal is only used for a multi-function input terminal. Output voltage: 23–25V, load capacity: 20 mA +24V terminal is only used for digital control signal common when in the internal power supply PNP mode. (Or used for digital control signal common when in the external power supply NPN mode.) For detailed wiring instructions, refer to NPN and PNP mode description. NOTE Do not use the +24V terminal for other external power loads to avoid damage to the hardware circuit.
DCM	Digital Signal Common (Sink)	Common for multi-function input terminals.
SG+	Madhua DO 405	Internally connected to RJ45 terminal PIN5 and PIN4,
SG-	Modbus RS-485	providing flexible choice for users (only support one of them at one time).
RA	Multi-function Relay Output (N.O.) a	Resistive Load: 5A (N.O.) / 3A (N.C.) 240 V _{AC}
RB	Multi-function Relay Output (N.C.) b	5A (N.O.) / 3A (N.C.) 24 V _{DC} Inductive Load:

Terminal Symbol	Terminal Function	Defaults (NPN mode) ON: Connect to DCM	
RC	Multi-function Relay Common	1.5A (N.O.) / 0.5A (N.C.) 240 V _{AC} 1.5A (N.O.) / 0.5A (N.C.) 24 V _{DC} Refer to Pr.03.00 for programming	
+10V	Potentiometer Power Supply	+10 V_{DC} 3 mA (Variable resistor 3–5 $k\Omega$)	
AVI	Analog Voltage Input AVI circuit AVI internal circuit	Impedance: $47 \text{ k}\Omega$ Resolution: 10 bits Range: $0-10 \text{ V}_{DC}$ /4-20 mA = $0-\text{maximum output frequency (Pr.01.00)}$ Selection: Pr.02.00, Pr.02.09, Pr.10.00 Setting: Pr.04.14-Pr.04.17	
ACM	Analog Control Signal (Common)	Common for AVI	

NOTE Control signal wiring size: 18 AWG (0.75 mm²) with shielded wire.

Analog inputs (AVI, ACM)

- Analog input signals are easily affected by external noise. Use shielded wiring and keep it as short as possible (<20 m) with proper grounding. If the noise is inductive, connecting the shield to the ACM terminal can cause improvement.
- If the analog input signals are affected by noise from the AC motor drive, connect a capacitor (0.1 μ F and above) and a ferrite core as shown in the following diagrams:

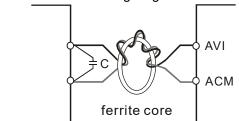


Wind each wire three times or more around the core

Digital inputs (MI1, MI2, MI3, DCM)


■ When using contacts or switches to control the digital inputs, use high-quality components to avoid contact bounce.

Specification for the control terminals

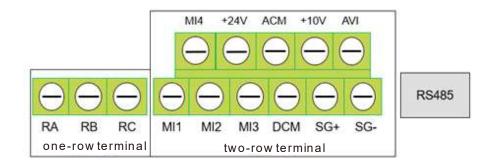

Frame	Model	Wire	One-row terminal torque (±10%)	Two-row terminal (±10%)
A1	VFD002EL21W(-1)	16~24 AWG [1.3~0.2mm ²]		
	VFD004EL21W(-1)			
	VFD004EL43W(-1)			
	VFD007EL21W(-1)			
	VFD007EL43W(-1)		4 kgf-cm [3.5 lbf-in]	7 kgf-cm [6.2lbf-in]
A2	VFD015EL43W(-1)			
В	VFD015EL21W(-1)		[0.4 N-m]	[0.7 N-m]
	VFD022EL21W(-1)			
	VFD022EL43W(-1)			
	VFD040EL43W(-1)			

2.5 NPN / PNP Mode

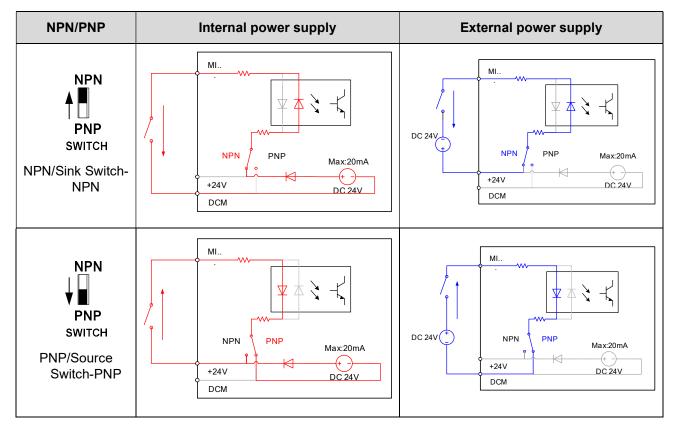

NOTE

- The total load capacity of +24V-DCM internal 24V power is 60 mA, and only supplies power for the MI terminal of NPN and PNP mode. If you want to know available load capacity to support other external accessories, deduct the load consumed by corresponding MI terminals. Each MI terminal consumes 6mA.
- 2) The power supply of the cooling fan is 24V_{DC}. Internal power is applied from terminal +24V/DCM. Once you install a cooling fan on VFD007EL21W(-1), do not connect any other external accessory to avoid overload on terminal +24V which will damage the motor drive.

This page intentionally left blank.

Chapter 3 Keypad and Start-up

- 3.1 Description of the Digital Keypad
- 3.2 Operation Method
- 3.3 Trial Run



- ☑ Make sure that the wiring is correct. In particular, ensure that the output terminals U/T1, V/T2, W/T3 are NOT connected to power and that the drive is well grounded.
- ☑ Verify that no other equipment is connected to the AC motor drive.
- ☑ Do NOT operate the AC motor drive with wet hands.
- ☑ Please check if the digital keypad displays F60.0 or F50.0 is ON when power is applied.



☑ Stop the motor when a fault occurs during running and refer to Chapter 6 Fault Code Information and Maintenance for solutions. DO NOT touch output terminals U, V, W when power is still applied to L1/R, L2/S, L3/T, even when the AC motor drive is stopped to prevent electric shock.

3.1 Description of the Digital Keypad

VFD-EL-W series operates the running and displays the functions by the digital keypad.



Status Display

Displays the drive's current status: RUN, STOP, FWD, REV

2 LED Display

Indicates frequency, current, voltage, running direction, user-defined units, faults, etc.

3 Potentiometer

Sets the master frequency

4 UP / DOWN Key

Selects parameters and sets / changes parameter settings

There are four LEDs on the keypad

STOP : Lights when the drive stops.

RUN : Lights when the motor is running.

• FWD : Lights when the motor is running forward.

• REV : Lights when the motor is running in reverse.

Description of the Displayed Functions

Display Function	Description
FWD STOP	Displays current setting frequency of the AC motor drive.
RUN• STOP	Displays the actual output frequency to the motor.
RUN STOP	Displays the user-defined unit (where U = F x Pr.00.05)
RUN• FWD• REV•	Displays the loading current.
RUN• FWD• REV•	FWD command.
RUN• FWD• REV•	REV command.
RUN• FWD• REV•	The counter value (C).
RUN• STOP	Displays the selected parameter.
RUN• FWD• REV•	Displays the actual stored value of the selected parameter.
RUN• FWD• REV•	Displays the external fault.
RUN• FWD• REV•	Displays "End" for approximately one second (as shown in the left figure) if the data has been accepted and automatically stored in the register.
RUN• FWD• REV•	Displays if the setting data is not accepted or data value exceeds the allowed range.

Keypad Operation Process



Reference Table for the Seven-segment LED Display of the Digital Keypad

Digit	0	1	2	3	4	5	6	7	8	9
LED Display	0	;	2	3	4	5	δ	7	8	9
English alphabet	Α	b	Сс	d	Е	F	G	Hh	li	Jj
LED	8	,		,	-	F			, -	, -
Display	n	Ь	ξc	ď	Ε	<i> </i>	5	XX	I.	ע ט
English alphabet	K	L	n	Oo	Р	q	r	S	Tt	U
LED		,		n	n	Q			7,	11
Display	۲	Ĺ	n	Co	ρ	7		5	75	Ü
English alphabet	V	Y	Z							
LED		.,	-							
Display	U	7	=							

3.2 Operation Method

You can set Pr.02.01 to select the operation method to be through the digital keypad, RS-485 communication or control terminals.




Operation Method	Frequency Source		Operation Command Source
Operate through communication	IFD8500 converter to connect the	ne drive	PC, use an IFD6500 / IFD6530 or to the PC. 000H and 2101H setting for details.
Operate through the digital keypad	RUN STOP RESET	Figur	MODE ENTER
	Set the frequency source throug		Set the operation command source through the RUN, STOP / RESET keys, as shown in Figure 3-1.
Operate through external signals	PNP Factory Setting	Switch Cl efault: A	MI2 MI3 MI4 gnal common DCM E + 10V AVI/ACI ACM VI SG- SG+
	MI3-DCM (Set Pr.04.05=d1 MI4-DCM (Set Pr.04.06=d1	,	Refer to the parameter descriptions in Chapter 04 for details of FWD/REV operations.

3.3 Trial Run

The default for the operation source is the digital

keypad. The setting methods are as follows:

- ☑ After applying power, verify that the LED display shows F 60.0 Hz.
- Press key to set the frequency to be around 5 Hz. (Refer to Figure 3-1)
- ☑ If you want to change FWD to REV, press MODE to find the FWD function, then press the UP or DOWN key to locate the REV function to finish the direction change.
- ☑ Check following items:
 - Check if the motor rotation direction is correct.
 - Check if the motor runs steadily without abnormal noise and vibration.
 - Check if acceleration and deceleration are smooth.

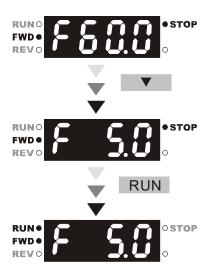

If the results of trial run are normal, increase the operating frequency to continue the trial run. If the trial run still goes normally, then you can start the formal run.

Motor operating direction

When the AC drive output terminals U/T1, V/T2 and W/T3 are connected to the motor terminals U/T1, V/T2 and W/T3 respectively, the FWD LED indicator on the digital keypad is ON. This means the AC motor drive executes running forward, and the motor rotates as the figure below shows. On the contrary, when the REV LED indicator lights, the AC motor drive executes running in reverse, and the motor rotates in an opposite direction as the figure below shows. If the AC motor drive executes running forward but the motor rotates in a reverse direction, exchange any two of the U/T1, V/T2 and W/T3 motor terminals.

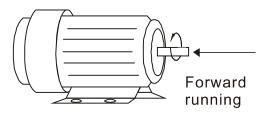


Figure 3-3

This page intentionally left blank.

Chapter 4 Parameters

- 4.1 Summary of Parameter Settings
- 4.2 Parameter Settings for Applications
- 4.3 Description of Parameter Settings

The VFD-EL-W parameters are divided into 11 groups by property for easy setting. In most applications, the user can finish all parameter settings before start-up without the need for re-adjustment during operation.

The 11 groups are as follows:

0	Hann Danson stans
Group 0:	User Parameters
Group 1:	Basic Parameters
Group 2:	Operation Method Parameters
Group 3:	Output Function Parameters
Group 4:	Input Function Parameters
Group 5:	Multi-Step Speed Parameters
Group 6:	Protection Parameters
Group 7:	Motor Parameters
Group 8:	Special Parameters
Group 9:	Communication Parameters
Group 10:	PID Control Parameters

4.1 Summary of Parameter Settings

Group 0 User Parameters

Parameter	Function	Setting	Default	Customer
		0: 230V, 0.25HP		
		2: 230V, 0.5HP		
		3: 460V, 0.5HP		
		4: 230V, 1 HP		
00.00	Identity Code of the AC motor drive		Read	
	unve	6: 230V, 2 HP 7: 460V, 2 HP	only	
		8: 230V, 3 HP		
		9: 460V, 3 HP		
		11: 460V, 5.5 HP		
00.01	Rated Current Display of the AC motor drive	Read only	Read only	
		0: Parameter can be read/written	,	
		1: All parameters are read only		
		8: Keypad lock		
00.02	Parameter Reset	9: All parameters are reset to default (50 Hz, 230V/400V or 220V/380V depends on Pr.00.12)	0	
		10: All parameters are reset to default (60 Hz, 220V/440V)		
		0: F (frequency command)		
		1: H (actual frequency)		
₩ 00.03	Start-up Display Selection	2: A (output current)	0	
		3: U (user-defined, see Pr.00.04)		
		4: FWD/REV command		
		Display the content of user-defined unit (Uxxx)	0	
		1: Display the counter value (c)		
		Display the status of multi-function input terminals (d)		
		3: Display DC bus voltage (u)		
		4: Display output voltage (E)		
№ 00.04	Content of Multi-function Display	5: Display PID analog feedback signal value (b) (%)		
		6: Output power factor angle (n)		
		7: Display output power (P)		
		8: Display PID setting and feedback signal		
		9: Display AVI (I) (V)		
		10: Display ACI (i) (mA)		
		11: Display the temperature of IGBT (h) (°C)		
1	<u>'</u>			

Parameter	Function	Setting	Default	Customer
00.06	Software Version	Read only	#.##	
00.08	Password Input	0–9999 0–2: the number of password attempts allowed	0	
00.09	Password Set	0–99990: No password protection / password entered correctly (Pr.00.08)1: Parameter has been set	0	
00.10	Control Mode	0: V/F control 1: Vector control	0	
00.12	50 Hz Base Voltage Selection	0: 230V/400V 1: 220V/380V	0	
00.13	User-defined value (correspond to max. operating frequency)	0–9999	0	
00.14	Decimal place of User-defined Value	0–3	0	

Group 1 Basic Parameters

Parameter	Function	Setting	Default	Customer
01.00	Maximum Output Frequency (Fmax)	50.00–400.0 Hz	60.00	
01.01	Motor Rated Frequency (Fbase)	0.10–400.0 Hz	60.00	
04.00	Metay Dated Maltage (Mass)	230V series: 0.1–255.0 V	220.0	
01.02	Motor Rated Voltage (Vbase)	460V series: 0.1–510.0 V	440.0	
01.03	Mid-Point Frequency (Fmid)	0.10–400.0 Hz	1.50	
04.04	Mid Daint Voltage (Vesid)	230V series: 0.1–255.0 V	10.0	
01.04	Mid-Point Voltage (Vmid)	460V series: 0.1–510.0 V	20.0	
01.05	Minimum Output Frequency (Fmin)	0.10–400.00 Hz	1.50	
01.06	Minimum Output Voltage (Vmin)	230V series: 0.1–255.0 V	10.0	
01.06	Minimum Output Voltage (Vmin)	460V series: 0.1–510.0 V	20.0	
01.07	Output Frequency Upper Limit	0.1–120.0%	110.0	
01.08	Output Frequency Lower Limit	0.0–100.0 %	0.0	
⊮ 01.09	Acceleration Time 1 (Taccel 1)	0.1-600.0 / 0.01-600.00 sec.	10.0	
⊮ 01.10	Deceleration Time 1 (Tdecel 1)	0.1-600.0 / 0.01-600.00 sec.	10.0	
⊮ 01.11	Acceleration Time 2 (Taccel 2)	0.1-600.0 / 0.01-600.00 sec.	10.0	
⊮ 01.12	Deceleration Time 2 (Tdecel 2)	0.1-600.0 / 0.01-600.00 sec.	10.0	
⊮ 01.13	Jog Acceleration Time	0.1-600.0 / 0.01-600.00 sec.	1.0	
⊮ 01.14	Jog Deceleration Time	0.1-600.0 / 0.01-600.00 sec.	1.0	
⊮ 01.15	Jog Frequency	0.10–400.0 Hz	6.00	
01.16	Auto-Acceleration and Auto-Deceleration	O: Linear Acceleration and linear deceleration 1: Auto-acceleration and linear deceleration 2: Linear acceleration and auto-deceleration 3: Auto-acceleration and auto-deceleration (Set by load)	0	
		4: Auto-acceleration and auto- deceleration (set by Acceleration / Deceleration Time setting)		
01.17	Acceleration S-Curve	0.0 (S-curve disabled) 0.1–10.0 / 0.01–10.00	0.0 / 0.00	
01.18	Deceleration S-Curve	[S-curve enabled (10.0/10.00 is the smoothest)]	5.5 / 5.00	
01.19	Acceleration / Deceleration Time Unit	0: Unit: 0.1 sec. 1: Unit: 0.01 sec.	0	
⊮ 01.20	Simple Positioning Stop Frequency 0		0.00	
⊮ 01.21	Simple Positioning Stop Frequency 1		5.00	
⊮ 01.22	Simple Positioning Stop Frequency 2	0.00–400.0 Hz	10.00	
⊮ 01.23	Simple Positioning Stop Frequency 3		20.00	
№ 01.24	Simple Positioning Stop Frequency 4		30.00	

Parameter	Function	Setting	Default	Customer
⊮ 01.25	Simple Positioning Stop Frequency 5		40.00	
 ∕ 01.26	Simple Positioning Stop Frequency 6	0.00–400.0 Hz	50.00	
 ∕ 01.27	Simple Positioning Stop Frequency 7		60.00	
 ∕ 01.28	Delay Time of Simple Positioning Stop 0		0.00	
 ∕ 01.29	Delay Time of Simple Positioning Stop 1		0.00	
⊮ 01.30	Delay Time of Simple Positioning Stop 2		0.00	
⊮ 01.31	Delay Time of Simple Positioning Stop 3	0.00,600.00,000	0.00	
⊮ 01.32	Delay Time of Simple Positioning Stop 4	0.00–600.00 sec.	0.00	
⊮ 01.33	Delay Time of Simple Positioning Stop 5		0.00	
⊮ 01.34	Delay Time of Simple Positioning Stop 6		0.00	
⊮ 01.35	Delay Time of Simple Positioning Stop 7		0.00	

Group 2 Operation Method Parameters

Parameter	Function	Setting	Default	Customer
№ 02.00	First Master Frequency Command Source	O: Digital keypad UP/DOWN keys or Multifunction Inputs UP/DOWN. 1: 0–10 V from AVI 2: 4–20 mA from ACI 3: RS-485 (RJ45) communication 4: Digital keypad potentiometer	0	
№ 02.01	First Operation Command Source	0: Digital keypad 1: External terminals. Keypad STOP/RESET enabled. 2: External terminals. Keypad STOP/RESET disabled. 3: RS-485 communication. Keypad STOP/RESET enabled. 4: RS-485 communication. Keypad STOP/RESET disabled.	0	
02.02	Stop Method	0: STOP: ramp to stop; E.F.: coast to stop 1: STOP: coast to stop; E.F.: coast to stop 2: STOP: ramp to stop; E.F.: ramp to stop 3: STOP: coast to stop; E.F.: ramp to stop 4: Simple Positioning Stop; E.F.:coast to stop	0	
02.03	PWM Carrier Frequency Selection	2–12 kHz	8	
02.04	Motor Direction Control	Forward/reverse operation enabled Reverse operation disabled Forward operation disabled	0	
02.05	Power-On Command and Run Command Source Modifies the Drive Operating Control	O: Start running when power is on. Do not run when power is on When the source of the command changes, the drive's operation remains the same. When the source of the command changes, the drive's operation follows the new command. The motor drive can start to run at power on or after reset. When the source of the command is a two-wire external terminal, the operating command changes as the external terminal's status changes.		
02.06	Loss of ACI Signal (4–20 mA)	 Decelerate to 0 Hz Coast to stop and display "AErr" Continue the operation according to the last frequency command Continue the operation according to the setting at Pr.02.11. 	0	
02.07	Up/Down Mode	0: Digital keypad up/down keys mode 1: Based on Accel./ Decel. time 2: Constant speed (according to Pr.02.08) 3: Pulse input unit (according to Pr.02.08)	0	

Parameter	Function	Setting	Default	Customer
02.08	Accel./ Decel. Rate of Change of UP/DOWN Operation with Constant Speed	0.01–10.00 Hz / 2ms	0.01	
№ 02.09	Second Frequency Command Source	 0: Digital keypad UP/DOWN keys or Multifunction Inputs UP/DOWN. 1: 0–10V from AVI 2: 4–20 mA from ACI 3: RS-485 (RJ45) communication 4: Digital keypad potentiometer 	0	
₩ 02.10	Combining the First and Second Master Frequency Commands	First Master Frequency Command Only First Master Frequency Command+ Second Master Frequency Command First Master Frequency Command - Second Master Frequency Command	0	
₩ 02.11	Keypad Frequency Command	0.00–400.0 Hz	60.00	
№ 02.12	Communication Frequency Command	0.00–400.0 Hz	60.00	
02.13	Saving Keypad or Communication Frequency Command Selection	Save Keypad & Communication Frequency Save Keypad Frequency Only Save Communication Frequency Only	0	
02.14	Initial Frequency Selection (for keypad & RS-485)	0: Current Frequency Command 1: Zero Frequency Command 2: Refer to Pr.02.15 to set up	0	
02.15	Initial Frequency Setting (for keypad & RS-485)	0.00–400.0 Hz	60.00	
02.16	Display the Master Frequency Command Source	Read Only 1: bit0=1: First Master Frequency Source (Pr.02.00) 2: bit1=1: Second Master Frequency Source (Pr.02.09) 4: bit2=1: Multi-function input	Read only	
02.17	Display the Operation Command Source	Read Only 1: bit0=1: Digital Keypad 2: bit1=1: RS-485 communication 4: bit2=1: External Terminal (MI1) 8: bit3=1: Multi-function input	Read only	
02.18	User-defined Value 2 Setting	0-Pr.00.13	0	
02.19	User-defined Value 2	0–9999	Read only	

Group 3 Output Function Parameters

Parameter	Function	Setting	Default	Customer
03.00	Multi-function Output Relay (RA1, RB1, RC1)	0: No function 1: Indication during RUN 2: Indication of master frequency reached 3: Zero speed 4: Over-torque detection 5: Base-Block (B.B.) indication 6: Low-voltage indication 7: Operation mode indication 8: Fault indication 9: Desired frequency reached 10: Terminal count value reached 11: Preliminary count value reached 12: Over-voltage stall prevention 13: Over-current Stall prevention 14: IGBT overheat warning (85°C: ON, 80°C: OFF) 15: Over-voltage 16: PID feedback error 17: Forward command 18: Reverse command 19: Zero speed output signal 20: Warning 21: Mechanical brake control (Desired frequency reached) 22: Drive ready 23: Multi-pump system error display (only master) 24: Preheating function indication 25: Fire mode indication	8	Customer
03.02	Desired Frequency Reached	0.00–400.0 Hz	0.00	
03.05	Terminal Count Value	0–9999	0	
03.06	Preliminary Count Value	0–9999	0	
03.07	EF Active when Terminal Count Value Reached	Terminal count value reached, no EF display Terminal count value reached, EF active	0	
03.08	Fan Control	 Fan is always ON One minute after the AC motor drive stops, the fan is OFF. Fan is ON when the AC motor drive runs, fan is OFF when the AC motor drive stops. Fan is ON when the preliminary heat sink temperature is reached. Fan is ON when the AC motor drive runs; fan is OFF when the AC motor drive stops. And the fan is in a standby mode at 0 Hz. 	0	

Parameter	Function	Setting	Default	Customer
03.11	Mechanical Brake Release Frequency	0.00–20.00 Hz	0.00	
03.12	Mechanical Brake Engage Frequency	0.00–20.00 Hz	0.00	
03.13	Display the Status of the Multi-function Output Terminals	Read only	Read only	

Group 4 Input Function Parameters

Parameter	Function	Setting	Default	Customer
₩ 04.00	Keypad Potentiometer Bias	0.0–100.0%	0.0	
№ 04.01	Keypad Potentiometer Bias Polarity	0: Positive bias 1: Negative bias	0	
 ∕ 04.02	Keypad Potentiometer Gain	0.1–200.0%	100.0	
04.03	Keypad Potentiometer Negative Bias, Reverse Motion Enable / Disable	No negative bias command Negative bias: REV motion enabled	0	
04.04	Start-up / Stop Method of MI Terminals and Multi-function Input Selection	Mode 1 (Pr.04.19=0) 0: MI1 start-up (keypad FWD lights) / stop Mode 2 (Pr.04-19=1) 0: Two-wire (1) MI1, MI2 1: Two-wire (2) MI1, MI2 2: Three-wire, MI1, MI2, MI3	0	
04.05	Reserved	0: No function	-	
04.06	Start-up / Stop or Multi-function Input Terminal (MI2)	1: Multi-step speed command 1	1	
04.07	Start-up / Stop or Multi-function Input Terminal (MI3)	2: Multi-step speed command 2	2	
04.08	Multi-function Input Terminal (MI4)	3: Multi-step speed command 3	3	
		5: External reset		
		6: Accel. / decel. inhibit 7: The 1 st , 2 nd acceleration or deceleration time selection		
		8: JOG operation control 9: External Base Block (Refer to Pr.08.06)		
		10: UP: Increase Master Frequency 11: DOWN: Decrease Master Frequency 12: Counter trigger		
		13: Counter reset		
		14: External fault		
		15: PID function disabled		
		16: Output shutoff stop		
		17: Parameter lock enable		
		18: Operation command selection (Pr.02.01 setting / external terminals) 19: Operation command selection (Pr.02.01 setting / digital keypad)		
		20: Operation command selection (Pr.02.01 setting / communication)		
		21: Forward / reverse		
		22: Second frequency command source		

Parameter	Function	Setting	Default	Customer
		 23: Simple positioning stop by forward limit 24: Simple positioning stop by reverse limit 25: Multi-pump control by Hand or Auto mode 		
		26: Auto-trigger preheating function 27: Fire mode enabled (without Operation Command) 28: Fire mode enabled (with Operation Command)		
04.09	Multi-function Input Contact Selection	0–63	0	
04.10	Digital Terminal Input Response Time	1–20 (*2ms)	1	
⊮ 04.11	Minimum AVI Voltage	0.0–10.0 V	0.0	
⊮ 04.12	Minimum AVI Frequency (percentage of Pr.01.00)	0.0-100.0% [100% corresponds to Fmax (Pr.01.00)]	0.0	
⊮ 04.13	Maximum AVI Voltage	0.0–10.0 V	10.0	
₩ 04.14	Maximum AVI Frequency (percentage of Pr.01.00)	0.00-100.00% [100% corresponds to Fmax (Pr.01.00)]	100.00	
⊮ 04.15	Minimum ACI Current	0.0–20.0 mA	4.0	
% 04.16	Minimum ACI Frequency (percentage of Pr.01.00)	0.00-100.00% [100% corresponds to Fmax (Pr.01.00)]	0.0	
⊮ 04.17	Maximum ACI Current	0.0–20.0 mA	20.0	
⊮ 04.18	Maximum ACI Frequency (percentage of Pr.01.00)	0.00-100.00% [100% corresponds to Fmax (Pr.01.00)]	100.0	
04.19	MI Terminal Control Mode Selection	0: Mode 1 (MI1: Start-up/Stop terminal; MI2 & MI3: multi-function input terminals) 1: Mode 2 (MI1/MI2/MI3 support two-wire / three-wire start-up)	0	
04.26	Display the Status of Multi-function Input Terminal	Read only	Read only	
⊮ 04.27	Internal/External Multi-function Input Terminals Selection	0–4095	0	
⊮ 04.28	Internal Terminal Status	0–4095	0	
₩ 04.29	Delay Time of Multi-function Input Terminal (MI1) Turn On	0.00-360.00 sec.	0.00	
₩ 04.30	Delay Time of Multi-function Input Terminal (MI1) Turn Off	0.00-360.00 sec.	0.00	
⊮ 04.31	Delay Time of Multi-function Input Terminal(MI2) Turn On	0.00-360.00 sec.	0.00	
№ 04.32	Delay Time of Multi-function Input Terminal (MI2) Turn Off	0.00-360.00 sec.	0.00	
⊮ 04.33	Delay Time of Multi-function Input Terminal (MI3) Turn On	0.00-360.00 sec.	0.00	

Chapter 4 Parameters / VFD-EL-W

Parameter	Function	Setting	Default	Customer
₩ 04.34	Delay Time of Multi-function Input Terminal (MI3) Turn Off	0.00-360.00 sec.	0.00	

Group 5 Multi-Step Speed Parameters

Parameter	Function	Setting	Default	Customer
№ 05.00	1st Step Speed Frequency	0.00–400.0 Hz	0.00	
 ∕ 0 5.01	2nd Step Speed Frequency	0.00–400.0 Hz	0.00	
№ 05.02	3rd Step Speed Frequency	0.00–400.0 Hz	0.00	
№ 05.03	4th Step Speed Frequency	0.00–400.0 Hz	0.00	
№ 05.04	5th Step Speed Frequency	0.00–400.0 Hz	0.00	
№ 05.05	6th Step Speed Frequency	0.00–400.0 Hz	0.00	
 ∕ 0 5.06	7th Step Speed Frequency	0.00–400.0 Hz	0.00	

Group 6 Protection Parameters

Parameter	Function	Setting	Default	Customer
00.00	Over-Voltage Stall	230V series: 330.0–410.0 V	390.0	
06.00	Prevention	460V series: 660.0-820.0 V	780.0	
⊮ 06.01	Over-Current Stall Prevention during Acceleration	0:Disable 20–250%	170	
₩ 06.02	Over-Current Stall Prevention during Operation	0:Disable 20–250%	170	
06.03	Over-Torque Detection Mode (oL2)	 Over-torque detection disabled Over-torque detection enabled during constant speed operation. After over-torque is detected, keep running until oL1 or oL occurs. Over-torque detection enabled during constant speed operation. After over-torque is detected, stop running. Over-torque detection enabled during acceleration. After over-torque is detected, keep running until oL1 occurs. Over-torque detection enabled during acceleration. After over-torque is detected, stop running. 	0	
№ 06.04	Over-Torque Detection Level	10–200%	150	
06.05	Over-Torque Detection Time	0.1-60.0 sec.	0.1	
06.06	Electronic Thermal Overload Relay Selection (oL1)	0: Standard motor (self-cooled by fan) 1: Special motor (forced external cooling) 2: Disabled	2	
06.07	Electronic Thermal Characteristic	30–600 sec.	60	
06.08	Present Fault Record	0: No fault		
06.09	Second Most Recent Fault Record	1: Over current (oc) 2: Over voltage (ov)		
06.10	Third Most Recent Fault Record	3: IGBT Overheat (oH1) 5: Overload (oL)		
06.11	Fourth Most Recent Fault Record			
06.12	Fifth Most Recent Fault Record	8: External fault (E.F.) 9: Current exceeds two times the rated current during acceleration (ocA)		
		 10: Current exceeds two times the rated current during deceleration (ocd) 11: Current exceeds two times the rated current during constant speed operation (ocn) 14: Phase-Loss (PHL) 16: Auto-acceleration / auto-deceleration failure (CFA) 17: Software / Password protection (codE) 18: Power Board CPU WRITE failure (cF1.0) 19: Power Board CPU READ failure (cF2.0) 20: CC, OC Hardware protection failure (HPF1) 21: OV Hardware protection failure (HPF2) 	0	

Parameter	Function	Setting	Default	Customer
		23: OC Hardware protection failure (HPF4) 24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 34: Motor PTC overheat protection (PtC1)		
		35: FBE_ERR: PID feedback error (Incorrect feedback signal)36: dEv: unusual PID feedback deviation37: OPHL		
⊮ 06.13	Motor Disconnection Detection Time	0.0–60.0 0.0: Disable the OPHL detection function	0.0	
 ∕ 06.14	Motor Disconnection Detection Current Level	10–100	30	

Group 7 Motor Parameters

Parameter	Explanation	Settings	Default	Customer
 ∕ 07.00	Motor Rated Current	23–120% FLA	100	
⊮ 07.01	Motor No-Load Current	0–99% FLA	40	
⊮ 07.02	Torque Compensation	0.0–10.0	0.0	
⊮ 07.03	Slip Compensation Gain	0.00–10.00	0.00	
 ∕ 07.04	Motor Parameter Auto-Tuning	0: Disable 1: Auto-tuning R1 (Motor does not run) 2: Auto-tuning R1 + No-load current (with running motor)	0	
07.05	Motor Line-to-line Resistance R1 (Motor 0)	0–65535 mΩ	0	
07.06	Motor Rated Slip (Motor 0)	0.00–20.00 Hz	3.00	
07.07	Slip Compensation Limit	0–250%	200	
07.08	Torque Compensation Time Constant	0.01-10.00 sec.	0.10	
07.09	Slip Compensation Time Constant	0.05–10.00 sec.	0.20	
07.10	Accumulated Motor Operation Time (Minute)	0–1439 Min.	0	
07.11	Accumulated Motor Operation Time (Day)	0–65535 Day	0	
07.12	Motor PTC Overheat Protection	0: Disable 1: Enable	0	
07.13	Motor PTC Protection Input Response Time	0–9999 (*2 ms)	100	
07.14	Motor PTC Overheat Protection Level	0.1–10.0 V	2.4	
07.15	Motor PTC Overheat Warning Level	0.1–10.0 V	1.2	
07.16	Motor PTC Overheat Reset Delta Level	0.1–5.0 V	0.6	
07.17	Motor PTC Overheat Action	0: Warn and ramp to stop 1: Warn and coast to stop 2: Warn and keep operating	0	

Group 8 Special Parameters

Parameter	Explanation	Settings	Default	Customer
08.00	DC Brake Current Level	0–100%	0	
08.01	DC Brake Time during Start-Up	0.0-60.0 sec.	0.0	
08.02	DC Brake Time during Stopping	0.0-60.0 sec.	0.0	
08.03	Start-point for DC Brake	0.00–400.0 Hz	0.00	
08.04	Momentary Power Loss Action	O: Operation stops (coast to stop) after momentary power loss : Operation continues after momentary power loss, speed search starts with the last frequency : Operation continues after momentary power loss, speed search starts with the minimum frequency	0	
08.05	Maximum Allowable Power Loss Time	0.1–20.0 sec.	2.0	
08.06	Base Block Speed Search	Disable Speed search starts with the last frequency command Speed search starts with the minimum output Frequency (Pr.01.05)	1	
08.07	Base Block Time for Speed Search (B.B.)	0.1–5.0 sec.	0.5	
08.08	Current Limit for Speed Search	30–200%	150	
№ 08.09	Skip Frequency 1 Upper Limit	0.00–400.00 Hz	0.00	
⊮ 08.10	Skip Frequency 1 Lower Limit	0.00-400.00 Hz	0.00	
 ∕ 08.11	Skip Frequency 2 Upper Limit	0.00–400.00 Hz	0.00	
№ 08.12	Skip Frequency 2 Lower Limit	0.00–400.00 Hz	0.00	
№ 08.13	Skip Frequency 3 Upper Limit	0.00–400.00 Hz	0.00	
№ 08.14	Skip Frequency 3 Lower Limit	0.00–400.00 Hz	0.00	
08.15	Number of Auto-restarts after Fault	0–10	0	
08.16	Auto-reset Time for Restart after Fault	0.1-6000 sec.	60.0	
08.17	Auto-energy Saving	O: Disable Energy-saving operation Enable Energy-saving operation	0	
08.18	Automatic Voltage Regulation (AVR)	O: AVR function enable 1: AVR function disable 2: AVR function disable for deceleration 3: AVR function disable for stop	0	
 ∕ 08.20	Compensation Coefficient for Motor Instability	0.0–5.0	0.0	
08.21	DC Current Level during Preheating	0–100%	0	
08.22	DC Current Cycle Time during Preheating	0–100%	0	
		0 : No function		
08.23	Fire mode	1 : Forward running	0	
		2 : Reverse in reverse		
08.24	Operating Frequency during Fire Mode	0.00-400.00 Hz	60.00	

Chapter 4 Parameters / VFD-EL-W

Parameter	Explanation	Settings	Default	Customer
08.25	Number of Fire Mode Actions	Refer to parameter description	Read only	

Group 9 Communication Parameters

Parameter	Explanation	Settings	Default	Customer
№ 09.00	Communication Address	1–254	1	
		0: Baud rate 4800 bps (bits / second)		
./00.04	Turnamiraira Cura d	1: Baud rate 9600 bps (bits / second)	1	
№ 09.01	Transmission Speed	2: Baud rate 19200 bps (bits / second)		
		3: Baud rate 38400 bps (bits / second)		
		0: Warn and keep operating		
./00.00	T	1: Warn and ramp to stop	0	
№ 09.02	Transmission Fault Action	2: Warn and coast to stop	3	
		3: No warning and keep operating		
№ 09.03	Time-out Detection	0.0–120.0 sec.	0.0	
7 09.03	Time-out Detection	0.0: Disable		
		0: 7,N,2 (Modbus, ASCII)	0	
		1: 7,E,1 (Modbus, ASCII)		
		2: 7,O,1 (Modbus, ASCII)		
		3: 8,N,2 (Modbus, RTU)		
		4: 8,E,1 (Modbus, RTU)		
(00.04	O	5: 8,O,1 (Modbus, RTU)		
№ 09.04	Communication Protocol	6: 8,N,1 (Modbus, RTU)		
		7: 8,E,2 (Modbus, RTU)		
		8: 8,O,2 (Modbus, RTU)		
		9: 7,N,1 (Modbus, ASCII)		
		10: 7,E,2 (Modbus, ASCII)		
		11: 7,O,2 (Modbus, ASCII)		
№ 09.07	Response Delay Time	0–200 (1 unit = 2 ms.)	1	

Group 10 PID Control Parameters

Parameter	Explanation	Settings	Default	Customer
		0: Disable PID operation		
		1: Digital keypad UP/DOWN keys		
10.00	PID Set Point Selection	2: Reserved	0	
		3: Reserved		
		4: PID set point (Pr.10.11)		
10.01	Input Terminal for PID Feedback	O: Positive PID feedback from external terminal AVI (0–10 V _{DC}) 1: Negative PID feedback from external terminal AVI (0–10 V _{DC}) 2: Positive PID feedback from external terminal ACI (4–20 mA) 3: Negative PID feedback from external terminal ACI (4–20 mA)	0	
⊮ 10.02	Proportional Gain (P)	0.0–10.0	1.0	
⊮ 10.03	Integral Time (I)	0.00-100.0 sec. (0.00=disable)	1.00	
№ 10.04	Differential Time (D)	0.00-1.00 sec.	0.00	
10.05	Upper Bound for Integral Control	0–100%	100	
10.06	PID Filter Time	0.0–2.5 sec.	0.0	
10.07	PID Output Frequency Limit	0–110%	100	
10.08	PID Feedback Signal Detection Time	0.0-3600.0 sec.	60.0	
	5,5 5 11 1	0: Warn and ramp to stop		
10.09	Erroneous PID Feedback Signal Action	1: Warn and coast to stop	0	
		2: Warn and keep operation		
10.10	Gain Over the PID Detection Value	0.0–10.0	1.0	
⊮ 10.11	PID Set Point Value	0.00–400.00 Hz (valid when Pr.10.00=4)	0.00	
10.12	PID Deviation Level	0.0–100.0%	10.0	
10.13	PID Deviation Detection Time	0.1–300.0 sec.	5.0	
10.14	Sleep Detection Time	0.0-6550 sec.	0.0	
10.15	Sleep Frequency	0.00 to Fmax Hz	0.00	
10.16	Wake-up Frequency	0.00 to Fmax Hz	0.00	
10.17	PID Offset	0.00–60.00 Hz	0.00	
10.18	Feedback of PID Physical Quantity Value	1.0–99.9	99.9	
10.19	PID Calculation Mode Selection	0: Serial mode 1: Parallel mode	0	

Parameter	Explanation	Settings	Default	Customer
10.20	Erroneous PID Feedback Deviation Level Action	0: Warn and keep operating 1: Warn and coast to stop 2: Warn and ramp to stop 3: Ramp to stop and restart after Pr.10.21 delay time (No display of error and warning) 4: Ramp to stop and restart after Pr.10.21 delay time. The number of times of restart is limited by Pr.10.50 (Number of Times of Restart after PID Fault).	0	
10.21	Restart Delay Time after Erroneous PID Deviation Level	0–9999 sec.	60	
⊮ 10.22	Set Point Deviation Level	0–100%	0	
⊮ 10.23	Detection Time of Set Point Deviation Level	0–9999 sec.	10	
№ 10.24	Deviation Level of Liquid Leakage	0–50%	0	
⊮ 10.25	Liquid Leakage Change Detection	0–100% (0: disable)	0	
⊮ 10.26	Time Setting for Liquid Leakage Change	0.1–10.0 sec. (0: disable)	0.5	
10.35	Multi-Pump Control Mode	Disable Tixed Time Circulation (alternative operation) Fixed quantity control (multi-pump operating at constant pressure)	0	
10.36	Multi-pump ID	0: Multi-pump control mode is disabled 1: Master 2–4: Slave	0	
⊮ 10.37	Multi-pump's Fixed Time Circulation Period	1–65535 (minute)	60	
⊮ 10.38	Frequency to Start Switching Pumps	0.00 Hz–Fmax	60.00	
⊮ 10.39	Time Detected When Pump Reaches the Starting Frequency	0.0-3600.0 sec.	1	
№ 10.40	Frequency to Stop Switching Pumps	0.00 Hz–Fmax	48.00	
1 0.41	Time Detected When Pump Reaches the Stopping Frequency	0.0-3600.0 (sec.)	1.0	
№ 10.42	Pump's Frequency at Timeout (Disconnection)	0.00 Hz–Fmax	0.00	
10.43	Pump's Error Treatment	bit0: Determines whether the erroneous pump switches to an alternative pump when an error occurs in the running pump 0: All pumps stop 1: Switch to an alternative pump	1	

Parameter	Explanation	Settings	Default	Customer
		bit1: Determines the erroneous pump to be in a standby or stop status after reset 0: Set the erroneous pump to be in a standby status after reset 1: Set the erroneous pump to be in a stop status after reset bit2: Determines whether the master pump received the RUN command or not when an error occurs in the running pump 0: When an error occurs in the running pump, the master pump does not receive the RUN command 1: When an error occurs in the running pump, the master pump can choose to run with an alternative pump, instead of the erroneous		
10.44	Selection of Pump's Start- up Sequence	0: By pump ID # 1: By running time.	1	
⊮ 10.45	Running Time of Multi- pump Under Alternative Operation	0.0–360.0 sec.	60.0	
№ 10.49	Specify the Setting for Pr.10.12 [PID Deviation Level]	O: Use the existing setting (default), and check for any error per the feedback deviation 1: Set the low water pressure percentage (%), and check for any error per the physical quantity feedback.	0	
 10.50	Number of Times of Restart after PID Fault	0–1000 times	0	

4.2 Parameter Settings for Applications

Speed Search

Applications	Purpose	Functions	Related Parameters
Windmills, winding machines, fans and all inertia loads	Restart a free-running motor	Before the free-running motor stops completely, the AC motor drive auto-searches the motor speed and accelerates when its speed is the same as the motor speed.	08.04–08.08

DC Brake before Running

Applications	Purpose	Functions	Related Parameters
,	I K OON THO TROO_TI INNING	If the running direction of the free-running motor is not steady, execute DC brake before start-up.	08.00, 08.01

Energy Saving

Applications	Purpose	Functions	Related Parameters
Punching machines, fans, pumps and precision machinery	vibration	Save energy when the AC motor drive runs at constant speed, yet has full power acceleration and deceleration. For precision machinery, it also helps reduce vibration.	08.17

Eight-step Speed Operation

Applications	Purpose	Functions	Related Parameters
Conveying machinery	Cyclic operation at multi- step speed	To control eight-step speed (including master frequency) and duration by simple contact signals.	04.06–04.08 05.00–05.06

Switching Acceleration and Deceleration Time

Applications	Purpose	Functions	Related Parameters
Auto-turntable for conveying machinery	deceleration time through	When an AC motor drive drives two or more motors, it can reach a high-speed but still start and stop smoothly.	01.09–01.12 04.06–04.08

Overheating Warning

Applications	Purpose	Functions	Related Parameters
Air conditioners	Safety measure	When an AC motor drive overheats, a thermal sensor triggers the overheating warning.	03.00, 04.06–04.08

Operation Command

Applications	Purpose	Functions	Related Parameters
General application	Select the control signal source	Select the AC motor drive control by external terminals or digital keypad-or RS-485.	02.01, 04.06–04.08

Frequency Hold

Applications	Purpose	Functions	Related Parameters
General application	Acceleration / deceleration pause	Hold output frequency during acceleration / deceleration	04.06–04.08

Auto-restart after Fault

Applications	Purpose	Functions	Related Parameters
Air conditioners, remote pumps	For continuous and reliable operation	The AC motor drive can automatically restart / reset up to 10 times after a fault occurs.	08.15, 08.16

Emergency Stop by DC Brake

Applications	Purpose	Functions	Related Parameters
High-speed rotors	Emergency stop without brake resistor	The AC motor drive can use the DC brake for emergency stop when a quick stop is needed without a brake resistor. Take motor cooling into consideration when using DC braking often.	08.00–08.03

Over-torque Setting

Applications	Purpose	Functions	Related Parameters
Pumps, fans and extruders	To protect machines and for continuous / reliable operation	Set the over-torque detection level. When OC stall, OV stall or over-torque occurs, the drive automatically adjusts the output frequency. It is suitable for machines like fans and pumps that require continuous operation.	06.00–06.05

Upper / Lower Limit Frequency

Applications	Purpose	Functions	Related Parameters
Pumps and fans	•	When you cannot provide the upper / lower limit, gain or bias from external signals, you can set the limits in the AC motor drive.	01.07 01.08

Skip Frequency Setting

Applications	Purpose	Functions	Related Parameters
Pumps and fans	To prevent machine resonance vibration	The AC motor drive does not run at constant speed in the skip frequency range. You can set up to three skip frequency ranges.	08.09–08.14

Carrier Frequency Setting

Applications	Purpose	Functions	Related Parameters
General application	l Reduce noise	Increase the carrier frequency to reduce motor noise.	02.03

Keep Running when Frequency Command is Lost

Applications	Purpose	Functions	Related Parameters
Air conditioners	For continuous operation	When the frequency command is lost because of a system malfunction, the AC motor drive still runs. Suitable for intelligent air conditioners.	02.06

Output Signal during Running

Applications	Purpose	Functions	Related Parameters
General application; mechanical brake	Provide a signal for running status	Signal available to stop braking (brake release) when the AC motor drive is running. (This signal disappears when the AC motor drive is free-running.)	03.00

Output Signal in Zero Speed

Applications	Purpose	Functions	Related Parameters
General application; machine tools	Provide a signal for running status	When the drive's output frequency is lower than the minimum output frequency, gives a signal for an external system or control wiring.	03.00

Output Signal at Set Frequency

Applications	Purpose	Functions	Related Parameters
General application; machine tools	Provide a signal for running status	When the drive's output frequency reaches the set frequency (from the frequency command), gives a signal for an external system or control wiring (frequency reached).	03.00

Output Signal at Over-torque

Applications	Purpose	Functions	Related Parameters
Machine tools, fans, pumps, and extruders	To protect machines and for reliable operation	When the motor over-torque is larger than the drive's setting level, gives a signal to prevent the machine from damage due to load.	03.00, 06.04–06-05

Output Signal at Low Voltage

	Applications	Purpose	Functions	Related Parameters
Gene	erai anniication		When low voltage is detected after the motor detects the P-N voltages, gives a signal for an external system or control wiring.	03.00

Output Signal at Desired Frequency

Applications	Purpose	Functions	Related Parameters
General application	Provide a signal for running status	When the drive's output frequency reaches the desired frequency, gives a signal for an external system or control wiring.	03.00–03.02

Output Signal for Base Block

Applications	Purpose	Functions	Related Parameters
General application	Provide a signal for running status	When executing a Base Block, gives a signal for an external system or control wiring.	03.00

Overheating Warning for Heat Sink

Applications	Purpose	Functions	Related Parameters
General application	For safety	When the heat sink overheats, gives a signal for an external system or control	03.00
		wiring.	

4.3 Description of Parameter Settings

Group 0: User Parameters

✓ You can set this parameter during operation.

00.00	AC Motor Drive Identity Code						
	Settings	Read Only	Default: ##				
00.01	AC Motor I	Drive Rated Current Display					
	Settings	Read Only	Default: #.#				

- Pr. 00.00 displays the AC motor drive identity code. The identity code includes the capacity, rated current, rated voltage and the maximum carrier frequency. The following table explains the identity code.
- Pr.00.01 displays the rated current of the AC motor drive. You can use it to check if the AC motor drive is correct.

230V Series					
kW	0.2	0.4	0.75	1.5	2.2
HP	0.25	0.5	1.0	2.0	3.0
Pr.00.00	0	2	4	6	8
Rated Output Current (A)	1.6	2.5	4.2	7.5	11.0
Max. Carrier Frequency			12 kHz		

	460V S	eries			
kW	0.4	0.75	1.5	2.2	4.0
HP	0.5	1.0	2.0	3.0	5.5
Pr.00.00	3	5	7	9	11
Rated Output Current (A)	1.5	2.5	4.2	5.5	9.0
Max. Carrier Frequency			12 kHz		

00.02 Parameter Reset

Default: 0

- Settings 0 Parameter can be read/written
 - 1 All parameters are read-only
 - 8 Keypad lock
 - 9 Reset all parameters to defaults (50Hz, 230V/400V or 220V/380V depending on Pr.00.12)
 - 10 Reset all parameters to defaults (60Hz,-220V/440V)
- 9 or 10: Resets all parameters to defaults when the parameter settings are abnormal.
- 9: Resets all parameters to defaults for 50 Hz; the base voltage depends on the Pr.00.12 settings.
- 1: All parameters are read-only and you cannot change any parameter settings. Err displays when you enter any input. To write all parameters, set Pr.00.02 = 0.

00.03 ✓ Start-up Display Selection

Default: 0

Settings 0 Display the frequency command value (F)

- 1 Display the actual output frequency (H)
- 2 Display the output current in Amps supplied to the motor (A)
- 3 Display the content of the user-defined unit (U)
- 4 FWD/REV command
- Determines the start-up display page after power is applied to the drive.

00.04	/ Conten	t Of IVIC	ulti-function Display		Default: 0
	Settings	0	Display the content of the user-defined unit (U)	u 20	Delault. 0
	oougo	1	Display the counter value that counts the number of pulses on TRG terminal (c)	c 20	
		2	Display status of multi-function input terminals	8:::::	
		3	Display the actual DC bus voltage in V _{DC} for the AC motor drive	υ3:0	
		4	Display the output voltage in V_{AC} for terminals U/T1, V/T2, W/T3 to the motor. (E)	8220	
		5	Display the PID analog feedback signal value in % (b)	b 0.0	
		6	Display the power factor angle in $^{\rm o}$ for terminals U/T1, V/T2, W/T3 to the motor (n)	n 80.0	
		7	Display the output power in kW for terminals U, V and W to the motor. (P)	P0.00	
		8	Display the setting values for PID control and feedback signal.	00:00	
		9	Display the signal of the AVI analog input terminal (V).	<i>i</i> 0.0	
		10	Display the signal of the ACI analog input terminal that corresponds to 0–100% (mA/V) (i).	C 0.0	
		11	Display the temperature of the IGBT in °C (h)	h30.0	
Whe	n you set Pr	r.00.03	to 3, the display is according to Pr.00.04.		
00.05	⊮ User-	define	d Coefficient K		Unit: 0.1
	Settings		0.1–160.0	Е	Default: 1.0
The	display valu -defined uni	e is ca it (U) = re Ver	ying factor (K) for the user-defined unit. lculated as follows: Output frequency (H) * User-defined Coefficient (K) (Pr.00.05) sion Read Only		efault: #.##
00.07	Reserv	ed			
00.0	Passwo	ord Inp	put		Unit: 1
	Setting	s	0–9999		Default: 0
Ente settir	r the passw ngs. You are	ord tha	the number of wrong password attempts. at is set in Pr.00.09. Enter the correct password here to enable changed to a maximum of three attempts. After three consecutive failed an anust restart the AC motor drive before you can try again to enter the	ittempts, a b	olinking

00.09	Set Password				
	Settings	0–9999	Default: 0		

Sets a password to protect your parameter settings.

If the display shows 0, no password is set or the password is correctly set in Pr.00.08. You can then change all parameters, including Pr.00.09.

The first time you can set a password directly. After successfully setting the password, the display shows 1. Be sure to record the password for later use.

To cancel the parameter lock, set Pr.00.09 to 0 after entering the correct password in Pr.00.08.

The password consists of between 1-4 digits.


You can re-enable the password after decoding with Pr.00.08:

Method 1: Enter the original password in Pr.00.09 again (or you can enter a new password; be sure to record it).

Method 2: Restart the drive to re-enable the password function.

Method 3: Enter any value that is not the password in Pr.00.08. (Pr.00.08 displays End regardless of whether the password is entered correctly.)

Password Decode Flow Chart

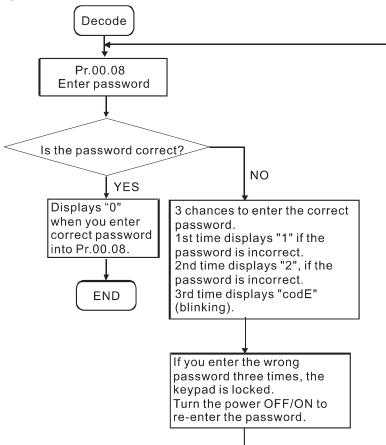

			le	Control Mod	00.10		
Default: 0							
	ol	V/F Control	0	Display			
	ontrol	Vector Control	1				

- Determines the control method for the AC motor drive.
- The V/F control is a constant value control mode. In this control mode, frequency decreasing and magnetic field increasing are under control. But as the frequency decreases, a problem rises: the insufficiency of motor's torque in a weaken low frequency magnetic field. To solve this problem, set Pr.07.02 Torque Compensation to compensate torque then to have the best operating performance. Common applications are water pumps, conveyors, compressors and treadmills.
- Vector Control: The vector control mode can eliminate the relationship between the field current vector and the armature flux, and auto-tune the torque compensation and slip compensation to increase the dynamic response of the motor drive. Common applications are textile equipment, printing equipment, crane equipment and drilling machinery.

Related parameter: Pr.07.02 Torque Compensation.								
00.11	Reserved							
00.12	50 Hz Base	Voltag	je Selection					
								Default: 0
	Settings	0	230V/400V					
		1	220V/380V					


Determines the base voltage for 50 Hz.

00.13 User-defined	Value (corre	sponds to maximum operating frequency Pr.01.00)				
Settings	0–9999	Default: 0				
The ranges for man	y functions di	automatically disappears in frequency mode and the rightmost digit blinks. splay according to Pr.00.13, including the UP/DOWN key on keypad unction, and JOG function.				
		d the frequency source is from communications, use Pr.02.18 to change the sing communication address 2001H.				
00.14 Decimal Pla	ce of User-de	fined Value				
 Settings	0–3	Default: 0				
Sets the place of de	cimal point fo	r Pr.00.13.				
Example: If you want to set the user-defined value to 10.0, set Pr.00.13 to 100 and Pr.00.14 to 1.						

Group 1: Basic Parameters

·	✓ You can set this parameter during operation.
01.00 Maximum Output Frequency (Fmax)	Unit: 0.01
Settings 50.00–400.0 Hz	Default: 60.00
Determines the AC motor drive's Maximum Output Fr sources (analog inputs 0–10 V and 4–20 mA) are sca	
01.01 Motor Rated Frequency (Fbase)	Unit: 0.01
Settings 0.10–400.0 Hz	Default: 60.00
you set the maximum voltage frequency to 60 Hz, the	as indicated on the motor nameplate. The Maximum or example, if the drive is rated for 460 V _{AC} output and drive maintains a constant ratio of 7.66 V/Hz (460 V / 60 to or greater than the Mid-Point Frequency (Pr.01.03).
01.02 Motor Rated Voltage (Vbase)	Unit: 0.1
Settings 230V series 0.1–255.0 V	Default: 220.0
460V series 0.1–510.0 V	Default: 440.0
For 230V series, the default is 220.0 V; for 460V series	es, the default is 440.0 V.
Sets the maximum output voltage. The setting must be indicated on the motor nameplate.	e smaller than or equal to the rated motor voltage as
01.03 Mid-Point Frequency (Fmid)	Unit: 0.01
Settings 0.10–400.0Hz	Default: 1.50
Sets the Mid-Point Frequency of any V/F curve. This Frequency and the Mid-Point frequency.	setting determines the V/F ratio between the Minimum
01.04 Mid-Point Voltage (Vmid)	Unit: 0.1
Settings 230V series 0.1–255.0 V	Default: 10.0
460V series 0.1–510.0 V	Default: 20.0
For 230V series, the default is 10.0 V; for 460V series Sets the Mid-Point Voltage of any V/F curve. This set Frequency and the Mid-Point Frequency.	
01.05 Minimum Output Frequency (Fmin)	Unit: 0.01
Settings 0.10–400.00 Hz	Default: 1.50
Sets the Minimum Output Frequency of the AC motor Mid-Point Frequency (Pr.01.03).	drive. This parameter must be equal to or less than the
01.06 Minimum Output Voltage (Vmin)	Unit: 0.1
Settings 230V series 0.1–255.0	0 V Default: 10.0
460V series 0.1–510.0	0 V Default: 20.0
For 230V series, the default is 10.0 V; for 460V series	s, the default is 20.0 V.
	ive. This parameter must be equal to or less than the Mid-
The settings for Pr.01.01–Pr.01.06 must meet the cor Pr.01.03 \geq Pr.01.05.	ndition of Pr.01.02 ≥ Pr.01.04 ≥ Pr.01.06 and Pr.01.01 ≥
01.07 Output Frequency Upper Limit	Unit: 0.1
Settings 0.1–120.0%	Default: 110.0
This parameter must be equal to or greater than the Output Frequency (Pr.01.00) is equal to 100%.	Output Frequency Lower Limit (Pr.01.08). The Maximum
The Output Frequency Upper Limit value = (Pr 01 00)	* Pr 01 07) /100

The Output Frequency Upper Limit value = (Pr.01.00 * Pr.01.07) /100.

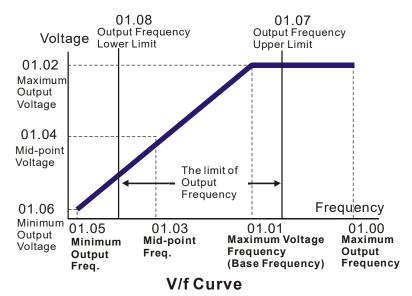

01.08	Output Freque	ency Lower Limit	Unit: 0.1
	Settings	0.0–100.0%	Default: 0.0


- The Output Frequency Lower Limit value = (Pr.01.00 * Pr.01.08) / 100.
- The Upper / Lower Limits are to prevent operation faults and machine damage.
- If the Output Frequency Upper Limit is 50 Hz and the Maximum Output Frequency (Pr.01.00) is 60 Hz, the Output Frequency will be limited to 50 Hz.
- If the Output Frequency Lower Limit is 10 Hz, and the Minimum Output Frequency (Pr.01.05) is 1.0 Hz, then any command frequency between 1.0–10 Hz generates a 10 Hz output from the drive. If the command frequency is less than 1.0 Hz, the drive is in ready status without output.
- If the Output Frequency Upper Limit is 60 Hz and the Maximum Output Frequency (Pr.01.00) is 60 Hz, the maximum output frequency will not be larger than 60 Hz even executing slip compensation. If the output frequency must be larger than 60 Hz, adjust the output frequency upper limit or increase the maximum operation frequency.

01.09		Time 1 (Taccel 1)	Unit: 0.1/0.01
01.10	✓ Deceleration	Time 1 (Tdecel 1)	Unit: 0.1/0.01
01.11		Time 2 (Taccel 2)	Unit: 0.1/0.01
01.12	✓ Deceleration	Time 2 (Tdecel 2)	Unit: 0.1/0.01
	Settings	0.1-600.0 sec. / 0.01-600.00 sec.	Default: 10.0

You can switch the acceleration/deceleration time 1 or 2 by setting the external terminals MI2–MI4 to 7.


01.19	Acceleratio	celeration / Deceleration Time Unit			
				Default: 0	
	Settings	0	Unit: 0.1 sec.		
		1	Unit: 0.01 sec.		

- Use the Acceleration Time to determine the time required for the AC motor drive to ramp from 0.0 Hz to Maximum Output Frequency (Pr.01.00). Use the Deceleration Time to determine the time required for the AC motor drive to decelerate from the Maximum Output Frequency (Pr.01.00) down to 0 Hz.
- You select the Acceleration/Deceleration Time 1, 2 with the Multi-function Input Terminals Settings. The defaults are Acceleration Time 1 / Deceleration Time 1.
- The setting for Pr.01.19 changes the time unit of Pr.01.09–Pr.01.12, Pr.01.13, and Pr.01.14, further changing the setting range of the acceleration / deceleration time.

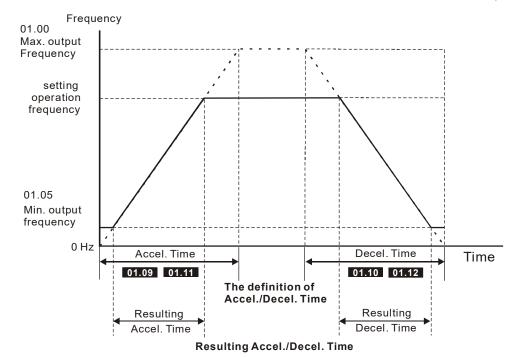

01.13	✓ Jog Accel	leration Time	Unit: 0.1/0.01
	Settings	0.1-600.0/0.01-600.0 sec.	Default: 1.0
01.14	✓ Jog Dece	leration Time	Unit: 0.1/0.01
•	Settings	0.1 to 600.0/0.01 to 600.0 sec.	Default: 1.0
01.15	✓ Jog Frequ	uency	Unit: 0.01
	Settings	0.10 to 400.0 Hz	Default: 6.00

- Use only external terminal JOG (setting MI2, MI3 or MI4 to 8). When the Jog command is ON, the AC motor drive accelerates from the Minimum Output Frequency (Pr.01.05) to the Jog Frequency (Pr.01.15). When the Jog command is OFF, the AC motor drive decelerates from the Jog Frequency to zero. The acceleration/deceleration time is set by the Jog Acceleration/Deceleration time (Pr.01.13, Pr.01.14).
- The drive must be stopped before using the JOG command. During Jog operation, other operation commands are not accepted, except FORWARD/REVERSE commands.

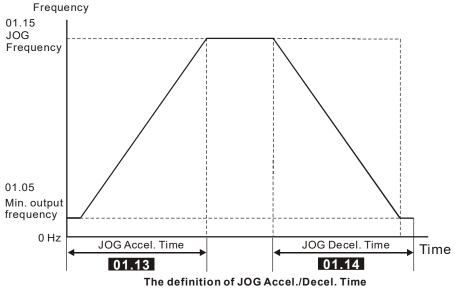

01.16 Auto-Acceleration and Auto-Deceleration

Default: 0

- Settings 0 Linear acceleration and linear deceleration
 - 1 Auto-acceleration and linear deceleration.

- 2 Linear acceleration and auto-deceleration.
- 3 Auto-acceleration and auto-deceleration (set by load)
- 4 Auto-acceleration and auto-deceleration (set by Acceleration/Deceleration Time setting)
- With auto-acceleration and auto-deceleration it is possible to reduce vibration and shocks during starting and stopping the load.

During auto-acceleration, the torque is automatically measured and the drive accelerates to the set frequency with the shortest acceleration time and the smoothest starting current.

During auto-deceleration, the drive measures the regenerative energy and the motor is stopped smoothly with the shortest deceleration time.

When this parameter is set to 4, the actual acceleration/deceleration time are equal to or greater than Pr.01.09–Pr.01.12.

- Auto-acceleration and auto-deceleration makes the complicated processes of tuning unnecessary. It makes operation efficient and saves energy by acceleration without stalling and deceleration without using the brake resistor.
- In applications with the brake resistor or brake unit, it is not recommended to use auto-deceleration.

01.17	Acceleratio	n S-Curve	Unit: 0.1 / 0.01
01.18	Deceleration	on S-Curve	Unit: 0.1 / 0.01
			Default: 0.0 / 0.00
	Settings	0.0	S-curve disabled
		0.1-10.0/0.01-10.00	S-curve enabled (10.0/10.00 is the smoothest)


- Ensure smooth acceleration and deceleration using an S-curve.
 - 0: Disables the S-curve function.
 - 0.1-10.0/0.01-10.00: Enables the S-curve function.

Setting the parameter to 0.1/0.01 gives the shortest S-curve and setting the parameter to 10.0/10.00 gives the longest and smoothest S-curve.

The following diagram shows that the original setting of the Acceleration and Deceleration Time is only for reference when you enable the S-curve. The actual acceleration and deceleration time depends on the selected S-curve (0.1 to 10.0). Pr.01.17 must be smaller than Pr.01.09 or Pr.01.11; Pr.01.18 must be smaller than Pr.01.10 or Pr.01.12. Otherwise, the S-curve is invalid.

The total acceleration time = Pr.01.09 + Pr.01.17 or Pr.01.11 + Pr.01.17

The total deceleration time = Pr.01.10 + Pr.01.18 or Pr.01.12 + Pr.01.18

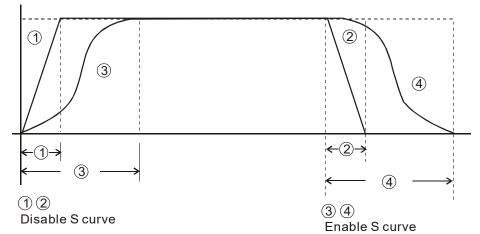

Acceleration/deceleration Characteristics

01.20	✓ Simple Po	ositioning Stop Frequency 0	Unit: 0.01
	Settings	0.00-400.00Hz	Default: 0.00
01.21		ositioning Stop Frequency 1	Unit: 0.01
	Settings	0.00-400.00Hz	Default: 5.00
01.22		ositioning Stop Frequency 2	Unit: 0.01
	Settings	0.00-400.00Hz	Default: 10.00

01.23		ositioning Stop Frequency 3	Unit: 0.01
	Settings	0.00-400.00Hz	Default: 20.00
01.24	✓ Simple Po ✓ Si	ositioning Stop Frequency 4	Unit: 0.01
	Settings	0.00-400.00Hz	Default: 30.00
01.25	✓ Simple Po ✓ Si	ositioning Stop Frequency 5	Unit: 0.01
•	Settings	0.00-400.00Hz	Default: 40.00
01.26	✓ Simple Po ✓ Si	ositioning Stop Frequency 6	Unit: 0.01
	Settings	0.00–400.00 Hz	Default: 50.00
01.27		ositioning Stop Frequency 7	Unit: 0.01
	Settings	0.00–400.00 Hz	Default: 60.00
	·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·


- The setting for Pr.01.20–Pr.01.27 must follow the condition below:
- \square Pr.01.20 \leq Pr.01.21 \leq Pr.01.22 \leq Pr.01.23 \leq Pr.01.24 \leq Pr.01.25 \leq Pr.01.26 \leq Pr.01.27
- If any two of the parameters (between Pr.01.20–Pr.01.27) have the same stop frequency, set their Delay Time of Simple Positioning Stop to the same values.

01.28	✓ Delay	Time of Simple Positioning Stop 0	Unit: 0.01
	Settings	0.00-600.00 sec.	Default: 0.00
01.29	✓ Delay	Time of Simple Positioning Stop 1	Unit: 0.01
	Settings	0.00-600.00 sec.	Default: 0.00
01.30	✓ Delay	Time of Simple Positioning Stop 2	Unit: 0.01
	Settings	0.00-600.00 sec.	Default: 0.00
01.31	✓ Delay	Time of Simple Positioning Stop 3	Unit: 0.01
	Settings	0.00-600.00 sec.	Default: 0.00
01.32	✓ Delay	Time of Simple Positioning Stop 4	Unit: 0.01
	Settings	0.00-600.00 sec.	Default: 0.00
01.33	✓ Delay	Time of Simple Positioning Stop 5	Unit: 0.01
•	Settings	0.00-600.00 sec.	Default: 0.00
01.34	✓ Delay	Time of Simple Positioning Stop 6	Unit: 0.01
,	Settings	0.00-600.00 sec.	Default: 0.00
01.35	✓ Delay	Time of Simple Positioning Stop 7	Unit: 0.01
	Settings	0.00-600.00 sec.	Default: 0.00

- This is valid only when Pr.02.02 motor stop method is set to 4: simple positioning stop.
- The settings 0–7 for Pr.01.20–Pr.01.27 must work with the settings 0–7 for Pr.01.28–Pr.01.35 and correspond to each other. Below is their corresponding.

(Pr.01.20, Pr.01.28)
(Pr.01.21, Pr.01.29)
(Pr.01.22, Pr.01.30)
(Pr.01.23, Pr.01.31)
(Pr.01.24, Pr.01.32)
(Pr.01.25, Pr.01.33)
(Pr.01.26, Pr.01.34)
(Pr.01.27, Pr.01.35)

The function of Pr.01.28–Pr.01.35 is simple positioning. Speed starts to decelerate after the time set at Pr.01.28–Pr.01.35 elapses. The accuracy of positioning is self-assessed by user.

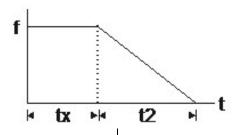

$$S = n \times \left(\frac{t_x + (t_x + t_2)}{2}\right)$$

 $n = f \times \frac{120}{p}$

s: operation distance (revolution)

n: rotation speed (revolution/second)

t_x: delay time (second)

t₂: deceleration time (second)


n: rotation speed (revolution/ minute)

p: number of poles in the motor

f: operation frequency (Hz)


The value of t_x in the equation above describes as below.

When the slope is negative (t1 > t2)

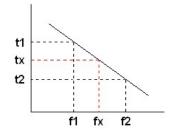


$$\mathbf{t}_{x} = t_{1} + \left(\frac{f_{x} - f_{1}}{f_{2} - f_{1}}\right) \times \left(t_{2} - t_{1}\right) = t_{1} + \left(\frac{f_{x} - f_{1}}{10}\right) \times \left(t_{2} - t_{1}\right)$$

When the slope is positive (t1 < t2)

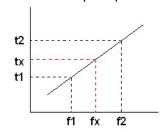

$$\mathbf{t}_{x} = t_{2} - \left(\frac{f_{2} - f_{x}}{f_{2} - f_{1}}\right) \times \left(t_{2} - t_{1}\right) = t_{2} - \left(\frac{f_{2} - f_{x}}{10}\right) \times \left(t_{2} - t_{1}\right)$$

As shown in the figure below, assume that the radius of the four-pole motor is r and rotation speed is n (RPM).

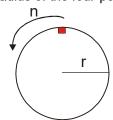


Example 1

When the motor swivel table rotates at 50 Hz, and Pr.02.02 = 4 [Simple Positioning Stop; E.F.: coast to stop], and Pr.01.26 = 50 Hz [Simple Positioning Stop Frequency 6], and its corresponding Pr.01.34 = 2 sec. [Delay Time of Simple Positioning Stop 6], then the deceleration time from 50 Hz to 0 Hz is 10 seconds.

After executing the stop command, Simple Positioning Stop activates, its rotation speed is $n = 120 \times 50 / 4$ (revolution / minute) = 25 (revolution / second)

The number of revolution of the swivel table = $(25 \times (2 + 12)) / 2 = 175$ (revolutions)

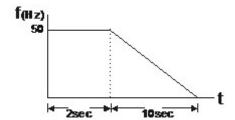

Therefore, the motor's operation distance after executing the stop command = number of revolutions x circumference = $175 \times 2 \pi r$. It also menas that the swivel table goes back to the top after 175 revolutions.


Example 2

Assume that the motor swivel table rotates at 1.5 Hz, and Pr.01.22 = 10 Hz [Simple Positioning Stop Frequency 2], and Pr.01.30 = 10 sec. [Delay Time of Simple Positioning Stop 2], then the deceleration time from 60 Hz to 0 Hz is 40 seconds.

The delay time at stop for 1.5 Hz is 1.5 second; the deceleration time from 1.5 Hz to 0 Hz is 1 second.

After executing the stop command, Simple Positioning Stop activates, its rotation speed is $n = 120 \times 1.5 / 4$ (revolution / minute) = 1.5 / 2 (revolution / second)

The number of revolution of the swivel table = $(1.5 / 2 \times (1.5 + 2.5)) / 2 = 1.5$ (revolutions)

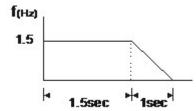

Therefore, the motor's operation distance after executing the stop command = number of revolutions x circumference = $1.5 \times 2 \, \text{mr}$. It also means the swivel table stops after running 1.5 revolutions.


Group 2: Operation Method Parameters

✓ You can set this parameter during operation.


				* You can set this parameter dum	ig operation.
02.00	✓ First Master F	req	uency Command Source		
					Default: 0
02.09	✓ Second Maste	er F	requency Command Source		
					Default: 0
S	ettings	0:	Digital keypad UP/DOWN keys	s or Multi-function Inputs UP/DOWN.	
		1:	0-10 V from AVI		
		2:	4-20 mA from ACI		
		3:	RS-485 (RJ45) communication	ı	
		4:	Digital keypad potentiometer		
Sets the	Master Freque	ency	Command Source for the AC n	notor drive.	
the frequence When us select AC	ency command by command an sing the AVI teri CI, the drive rec	d so nd so mina	urce is the setting for Pr.02.09. econd master frequency comma al, pay attention to the ACI / AV	07, or Pr.04.08 = 22. When setting 22 is You can only enable only one of the first and sources at one time. If dip switch location on the AC motor drival; if you select AVI, the drive receives 0	t master ve. If you
analog v	oltage signal.				
02.01	✓First Operatio	n C	ommand Source		
					Default: 0
S	Settings	0:	Digital keypad		
		1:	External terminals. Keypad ST	OP/RESET enabled.	
		2:	External terminals. Keypad ST	OP/RESET disabled.	
		3:	RS-485 communication. Keypa	ad STOP/RESET enabled.	
		4:	RS-485 communication. Keypa	ad STOP/RESET disabled.	
Sets the	operation com	mar	nd source of the drive.		
02.10	✓ Combining the	e Fi	rst and Second Master Frequen	icy Commands	
					Default: 0
S	Settings	0:	First Master Frequency Comm	nand Only	
		1:	First Master Frequency + Sec	ond Master Frequency	
		2:	First Master Frequency - Seco	nd Master Frequency	
02.02	Stop Method				
	-				Default: 0
S	Settings	0:	STOP: ramp to stop	E.F.: coast to stop	
		1:	STOP: coast to stop	E.F.: coast to stop	
		2:	STOP: ramp to stop	E.F.: ramp to stop	
		3:	STOP: coast to stop	E.F.: ramp to stop	
		4:	Simple positioning stop	E.F.: coast to stop	
•	ameter determi			n the AC motor drive receives a valid sto	p command
Ramp to		mote	or drive decelerates to the Minir	mum Output Frequency (Pr.01.05) accor	ding to the
				ly and the motor coasts until it comes to	a standstill.
	•		·	cteristics of the motor load and how freq	

- The motor stop method is usually determined by the characteristics of the motor load and how frequently it is stopped.
 (1) It is recommended that you use "ramp to stop" for the safety of personnel or to prevent material from
 - (1) It is recommended that you use "ramp to stop" for the safety of personnel or to prevent material from being wasted in applications where the motor has to stop after the drive is stopped. Set the deceleration time accordingly.
 - (2) If motor coasting is allowed or the load inertia is large, it is recommended that you use "coast to stop".

Example uses are blowers, punching machines, centrifuges and pumps.

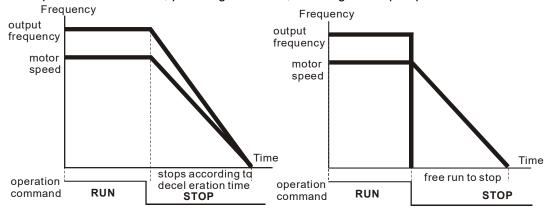

ramp to stop and free run to stop

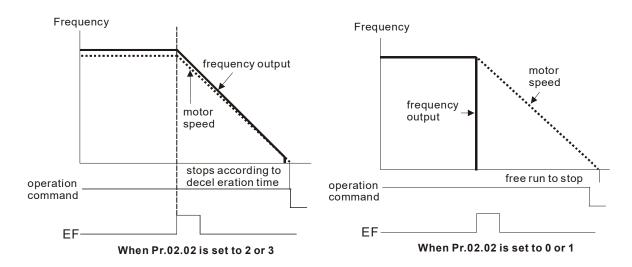

02.03 PWM Carrier Frequency Selection

Default: 8

Unit: 1


Settings 2–12 kHz

Determines the PWM carrier frequency of the AC motor drive.


Carrier Frequency	Acoustic Noise	Electromagnetic Noise or leakage current	Heat Dissipation	Current Wave
2kHz	Significant	Minimal ↑	Minimal ↑	Minimal
8kHz				
12kHz	↓ Minimal	↓ Significant	↓ Significant	Significant

From the table, you can see that the PWM carrier frequency has a significant influence on the electromagnetic noise, AC motor drive heat dissipation, and motor acoustic noise. The PWM carrier frequency is decreased automatically according to the ambient temperature and output current of the AC motor drives. It is used to prevent the AC motor drive from overheating and thus extend the IGBT's life. Increasing the PWM carrier frequency may reduce the noise of motor operation, but interference measures have to be taken for the consideration of overall wiring.

Take VFD007EL21W(-1) as an example, assume that the ambient temperature is 40°C, the drive output current must be controlled within 100% of the rated current. If the ambient temperature is 50°C, the drive output current should not exceed 80% of the rated current. For other models in an ambient temperature of 50°C, the drive output current must be controlled within 100% of the rated current; for other models in an ambient temperature of 60°C, the drive output current must be controlled within 80% of the rated current.

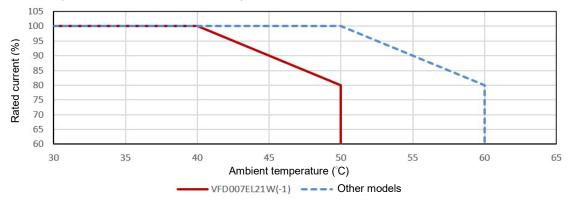

Take VFD007EL21W(-1) as an example, assume that the ambient temperature is 40°C, and default carrier frequency is 8 kHz, then the drive output current reaches 100% of the rated current; if the carrier frequency is 12 kHz, the drive output current must be controlled within 80% of the rated current. If the ambient temperature is 25°C, the installation method is single drive installation, and the carrier frequency is 12 kHz, then the drive reaches 100% of the rated current.

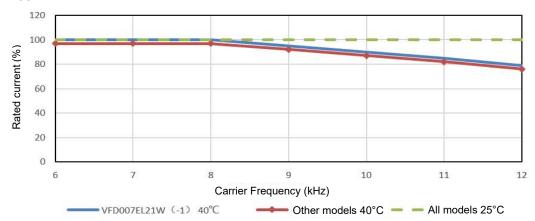

NOTE

Other models: VFD002EL21W(-1), VFD004EL21W(-1), VFD015EL21W(-1), VFD022EL21W(-1), VFD004EL43W(-1), VFD007EL43W(-1), VFD015EL43W(-1), VFD022EL43W(-1), VFD040EL43W(-1)

02.04 Motor Direction Control

Default: 0

Settings

- 0: Forward / Reverse operation enabled
- 1: Reverse operation disabled
- 2: Forward operation disabled
- Disables one direction of rotation for the AC motor drive.

02.05 Power-On Command and Run Command Source Modifies the Drive Operating Control

Default: 1

Settings

- 0: Start running when power is on.
- 1: Do not run when power is on.
- 2: When the source of the command changes, the drive's operation remains the same.
- 3: When the source of the command changes, the drive's operation follows the new command.
- 4: The motor drive can start to run at power on or after reset.

 When the source of the command is a two-wire external terminal, the operating

Determines the response of the drive at power-on and when the operation command source is changed.


Pr.02.05	Start lockout (Run when power is ON)	Operation status when operation command source is changed
0	AC motor drive runs	Keeps previous status
1	AC motor drive does not run	Keeps previous status
2	AC motor drive runs	Changes according to the new operation command source
3	AC motor drive does not run	Changes according to the new operation command source
4	AC motor drive runs	Changes as the external terminal's status changes

- Use this parameter to determine whether the AC motor drive receives the operation command or not when the operation command source is the external terminal, the operation command remains, and the AC motor drive power is ON.
 - 1. 0: The drive receives the operation command and runs immediately.
 - 2. 1: The drive does not receive the operation command. To make the motor run, cancel the operation command, and then input again.
 - 3. 4: It is an external terminal control setting when the motor drive restarts after an instantaneous power failure. When the motor drive has an instantaneous power failure, the DC bus decreases to Lv. If you send a command from the host computer while the DC bus is at Lv, and the operating command is still on conductive trigger, the motor drive can be restarted.

Power-on:

When the operation command source is the external terminal and the operation command is ON (MI1-DCM=closed), the AC motor drive operates according to Pr.02.05 after power is applied.


- (1) When you set Pr.02.05 to 0 or 2 or 4, the AC motor drive runs immediately.
- (2) When you set Pr.02.05 to 1 or 3, the AC motor drive remains stopped until the operation command is received after the previous operation command is cancelled.

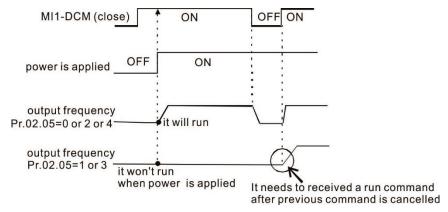

- When the operation command source is not the external terminals, regardless of whether the AC motor drive runs or stops, the AC motor drive operates according to Pr.02.05 if the two conditions below are both met.
 - 1. The operation command source is changed to external terminal (Pr.02.01 = 1 or 2)
 - 2. The status of the terminal and the AC motor drive are different.

And the operation of the AC motor drive will be:

- 1. When you set Pr.02.05 to 0 or 1, the status of the AC motor drive is not changed by the terminal status.
- 2. When you set Pr.02.05 to 2 or 3 or 4, the status of the AC motor drive is changed by the terminal status.

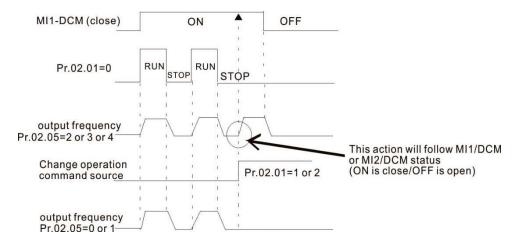

When you set Pr.02.05 to 1 or 3, it does not guarantee that the motor will never run under this condition. It is possible the motor may be set in motion by a malfunctioning switch.

02.06	Loss of ACI Signal (4–20 mA)

Default: 0

Settings 0: Decelerate to 0 Hz

- 1: Coast to stop and display "AErr"
- 2: Continue the operation according to the last frequency command
- 3: Continue the operation according to the setting at Pr.02.11.
- Determines the action when ACI signal is lost.
- 1: Display the warning message "AErr" on the keypad when the ACI signal is lost and execute the Pr.02.06 setting. When the ACI signal is recovered, the warning message atomically stops blinking. You can also press "STOP/RESET" to clear the warning message.

02.07 Up/Down Mode

Default: 0

Settings 0: Digital keypad up/down keys mode

1: Based on Accel./ Decel. Time

2: Constant speed (according to Pr.02.08)

3: Pulse input unit (according to Pr.02.08)

02.08	Accel. / Dec Speed	el. Rate of Change of UP / DOWN Operation with Constant	Unit: 0.01
	Settings	0.01-10.00 Hz/2ms	Default: 0.01

- Determine the increase / decrease of the master frequency when operated through the multi-function inputs and you set Pr.04.06–Pr.04.08 10 (Up command) or 11 (Down command).
- Pr.02.07=0: Use the external terminal's UP/DOWN keys to increase or decrease the frequency. This is valid only when the AC motor drive is running.
- Pr.02.07=1: Increase and decrease the frequency by the acceleration and deceleration settings. This is valid only when the AC motor drive is running.
- Pr.02.07=2: Increase and decrease the frequency by Pr.02.08 settings.
- Pr.02.07=3: Increase and decrease the frequency according to Pr.02.08 (unit: pulse input). Every ON after OFF is regarded as an input pulse.

02.11		quency Command	Unit: 0.01
	Settings	0.00–400.00 Hz	Default: 60.00

Sets the frequency command or reads the keypad frequency command.

02.12*/ Communication Frequency CommandUnit: 0.01Settings0.00-400.00 HzDefault: 60.00

Sets the frequency command or reads the communication frequency command.

02.13 Saving Keypad or Communication Frequency Command Selection

Default: 0

Settings 0: Save Keypad & Communication Frequency

1: Save Keypad Frequency Only

2: Save Communication Frequency Only

Saves the keypad or RS-485 frequency command.

02.14 Initial Frequency Selection (for Keypad & RS-485)

Default: 0

Settings 0 Current Frequency Command

1 Zero Frequency Command

2 Refer to Pr.02.15 to set up

02.15 Initial Frequency Setting (for Keypad & RS-485) Unit: 0.01

Settings 0.00–400.00 Hz Default: 60.00

Determinates the frequency at stop.

Pr.02.14=0: The initial frequency is the current frequency.

Pr.02.14=1: The initial frequency is 0.

Pr.02.14=2: The initial frequency is the Pr.02.15 setting.

02.16 Display the Master Frequency Command Source

Settings Read Only Default: Read Only

You can read the master frequency command source from this parameter.

Display Value	Bit	Function
1	bit0=1	The Master Frequency Command Source is the First Master Frequency Source (Pr.02.00).
2	bit1=1	The Master Frequency Command Source is the Second Master Frequency Source (Pr.02.09).
4	bit2=1	The Master Frequency Command Source is the Multi-function input.

02.17 Display the Operation Command Source

Settings Read Only Default: Read Only

You can read the operation command source from this parameter.

Display Value	Bit	Function	
1	bit0=1 Operation Command Source is the Digital Keypad		
2	bit1=1	Operation Command Source is the RS-485 communication	
4	bit2=1	Operation Command Source is the External Terminal (MI1)	
8	bit3=1	Operation Command Source is the Multi-function Input	

02.18	User-defined	d Value 2 Setting	
	Settings	0_Pr 00 13	Default: 0

Reads and writes the user-defined value settings. Changes the operation frequency when Pr.00.13 is not set to 0 and frequency source is from communication.

02.19	User-defined	Value 2	
	Settinas	Read only	Default: 0

For example, assume that the frequency source is the first frequency + the second frequency command (the first frequency source is the digital keypad and the second frequency source is AVI), the user-defined value 1 is set to 180.0 (Pr.00.13 is set to 1800; Pr.00.14 is set to 1).

When AVI=2V, the user-defined value is 36.0 [180.0/(2V/10V)], and the frequency is 12.0 Hz [36.0/(180.0/60.0)].

When Pr.02.18=30.0, the frequency is 10.0 Hz [30.0/(60.0/180.0)].

At this time, the keypad displays 66.0 (36.0+30.0), and the output frequency is 22.0 Hz (12.0+10.0). If you read the values by using the communication address, the values display as follows: 2102H and 2103H are 22.0 Hz; 0212H (Pr.02.18) is 30.0 Hz; 0213H (Pr.02.19) is 66.0.

✓ You can set this parameter during operation.

03.00 Multi-function Output Relay (RA1, RB1, RC1)

Default: 8

Settings 0–25


Settings	Function	Description	
0	No Function	There is no function for the output terminals.	
1	Indication During Run	Active when the drive is ready or RUN command is ON.	
2	Indication of Master Frequency Reached	Active when the AC motor drive reaches the output frequency setting.	
3	Zero Speed	Active when Frequency command is lower than the Minimum Output Frequency.	
4	Over-Torque Detection	Active when the drive detects over-torque. Pr.06.04 sets the over-torque detection level, and Pr.06.05 sets the over-torque detection time.	
5	Base Block (B.B.) Indication	Active when the output of the AC motor drive is shut off during Base Block. You can force Base Block with the multi-function input (setting 09).	
6	Low-Voltage Indication	Active when low voltage (Lv) is detected.	
7	Operation Mode Indication	Active when the operation command is controlled by the external terminal.	
8	Fault Indication	Active when the drive detects abnormal conditions; the contact will be closed (example: oc, ov, oH1, oL, oL1, EF, cF3.0–5, HPF1, 2, 4, ocA, ocd, ocn).	
9	Desired Frequency Reached	Active when the desired frequency (Pr.03.02) is reached.	
10	Terminal Count Value Reached	Active when the counter reaches the Terminal Count Value.	
11	Preliminary Count Value Reached	Active when the drive executes the external counter if the count value is equal to the setting value for Pr.03.06.	
12	Over-voltage Stall Prevention	Active when the Over-voltage Stall Prevention function is operating.	
13	Over-current Stall Prevention	Active when the Over-current Stall Prevention function is operating.	
14	IGBT Overheat Warning	When the IGBT overheats, it signals to prevent OH from turning off the drive. When the temperature is higher than 85°C (185°F), it is ON. When it is lower than 80°C (180°F), it is OFF.	
15	Over-voltage	Active when the DC bus voltage exceeds the setting level.	
16	PID Feedback Error	Active when the PID feedback signal is abnormal (refer to Pr.10.08 and Pr.10.12).	
17	Forward Command	Active when the direction command is FWD.	
18	Reverse Command	Active when the direction command is REV.	
19	Zero Speed Output Signal	Active when the drive is in standby or stop.	
20	Warning	Active when there is a communication warning (CExx, AoL2, AUE, FbE, SAvE).	
21	Mechanical Brake Control (Desired Frequency Reached)	Active when the output frequency \geq Pr.03.11. Deactivated when the output frequency \leq Pr.03.12 after STOP command.	
22	Drive Ready	Active when the drive is on and no abnormality is detected.	
23	Multi-pump System Error Display (Only Master)	If any error occurred on the drive for the multi-pump system, the RLY outputs.	

Settings	Function	Description
24	Preheating Function Indication	Active when the preheating function is enabled.
25	Fire Mode Indication	Active when MI is set to 27 or 28 (fire mode).

"Active" means ON or low voltage.

03.01	Reserved		
03.02	Desired Fre	quency Reached	Unit: 0.01
	Settings	0.00–400.0 Hz	Default: 0.00

If you set a multi-function output terminal to function as Desired Frequency Reached (Pr.03.00–Pr.03.01 = 09), then the output is activated when the output frequency reaches the Pr.03.02 setting.

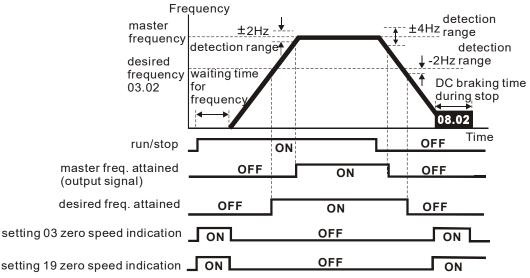

output timing chart of multiple function terminals when setting to frequency attained or zero speed indication

03.03	Reserved				
03.04	Reserved			-	
03.05	Terminal Co	ount Value			Unit: 1
	Settings	0–9999			Default: 0

Sets the count value of the internal counter.


You can use the external multi-function input terminals on the control terminals to trigger the counter. When the count reaches the setting value, the specified output terminal activates by setting one of the multi-function input terminals (the count value resets after reaching the setting for Pr.03.05).



When the display shows c555, the drive has counted 555 times. If the display shows c555•, it means that the actual counter value is between 5,550 and 5,559.

03.06	Preliminary Count Value		Unit: 1
	Settings	0–9999	Default: 0

- When the counter value counts from c1 to this setting value, the corresponding multi-function output terminal activates. You can use it as an indication for the AC motor drive running at low speed to stop when the counting is going to reach the setting value before stop.
- The timing diagram shows as follows:

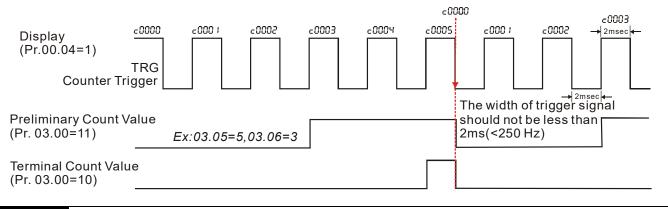

03.07 EF Active when Terminal Count Value Reached

Default: 0

Settings

- 0: Terminal count value reached, no EF display.
- 1: Terminal count value reached, EF active.
- If you set this parameter to 1 and the desired counter setting value is reached, the AC motor drive treats it as a fault. The drive stops and shows the "EF" message on the display. The AC motor drive continues to run until you press RESET.

03.08 Fan Control

Default: 0


Settings

- 0: Fan is always ON.
- 1: One minute after the AC motor drive stops, the fan is OFF.
- 2: Fan is ON when the AC motor drive runs, fan is OFF when the AC motor drive stops.
- 3: Fan is ON when the preliminary heat sink temperature is reached.
- 4: Fan is ON when the AC motor drive runs; fan is OFF when the AC motor drive stops. And the fan is in a standby mode at 0 Hz.
- Determines the operation mode of the cooling fan.
- This parameter is only valid for fan cooling models. The 1 HP models have no fans (convective cooling) so this parameter cannot be used for 1 HP models.

03.09	Reserved		
03.10	Reserved		
03.11	Mechanical	Brake Release Frequency	Unit: 0.01
	Settings	0.00-20.00 Hz	Default: 0.00
03.12	Mechanical	Brake Engage Frequency	Unit: 0.01
	Settings	0.00–20.00 Hz	Default: 0.00

- These two parameters set control of the mechanical brake through the output terminals (Relay) by setting Pr.03.00 to 21. Refer to the following example for details.

 Example:
 - 1. Case 1: Pr.03.12 ≥ Pr.03.11
 - 2. Case 2: Pr.03.12 ≤ Pr.03.11

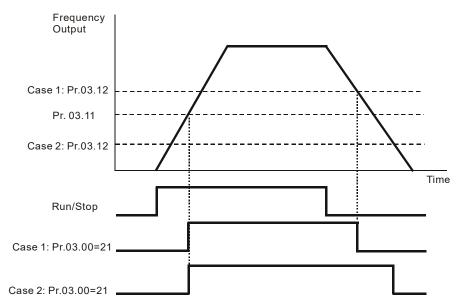

Pr.03.00 multi-function output terminal 21 (Mechanical Brake Control): When the output frequency reaches Pr.03.11 (Mechanical Brake Release Frequency), the multi-function output terminal is closed. When the output frequency reaches Pr.03.12 (Mechanical Brake Engage Frequency), the multi-function output terminal is open.

03.13	Display the	Status of the Multi-function Output Terminals	
	Settings	Read Only	Default: Read Only

- For the standard AC motor drive, the multi-function output terminals are falling-edge triggered.
- 0: Relay is ON; 1: Relay is OFF.

Group 4: Input Function Parameters

✓ You can set this parameter during operation.

04.00			Unit: 0. 1
	Settings	0.0–100.0%	Default: 0.0
04.01			
			Default: 0
	Settings	0: Positive Bias	
		1: Negative Bias	
04.02		Potentiometer Gain	Unit: 0.1
	Settings	0.1–200.0%	Default: 100.0
04.03	Keypad Pot Enable/Disa	entiometer Negative Bias, Reverse Motion able	
			Default: 0

Settings 0: No Negative Bias Command

1: Negative Bias: REV Motion Enabled

- Use Pr.04.00–04.03 for applications that use the potentiometer signal on the digital keypad to adjust the setting frequency. The potentiometer is not an external device, but you need to use it when setting parameters. Refer to the following examples to know how to use it.
- As shown in the left figure below, operating the potentiometer on the digital keypad to the leftmost means the minimum value that the lowest voltage 0 V_{DC} corresponds to. As shown in the right figure below, operating the potentiometer on the digital keypad to the rightmost means the maximum value that the highest voltage 5 V_{DC} corresponds to.






The minimum

The maximum


Example 1:

You set Pr.02.00 to 4 (the master frequency command comes from keypad potentiometer), set Pr.04.00~04.03 to defaults, and then you can set the main frequency command through the keypad potentiometer.

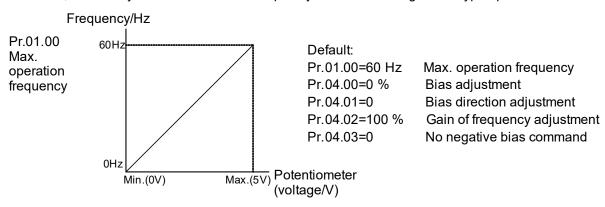

Example 2:

If you want the corresponded minimum value to be 12 Hz (the master frequency setting) when operating the keypad potentiometer to the leftmost, and you set other frequency settings, refer to the diagram below. The correspondence between the keypad potentiometer (voltage) and setting frequency has been changed from 0-5 V (min.-max.) / 0-60 Hz to 0-4 V / 0-60 Hz. Therefore, the 4 V and above from the keypad potentiometer all correspond to 60 Hz. To use the full potentiometer range, refer to Example 3.

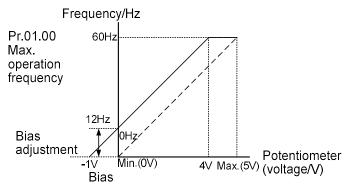

Default:
Pr.01.00=60 Hz Max. operation frequency
Pr.04.00=20 % Bias adjustment
Pr.04.01=0 Bias direction adjustment
Pr.04.02=100 % Gain of frequency adjustment
Pr.04.03=0 No negative bias command


To count the bias (See α in the formula)

$$\frac{60\text{-}0 \text{ Hz}}{5\text{V}} = \frac{12\text{-}0 \text{ Hz}}{\alpha\text{V}} \rightarrow \alpha = 1\text{V}$$

$$\therefore \text{ Pr.04.00} = \frac{1\text{V}}{5\text{V}} \times 100 \% = 20 \%$$

Example 3:

As shown in this example, the keypad potentiometer can be used for all ranges of 0-5 V / 0-60 Hz settings. This increases flexibility.

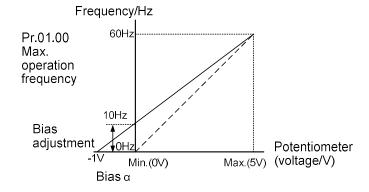

Default:
Pr.01.00=60 Hz
Pr.04.00=20 %
Pr.04.01=0
Pr.04.02=83.3 %
Pr.04.03=0

Max. operation frequency
Bias adjustment
Bias direction adjustment
Gain of frequency adjustment
No negative bias command


To count the bias (See α in the formula) $\frac{60-10Hz}{5V} = \frac{10-0Hz}{\alpha V} \rightarrow \alpha = 1V$

 $\therefore 04.00 = \frac{1V}{5V} \times 100 \% = 20 \%$

To count the gain value $Pr.04.02 = \frac{5V}{[5-(-1)]V} \times 100 \% = 83.3 \%$

Example 4:

This example shows how to use the first half range 0-2.5 V (min.-1/2 * max.) from the keypad potentiometer to set 0-60 Hz frequency settings. You can achieve the same results by either adjusting Pr.04.02 gain or setting Pr.01.00 to 120 Hz.

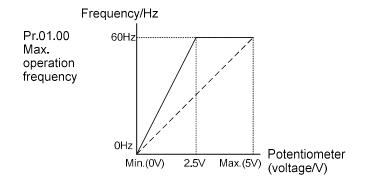


Default:
Pr.01.00=60 Hz Max. operation frequency
Pr.04.00=0.0 % Bias adjustment
Pr.04.01=0 Bias direction adjustment
Pr.04.02=200 % Gain of frequency adjustment
Pr.04.03=0 No negative bias command

To count the gain value $Pr.04.02 = \frac{5V}{(5-2.5)V} \times 100 \% = 200 \%$


Example 5:

This example uses a 1 V negative bias. In noisy environments, negative bias can be useful to provide a noise margin (1 V in this example).

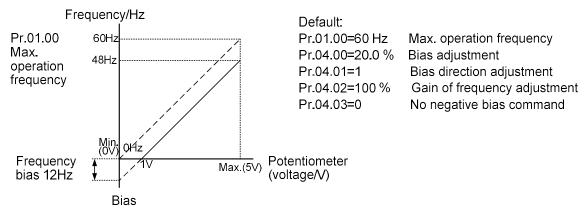

Example 6:

This example uses a negative bias to provide a noise margin. In additional, it uses a potentiometer frequency gain to reach the Maximum Output Frequency.

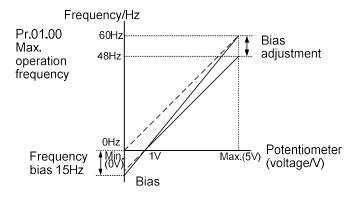

Default:

Pr.01.00=60 Hz Max. operation frequency

Pr.04.00=20.0 % Bias adjustment


Pr.04.01=1 Bias direction adjustment
Pr.04.02=125 % Gain of frequency adjustment
Pr.04.03=0 No negative bias command

To count the gain value

$$Pr.04.02 = \frac{5V}{(5-1)V} \times 100 \% = 125 \%$$

Example 7:

In this example, you perform the input to run the motor in both the forward and reverse directions. The motor is idle when the potentiometer position is at its mid-point. Using the settings in this example disables the external FWD and REV controls.

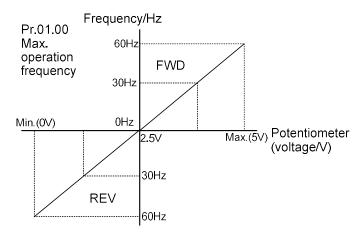

Default:

Pr.01.00=60 Hz Max. operation frequency

Pr.04.00=50.0 % Bias adjustment

Pr.04.01=1 Bias direction adjustment
Pr.04.02=200 % Gain of frequency adjustment
Pr.04.03=1 No negative bias command

To count the bias (See α in the formula) $\frac{60-(-60)Hz}{60-(-60)Hz} = \frac{60-0Hz}{60-0Hz} \rightarrow \alpha=2.5V$


∴ Pr.04.00 =
$$\frac{2.5V}{5V}$$
×100%=50%

To count the gain value

$$Pr.04.02 = \frac{5V}{[5-(2.5)]V} \times 100\% = 200\%$$

Example 8:

This example uses negative slope. With these settings, the AC motor drive always runs in only one direction (reverse).

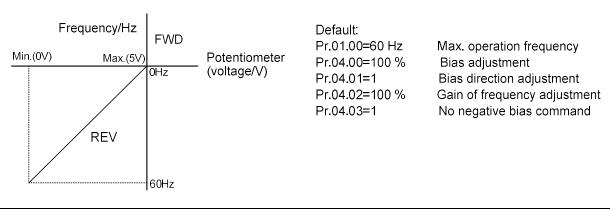



4.11		VI Voltage	
			Unit: 0.1
			Default: 0.0
	Settings	0.0–10.0 V	
4.12		/I Frequency (percentage of Pr.01.00)	
			Unit: 0.1
			Default: 0.0
	Settings	0.0-100.0 % [100% corresponds to Fmax (Pr.01.00)]	
13		VI Voltage	
			Unit: 0.1
			Default: 10.0
	Settings	0.0–10.0 V	
ļ		VI Frequency (percentage of Pr.01.00)	
			Unit: 0.1
			Default: 100.00
	Settings	0.00-100.00% [100% corresponds to Fmax (Pr.01.00)]	
		CI Current	
			Unit: 0.1
			Default: 4.0
	Settings	0.0–20.0 mA	
3	∦ Minimu	m ACI Frequency (percentage of Pr.01.00)	
			Unit: 0.1
			Default: 0.0
	Settings	0.00-100.00% [100% corresponds to Fmax (Pr.01.00)]	
7		CI Current	
			Unit: 0.1
			Default: 20.0
	Settings	0.0–20.0 mA	
8		CI Frequency (percentage of Pr.01.00)	
			Unit: 0.1
			D . f It . 400.0

Default: 100.0

Settings 0.00–100.00% [100% corresponds to Fmax (Pr.01.00)]

These parameters set the analog input reference values. The minimum and maximum frequencies are set based on Pr.01.00 (during open-loop control) as shown in the following diagrams.

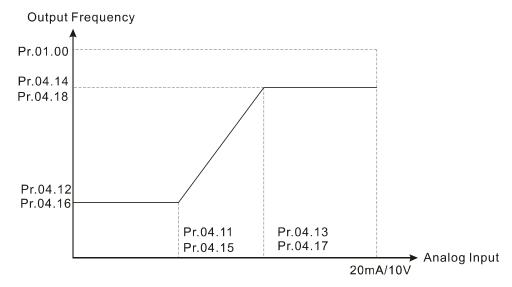

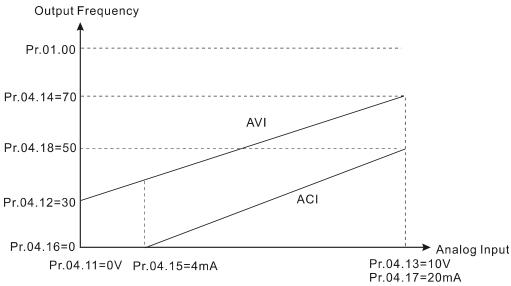

04.19 MI Terminal Control Mode Selection

Default: 0

Settings

0: Mode 1

(MI1: Start-up/Stop terminal; MI2 & MI3: multifunction input terminals)

1: Mode 2

(MI1/MI2/MI3 support two-wire/three-wire start-up)

- Determines the MI terminal control modes.
- Mode 1: MI1 is the start-up/stop terminal; MI2 and MI3 are the multi-function input terminals.
- Mode 2: MI1, MI2 and MI3 support the two-wire / three-wire start-up.

04.20	Reserved
04.21	Reserved
04.22	Reserved
04.23	Reserved
04.24	Reserved
04.25	Reserved

04.04 Start-up / Stop Method of MI Terminals and Multi-function Input Selection

Default: 0

Mode 1 0: MI1 Start-up (keypad FWD lights) / Stop

(Pr.04.19=0)

Mode 2 0: Two-wire (1) MI1, MI2 (Pr.04.19=1) 1: Two-wire (2) MI1, MI2

2: Three-wire, MI1, MI2, MI3

- Pr.04.19 determines the setting range and function for Pr.04.04.
- Mode 1 (Pr.04.19=0): MI1 controls the start-up / stop, and MI2 / MI3 / MI4 are set as multi-function terminals.
- Mode 2 (Pr.04.19=1): two-wire (1)/two-wire (2) MI1 and MI2 are used for start-up/stop and forward/reverse control; MI3 and MI4 are set as multi-function terminals; three-wire (MI1, MI2 and MI3) are used for start-up/stop and forward/reverse control; MI4 is set as the multi-function terminal.
- There are four different control modes:

Setting for Pr.04.19	Setting for Pr.04.04	External terminal control circuit
Mode 1 Pr.04.19=0	Pr.04.04=0 Single-wire FWD/STOP	FWD/STOP MI1: "OPEN":STOP, "CLOSE": FWD MI2: Multi-function terminal MI3: Multi-function terminal DCM VFD-EL-W
	Pr.04.04=0 Two-wire (1) FWD/STOP, REV/STOP	FWD/STOP MI1: "OPEN":STOP, "CLOSE": FWD MI2: "OPEN": STOP, "CLOSE": REV MI3: Multi-function terminal DCM VFD-EL-W
Mode 2 Pr.04.19=1	Pr.04.04=1 Two-wire (2) RUN/STOP, REV/FWD	RUN/STOP MI1: "OPEN":STOP, "CLOSE": RUN FWD/REV MI2: "OPEN": FWD, "CLOSE": REV MI3: Multi-function terminal DCM VFD-EL-W
	Pr.04.04=2 Three-wire Operation Control	STOP RUN MI1: "CLOSE": RUN MI3: "OPEN": STOP MI2: "OPEN": FWD, "CLOSE": REV FWD/REV DCM VFD-EL-W

04.05	Reserved	
04.06	Start-up/Stop or Multi-function Input Terminal (MI2)	
		Default: 1
04.07	Start-up/Stop or Multi-function Input Terminal (MI3)	
		Default: 2
04.08	Multi-function Input Terminal (MI4)	
		Default: 3
	Settings 0–28	


Settings	Function	Description	
0	No Function	Program any unused terminals to 0 to ensure they have no effect on operations.	
1	Multi-Step Speed Command 1	Use these three terminals to set the seven-step speed operation.	
2	Multi-Step Speed Command 2	There are nine steep speed frequencies (including Master	
3	Multi-Step Speed Command 3		
4	Reserved		

Settings	Function	Description
5	External Reset	Use this terminal to reset the drive after drive faults are cleared.
6	Accel./ Decel. Inhibit	When you enable this function, the drive stops acceleration and deceleration immediately. The AC motor drive resumes from the inhibit point once this function is disabled. Frequency Setting frequency Accel. inhibit area Actual operation frequency Decel. inhibit area Actual operation frequency Decel. inhibit area Actual operation frequency Decel. inhibit area ON Operation ON OFF
7	The 1 st , 2 nd acceleration or deceleration time selection	Selects the acceleration and deceleration time of the drive with this terminal; there are two acceleration and deceleration selections. Frequency Setting frequency Pr.01.10 Pr.01.12 Pr.01.12 Time Operation ON ON OFF
8	JOG Operation Control	Executes the JOG operation only when the drive stops completely. While running, you can still change the operation direction, and the STOP key on the keypad is valid. Once the external terminal receives the OFF command, the motor stops in the JOG deceleration time. Refer to Pr.01.13–Pr.01.15 for details.
9	External Base Block (Refer to Pr.08.06)	When the AC motor drive receives a Base Block signal, it blocks all output and the motor coasts. When Base Block control is deactivated, the AC drive starts its speed search function and synchronizes with the motor speed. It then accelerates to the Master Frequency. Refer to Pr.08.06–Pr.08.07 for details. External B.B. Output Frequency The drive traces speed downstairs from the speed before B.B. Output Voltage Speed sync detection Output Voltage Speed sync detection Fr.08.07
10	UP: Increase Master Frequency	ON: the frequency of the drive increases or decreases by one unit. If this function remains ON continuously, the frequency increases or decreases according to Pr.02.07 / Pr.02.08 settings.

Settings	Function	Description
11	DOWN: Decrease Master Frequency	These two functions are the same as the up / down key on the digital keypad, but are only valid when the frequency command source is set as digital keypad (Pr.02.00 / 02.09=0). You cannot use these two functions to change the parameter setting.
12	Counter Trigger	Uses external signals such as connecting ON/OFF switch, lightening senor, etc., to trigger the counter. You can also use signals of the multi-function output terminal (counter reached, desired counter reached) to control the applications that based on the counter. For example: winding machine, packing machine. (Refer to Pr.03.05 and Pr.03.06 for details.)
13	Counter Reset	ON: the current counter value is cleared and displays "c 0". The drive starts to count up only when this function is disabled.
14	External Fault	When the drive receives status change from the EF terminal, the output of the drive stops immediately, and displays EF on the keypad. The motor coasts. The drive keeps running until the fault is cleared after you press RESET on the keypad (EF: External Fault).
15	PID function disabled	ON: the PID function is disabled.
16	Output Shutoff Stop	AC motor drive stops output and the motor coasts if one of these settings is enabled. If the status of terminal is changed, AC motor drive restarts from 0 Hz.
17	Parameter lock enable	Locks all parameters and disables writing parameters.
18	Operation Command Selection (Pr.02.01 setting/external terminals)	ON: Operation command through External Terminals OFF: Operation command through Pr.02.01 setting When 18, 19, and 20 are ON at the same time, the priority is settings 18 > setting 19 > setting 20.
19	Operation Command Selection (Pr.02.01 setting/Digital Keypad)	ON: Operation command through Digital Keypad OFF: Operation command through Pr.02.01 setting When 18, 19 and 20 are ON at the same time, the priority is setting 18 > setting 19 > setting 20.
20	Operation Command Selection (Pr.02.01 setting/ Communication)	ON: Operation command through the Communication OFF: Operation command through Pr.02.01 setting When 18, 19 and 20 are ON at the same time, the priority is setting 18 > setting 19 > setting 20.
21	Forward/Reverse	This function has top priority to set the running direction (If "Pr.02.04=0").
22	Second frequency command source enabled	Select the first or second Frequency command source. Refer to Pr.02.09. ON: Second Frequency command source OFF: First Frequency command source
23	Simple positioning stop by forward limit	If a motor receives such signal while running forward, it stops running forward.
24	Simple positioning stop by reverse limit	If a motor receives such signal while running in reverse, it stops running in reverse.
25	Multi-pump control by Hand or Auto mode	When this function is enabled, switch to hand or auto mode from this terminal.
26	Auto-trigger preheating function	When this function is enabled, control the motor preheating function from this terminal.
27	Fire mode enabled (without Operation Command)	When this function is enabled, the fire mode is activated. The drive displays fire message but does not run automatically. You must give the operation command to make the drive run.
28	Fire mode enabled (with Operation Command)	When this function is enabled, the fire mode is activated. The drive displays fire message, runs and automatically accelerates to Pr.08.24 setting values.

04.09	Multi-function	on Input Contact Selection	Unit: 1
	Settings	0–63	Default: 0


- Sets the contact status of external multi-function input terminals MI2–MI4 to be normally open (N.O.) or normally closed (N.C.) according to the start-up / stop mode (Pr.04.19 and Pr.04.04).
- When the start-up/stop mode is single-wired, MI1 setting is invalid; when the start-up/stop mode is two-wired, MI2 setting is invalid; when the start-up/stop mode is three-wired, MI2 and MI3 settings are invalid. See the table below for details.

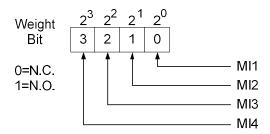

Start-u	MI4	MI3	MI2	MI1	The Setting of the MI Terminals			
Mode	Pr.04.19	Pr.04.04	Bit 3	Bit 2	Bit 1	Bit 0	Multi-function Input Terminals	The Terminals Occupied by the Start-up / Stop Function
Single-wire	0	0	0/1	0/1	0/1	-	MI4, MI3, MI2 can be set as N.O. or N.C.	MI1 is only controlled by external terminals
Two-wire	1	0 or 1	0/1	0/1	-	-	MI4, MI3 can be set as N.O. or N.C.	MI1, MI2 are only controlled by external terminals
Three-wire	1	2	0/1	1	1	,	MI4 can be set as N.O. or N.C.	MI1, MI2, MI3 are only controlled by external terminals

Setting method: When setting this parameter, covert Bit3–Bit0 that represent the status of MI4–MI1 from binary to decimal.

For example: setting MI3 and MI4 to be 1 = N.C.; seting MI1 and MI2 to be 0 = N.O. The setting value for Pr.04.09 should be 12.

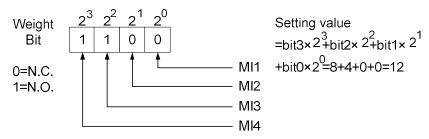

04.10	Digital Termina	al Input Response Time	Unit: 1 msec
	Settings	1–20 (*2ms)	Default: 1


This parameter delays the signals on digital input terminals. A value of 1=2 ms, 2=4 ms, and so on. The delay time helps with noisy signals that could cause the digital terminals to malfunction. This parameter could effectively improve the interference, but the response time will be delayed.

04.26 Display the Status of Multi-function Input Terminal


Settings Read Only Default: Read Only

- Displays 63 in Pr.04.26 when all the MI terminals are not active.
 - 1. When MI1 (corresponds to bit0) is triggered, and the weight is 1, Pr.04-26=62 (63-1).
 - 2. When MI2 (corresponds to bit1) is triggered, and the weight is 2, Pr.04-26=61 (63-2).

- 3. When MI3 (corresponds to bit2) is triggered, and the weight is 4, Pr.04-26=59 (63-4).
 - 4. When MI4 (corresponds to bit3) is triggered, and the weight is 8, Pr.04-26=55 (63-8).
- 5. If more than one MI terminals are triggered, use 63 minus the weight that corresponds to the MI terminal.

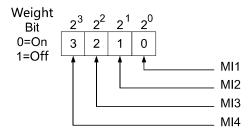


For example, if you set MI2 and MI3 to ON, Pr.04.26 displays 57 (63-2-4=57, decimal)

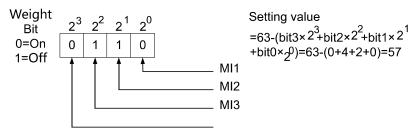


04.27	✓ Internal/Exter	nal Multi-function Input Terminals Selection	Unit: 1
	Settings	0–4095	Default: 0

Selects the terminals MI1–MI4 to be either internal terminal or external terminal. You can activate internal terminals with Pr.04.28. A terminal cannot be both an internal terminal and an external terminal at the same time.

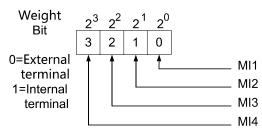


When setting this parameter, convert Bit3–Bit0 that represent the status of MI4–MI1 from binary to decimal. Set MI3 and MI4 as internal terminals; set MI1 and MI2 as external terminals. Pr.04-27 should be set to 12.

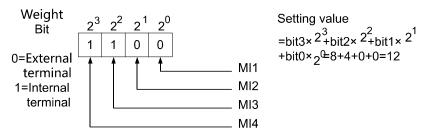


04.28 / Internal T	erminal Status	Unit: 1
Settings	0–4095	Default: 0

Sets the internal terminal action (ON/OFF) through the keypad or communication. And use this parameter with Pr.04.27.

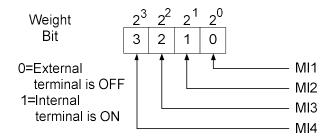


For example, to activate MI3 and MI4, set Pr.04.28 to 12.

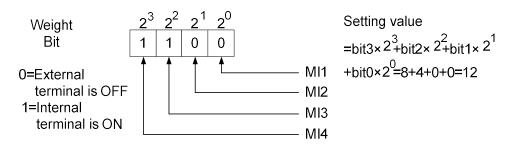

04.29	✓ Delay Tim	ne of Multi-function Input Terminal (MI1) Turn On	
	Settings	0.00-360.00 sec.	Default: 0.00
04.30	✓ Delay Time	ne of Multi-function Input Terminal (MI1) Turn Off	
	Settings	0.00-360.00 sec.	Default: 0.00
04.31	✓ Delay Tim	ne of Multi-function Input Terminal (MI2) Turn On	
	Settings	0.00-360.00 sec.	Default: 0.00
04.32	✓ Delay Tim	ne of Multi-function Input Terminal (MI2) Turn Off	
	Settings	0.00-360.00 sec.	Default: 0.00
04.33	✓ Delay Tim	ne of Multi-function Input Terminal (MI3) Turn On	
	Settings	0.00-360.00 sec.	Default: 0.00
04.34	✓ Delay Tim	ne of Multi-function Input Terminal (MI3) Turn Off	
	Settings	0.00-360.00 sec.	Default: 0.00

The delay function of multi-function input terminals ON/OFF: In the testing process of automatic production line, the conveyor uses photoelectric switch as a triggered switch for the position reached, which means the conveyor stops once the product arrives the specified position. However, there may be a difference between the installation position of the photoelectric switch and the specified position the product arrives. Therefore, this delay time function is added for the convenience of tuning.

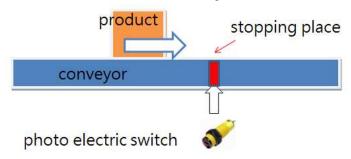

Group 5: Multi-Step Speed Parameters

✓ You can set this parameter during operation.

05.00		Unit: 0.01
05.01		Unit: 0.01
05.02		Unit: 0.01
05.03		Unit: 0.01
05.04		Unit: 0.01
05.05		Unit: 0.01
05.06		Unit: 0.01
	Settings 0.00–400.00Hz	Default: 0.00

The multi-function input terminals (refer to Pr.04.06–Pr.04.08) select one of the AC motor drive multi-step speeds (maximum of seven speeds). The speeds (frequencies) are determined by Pr.05.00–Pr.05.06 as shown in the following table.


	Parameter	Multi-step speed command 1	Multi-step speed command 2	Multi-step speed command 3
Master frequency	Master speed	OFF	OFF	OFF
1 st speed	05.00	ON	OFF	OFF
2 nd speed	05.01	OFF	ON	OFF
3 rd speed	05.02	ON	ON	OFF
4 th speed	05.03	OFF	OFF	ON
5 th speed	05.04	ON	OFF	ON
6 th speed	05.05	OFF	ON	ON
7 th speed	05.06	ON	ON	ON

Group 6: Protection Parameters

✓ You can set this parameter during operation.


06.00	Over-Vol	tage Stall Prever	ntion	Unit: 0.1
	Settings	230V series	330.0-410.0V	Default: 390.0
		460V series	660.0-820.0V	Default: 780.0

- The default for 230V series is 390.0; the default for 460V series is 780.0.
- 0.0: Disables the Over-voltage Stall Prevention (with brake unit or brake resistor)
- During deceleration, the DC bus voltage may exceed its Maximum Allowable Value due to motor regeneration. When this function is enabled, the AC motor drive does not decelerate further and keep the output frequency constant until the voltage drops below the preset value again.
- This parameter is suitable for uncertain load inertia. In normal inertia load condition, over-voltage stall prevention does not occur and the actual deceleration time is the deceleration time setting. However, when the load inertia is large, the AC motor drive automatically increases the deceleration time until it stops. You can also install a brake resistor to absorb the excessive regenerative voltage. If the deceleration time affects your application, it is not recommended to use this function.

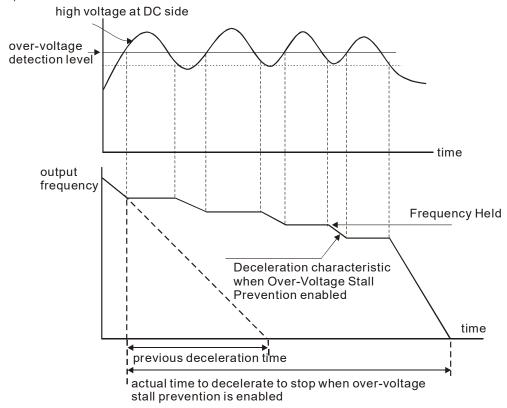


06.01	✓ Over-Cur	rent Stall Prevention during Acceleration	Unit: 1
	Settings	20–250%	Default: 170
		0: Disable	

- A setting of 100% is equal to the AC motor drive's Rated Output Current.
- During acceleration, the AC motor drive output current may increase abruptly and exceed the value specified in Pr.06.01 due to rapid acceleration or excessive load on the motor. When this function is enabled, the AC motor drive stops accelerating and keeps the output frequency constant until the current drops below this setting.

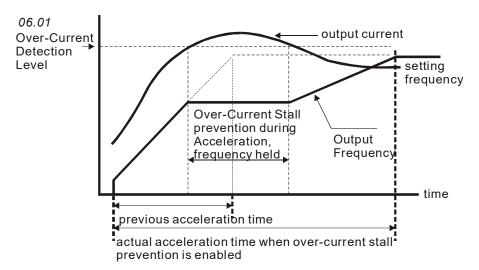

06.02	✓ Over-curr	ent Stall Prevention during Operation	Unit: 1
	Settings	20–250%	Default: 170
		0: Disable	

If the output current exceeds the setting for Pr.06.02 when the drive is operating, the drive decreases its output frequency to prevent motor stall. If the output current is lower than the setting for Pr.06.02, the drive accelerates again to catch up with the set frequency command value.

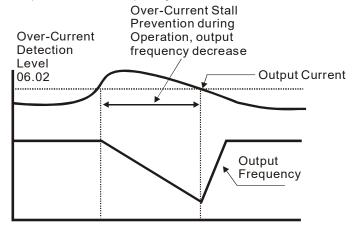

over-current stall prevention during operation

06.03	Over-torque	e Detection	on Mode (OL2)
			Default: 0
	Settings	0	Over-torque detection disabled.
		1	Over-torque detection enabled during constant speed operation. After over-torque is detected, keep running until OL1 or OL occurs.
		2	Over-torque detection enabled during constant speed operation. After over-torque is detected, stop running.
		3	Over-torque detection enabled during acceleration. After over-torque is detected, keep running until OL1 occurs.
		4	Over-torque detection enabled during acceleration. After over-torque is detected, stop running.

- Determines the operation mode of the drive after detecting over-torque (OL2). It uses the following methods:
 - If the output current exceeds the Over-torque Detection Level (Pr.06.04) and the detection time is longer than the setting for Pr.06.05 (Over-torque Detection Time), the warning message "OL2" displays.
 - If a multi-functional output terminal is set to over-torque detection (Pr.03.00=4), the output is ON. Refer to Pr.03.00 for details.

06.04 从 Over	-torque Detection Level	Unit: 1
Settings	10–200%	Default: 150


This setting is proportional to the Rated Output Current of the drive.


06.05	Over-torque	e Detection Time	Unit: 0.1
	Settings	0.1-60.0 sec.	Default: 0.1

- Sets the length of time that over-torque must be detected before "OL2" displays.
- Over-torque is detected when the following occurs:
 - 1. The output current exceeds the Over-torque Detection Level (Pr.06.04).
 - 2. The over-toque time exceeds the Over-torque Detection Time (Pr.06.05). If a multi-function output terminal is set to over-torque detection (Pr.03.00=4), the contact is "closed". Refer to Pr.03.00 for details.

06.06	Electronic Thermal Overload Relay Selection (OL1)					
				Default: 2		
	Settings	0	Standard Motor (self-cooled by fan)			
		1	Special Motor (forced external cooling)			
		2	Disable			


Sets the operation of the electronic thermal overload relay that protects the motor from overloading or overheating. When the motor (self-cooled by fan) operates in low frequency, overloads rarely happen. Refer to the following figures.

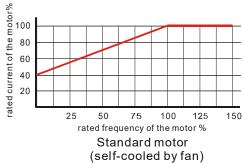

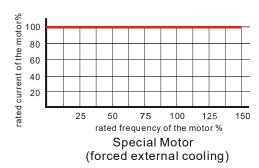

06.07	Electronic	Thermal Characteristic	Unit: 1
	Settings	30-600 sec	Default: 60

Determines the time required to activate the I²t electronic thermal protection function. The figure below shows I²t curves for 150% output power for one minute.

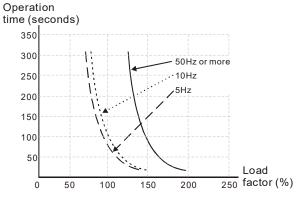

06.08	Present Fau	Present Fault Record					
06.09	Second Mos	Second Most Recent Fault Record					
06.10	Third Most F	Recent Fau	ılt Record				
06.11	Fourth Most	Fourth Most Recent Fault Record					
06.12	Fifth Most R	Fifth Most Recent Fault Record					
	Display	Display 0–40 Default: 0					
	Readings	Readings 0 No fault					
		1 Over-current (oc)					
		2	Over-voltage (ov)				

IGBT overheat (oH1) Reserved Overload (oL) Overload (oL1) Motor overload (oL2) External Fault (E.F.) Current exceeds two times the rated current during acceleration (ocA) Current exceeds two times the rated current during deceleration (ocd) Current exceeds two times the rated current during constant speed operation (ocn) Reserved Reserved Auto-acceleration / auto-deceleration failure (CFA) Software/password protection (codE) Power Board CPU WRITE failure (oF1.0) Power Board CPU READ failure (oF2.0) CC, OC Hardware protection failure (HPF1) CV Hardware protection failure (HPF2) Reserved COC Hardware protection failure (HPF4) U-phase error (oF3.0) V-phase error (oF3.1) W-phase error (cF3.2) Reserved FEE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL		
Overload (oL.) Overload (oL.) Current overload (oL.) External Fault (E.F.) Current exceeds two times the rated current during acceleration (ocA) Current exceeds two times the rated current during deceleration (ocd) Current exceeds two times the rated current during constant speed operation (ocn) Current exceeds two times the rated current during constant speed operation (ocn) Reserved Asserved Auto-acceleration / auto-deceleration failure (CFA) Software/password protection (codE) Power Board CPU WRITE failure (cF1.0) Power Board CPU READ failure (cF2.0) CC, OC Hardware protection failure (HPF1) OV Hardware protection failure (HPF2) Reserved OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) We phase error (cF3.3) Reserved	3	IGBT overheat (oH1)
6 Overload (oL1) 7 Motor overload (oL2) 8 External Fault (E.F.) 9 Current exceeds two times the rated current during acceleration (ocA) 10 Current exceeds two times the rated current during deceleration (ocd) 11 Current exceeds two times the rated current during constant speed operation (ocn) 12 Reserved 13 Reserved 14 Phase-loss (PHL) 15 Reserved 16 Auto-acceleration / auto-deceleration failure (CFA) 17 Software/password protection (codE) 18 Power Board CPU WRITE failure (cF1.0) 19 Power Board CPU READ failure (cF2.0) 20 CC, OC Hardware protection failure (HPF1) 21 OV Hardware protection failure (HPF2) 22 Reserved 23 OC Hardware protection failure (HPF4) 24 U-phase error (cF3.1) 25 V-phase error (cF3.2) 26 W-phase error (cF3.3) 27 DC bus error (cF3.3) 28 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback deviation 37 OPHL	4	Reserved
7 Motor overload (oL2) 8 External Fault (E.F.) 9 Current exceeds two times the rated current during acceleration (ocA) 10 Current exceeds two times the rated current during deceleration (ocd) 11 Current exceeds two times the rated current during constant speed operation (ocn) 12 Reserved 13 Reserved 14 Phase-loss (PHL) 15 Reserved 16 Auto-acceleration / auto-deceleration failure (CFA) 17 Software/password protection (codE) 18 Power Board CPU WRITE failure (cF1.0) 19 Power Board CPU READ failure (cF2.0) 20 CC, OC Hardware protection failure (HPF1) 21 OV Hardware protection failure (HPF2) 22 Reserved 23 OC Hardware protection failure (HPF4) 24 U-phase error (cF3.0) 25 V-phase error (cF3.1) 26 W-phase error (cF3.2) 27 DC bus error (cF3.3) 28 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback deviation 37 OPHL	5	Overload (oL)
External Fault (E.F.) Current exceeds two times the rated current during acceleration (ocA) Current exceeds two times the rated current during deceleration (ocd) Current exceeds two times the rated current during deceleration (ocd) Reserved Reserved Reserved Auto-acceleration / auto-deceleration failure (CFA) Software/password protection (codE) Power Board CPU WRITE failure (cF1.0) Power Board CPU READ failure (HPF1) CC, OC Hardware protection failure (HPF2) Reserved CC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.3) Reserved 6	Overload (oL1)	
Current exceeds two times the rated current during acceleration (ocA) Current exceeds two times the rated current during deceleration (ocd) Current exceeds two times the rated current during constant speed operation (ocn) Reserved Reserved Auto-acceleration / auto-deceleration failure (CFA) Software/password protection (codE) Power Board CPU WRITE failure (cF1.0) Power Board CPU READ failure (cF2.0) CC, OC Hardware protection failure (HPF1) OV Hardware protection failure (HPF2) Reserved OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) DC bus error (cF3.3) Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback deviation OPHL	7	Motor overload (oL2)
Current exceeds two times the rated current during deceleration (ocd) Current exceeds two times the rated current during constant speed operation (ocn) Reserved Reserved Auto-acceleration / auto-deceleration failure (CFA) Software/password protection (codE) Power Board CPU WRITE failure (cF1.0) Power Board CPU READ failure (cF2.0) CC, OC Hardware protection failure (HPF1) OV Hardware protection failure (HPF2) Reserved OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) CD bus error (cF3.3) Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback deviation OPHL	8	External Fault (E.F.)
Current exceeds two times the rated current during constant speed operation (ocn) Reserved Reserved Auch-acceleration / auto-deceleration failure (CFA) Software/password protection (codE) Power Board CPU WRITE failure (cF1.0) Power Board CPU READ failure (cF2.0) CC, OC Hardware protection failure (HPF1) CV Hardware protection failure (HPF2) Reserved CC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) Reserved	9	Current exceeds two times the rated current during acceleration (ocA)
(ocn) 12 Reserved 13 Reserved 14 Phase-loss (PHL) 15 Reserved 16 Auto-acceleration / auto-deceleration failure (CFA) 17 Software/password protection (codE) 18 Power Board CPU WRITE failure (cF1.0) 19 Power Board CPU READ failure (cF2.0) 20 CC, OC Hardware protection failure (HPF1) 21 OV Hardware protection failure (HPF2) 22 Reserved 23 OC Hardware protection failure (HPF4) 24 U-phase error (cF3.0) 25 V-phase error (cF3.1) 26 W-phase error (cF3.2) 27 DC bus error (cF3.3) 18 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback deviation 37 OPHL	10	Current exceeds two times the rated current during deceleration (ocd)
13 Reserved 14 Phase-loss (PHL) 15 Reserved 16 Auto-acceleration / auto-deceleration failure (CFA) 17 Software/password protection (codE) 18 Power Board CPU WRITE failure (cF1.0) 19 Power Board CPU READ failure (cF2.0) 20 CC, OC Hardware protection failure (HPF1) 21 OV Hardware protection failure (HPF2) 22 Reserved 23 OC Hardware protection failure (HPF4) 24 U-phase error (cF3.0) 25 V-phase error (cF3.1) 26 W-phase error (cF3.2) 27 DC bus error (cF3.3) 28 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	11	· · · · · · · · · · · · · · · · · · ·
Phase-loss (PHL) Reserved Auto-acceleration / auto-deceleration failure (CFA) Software/password protection (codE) Power Board CPU WRITE failure (cF1.0) Power Board CPU READ failure (cF2.0) CC, OC Hardware protection failure (HPF1) OV Hardware protection failure (HPF2) Reserved OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) CD bus error (cF3.3) Reserved	12	Reserved
15 Reserved 16 Auto-acceleration / auto-deceleration failure (CFA) 17 Software/password protection (codE) 18 Power Board CPU WRITE failure (cF1.0) 19 Power Board CPU READ failure (cF2.0) 20 CC, OC Hardware protection failure (HPF1) 21 OV Hardware protection failure (HPF2) 22 Reserved 23 OC Hardware protection failure (HPF4) 24 U-phase error (cF3.0) 25 V-phase error (cF3.1) 26 W-phase error (cF3.2) 27 DC bus error (cF3.3) 28 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	13	Reserved
Auto-acceleration / auto-deceleration failure (CFA) Software/password protection (codE) Power Board CPU WRITE failure (cF1.0) Power Board CPU READ failure (cF2.0) CC, OC Hardware protection failure (HPF1) OV Hardware protection failure (HPF2) Reserved OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) DC bus error (cF3.3) IGBT Overheat error (cF3.4) Reserved Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback deviation OPHL	14	Phase-loss (PHL)
17 Software/password protection (codE) 18 Power Board CPU WRITE failure (cF1.0) 19 Power Board CPU READ failure (cF2.0) 20 CC, OC Hardware protection failure (HPF1) 21 OV Hardware protection failure (HPF2) 22 Reserved 23 OC Hardware protection failure (HPF4) 24 U-phase error (cF3.0) 25 V-phase error (cF3.1) 26 W-phase error (cF3.2) 27 DC bus error (cF3.3) 28 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	15	Reserved
Power Board CPU WRITE failure (cF1.0) Power Board CPU READ failure (cF2.0) CC, OC Hardware protection failure (HPF1) OV Hardware protection failure (HPF2) Reserved OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) DC bus error (cF3.3) IGBT Overheat error (cF3.4) Reserved Reserved Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation	16	Auto-acceleration / auto-deceleration failure (CFA)
19 Power Board CPU READ failure (cF2.0) 20 CC, OC Hardware protection failure (HPF1) 21 OV Hardware protection failure (HPF2) 22 Reserved 23 OC Hardware protection failure (HPF4) 24 U-phase error (cF3.0) 25 V-phase error (cF3.1) 26 W-phase error (cF3.2) 27 DC bus error (cF3.3) 28 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	17	Software/password protection (codE)
CC, OC Hardware protection failure (HPF1) OV Hardware protection failure (HPF2) Reserved OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) DC bus error (cF3.3) IGBT Overheat error (cF3.4) Reserved Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL	18	Power Board CPU WRITE failure (cF1.0)
OV Hardware protection failure (HPF2) Reserved OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) DC bus error (cF3.3) Reserved Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback deviation OPHL	19	Power Board CPU READ failure (cF2.0)
22 Reserved 23 OC Hardware protection failure (HPF4) 24 U-phase error (cF3.0) 25 V-phase error (cF3.1) 26 W-phase error (cF3.2) 27 DC bus error (cF3.3) 28 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	20	CC, OC Hardware protection failure (HPF1)
OC Hardware protection failure (HPF4) U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) DC bus error (cF3.3) IGBT Overheat error (cF3.4) Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL	21	OV Hardware protection failure (HPF2)
U-phase error (cF3.0) V-phase error (cF3.1) W-phase error (cF3.2) DC bus error (cF3.3) IGBT Overheat error (cF3.4) Reserved Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL	22	Reserved
V-phase error (cF3.1) W-phase error (cF3.2) DC bus error (cF3.3) IGBT Overheat error (cF3.4) Peserved Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL	23	OC Hardware protection failure (HPF4)
W-phase error (cF3.2) DC bus error (cF3.3) Reserved Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL	24	U-phase error (cF3.0)
DC bus error (cF3.3) Reserved Reserved Reserved Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL	25	V-phase error (cF3.1)
28 IGBT Overheat error (cF3.4) 29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	26	W-phase error (cF3.2)
29–31 Reserved 32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	27	DC bus error (cF3.3)
32 Reserved 33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	28	IGBT Overheat error (cF3.4)
33 Reserved 34 Motor PTC overheat protection (PtC1) 35 FBE_ERR: PID feedback error (Incorrect feedback signal) 36 dEv: unusual PID feedback deviation 37 OPHL	29–31	Reserved
 Motor PTC overheat protection (PtC1) FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL 	32	Reserved
FBE_ERR: PID feedback error (Incorrect feedback signal) dEv: unusual PID feedback deviation OPHL	33	Reserved
36 dEv: unusual PID feedback deviation 37 OPHL	34	Motor PTC overheat protection (PtC1)
37 OPHL	35	FBE_ERR: PID feedback error (Incorrect feedback signal)
	36	dEv: unusual PID feedback deviation
38–40 Reserved	37	OPHL
	38–40	Reserved

Pr.06.08 to Pr.06.12 store the five most recent faults that occurred. After clearing the cause of the faults, use the RESET command to reset the drive.

06.13	Motor Dis	sconnection Detection Time	Unit: 1
	Settings	0.1-60.0 sec.	Default: 0.0
		0.0: Disable	
06.14	Motor Dis	sconnection Detection Current Level	
	Settings	10–100%	Default: 30

Use Pr.06.13 with Pr.06.14. When three-phase imbalance occurs among three-phase motors and the imbalance reaches Pr.06.14 setting percentage (the percentage is 100% equal to the AC motor drive's rated current settings in Pr.00.01), and lasts the time set in Pr.06.13, OPHL warning displays and the drive stops to prevent the motor from damage due to the three-phase unbalanced operation.

Group 7: Motor Parameters

✓ You can set this parameter during operation.

07.00 Motor Rated Current Unit: 0.1 23% FLA-120% FLA Default: 100 Settings Use the following formula to calculate the percentage value entered in this parameter: FLA = (Motor Current / AC Motor Drive Current) x 100% Motor Current = Motor rated current in A on the motor nameplate AC Motor Drive Current = Rated current of AC motor drive in A (see Pr.00.01) 07.01 Motor No-load Current Unit: 0.1 0% FLA-99% FLA Default: 40 Settinas The rated current of the AC motor drive is equal to 100%. The setting for the motor no-load current affects the slip compensation. The setting value must be smaller than Pr.07.00 (Motor Rated Current). 07.02 **✗** Torque Compensation Unit: 0.1 Default: 0.0 Settings 0.0 - 10.0Sets the AC motor drive to automatically increase voltages to get a higher torque when the AC motor drive is running. Note that too high a torque compensation can overheat the motor. 07.03 ✓ Slip Compensation Gain Unit: 0.01 Settings 0.00 - 10.00Default: 0.00 For an asynchronous motor, increasing the load on the AC motor drive causes slip to increase and results in decreased speed. Use this parameter to compensate for slip by increasing the output frequency. When the output current of the AC motor drive is larger than the motor no-load current value (Pr.07.01), the AC motor drive adjusts the output frequency according to this parameter. 07.04 Motor Parameter Auto-Tuning Settings 0: Disable Default: 0 1: Auto-tuning R1 (Motor does not run) 2: Auto-tuning R1 + No-load current (with running motor) Start auto-tuning by pressing the RUN key after you set this parameter to 1 or 2.

- 1: Auto-detect only the R1 value, and manually enter Pr.07.01.
- 2: Unload the AC motor drive and automatically set the values for Pr.07.01 and Pr.07.05.

The steps for auto-tuning are:

- 1. Ensure that all the parameters are set to defaults and the motor wiring is correctly.
- 2. Ensure that the motor is not loaded before executing auto-tuning and that the shaft is not connected to any belt or reducer.
- 3. Enter the correct settings for Pr.01.01 Motor Rated Frequency (Fbase), Pr.01.02 Motor Rated Voltage (Vbase), Pr.07.00 Motor Rated Current, and Pr.07.06 Motor Rated Slip (Motor 0).
- 4. After you set Pr.07.04 to 2, the AC motor drive executes auto-tuning immediately after receiving a RUN command (CAUTION: the motor will run!). The total auto-tuning time is 15 seconds = Pr.01.09 + Pr.01.10. Higher-power drives need longer acceleration and deceleration time (the default is recommended). After executing auto-tuning, it sets Pr.07.04 to 0.
- 5. After executing auto-tuning, check to ensure there are values filled in for Pr.07.01 and Pr.07.05. If not, press the RUN key after setting Pr.07.04 again to repeat auto-tuning.
- 6. Finally, set Pr.00.10 to 1 and set other parameters according to your application requirements.
 - ➤ Related parameters: Pr.01.01 Motor Rated Frequency (Fbase); Pr.01.02 Motor Rated Voltage (Vbase); Pr.07.00 Motor Rated Current; Pr.07.01 Motor No-Load Current; Pr.07.05 Motor Line-to Line Resistance R1 (Motor 0); Pr.07.06 Motor Rated Slip (Motor 0).

NOTE

1. In vector control mode, it is not recommended to have motors run in parallel.

Vector control mode is not recommended if the motor rated power exceeds the rated power of the AC motor drive.

07.05	Motor Line-to-line Resistance R1 (Motor 0)		
	Settings	0–65535 mΩ	Default: 0

The motor auto-tuning procedure sets this parameter. You can also set this parameter without using Pr.07.04 (Motor Parameter Auto-Tuning). This resistance value is the R value between phase and phase of the motor. Regardless of the motor wiring method, this resistance value is the measured value of any two motor leads.

07.06	Motor Rated S	Motor Rated Slip (Motor 0)		
	Settings	0.00-20.00 Hz		Default: 3.00

- Sets the motor rated slip. Enter the actual rated RPM from the motor nameplate.
- Refer to the rated RPM and the number of poles from the motor nameplate and use the following equation to calculate the rated slip:

Rated Slip = $F - N \times P / 120$

F: Rated frequency (Hz)

N: Rated speed (RPM)

P: Number of poles (Pole)

Assume that the rated frequency of the motor is 60 Hz with 4 poles, and the rated RPM is 1650. The rated slip calculated by the formula is $60 \text{ Hz} - (1650 \text{ rpm} \times 4 / 120) = 5 \text{ Hz}$.

- This parameter is related to Pr.07.03 Slip Compensation Gain. To get the best slip compensation effect, you must enter the correct settings. The incorrect setting may cause invalid slip compensation and even damage the motor and the AC motor drive.
 - Related parameter: Pr.07.03 Slip Compensation Gain

07.07 Slip Compensation Limit

Settings 0–250% Default: 200

- This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07.06). If the motor speed is lower than the target speed and the speed does not change after adjusting the Pr.07.03 setting, the AC motor drive may reach the upper limit of the compensation frequency and you may need to increase the Pr.07.07 setting.
 - > Related parameters: Pr.07.03 Slip Compensation Gain, Pr.07.06 Motor Rated Slip (Motor 0).

77.08 Torque Compensation Time Constant Settings 0.01–10.00 sec. Default: 0.10

This function is usually applied in applications with heavy load where the motor current changes frequently for the current compensation to increase the output torque. The frequent current change can cause machine vibration. Increase the Pr.07.08 setting to solve this problem.

07.09	Slip compe	Slip compensation Time Constant			
	Settings	0.05-10.00 sec.	Default: 0.20		


- This function is usually applied in applications with heavy load where the motor speed changes frequently for the speed compensation to reach the synchronous speed. The frequent speed change can cause machine vibration. Increase the Pr.07.09 setting to solve this problem.
- Setting the time constants too high (set Pr.07.08 and Pr.07.09 to 10) results in slow response; setting them too low results in unstable operation.

07.10	Accumulate	ed Motor Operation Time (Minute)	Unit: 1
	Settings	0–1439	Default: 0
07.11	Accumulate	ed Motor Operation Time (Day)	Unit: 1
	Settings	0–65535	Default: 0

Pr.07.10 and Pr.07.11 record the motor operation time. Clear the values by setting them to 0. Any time that is less than one minute is not recorded.

07.12	Motor PTC	Overhea	at Protection	Unit: 1
•				Default: 0
	Settings	0	Disable	
		1	Enable	
07.14	07.14 Motor PTC Overheat Protection Level			Unit: 0.1
	Settings	0.1-	-10.0 V	Default: 2.4

- Running the motor at low frequency for a long time reduces the cooling function of the motor fan. To prevent overheating, use a Positive Temperature Coefficient thermistor on the motor, and connect the thermistor output signal to the drive's corresponding control terminals.
- When you set the source of the first and second frequency command to AVI (Pr.02.00=1 / Pr.02.09=1), you disable the motor PTC overheat protection (that is, Pr.07.12 cannot be set to 1).
- Pr.07.14 (overheat protection level) must be greater than Pr.07.15 (overheat warning level).
- The PTC function uses the AVI-input and is connected with a resistor-divider as shown in the diagram below.
 - 1. The voltage between +10 V to ACM: between 10.4–11.2 V.
 - 2. The impedance for AVI is around 47 k Ω .
 - 3. The recommended value for the resistor-divider R1 is 1–10 k Ω .
 - 4. Please contact your motor dealer for the temperature curve and resistance value for the PTC function.

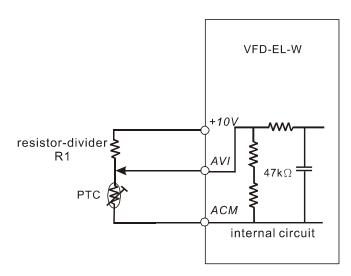

- Refer to the following calculation for the protection and warning levels.
 - 1. Protection level

 $Pr.07.14 = V_{+10} * (R_{PTC1}//47k) / [R1+(R_{PTC1}//47k)]$

2. Warning level

 $Pr.07.15 = V_{+10} * (R_{PTC2}//47k) / [R1+(R_{PTC2}//47k)]$

Definition:

V+10: voltage between +10 V to ACM, Range 10.4-11.2 V

R_{PTC1}: motor PTC overheat protection level; set the corresponding voltage level in Pr.07.14


R_{PTC2}: motor PTC overheat warning level; set the corresponding voltage level in Pr.07.15

47 kΩ: the AVI input impedance

R1: resistor-divider (recommended value: 1–10 kΩ)

Example: using a standard PTC thermistor, if the protection level is 1330 Ω , the voltage between +10 V to ACM is 10.5 V and resistor-divider R1 is 4.4 k Ω . Refer to the following calculation for the Pr.07.14 setting. 1330//47000 = (1330*47000) / (1330+47000) = 1293.4 10.5*1293.4 / (4400+1293.4) = 2.38(V) = 2.4(V)

Therefore, set Pr.07.14 to 2.4.

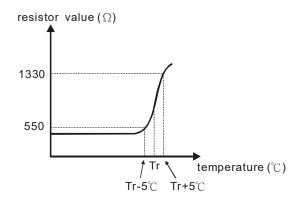

07.15	Motor PTC	Overhea	at Warning Level	Unit: 0.1
	Settings	0.1-	-10.0 V	Default: 1.2
07.16	Motor PTC	Overhea	at Reset Delta Level	Unit: 0.1
	Settings	0.1-	-5.0 V	Default: 0.6
07.17	Motor PTC	Overhea	at Action	
				Default: 0
	Settings	0	Warn and ramp to stop	
		1	Warn and coast to stop	
		2	Warn and keep operating	

If the temperature exceeds the motor PTC Overheat Warning Level (Pr.07.15), the drive acts according to Pr.07.17 and displays PtC2 (PtC) on the digital keypad. If the temperature decreases below the result of (Pr.07.15 minus Pr.07.16), the warning message disappears.

07.13	Motor PTC	Protection Input Response Time	Unit: 1
	Settings	0-9999 (*2 ms)	Default: 100

Group 8: Special Parameters

✓ You can set this parameter during operation.

08.00	DC Brake	Current Level	Unit: 1
	Settings	0-100%	Default: 0

Sets the level of the DC Brake Current output to the motor during start-up and stopping. When setting the DC Brake Current, the AC Motor Drive Rated Current (Pr.00.01) is equal to 100%. It is recommended to start with a low DC Brake Current Level and then increase it until you reach the proper holding torque.

08.01	DC Brake	Time during Start-up	Unit: 0.1
	Settings	0.0-60.0 sec.	Default: 0.0


Determines the duration of the DC Brake current after a RUN command. When the time has elapsed, the AC motor drive starts accelerating from the Minimum Output Frequency (Pr.01.05).

08.02	DC Brake Tim	ne during Stopping	Unit: 0.1
	Settings	0.0-60.0 sec.	Default: 0.0

Determines the duration of the DC Brake current during stopping. If you want to stop the motor with the DC Brake, set Pr.02.02 (Stop Method) to 0 or 2 for Ramp to Stop.

08.03	Start-point	for DC Brake	Unit: 0.01
	Settings	0.00-400.00 Hz	Default: 0.00

Determines the frequency at which the DC Brake is applied during deceleration.

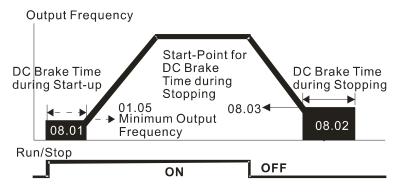

DC Brake Time

- Use the DC Brake during Start-up for loads that may move before the AC drive starts, such as fans and pumps. The DC Brake can hold the load in position before starting the motor.
- Use the DC Brake during stopping to shorten the stopping time, and to hold a stopped load in position, such as cranes and cutting machines.

Default: 0 Settings 0 Operation stops (coast to stop) after momentary power loss. 1 Operation continues after momentary power loss, speed search starts with the last frequency. 2 Operation continues after momentary power loss, speed search starts with the minimum frequency.

Determines the operation mode when the AC motor drive restarts from a momentary power loss.

08.05	Maximum	Allowable Power Loss Time	Unit: 0.1
	Settings	0.1–20.0 sec.	Default: 2.0

Sets the maximum allowable power loss time. If the time exceeds the Maximum Allowable Power Loss Time, the AC motor drive output turns off (coast to stop).

The selected operation after power loss in Pr.08.04 is only executed when the maximum allowable power loss time is ≤ 5 seconds and the AC motor drive keypad displays "Lu".

If the AC motor drive is powered off due to overload, even if the maximum allowable power loss time is ≤ 5 seconds, the drive does not execute the operation mode you set for Pr.08.04. In that case it starts up normally.

08.06 Base Block Speed Search

Default: 1

- Settings 0 Disable
 - 1 Speed search starts with the last frequency command
 - 2 Speed search starts with the minimum output frequency (Pr.01.05)

Determines the AC motor drive restart method after an External Base Block is enabled.

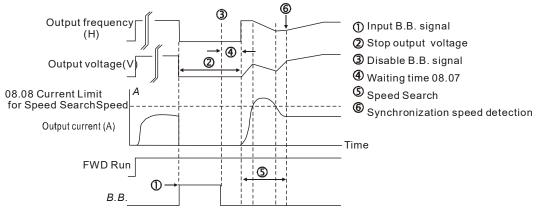


Fig 1:B.B. Speed Search with Last Output Frequency Downward Timing Chart (Speed Search Current Attains Speed Search Level)

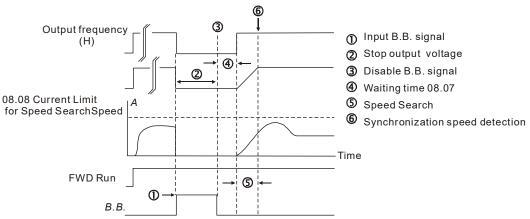


Fig 2: B.B. Speed Search with Last Output Frequency Downward Timing Chart (Speed Search Current doesn't Attain Speed Search Level)

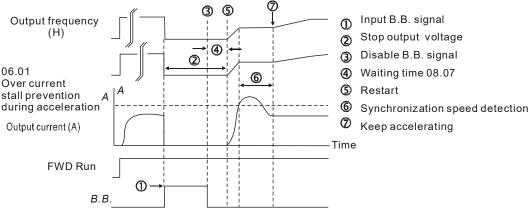


Fig3: B.B. Speed Search with Minimum Output Frequency Upward Timing Chart


08.07

Settings 0.1–5.0 sec. Default: 0.5

- When the AC motor drive detects a momentary power loss, it blocks its output and then waits for a period of time specified by this parameter before resuming operation. Set this parameter at a value that ensures that any residual regeneration voltage from the motor on the output has disappeared before the drive is activated again.
- This parameter also determines the waiting time before resuming operation after an External Base Block and Number of Auto-restarts after Fault (Pr.08.15).

80.80	Current Limit	for Speed Search	Unit: 1
	Settings	30–200%	Default: 150


- Limits the drive output current during a speed search.
- When executing a speed search, the V/F curve is defined by the settings in Parameter Group 01.

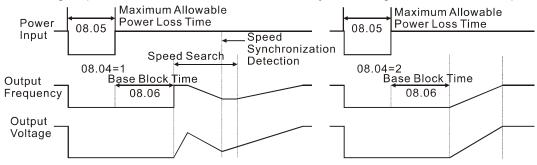

Momentary Power Loss Operation

08.09	✓ Skip Frequency 1 Upper Limit	Unit: 0.01
08.10	✓ Skip Frequency 1 Lower Limit	Unit: 0.01
08.11	✓ Skip Frequency 2 Upper Limit	Unit: 0.01
08.12	✓ Skip Frequency 2 Lower Limit	Unit: 0.01
08.13	✓ Skip Frequency 3 Upper Limit	Unit: 0.01
08.14	✓ Skip Frequency 3 Lower Limit	Unit: 0.01
	Settings 0.00–400.00 Hz	Default: 0.00

These parameters cause the AC motor drive not to remain in these frequency ranges with continuous frequency output. Set these six parameters as follows Pr.08.09 ≥ Pr.08.10 ≥ Pr.08.11 ≥ Pr.08.12 ≥ Pr.08.13 ≥ Pr.08.14.

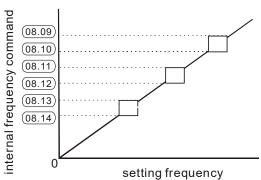

	08.15	Number of	Auto-restarts After Fault	Unit: 1
Ī		Settings	0–10	Default: 0
	08.16	Auto-reset	Time for Restart after Fault	Unit: 0.1
-		Settings	0.1-6000 sec.	Default: 60.0

- After an over-current OC or over-voltage OV fault occurs, the AC motor drive can automatically reset/restart up to ten times.
- Setting this parameter to 0 disables automatic reset/restart operation after any fault.

 When enabled, the AC motor drive restarts with speed search, which starts at the last frequency before the fault.

Use this parameter in conjunction with Pr.08.15.

For example: If you set Pr.08.15 to 10 and Pr.08.16 to 600 seconds (10 minutes), and if there is no fault for over 600 seconds from the restart for the previous fault, then the number of auto-restarts after a fault is reset to 10.


08.17 Auto-energy Saving

Default: 0

Settings 0 Disable Energy-saving operation

1 Enable Energy-saving operation

When you set Pr.08.17 to 1, acceleration and deceleration operate at full voltage. During constant speed operation, the AC motor drive automatically calculates the best voltage value for the power for the current load. This function is not suitable for constantly changing loads or near-full loads during operation.

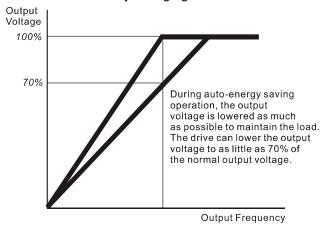

08.18 Automatic Voltage Regulation (AVR)

Default: 0

Settings 0 AVR function enabled

- 1 AVR function disabled
- 2 AVR function disabled for deceleration
- 3 AVR function disabled for stop
- The motor rated voltage is usually 230/200 V_{AC} 50/60 Hz and the AC motor drive input voltage may vary between 180–264 V_{AC} 50/60 Hz. Therefore, when you use the AC motor drive without the AVR function, the output voltage is the same as the input voltage. When the motor runs at voltages exceeding the rated voltage by 12–20%, the motor's lifetime is shortened and the motor can be damaged due to higher temperature, failing insulation and unstable torque output.
- The AVR function automatically regulates the AC motor drive output voltage to the Maximum Output Voltage (Pr.01.02). For instance, if you set Pr.01.02 to 200 V_{AC} and the input voltage is at 200–264 V_{AC}, then the Maximum Output Voltage is automatically reduced to a maximum of 200 V_{AC}.
- When the motor ramps to stop, the deceleration time is longer. When setting this parameter to 2 with auto-acceleration / auto-deceleration, the deceleration is quicker.

80	1	o	R	ese	r\/6	ᅿ

08.20	✓ Compens	sation Coefficient t	Unit: 0.1	
	Settings	0.0-5.0		Default: 0.0


The drift current occurs in a specific zone of the motor and it causes serious motor vibration. It is recommended to use this parameter (the recommended value is 2.0) to greatly improve this situation. (The drift current zone for high-power motors is usually in the low frequency area.)

08.21	DC Current	Level during Preheating		
	Settings	0–100%		Default: 0


- Sets the DC current level input to the motor during preheating. The DC current during preheating is 100% equal to the Motor Rated Current (Pr.07.00). When setting this parameter, increase the current level slowly until you reach the desired preheating temperature.
- Related parameters: Pr.08.22 (DC Current Cycle Time during Preheating), Pr.03.00 (Multi-function Output Relay #24: Preheating function indication), Pr.04.06–Pr.04.08 (Multi-function Input Terminal #26: Auto-trigger preheating function).

08.22	DC Current Cy	cle Time during Preheating	
	Settings	0–100%	Default: 0


- Sets the cycle time that the DC current input to the motor during preheating. 0–100% corresponds to 0–10 seconds. When you set the cycle time to 0%, it means that there is no current output; 100% means continuous current output. For example, if you set the cycle time to 50%, the time that the current input to the motor for one cycle is five seconds; the stopping time is five seconds. When the AC motor drive stops running, continuous DC current automatically and cyclically input to the motor. When you use this parameter with MI=26 (Auto-trigger preheating function), this parameter works with the MI signal continuously and cyclically until the AC motor drive starts the motor operation or MI=26 is disabled.
- The preheating function works when Pr.08.21 and Pr.08.22 are not set to 0.
- When MI=26 (Auto-trigger preheating function) is enabled, MI terminal determines the preheating function.
- When MI=26 is disabled, the preheating function is enabled after the AC motor drive stops its first operation or when the AC motor drive starts after re-applying power.
- The diagram below shows the 50% setting for the cycle time that the DC current input to the motor during preheating when MI=26 (Auto-trigger preheating function) is enabled.

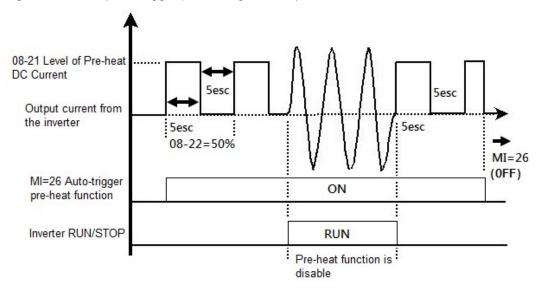

The diagram below shows the 50% setting for the cycle time that the DC current input to the motor during preheating when MI=26 (Auto-trigger preheating function) is disabled. The preheating function automatically enables continuous current input after the drive stops running.

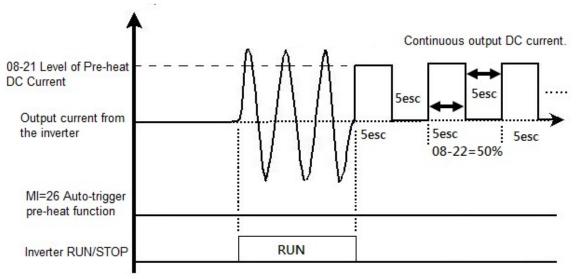

The diagram below shows the sequential relationship between the preheating function and enabled DC brake.

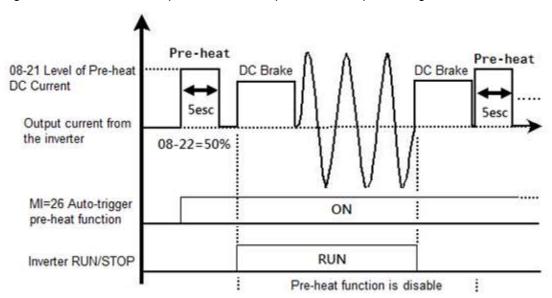

08.23	Fire Mode					
	Settings	0: No function	Default: 0			
		1: Forward running				
		2: Running in reverse				


- Use this parameter with Pr.04.06–Pr.04.08 multi-function input terminals #27 or #28 (Fire mode enabled with/without operation command) and Pr.03.00 multi-function output terminal #25 (Fire Mode Indication).
 - 0: The fire mode is invalid.
 - 1: The motor runs in a clockwise direction (U, V, W) during fire accident.
 - 2: The motor runs in a counterclockwise direction (U, V, W) during fire accident.

08.24	✓ Operating	Frequency during Fire Mode	
	Settings	0.00-400.00 Hz	Default: 60.00

Sets the AC motor drive's operating frequency when the fire mode is enabled.

08.25	Number of	Fire Mode Actions		
	Settings	Read only		Default: Read only

- As long as the fire mode is enabled for more than four minutes, regardless of whether the AC motor drive runs or not, the fire mode action and its number of occurrences are recorded. Note that this parameter is read-only. Any parameter value that is not zero voids the warranty.
 - X Fire mode end process flow:
- If you set the Pr.04.06–Pr.04.08 multi-function input terminal=27/28 to ON or the communication address to 2002H with bit5=1 (fire mode enabled), and the fire mode is enabled for more than four minutes, and then you set the Pr.04.06–Pr.04.08 multi-function input terminal=27/28 to OFF or the communication address to 2002H with bit5=0 (no function), the counter starts to count from four minutes after the fire mode is enabled. After the fire mode is enabled for 2.5 hours, the AC motor drive resumes normal operation, and stops or operates to normal operating frequency according to the original input status.
- If you set the Pr.04.06–Pr.04.08 multi-function input terminal=27/28 to ON or the communication address to 2002H with bit5=1 (fire mode enabled), and the fire mode is enabled for less than four minutes, the AC motor drive resumes normal operation once the fire mode is disabled, and stops or operates to normal operating frequency according to the original input status.

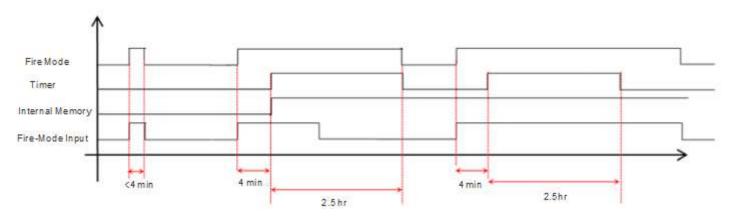

No.	Fault Name	Normal Mode	Fire Mode
1	Over current (oc)	V	V
2	Over voltage (ov)	V	V
3	Over heat 1 (oH1)	V	No detection
4	Over heat 2 (oH2)	V	No detection
5	Over Load (oL) (150% 1 Min., Drive)	V	No detection
6	Internal electronic overload trip (oL1)	V	No detection
7	Motor over load (oL2)	V	No detection
8	External fault (EF)	V	V
9	Over current during Acceleration (ocA)	V	V
10	Over current during Deceleration (ocD)	V	V
11	Over current during normal speed (ocN)	V	V
12	Reserved		
13	Low voltage (LV)	V	V
14	Input phase loss (PHL)	V	V
15	base block (bb)	V	V
16	Auto acceleration/deceleration failure (cFA)	V	V
17	Software parameter protection failure (code)	V	V
18	Internal EE parameter OM cannot write (cF10)	V	V
19	Internal EE parameter OM cannot read (cF20)	V	V
20	Hardware NMI (HPF1)	V	V
21	Hardware OV (HPF2)	V	V
22	Reserved		
23	Hardware OC (HPF4)	V	V
24	Hardware IU (CF3.0)	V	V
25	Hardware IV (CF3.1)	V	V
26	Hardware IW (CF3.2)	V	V
27	Hardware DC bus (CF3.3)	V	V
28	Hardware Temperature (CF3.4)	V	No detection
32	Analog signal Error (AErr)	V	V
34	Motor overheat parameter protect (PTC)	V	V
35	Analog feedback error (FBE)	V	V
36	Deviation error (DEV)	V	V

Group 9: Communication Parameters

✓ You can set this parameter during operation.

The AC motor drive includes a built-in RS-485 serial interface, marked RJ45 near the control terminals. The RS-485 pins are defined below.

8←1

RS-485 Serial interface



1-254

1: Reserved 2: EV 3: GND 4: SG-5: SG+6: Reserved

7: Reserved 8: Reserved

09.00	✗ Communication	Address

Default: 1

You must set the communication address this drive if the AC motor drive is controlled by RS-485 serial communication. The communication address for each AC motor drive must be unique.

Settings

Default: 1

Settings 0: Baud rate 4800 bps (bits / second)

Baud rate 9600 bps (bits / second)
 Baud rate 19200 bps (bits / second)

3: Baud rate 38400 bps (bits / second)

Sets the transmission speed between the RS-485 master (such as PC) and the AC motor drive.

09.02 ★ Transmission Fault Action

Default: 3

Settings 0: Warn and keep operating

1: Warn and ramp to stop

2: Warn and coast to stop

3: No warning and keep operating

Determines how the AC motor drive reacts if a transmission fault occurs.

Unit: 0.1

Settings 0.0–120.0 sec.

Default: 0.0

0.0 Disable

If Pr.09.03 is not equal to 0.0, and Pr.09.02=0–2, and there is no communication on the bus during the time-out detection period (set by Pr.09.03), the digital keypad displays "cE10".

09.04

✓ Communication Protocol

Default: 0

Settings 0: Modbus ASCII mode, protocol <7, N, 2>

1: Modbus ASCII mode, protocol <7, E, 1>

2: Modbus ASCII mode, protocol <7, O, 1>

3: Modbus RTU mode, protocol <8, N, 2>

4: Modbus RTU mode, protocol <8, E, 1>

5: Modbus RTU mode, protocol <8, O, 1>

6: Modbus RTU mode, protocol <8, N, 1>

7: Modbus RTU mode, protocol <8, E, 2>

8: Modbus RTU mode, protocol <8, O, 2>

9: Modbus ASCII mode, protocol <7, N, 1>

10: Modbus ASCII mode, protocol <7, E, 2>

Control by PC

- 1. When using RS-485 to connect with the communication port, you must set the communication address for each VFD-EL-W drive in Pr.09.00 first so that the PC controls according to each address.
- 2. You can set a VFD-EL-W drive to communicate over Modbus networks using one of the following modes: ASCII (American Standard Code for Information Interchange) or RTU (Remote Terminal Unit). Select the desired mode along with the serial port communication protocol in this parameter.
- 3. Code Description:

The CPU delays about 1 second when using the communication reset; therefore, there is at least 1 second delay time in the master station.

ASCII mode:

Each 8-bit data is the combination of two ASCII characters. For example, a 1-byte data: 64 Hex, shown as '64' in ASCII, consists of '6' (36Hex) and '4' (34Hex).


Character	'0'	'1'	'2'	'3'	'4'	' 5'	'6'	'7'
ASCII code	30H	31H	32H	33H	34H	35H	36H	37H
Character	'8'	' 9'	'A'	'B'	C'	'D'	'E'	'F'
ASCII code	38H	39H	41H	42H	43H	44H	45H	46H


RTU mode:

Each 8-bit data is the combination of two 4-bit hexadecimal characters. For example, 64 Hex.


Data Format

Character Frame for ASCII:

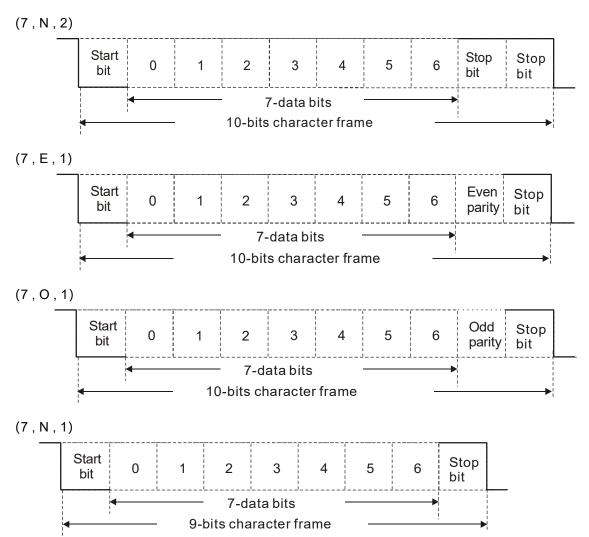

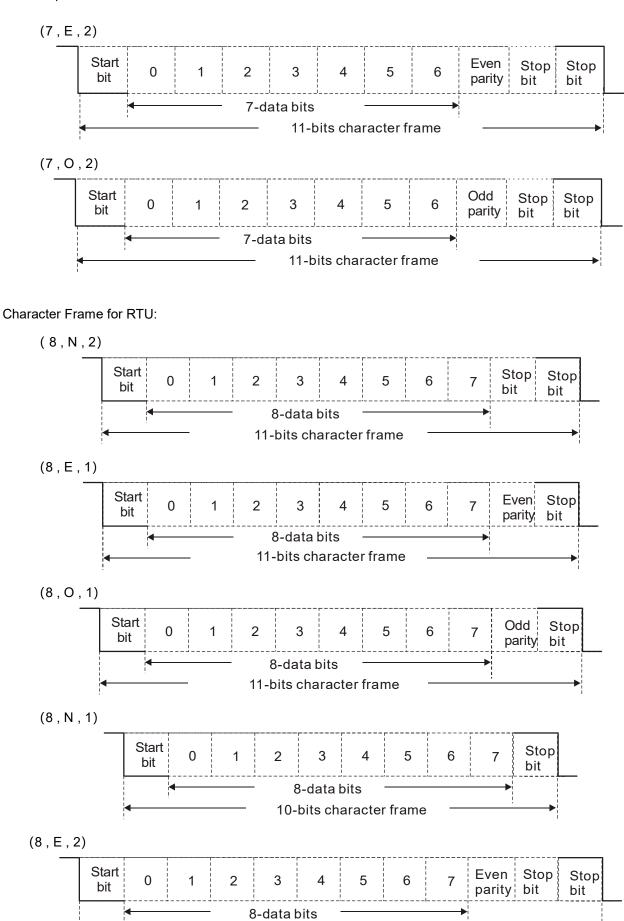

12-bits character frame

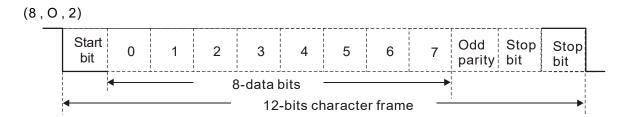

Communication Protocol

1. Communication Data Frame

ASCII mode:

STX	Start character ':' (3AH)	
Address Hi	Communication address:	
Address Lo	8-bit address consists of two ASCII codes.	
Function Hi	Command code:	
Function Lo	8-bit command consists of two ASCII codes.	
DATA (n-1) to DATA 0	Contents of data: Nx8-bit data consists of 2n ASCII codes. n ≤ 20, maximum of 40 ASCII codes.	
LRC CHK Hi	LRC checksum:	
LRC CHK Lo	8-bit checksum consists of two ASCII codes.	
END Hi	End characters:	
END Lo	END1 = CR (0DH), END0 = LF (0AH)	

RTU mode:

START	A silent interval of more than 10 ms
Address	Communication address: 8-bit address
Function	Command code: 8-bit command
DATA (n-1) to DATA 0	Contents of data: n×8-bit data, n ≤ 40 (20 x 16-bit data).
CRC CHK Low	CRC checksum:
CRC CHK High	16-bit checksum consists of two 8-bit characters.
END	A silent interval of more than 10 ms

2. Address (Communication Address)

Valid communication addresses are between 0–254. A communication address of 0 means broadcast to all AC motor drives (AMD). In this case, the AMD broadcast does not reply with any message to the master device.

00H: broadcast to all AC motor drives 01H: AC motor drive with address 01

0FH: AC motor drive with address 15 10H: AC motor drive with address 16

FEH: AC motor drive with address 254

For example, send communication to AMD with address 16 decimal (10H):

ASCII mode: Address = '1','0' => '1' = 31H, '0' = 30H

RTU mode: Address = 10H

3. Function (Function code) and DATA (data characters)

The format of the data characters depends on the function code.

03H: Read data from register

06H: Write single register

08H: Loop detection

The available function codes and examples for the VFD-EL-W drive are described in the following tables.

(1) 03H: multi-read, read data from registers.

Example: reading two continuous data from register address 2102H; AMD address is 01H.

ASCII mode:

Command message:

STX	٠.,
Address	'0'
Address	'1'
Function	'0'
FullCuon	'3'
	'2'
Starting data address	'1'
Starting data address	'0'
	'2'
	'0'
Number of data	'0'
(count by word)	'0'
	'2'
LRC Check	'D'
LRC Check	'7'
END	CR
END	LF

Response message:

STX	·.,
Address	'0'
Address	'1'
Function	'0'
Function	'3'
Number of data	'0'
(Count by byte)	'4'
	'1'
Content of starting address 2102H	'7 '
	'7'
	'0'
	'0'
Content of address 2103H	'0'
Content of address 2103H	'0'
	'0'
L BC Chook	'7 '
LRC Check	'1'
END	CR
END	LF

RTU mode:

Command message:

Address	01H
Function	03H
Starting data address	21H
Starting data address	02H
Number of data	00H
(count by word)	02H
CRC CHK Low	6FH
CRC CHK High	F7H

Response message:

Address	01H
Function	03H
Number of data (count by byte)	04H
Content of address 2102H	17H
Content of address 2 102H	70H
Content of address 2103H	00H
Content of address 2103H	00H
CRC CHK Low	FEH
CRC CHK High	5CH

(2) 06H: single write, write single data to register.

Example: writing data 6000 (1770H) to register 0100H; AMD address is 01H. ASCII mode:

Command message:

Command message.		
STX	٠.,	
Address	' 0'	
Address	'1'	
Function	' 0'	
Function	·6`	
Data address	' 0'	
	'1'	
	' 0'	
	' 0'	
Data content	'1'	
Data content	'7'	

Response message:

STX	· . ·
Address	'0'
Audress	'1'
Function	'0'
runction	'6'
Data address	'0'
	'1'
	'0'
	'0'
Data content	'1'
	'7'

Command message:

	'7'
	'0'
LRC Check	'7'
	'1'
END	CR
END	LF

Response message:

	'7'
	'0'
LRC Check	'7'
LRC CHeck	'1'
END	CR
END	LF

RTU mode:

Command message:

ADR	01H
CMD	08H
Data	00H
Data	00H
Data	17H
Data	70H
CRC CHK Low	8EH
CRC CHK High	0EH
	•

Response message:

ADR	01H
CMD	08H
Data	00H
Data	00H
Data	17H
	70H
CRC CHK Low	8EH
CRC CHK High	0EH

- 4. CRC (Cyclical Redundancy Check) is calculated by the following steps:
- Step 1: Load a 16-bit register (called CRC register) with FFFFH.
- Step 2: Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, storing the result in the CRC register.
- **Step 3:** Examine the LSB of CRC register.
- Step 4: If the LSB of CRC register is 0, shift the CRC register one bit to the right with MSB zero filling, then repeat step 3. If the LSB of CRC register is 1, shift the CRC register one bit to the right with MSB zero filling, Exclusive OR the CRC register with the polynomial value A001H, then repeat step 3.
- Step 5: Repeat step 3 and 4 until eight shifts have been performed. When this is done, a complete 8-bit byte will have been processed.
- Step 6: Repeat step 2 to 5 for the next 8-bit byte of the command message. Continue doing this until all bytes have been processed. The final content of the CRC register is the CRC value. When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, that is the lower order byte will be transmitted first.

The following is an example of CRC generation using C language. The function takes two arguments: Unsigned char* data ← a pointer to the message buffer

Unsigned char length ← the quantity of bytes in the message buffer The function returns the CRC value as a type of unsigned integer.

Unsigned int crc chk(unsigned char* data, unsigned char length){

```
int j;
unsigned int reg_crc=0xFFFF;
while(length--){
  reg crc ^= *data++;
  for(j=0;j<8;j++)
   if(reg crc & 0x01){ /* LSB(b0)=1 */
    reg_crc=(reg_crc>>1) ^ 0xA001;
   }else{
    reg crc=reg crc >>1;
return reg_crc;
```

5. Address list

The contents of the available addresses are shown in the following table.

		addresses are shown in the following table.		
Content	Address		Function	
AC motor drive Parameters	GGnnH	GG means parameter group, nn means parameter number. For example, the address of Pr.04.01 is 0401H. Refer to Chapter 4 Parameters for the function of each parameter. When reading parameters by command code 03H, only one parameter can be read at a time.		
		bit 0–1	00B: No function 01B: Stop 10B: Run 11B: Jog + Run	
		bit 2-3	Reserved	
Command	2000H	bit 4–5	00B: No function 01B: FWD 10B: REV 11B: Change direction	
Write only		bit 6-7	00B: Comm. forced first acceleration/deceleration	
		- Bit 0 7	01B: Comm. forced second acceleration/deceleration	
		bit 8–15	Reserved	
	2001H	Frequency	/ command	
		bit 0	1: E.F. (external fault) ON	
		bit 1	1: Reset	
	2002H	bit 2	1: B.B. ON	
		bit 3–4 bit 6–15	Reserved	
Fire mode enabled	2002H	Bit 5	00B: No function 01B: Fire mode enabled (Does not include the running commands)	
Status		Error code	,	
monitor	2100H	0: No error occurred		
Read only		1: Over-cu	ırrent (oc)	
		2: Over-vo	oltage (ov)	
		3: IGBT O	verheat (oH1)	
		4: Reserved 5: Drive overload (oL)		
		6: Motor o	verload1 (oL1)	
		7: Over-to	rque (oL2)	
		8: Externa	l fault (EF)	
		9: Over-current during acceleration (ocA)		
		10: Over-c	current during deceleration (ocd)	
		11: Over-c	current during constant speed (ocn)	
		12: Reserv		
		13: Reserved 14: PHL (Phase-Loss)		
		15: Reserv	ved	

16: Auto-acceleration/deceleration failure (cFA) 17: Software and parameter password protection enabled (co 18: Power Board CPU WRITE failure (cF1.0) 19: Power Board CPU READ failure (cF2.0) 20: CC, OC Hardware protection failure (HPF1) 21: OV Hardware protection failure (HPF2) 22: Reserved 23: OC Hardware protection failure (HPF4) 24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 34: Reserved 35: Reserved 36: Reserved 36: Reserved 37: OPHL	dE)
18: Power Board CPU WRITE failure (cF1.0) 19: Power Board CPU READ failure (cF2.0) 20: CC, OC Hardware protection failure (HPF1) 21: OV Hardware protection failure (HPF2) 22: Reserved 23: OC Hardware protection failure (HPF4) 24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	dE)
19: Power Board CPU READ failure (cF2.0) 20: CC, OC Hardware protection failure (HPF1) 21: OV Hardware protection failure (HPF2) 22: Reserved 23: OC Hardware protection failure (HPF4) 24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 34: Reserved 35: Reserved 36: Reserved	
20: CC, OC Hardware protection failure (HPF1) 21: OV Hardware protection failure (HPF2) 22: Reserved 23: OC Hardware protection failure (HPF4) 24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
21: OV Hardware protection failure (HPF2) 22: Reserved 23: OC Hardware protection failure (HPF4) 24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved	
22: Reserved 23: OC Hardware protection failure (HPF4) 24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
23: OC Hardware protection failure (HPF4) 24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 33: Reserved 35: Reserved 36: Reserved	
24: U-phase error (cF3.0) 25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
25: V-phase error (cF3.1) 26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
26: W-phase error (cF3.2) 27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
27: DC bus error (cF3.3) 28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
28: IGBT Overheat error (cF3.4) 29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
29: Reserved 30: Reserved 31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
31: Reserved 32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
32: Reserved 33: Reserved 34: Reserved 35: Reserved 36: Reserved	
33: Reserved 34: Reserved 35: Reserved 36: Reserved	
34: Reserved 35: Reserved 36: Reserved	
35: Reserved 36: Reserved	
36: Reserved	
37: OPHL	
Status of the AC motor drive	
00B: RUN LED is off, STOP LED is on (the AC r drive stops).	notor
01B: RUN LED blinks, STOP LED is on (when the motor drive decelerates to stop).	ne AC
bit 0–1 10B: RUN LED is on, STOP LED blinks (when the motor drive is in standby).	ne AC
11B: RUN LED is on, STOP LED is off (when the motor drive runs).	e AC
bit 2 1: JOG command	
2101H bit 3–4 00B: FWD LED is on, REV LED is off (when the motor drive runs forward).	AC
01B: FWD LED is on, REV LED blinks (when the motor drive runs from reverse to forward).	∍ AC
10B: FWD LED blinks, REV LED is on (when the motor drive runs from forward to reverse).	∍ AC
11B: FWD LED is off, REV LED is on (when the motor drive runs in reverse).	AC
bit 5–7 Reserved	
bit 8 1: Master frequency is controlled by the commur interface.	nication
bit 9 1: Master frequency is controlled by the analog s	

Content	Address	Function		
		bit 10	Operation command is controlled by the communication interface.	
		bit 11–15	Reserved	
	2102H	Frequency of	command (F)	
	2103H	Output frequ	Output frequency (H)	
	2104H	Output curre	ent (AXX.X)	
	2105H	Reserved		
	2106H	Reserved Reserved DC bus Voltage (UXXX.X) Output voltage (EXXX.X) Displays temperature of IGBT (°C) User-defined (Low word)		
	2107H			
	2108H			
	2109H			
	210AH			
	2116H			
	2117H	User-defined	d (High word)	

Note: 2116H is the number display for Pr.00.04. The high byte of 2117H is the number of decimal places for 2116H. The low byte of 2117H is the ASCII code of the alphabetic display for Pr.00.04.

6. Exception response:

The AC motor drive is expected to return a normal response after receiving command messages from the master device. The following describes the conditions when no normal response is returned to the master device.

The AC motor drive does not receive the messages due to a communication error, and the AC motor drive has no response. The master device eventually processes a time-out condition.

The AC motor drive receives the messages without a communication error, but cannot handle them. An exception response is returned to the master device and a fault message "CExx" displays on the AC motor drive keypad. The xx of "CExx" is a decimal code equal to the exception code (described below). In the exception response, the most significant bit of the original command code is set to 1, and an exception code that explains the condition that caused the exception is returned.

The following is an example of an exception response of command code 06H and exception code 02H.

ASCII mode:

Addit mode.			
٠.,			
'0'			
'1'			
'8'			
'6'			
'0'			
'2'			
'7'			
'7'			
CR			
LF			

RTU mode:

Address	01H
Function	86H
Exception code	02H
CRC CHK Low	СЗН
CRC CHK High	A1H

Explanation of exception codes:

Exception code	Explanation	
01	Illegal function code: The function code received in the command message is not available for the AC motor drive.	
02	Illegal data address: The data address received in the command message is not available for the AC motor drive.	
03	Illegal data value: The data value received in the command message is not available for the AC motor drive.	
04	Slave device failure: The AC motor drive is unable to perform the requested action.	
10	Communication time-out: If Pr.09.03 is not equal to 0.0, and Pr.09.02 = 0–2, and there is no communication on the bus during the time-out detection period (Pr.09.03), the keypad displays "cE10".	


7. Communication program for a PC:

The following is a simple example of how to write a communication program for Modbus ASCII mode on a PC in the C language.

```
#include<stdio.h>
#include<dos.h>
#include<conio.h>
#includerocess.h>
#define PORT 0x03F8 /* the address of COM1 */
/* the address offset value relative to COM1 */
#define THR 0x0000
#define RDR 0x0000
#define BRDL 0x0000
#define IER 0x0001
#define BRDH 0x0001
#define LCR 0x0003
#define MCR 0x0004
#define LSR 0x0005
#define MSR 0x0006
unsigned char rdat[60];
/* read 2 data from address 2102H of AC drive with address 1 */
unsigned char tdat[60]={':','0','1','0','3','2','1','0','2', '0','0','2','D','7','\r',\n'};
void main(){
int i;
outportb(PORT+MCR,0x08);
                                  /* interrupt enable */
outportb(PORT+IER,0x01);
                                 /* interrupt as data in */
outportb(PORT+LCR,(inportb(PORT+LCR) | 0x80));
/* the BRDL/BRDH can be access as LCR.b7==1 */
outportb(PORT+BRDL,12);
                                 /* set baudrate=9600, 12=115200/9600*/
outportb(PORT+BRDH,0x00);
outportb(PORT+LCR,0x06);
                                  /* set protocol, <7,N,2>=06H, <7,E,1>=1AH, <7,O,1>=0AH,
<8,N,2>=07H, <8,E,1>=1BH, <8,O,1>=0BH */
for(i=0;i<=16;i++){
while(!(inportb(PORT+LSR) & 0x20)); /* wait until THR empty */
outportb(PORT+THR,tdat[i]);
                             /* send data to THR */ }
i=0;
while(!kbhit()){
if(inportb(PORT+LSR) & 0x01){ /* b0==1, read data ready */
rdat[i++]=inportb(PORT+RDR); /* read data form RDR */
} }
```

09.06	Reserved		
09.07	∦ Respons	e Delay Time	Unit: 1
	Settings	0–200 (1 unit = 2 ms.)	Default: 1

Sets the response delay time after the AC motor drive receives a communication command as shown in the following diagram.

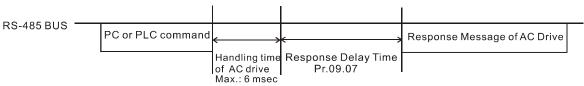

✓ You can set this parameter during operation.

				Default: (
	Settings	0	Disable	
	_	1	Digital keypad UP/DOWN keys	
		2	Reserved	
		3	Reserved	
		4	PID set point (Pr.10.11)	
1	0.01 Input Termi	nal for Pl	D Feedback	
				Default:
	Settings	0	Positive PID feedback from external terminal AVI $(0-10 \text{ V}_{DC})$	
		1	Negative PID feedback from external terminal AVI (0–10 V_{DC})	
		2	Positive PID feedback from external terminal ACI (4–20 mA)	
		3	Negative PID feedback from external terminal ACI (4–20 mA)	
	accordingly. Ensur Frequency). Negative feedback	e that thi	riable (feedback) controls the output frequency (Hz). Select the inputs parameter setting does not conflict with the setting for Pr.10.00 (set point (SP) – feedback (FB) eedback (FB) – set point (SP)	
1	0.11 ⊮ PID Set F	Point Valu	ue	Unit: 0.
	Settings	0.00	–400.00 Hz	Default: 0.0
ľ	Sets the set point i	n Hz in c	conjunction with Pr.10.00 setting to 4.	
			<u> </u>	Haite O
	0.02 ⊮ Proportion	nal Gain	(P)	
1	0.02	nal Gain 0.0–	(P) 10.0	Default: 1.0
	Settings Determines the de decrease the error value too high, it m	nal Gain 0.0– viation re and get nay cause	(P) 10.0 esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But e system oscillation and instability.	Default: 1.0 ally used to if you set the
	Settings Determines the de decrease the error value too high, it m	nal Gain 0.0– viation re and get nay cause	(P) -10.0 esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But	Default: 1.0 ally used to if you set the
	Settings Determines the de decrease the error value too high, it m	nal Gain 0.0– viation re and get nay cause two gair	(P) 10.0 esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But e system oscillation and instability.	Default: 1.0 ally used to if you set the neter.
	Settings Determines the de decrease the error value too high, it multiple of the set of	nal Gain 0.0– viation re and get nay cause two gair	(P) 10.0 esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But e system oscillation and instability.	Default: 1.0 ally used to if you set the neter. Unit: 0.0
	Settings Determines the de decrease the error value too high, it m If you set the other	nal Gain 0.0- viation re and get nay cause two gair ime (I) 0.00	(P) -10.0 esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But e system oscillation and instability. Ins (I and D) to zero, proportional control is the only effective parameter. —100.00 sec.	Default: 1.0 ally used to if you set the neter. Unit: 0.0
	Determines the de decrease the error value too high, it m If you set the other O.03	viation reading and get nay cause two gair (I) 0.00 0.00 ontroller t	(P) -10.0 -esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But e system oscillation and instability	Default: 1.0 ally used to if you set the neter. Unit: 0.0 Default: 1.00
	Settings Determines the de decrease the error value too high, it must be set the other set the other set the integral To settings Use the integral council not stop working under the integral to socillation for a star	viation reading of two gairs of	(P) -10.0 -esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But e system oscillation and instability	Default: 1.0 ally used to if you set the neter. Unit: 0.0 Default: 1.00 control does
	Determines the de decrease the error value too high, it m If you set the other O.03 Integral T Settings Use the integral co not stop working urange the integral control is contegral control is contegral control is contegral control is contegral to sets the integral time with slower responsible.	viation reading and get hay cause two gair ime (I) 0.00 0.00 ontroller trottle time time to the eight of the ise and see an	(P) -10.0	Default: 1.0 ally used to if you set the neter. Unit: 0.0 Default: 1.0 control does and es. The coller gain,
	Settings Determines the de decrease the error value too high, it must be set the other set to be set the integral To settings Use the integral To set the smaller the integral control is control is control is control is control in the smaller the integral control is control	viation reading of two gairs of two gairs of the elegral time (I) of the elegral time (II) of the elegral time (III) of the elegral time (IIII) of the elegral time (IIIII) of the elegral time (IIIIIIIII) of the elegral time (IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	(P) -10.0	Default: 1.0 ally used to if you set the neter. Unit: 0.0 Default: 1.0 control does and es. The coller gain,
	Settings Determines the de decrease the error value too high, it must be set the other set to be set the integral To settings Use the integral To set the smaller the integral control is control is control is control is control in the smaller the integral control is control	viation ready cause two gair me (I) 0.00 0.00 ontroller to the egral time time use me of the ase and seponse as is too should be as to should be as too should be as to should be as too shoul	(P) 10.0 esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But the system oscillation and instability. In (I and D) to zero, proportional control is the only effective parameters of the properties of the original control is the only effective parameters. In a control of the properties of	Default: 1.0 ally used to if you set the neter. Unit: 0.0 Default: 1.00 control does and es. The roller gain,
	Determines the de decrease the error value too high, it must be decrease the error value too high, it must be decrease the error value too high, it must be decrease the error value too high, it must be decrease the error value too high, it must be decrease the error value too high, it must be decreased to high a set of the integral of the integral control is control in the integral time.	viation read get any cause two gair two gair ime (I) 0.00 0.00 ontroller to the egral time ible system use me of the ise and so sponse a is too should be a sponse a	esponse of Proportional gain (P). Eliminates the system error; usual faster response speed. It also reduces the steady-state error. But a system oscillation and instability. In (I and D) to zero, proportional control is the only effective parameters of the error during stable system operation. The integral of the stronger the integral action. It is helpful to reduce overshoot em. Accordingly, the speed to lower the steady-state error decreased with the other two controls for the PI controller or PID controller. It is controller. When the integral time is long, there is a small I controlled wexternal control. When the integral time is short, there is a large and rapid external control. The integral time is short, there is a large and rapid external control. The integral time is short, there is a large and rapid external control. The integral time is short, there is a large and rapid external control. The integral time is short, there is a large and rapid external control. The integral time is short, there is a large and rapid external control. The integral time is short, there is a large and rapid external control. The integral time is short, there is a large and rapid external control.	Unit: 0.07 Default: 1.00 control does and es. The coller gain,

can use the differential controller to eliminate the error in order to improve the system state. Using a

suitable differential time can reduce overshoot and shorten adjustment time; however, the differential

operation increases noise interference. Note that a too large differential causes more noise interference. In addition, the differential shows the change and the output is 0 when there is no change. Note that you cannot use the differential control independently. You must use it with the other two controllers for the PD controller or PID controller.


- Sets the D controller gain to determine the error change response. Using a suitable differential time reduces the P and I controllers overshoot to decrease the oscillation for a stable system. A differential time that is too long may cause system oscillation.
- The differential controller acts on the change in the error and cannot reduce the interference. Do not use this function when there is significant interference.

10.05	Upper Bound for Integral Control	Unit: 1
	Settings 0–100%	Default: 100

- Defines an upper bound for the integral gain (I) and therefore limits the Master Frequency. The formula is Integral upper bound = Maximum Output Frequency (Pr.01.00) x (Pr.10.05).
- An excessive integral value causes a slow response due to sudden load changes and may cause motor stall or machine damage.

10.06	PID Filter Ti	me	Unit: 0.1
	Settings	0.0-2.5 sec.	Default: 0.0

- The output for PID filter time helps reduce the system oscillation.
- Refer to the following closed-loop control diagram:

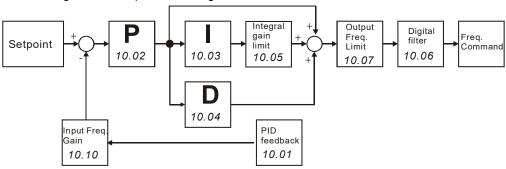

10.07	PID Outpu	it Frequency Limit	Unit: 1
	Settings	0–110 %	Default: 100

Defines the percentage of the output frequency as the limit for PID control. The formula is Output Frequency Limit = Maximum Output Frequency (Pr.01.00) X Pr.10.07%. This parameter limits the Maximum Output Frequency. You can set an overall limit for the output frequency in Pr.01.07.

10.08	PID Feedba	ack Signal Detection Time	Unit: 0.1
	Settings	0.0-3600.0 sec.	Default: 60.0

- This function in only for ACI signal.
- Defines the time during which the PID feedback is abnormal before a warning (see Pr.10.09) is given. It can also be modified according to the system feedback signal time.
- If you set it to 0.0, the system does not detect any abnormality signal.

This for the investor of ACM is real and a signal Action Erroneous PID Feedback Signal Action Default: 0 Settings 0 Warn and ramp to stop 1 Warn and coast to stop 2 Warn and keep operating

- This function in only for ACI signal.
- Determines the AC motor drive action when the feedback signals (analog PID feedback) are abnormal according to Pr.10.16.

10.10	Gain Over the PID Detection Value			Unit: 0.1
	Settings	0.0–10.0		Default: 1.0


Sets the gain adjustment over the feedback detection value. Refer to the PID closed-loop control diagram in Pr.10.06 for details.


	10.12	PID Deviation	on Level	Unit: 0.1
_		Settings	0.0–100.0%	Default: 10.0
	10.13	PID Deviation Detection Time		Unit: 0.1
		Settings	0.1–300.0 sec.	Default: 5.0

- Sets the detection of the deviation between the set point and the feedback signal value.
- The base for Pr.10.12 is Pr.01.00. When the PID feedback control is enabled, and (PID set point source feedback) is larger than Pr.10.12, and the time exceeds the Pr.10.13 setting, then the multi-function output terminal #16 (PID Feedback Error) displays as a warning and acts according to Pr.10.20 settings.
- When you set Pr.10.12 to 0, PID feedback error detection is disabled.

10.14	Sleep Detec	tion Time	Unit: 0.1
	Settings	0.0-6550 sec.	Default: 0.0
10.15	Sleep Frequ	ency	Unit: 0.01
	Settings	0.00–400.00 Hz	Default: 0.00
10.16	Wake-up Fr	equency	Unit: 0.01
	Settings	0.00–400.00 Hz	Default: 0.00

- Sleep mode setting requirements:
 - PID function must be enabled.
 - The wake-up frequency Pr.10.16 setting must be higher than the sleep frequency Pr.10.15, and ensure that there must be an appropriate difference between them (5 Hz or above) to prevent frequent switching between the two frequency status.
 - The sleep frequency Pr.10.15 setting must be higher than the Pr.01.08 output frequency lower limit to prevent being in sleep mode.
 - The sleep frequency Pr.10.15 setting must be higher than the Pr.01.05 minimum output frequency.
- Sleep/wake-up mode status description for the AC motor drive:
 - When the actual output frequency H < Pr.10.15 and the time exceeds the Pr.10.14 setting, the AC motor drive no longer outputs and is in sleep mode after the AC motor drive decelerates to Pr.01.05 minimum output frequency following the deceleration time limit.
 - When the AC motor drive is in sleep mode, the frequency command F is still calculated by PID. The state of the wake-up shows as the following diagram.
 - ➤ Before the frequency command F calculated by the PID reaches the wake-up frequency Pr.10.16, the AC motor drive is in sleep mode, and the output frequency H is 0 Hz. The duration of this period of time is affected by the PID parameters (Pr.10.02, Pr.10.03, and Pr.10.04).
 - ➤ When the frequency command F calculated by the PID reaches the wake-up frequency Pr.10.16, the AC motor drive output frequency H accelerates from Pr.01.05 minimum output frequency to Pr.10.16 wake-up frequency following the V/F curve.
 - ➤ When the actual output frequency H of the AC motor drive accelerates to Pr.10.16 wake-up frequency, control the AC motor drive output frequency H by PID.

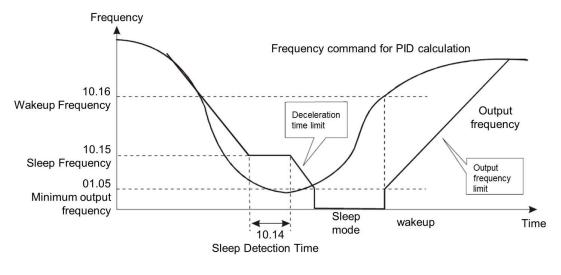

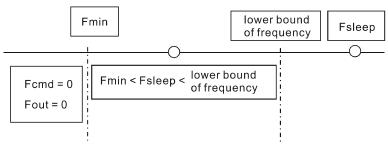

- When the PID function is enabled and the sleep mode is disabled:
 - If Pr.01.08 > Pr.01.05, the lower limit of the AC motor drive output frequency H is limited by Pr.01.08.
 - If Pr.01.08 ≤ Pr.01.05, the lower limit of the AC motor drive output frequency H is limited by Pr.01.05. When it reaches Pr.01.05, the AC motor drive stops output and is in ready status.

10.17 PID Offset


Default: 0.00

Settings: 0.00–60.00 Hz

Selects the minimum output frequency in the PID control mode according to your applications.

10.18	Feedback	Unit: 0.1	
	Settings	1.0–99.9	Default: 99.9

- When you set Pr.00.04 to 8, 00:00 displays (see the figure below).
- Use this parameter only for display. This parameter does not relate to Pr.00.13, Pr.00.14, Pr.02.18 and Pr.02.19.

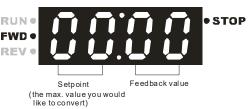


10.19 PID Calculation Mode Selection


Default: 0

Settings 0 Serial mode 1 Parallel mode

Serial mode

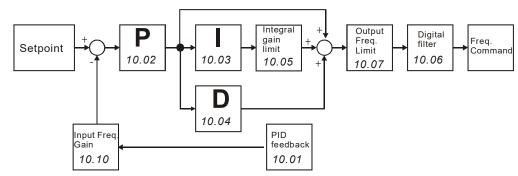

Parallel mode

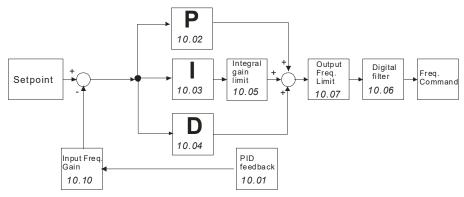

10.20 Erroneous PID Feedback Deviation Level Action

Default: 0


- Settings 0 Warn and keep operating
 - 1 Warn and coast to stop
 - 2 Warn and ramp to stop
 - Ramp to stop and restart after Pr.10.21 delay time (No warning displays)
 Ramp to stop, and restart after Pr.10.21 delay time. The number of times of restart is limited by Pr.10.50 (Number of Times of Restart after PID Fault)
- In PID control mode, the AC motor drive acts according to this parameter when erroneous PID feedback deviation level occurs (Pr.10.12 and Pr.10.13).

Unit: 1	Restart Delay Time after Erroneous PID Deviation Level	10.21
Default: 60	Settings 0–9999 sec.	
Unit: 1		10.22
Default: 0	Settings 0–100%	
Unit: 1		10.23
Default: 10	Settings 1–9999 sec.	

- Pr.10.22 is based on the set point set by the PID control. When the deviation is less than Pr.10.22 and the time exceeds Pr.10.23 setting, the AC motor drive decelerates to stop to be in a standby status with constant pressure (this deceleration time is according to the Deceleration Time 2 in Pr.01.12). If the deviation is still in the range of the error set during deceleration to stop, the system is in standby status.
- Example: Assume that the set point of a constant pressure control for a pump is 4 kg, Pr.10.22 is set to 5%, and Pr.10.23 is set to 15 seconds, then the deviation is 0.2 kg (4 kg X 5% = 0.2 kg). When the feedback value is higher than 3.8 kg and the time exceeds 15 seconds, the AC motor drive decelerates to stop (this deceleration time is according to the Deceleration Time 2 in Pr.01.12). When the feedback value is less than 3.8 kg, the AC motor drive starts to run.


10.24	✓ Deviation Let	evel of Liquid Leakage	Unit: 1
	Settings	0–50%	Default: 0

- Pr.10.24 is based on the set point set by the PID control. When the drive does not run and is in a constant pressure status, and if the error is higher than Pr.10.24 due to liquid leakage (minor pressure loss), the AC motor drive starts to run.
- Use this parameter to avoid the drive's frequent start-up and stop due to liquid leakage (minor pressure loss).
- Liquid Leakage Deviation Level Detection

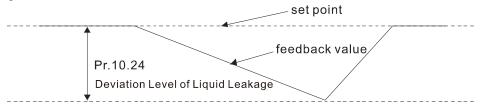

10.25		akage Change Detection	Unit: 1
	Settings	0–100%	Default: 0
		(0: Disable)	
10.26		ting for Liquid Leakage Change	Unit: 0.1
	Settings	0.1–10.0 sec.	Default: 0.5
		(0: Disable)	

- Pr.10.25 and Pr.10.26 define the variation of the feedback value within a time unit in the case of liquid leakage (minor pressure loss).
- Pr.10.25 sets the variation of the feedback value based on the set point set by the PID control; Pr.10.26 is the setting value within a time unit. If the variation of the feedback value is less than the settings for Pr.10.25 and Pr.10.26, the liquid leakage occurs. When the drive does not run and is in a constant pressure status, and if the variation of the feedback value is higher than the settings for Pr.10.25 and Pr.10.26, the AC motor drive starts to run in order to keep the system stable.
- Liquid Leakage / Usage Deviation Level Detection

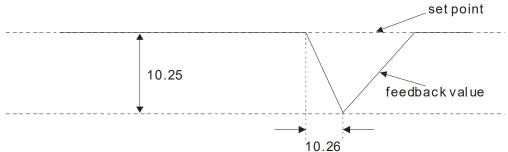

Example:

Assume that the set point of a constant pressure control for a pump is 4 kg, Pr.10.22=5%, Pr.10.23 =15 seconds, Pr.10.24=25%, Pr.10.25=3% and Pr.10.26=0.5 second, then the deviation is 0.2 kg (4 kg X 5% = 0.2 kg). That is, when the feedback value is higher than 3.8 kg and the time exceeds 15 seconds, the AC motor drive decelerates to stop (this deceleration time is according to the Deceleration Time 2 in Pr.01.12). When the feedback value is less than 3.8 kg, the AC motor drive starts to run.

- Case 1: Assume that when the AC motor drive does not run and is in a constant pressure status, the variation of the feedback value is less than 0.12 kg (4 kg X 3% = 0.12 kg) within 0.5 second. When the feedback value continues to decrease to make the deviation of the set point be less than 1 kg (4 kg X 25% = 1 kg), that is, when the feedback value is less than 3 kg, the AC motor drive starts to run.
- Case 2: Assume that when the AC motor drive does not run and is in a constant pressure status, the variation of the feedback value is higher than 0.12 kg (4 kg X 3% = 0.12 kg) within 0.5 second; that is, when the feedback value is less than 3.88 kg [4 (4 kg X 3%) = 3.88 kg] within 0.5 second, the AC motor drive starts to run.

10.27 10.33	Reserved		
10.35	Multi-pump	Control Mode	
-	Settings	0–2	Default: 0
-		0: Disable	

		Fixed time circulation (alternative operation) Fixed quantity control (multi-pump operating at constant pressu	ıre)
	When using the mu	ulti-pump control mode, you must set Pr.10.35 for each pump to the s	•
1	10.36 Multi-pump I	ID .	
	Settings	0–4	Default: 0
	J	0: Multi-pump control mode is disabled	
		1: Master	
		2–4: Slave	
	When using the mu	ulti-pump control mode, the settings of each pump for Pr.10.36 canno	t be the same.
1	10.37	p's Fixed Time Circulation Period	
	Settings	1–65535 minutes	Default: 60
	This parameter is c	only valid for master pump settings.	
	Fixed time circulation	on mode (alternative operation): Assume that when pump #1's operators. Pr.10.37, pump #1 stops, and then pump #2 activates, and so on.	ting time is longer
		trol (multi-pump operating at constant pressure): Assume that when the onger than the setting for Pr.10.37, the master pump and the slave pure	
1	10.38 ★ Frequency	y to Start Switching Pumps	
	Settings	0.00 Hz–F _{MAX}	Default: 60.00
1	10.39 ★ Time Dete	ected When Pump Reaches the Starting Frequency	
	Settings	0.0–3600.0 sec.	Default: 1.0
1	10.40 ★ Frequency	y to Stop Switching Pumps	
	Settings	0.00 Hz–F _{MAX}	Default: 48.00
	-		
1	Variable 10.41 ✓ Time Determine	ected When Pump Reaches the Stopping Frequency	
	Settings	0.0–3600.0 sec.	Default: 1.0
	This parameter is o	only valid for master pump settings.	
	This parameter is c	only valid for fixed quantity control (multi-pump operating at constant p	oressure) mode.
		oump's operating frequency ≥ Pr.10.38, and the time exceeds Pr.10.39 antity of water is still insufficient, slave pump #2 and #3 activates under the still insufficient in th	
	If the master pump	o's operating frequency ≤ Pr.10.40, and the time exceeds Pr.01.41, sla o can fulfill the conditions, slave pump #2 and #3 stop in sequence, an	
	pump in operation of	•	
	whether the maste	er pump stops depends on the stopping detection function.	
1	10.42 ⊮ Pump's Fi	requency at Time-out (Disconnection)	
	Settings	0.00 Hz–F _{MAX}	Default: 0.00
	This parameter is c	only valid for slave pump settings.	
		conditions of communication disconnection and treatment, refer to Pr. t Action and Pr.09.03 Time-out Detection.	09.02
	mode, the frequence	me-out) occurs in the fixed quantity control (multi-pump operating at c cy for the slave pump is Pr.10.42. When you press the STOP key, the ngle-pump mode. (The RUN command and operating frequency is se ve pump.)	disconnected
	The master pump of	can re-detect the disconnection of the salve pump.	

	ter 4 Parameters / VFD-EL-W		
1	O.43 Pump's Err Settings	ror Treatment Bit0-Bit2	Default: 1
		only valid for master pump settings.	Delault. 1
	•	whether the erroneous pump switches to an alternative pump when an error o	occurs in the
	running pump.		
	0: All pumps stop.		
	1: Switch to an alte	ernative pump	
	Example:		
		if an error occurs in the running pump, all pumps stop.	
m		if an error occurs in the running pump, switch the erroneous pump to an alte	rnative pump.
		he erroneous pump to be in a standby or stop status after reset.	ommand)
		us pump to be in a standby status after reset (the pump receives the RUN co us pump to be in a stop status after reset (the pump does not receive the RU	•
	Example:	us partip to be in a stop status after reset (the partip does not receive the rec	''' Command).
	•	after resetting the erroneous pump, you can control its running through the c	controller.
	When Bit1=1, and	after resetting the erroneous pump, you cannot control its running through thimp gives the STOP command.	
	Bit2: Determines wrunning pump.	vhether the master pump receives the RUN command or not when an error c	occurs in the
		occurs in the running pump, the master pump does not receive the RUN com	
	instead of the erro	occurs in the running pump, the master pump can choose to run with an alter neous pump.	native pump,
	Example:		
		master pump does not receive the RUN command when an error occurs in d master pump receives the RUN command and choose to run with an alterna	
	when an error occ		live pump
	This parameter se	tting is only valid for AUTO mode.	
1	0.44 Selection of	of Pump's Start-up Sequence	
	Settings	0–1	Default: 0
		0: By pump ID#	
		1: By running time	
Ш	0: By pump ID#, (1	·	
	1: By the shortest	running time	
1	J	Time of Multi-pump Under Alternative Operation	
	Settings	0.0–360.0 sec.	Default: 60.0
	•	only valid for master pump settings.	
	Sets the time for s	witching the master pump and the slave pump.	
1	0.46 Reserved		
	0.47 Reserved		
1	0. 48 Reserved		

When the pressure sensor is set to 10 kg, Pr.10.49=0 and Pr.10.12=10.0% (that is, deviation=1 kg), and if the set point=3 kg and feedback < 2 kg, then the AC motor drive follows the setting for Pr.10.20.

0: Use the existing setting (default), and check for any error per the

1: Set the low water pressure percentage (%), and check for any error

Default: 0

✓ Specify the Setting for Pr.10.12 [PID Deviation Level]

per the physical quantity feedback.

feedback deviation.

0-1

10.49

Settings

When the pressure sensor is set to 10 kg, Pr.10.49=1 and Pr.10.12=10.0% (that is, the physical quantity=1 kg), and if the set point=3 kg and feedback < 1 kg, then the AC motor drive follows the setting for Pr.10.20.

10.50	0.50 ✓ Number of Times of Restart after PID Fault			
	Settings	0–1000 times	Default: 0	

When you set Pr.10.20 =4, this parameter sets the number of times to restart when PID error occurs.

VFD-EL-W Multi-pump SOP

<u> </u>	Wilditi-purify SOP	
STEP		
1	PID settings	The pressure feedback signal only connects to the Master, so set the PID for the master pump only. Pr.10.00 (PID Set Point Selection)
		Pr.10.01 (Input Terminal for PID Feedback)
2	P, I, D Gain / Time	Each AC motor drive has a PID controller, so set the following parameters for all AC motor drives. Pr.10.02 Proportional Gain (P) Pr.10.03 Integral Time (I) Pr.10.04 Differential Time (D)
	Acceleration/	Set the acceleration and deceleration time for each AC motor drive.
3	Deceleration Settings	Pr.01.09 (Acceleration Time 1) Pr.01.10 (Deceleration Time 1)
4	Keypad Multi-function Display	The keypad of VFD-EL-W displays the PID settings and feedback values. Set the following parameters for each AC motor drive. Pr.00.04 (Content of Multi-function Display) Setting: 5 (Display the PID analog feedback signal value in % (b) or 8 (Display the setting values for PID control and feedback signal.) Pr.00.13 (User-defined Value) Pr.00.14 (Decimal Place of User-defined Value) Pr.10.18 (Feedback of PID Physical Quantity Value)
5	Stopping Detection Function	All drives must have the stopping detection function. Set the related parameters for each AC motor drive. Pr.10.22 (Set Point Deviation Level) Pr.10.23 (Detection Time of Set Point Deviation Level) Pr.01.12 (Deceleration Time 2)
6	Liquid Leakage	All drives must have the restart function after liquid leakage. Set the related parameters for each AC motor drive. Pr.10.24 (Deviation Level of Liquid Leakage) Pr.10.25 (Liquid Leakage Change Detection) Pr.10.26 (Time Setting for Liquid Leakage Change)
7	Multi-functional Pumps	Set the Master and Slave pumps and their parameter settings according to your applications.

Optional Accessories for Multi-pumps under Alternative Operation

When you use the multi-pump operation, pay attention to the following wirings.

1. Use a RJ45 cable (8 pin, Internet cable) without an adapter. Simply connect the master/slave communication port. If there are more than two pumps, use RMKE-HUB01 to connect RJ45.





RJ45 Female Connector

RMKE-HUB01 RS-485 One-wire to Two-wire

2. Use a RJ11 (6 pin) cable with an adapter to connect the master/slave communication port.




VFD-CMD04 RS-485 RJ11 Four-port communication breakout box

Case:

For alternative operation of multi-pump (Pr.10.35=1 Fixed Time Circulation)

- Enables four pumps to operate alternatively by time to extend their life span.
- Keeps the water pressure at 3 kg in a water system with constant pressure. Refer to the diagram below:

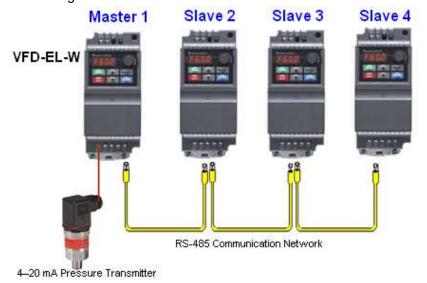

Related parameters when setting Pr.10.35=1

Parameter	Function	Settings	Default	End user's master	End user's slave	Note
		0: Display the frequency command value (F)				
	Start-up	1: Display the actual output frequency (H)				
№ 00.03	Display Selection	2: Display the output current in Amps supplied to the motor (A)	0	3	3	
		3: Display the content of the user- defined unit (U)				
		4: FWD/REV command				
		0: Display the content of the user- defined unit (U)				
		1: Display the counter value (c)		8	8	
	Content of Multi-function Display	2: Display the status of multi-function input terminals (d)	0			
		3: Display the DC bus voltage (u)				
		4: Display the output voltage (E)				
₩ 00.04		5: Display the PID analog feedback signal value in % (b)				
# 00.04		6: Display the output power factor angle (n)				
		7: Display the output power (P)				
		8: Display the setting values for PID control and feedback signal				
		9: Display the AVI (I) (V)				
		10: Display the ACI (mA/V) (i)				
		11: Display the temperature of the IGBT in °C (h)				
00.13	User-defined Value (corresponds to max. operating frequency Pr.01.00)	0–9999	0	100	100	Sets the constant pressure control to correspond to the largest physical quantity and the decimal
00.14	Decimal Place of User- defined Value	0–3	0	1	1	place. The number displayed is 10.0 currently.

Parameter	Function	Settings	Default	End user's master	End user's slave	Note
01.00	Maximum Output Frequency (Fmax)	50.00–400.0 Hz	60.00	60.00	60.00	
01.01	Motor Rated Frequency (Fbase)	0.10–400.0 Hz	60.00	60.00	60.00	Follows the specifications of
01.02	Motor Rated Voltage	230V series: 0.1–255.0 V	220.0	220.0	220.0	pumps
01.02	(Vbase)	460V series: 0.1–510.0 V	440.0			

₩ 01.09	Accel. Time 1	0.1-600.0 / 0.01-600.00 sec.	10.0	0.5	0.5	Adjusts according
⊮ 01.10	Decel. Time 1	0.1-600.0 / 0.01-600.00 sec.	10.0	5.0	5.0	to customer's applications
⊮ 01.12	Decel. Time 2	0.1-600.0 / 0.01-600.00 sec.	10.0	3.0	3.0	The time the AC motor drive decelerates to stop when the pressure reaches the setting value.

Parameter	Function	Setting s	Default	End user's master	End user's slave	Note
№ 02.00	First Master Frequency Command Source	O: Digital keypad UP/DOWN keys or Multi-function Inputs UP/DOWN. 1: 0–10 V from AVI 2: 4–20 mA from ACI 3: RS-485 (RJ45) communication 4: Digital keypad potentiometer	0	2	2	Adjusts according to customer's applications
 √ 02.01	First Operation Command Source	1: External terminals. Keypad STOP/RESET enabled. 2: External terminals. Keypad STOP/RESET disabled. 3: RS-485 communication. Keypad STOP/RESET enabled. 4: RS-485 communication. Keypad STOP/RESET disabled.	0	0	0	Adjusts according to customer's applications

Parameter	Function	Setting s	Default	End user's master	End user's slave	Note
10.00	PID Set Point Selection	0: Disable 1: Digital keypad UP/DOWN keys 2: Reserved 3: Reserved 4: PID set point (Pr.10.11)	0	1	1	Adjusts according to customer's applications
10.01	Input Terminal for PID Feedback	O: Positive PID feedback from external terminal AVI (0–10 V _{DC}) 1: Negative PID feedback from external terminal AVI (0–10 V _{DC}) 2: Positive PID feedback from external terminal ACI (4–20 mA) 3: Negative PID feedback from external terminal ACI (4–20 mA)	0	3	3	
№ 10.02	Proportional Gain (P)	0.0–10.0	1.0	1.2	1.2	Adjusts according
⊮ 10.03	Integral Time (I)	0.00-100.00 sec. (0.00=Disable)	1.00	0.7	0.7	to customer's applications
№ 10.04	Differential Time (D)	0.00-1.00 sec.	0.00	-	-	
10.12	PID Deviation Level	0.0–100.0%	10.0	5	5	When the pressure feedback is < 0.5 kg and
10.13	PID Deviation Detection Time	0.1–300.0 sec.	5.0	15	15	time > 15 sec., follow the settings for Pr.10.20.
10.18	Feedback of PID Physical Quantity Value	1.0–99.9	99.9	10	10	Sets the maximum feedback of PID physical quantity value to be 10 kg.
10.19	PID Calculation Mode Selection	0: Serial mode 1: Parallel mode	0	1	1	The parallel PID calculation mode applies for the constant pressure water supply control.
10.20	Erroneous PID Feedback Deviation Level Action	0: Wan and keep operating 1: Warn and coast to stop 2: Warn and ramp to stop 3: Ramp to stop and restart after Pr.10.21 delay time	0	3	3	When there is water shortage or unusual pressure feedback, the pump stops
10.21	Restart Delay Time after Erroneous PID Deviation Level	0–9999 sec.	60	1800	1800	running for 1800 sec. (30 minutes) until the pressure feedback is back to normal.

⊮ 10.22	Set Point Deviation Level	0–100%	0	5	5	When the feedback value and the set point deviation are both 0.15 kg (3 kg X 5%=0.15 kg), that is, when feedback value is ≥ 2.85 kg and time > 10 seconds, the AC motor drive starts
⊮ 10.23	Detection Time of Set Point Deviation Level	1–9999 sec.	10	10	10	to decelerate to stop. This deceleration time is according to the Deceleration Time 2 in Pr.01.12. When the feedback value is < 2.85 kg, the AC motor drive starts to run.
⊮ 10.24	Deviation Level of Liquid Leakage	0–50%	0	33	33	Liquid Leakage: Assume that when the AC motor drive does not run and is in a constant pressure status, the variation of the feedback value is less than 0.12 kg (3 kg X 4% = 0.12 kg) within 2
⊮ 10.25	Liquid Leakage Change Detection	0–100% (0: Disable)	0	4	4	seconds. When the feedback value continues to decrease to make the deviation of the set point be less than 0.99 kg (3 kg X 33% = 0.99 kg), that is, when the feedback value is
№ 10.26	Time Setting for Liquid Leakage Change	0.1–10.0 sec. (0: Disable)	0.5	2	2	less than 2.01 kg, the AC motor drive starts to run. Liquid Usage after Liquid Leakage: Assume that when the AC motor drive does not run and is in a constant pressure status, the variation of the feedback value is higher than 0.12 kg (3 kg X 4% = 0.12 kg) within 2 seconds, the AC motor drive starts to run.

10.35	Multi-pump Control Mode	0: Disable 1: Fixed time circulation (alternative operation) 2: Fixed quantity control (multi-pump operating at constant pressure)	0	1	1	
10.36	Multi-pump ID	Multi-pump control mode is disabled Master Slave	0	1	2	
⊮ 10.37	Multi-pump's Fixed Time Circulation Period	1–65535 minutes	60	1	1	
⊮ 10.42	Pump's Frequency at Time-out (Disconnection)	0.00 Hz–FMAX	0.00	60	60	
10.43	Pump's Error Treatment	Bit0: Determines whether the erroneous pump switches to an alternative pump when an error occurs in the running pump. 0: All pumps stop. 1: Switch to an alternative pump Bit1: Determines the erroneous pump to be in a standby or stop status after reset. 0: Standby after reset. 1: Stop after reset. Bit2: Determines whether the master pump receives the RUN command or not when an error occurs in the running pump. 0: Does not receives the RUN command. 1: Choose to run with an alternative pump.	1	1	1	000=0 001=1 010=2 011=3 100=4 101=5 110=6 111=7
10.44	Selection of Pump's Start-up Sequence	0: By pump ID# 1: By running time	0	1	1	Adjusts according to customer's applications
⊮ 10.45	Running Time of Multi-pump Under Alternative Operation	0.0-360.0 sec.	60.0	60.0	60.0	Adjusts according to customer's applications

For multi-pump operating at constant pressure (Pr.10.35=2 Fixed Quantity Control) Related parameters when setting Pr.10.35=2

Parameter	Function	Settings	Default	End user's master		Note
		0: Display the frequency command value (F)				
		1: Display the actual output frequency (H)				
₩ 00.03	Start-up Display Selection	2: Display the output current in Amps supplied to the motor (A)	0	3	3	
		3: Display the content of user-defined unit (U)				
		4: FWD/REV command				
		0: Display the content of the user-defined unit (U)				
		1: Display the counter value (c)				
		2: Display the status of multi-function input terminals (d)		8		
	Content of Multi-function Display	3: Display the DC bus voltage (u)	0			
		4: Display the output voltage (E)				
₩ 00.04		5: Display the PID analog feedback signal value in % (b)			8	
		6: Display the output power factor angle (n)				
		7: Display the output power (P)				
		8: Display the setting values for PID control and feedback signal				
		9: Display the AVI (I) (V)				
		10: Display the ACI (mA/V) (i)				
		11: Display the temperature of the IGBT in °C (h)				
00.13	User-defined Value (corresponds to max. operating frequency Pr.01.00)	0–9999	0	100	100	Sets the constant pressure control to correspond to the largest physical quantity and the decimal place. The
00.14	Decimal Place of User-defined Value	0–3	0	1	1	number displayed is 10.0 currently.

Parameter	Function	Settings	Default	End user's master		Note
01.00	Maximum Output Frequency (Fmax)	50.00–400.0 Hz	60.00	60.00	60.00	
01.01	Motor Rated Frequency (Fbase)	0.10–400.0 Hz	60.00	60.00	60.00	Follows the specifications of pumps
	Motor Rated	230V series: 0.1–255.0 V	220.0	220.0	220.0	
01.02	Voltage (Vbase)	460V series: 0.1–510.0 V	440.0			
⊮ 01.09	Accel. Time 1	0.1-600.0 / 0.01-600.00 sec.	10.0	0.5	0.5	Adjusts according to
⊮ 01.10	Decel. Time 1	0.1-600.0 / 0.01-600.00 sec.	10.0	5.0	5.0	customer's applications
⊮ 01.12	Decel. Time 2	0.1–600.0 / 0.01–600.00 sec.	10.0	3.0	3.0	The time the AC motor drive decelerates to stop when the pressure reaches the setting value.

Parameter	Function	Settings	Default	End user's master		Note
№ 02.00	First Master Frequency Command Source	O: Digital keypad UP/DOWN keys or Multi-function Inputs UP/DOWN. 1: 0–10 V from AVI 2: 4–20 mA from ACI 3: RS-485 (RJ45) communication 4: Digital keypad potentiometer	0	2	2	Adjusts according to customer's applications
 ∕ ⁄ 02.01	First Operation Command Source	Digital keypad External terminals. Keypad STOP/RESET enabled. External terminals. Keypad STOP/RESET disabled. RS-485 communication. Keypad STOP/RESET enabled. RS-485 communication. Keypad STOP/RESET enabled.	0	0	0	Adjusts according to customer's applications

Parameter	Function	Settings	Default	End user's master	l	Note
10.00	PID Set Point Selection	Disable Digital keypad UP/DOWN keys Reserved	0	1		Adjusts according to customer's applications
		3: Reserved				

Parameter	Function	Settings	Default	End user's master	End user's slave	Note
		4: PID set point (Pr.10.11)				
10.01	Input Terminal for PID Feedback	0: Positive PID feedback from external terminal AVI (0– 10 V _{DC}) 1: Negative PID feedback from external terminal AVI (0–10 V _{DC}) 2: Positive PID feedback from external terminal ACI (4– 20 mA) 3: Negative PID feedback from external terminal ACI (4–20 mA)	0	3	3	
1 0.02	Proportional Gain (P)	0.0–10.0	1.0	1.2	1.2	Adjusts according to
№ 10.03	Integral Time (I)	0.00–100.00 sec. (0.00=Disable)	1.00	0.7	0.7	customer's applications
1 0.04	Differential Time (D)	0.00-1.00 sec.	0.00	-	-	
10.12	PID Deviation Level	0.0–100.0%	10.0	5	5	When the pressure feedback is < 0.5 kg and time > 15
10.13	PID Deviation Detection Time	0.1–300.0 sec.	5.0	15	15	sec., follow the settings for Pr.10.20.
10.18	Feedback of PID Physical Quantity Value	1.0–99.9	99.9	10	10	Sets the maximum feedback of PID physical quantity value to be 10 kg.
10.19	PID Calculation Mode Selection	0: Serial mode 1: Parallel mode	0	1	1	The parallel PID calculation mode applies for the constant pressure water supply control.
10.20	Erroneous PID Feedback Deviation Level Action	O: Wan and keep operating I: Warn and coast to stop I: Wand and ramp to stop I: Wand and ramp to stop I: Ramp to stop and restart after Pr.10.21 delay time	0	3	3	When there is water shortage or unusual pressure feedback, the pump stops running for 1800 sec.
10.21	Restart Delay Time after Erroneous PID Deviation Level	0–9999 sec.	60	1800	1800	(30 minutes) until the pressure feedback is back to normal.
⊮ 10.22	Set Point Deviation Level	0–100%	0	5	5	When the feedback value and the set point deviation are both 0.15 kg (3 kg X 5%=0.15 kg), that is, when feedback value is ≥ 2.85 kg and time > 10 seconds, the AC motor drive starts to

				End	End	
Parameter	Function	Settings	Default			Note
№ 10.23	Detection Time of Set Point Deviation Level	1–9999 sec.	10	master 10	10	decelerate to stop. This deceleration time is according to the Deceleration Time 2 in Pr.01.12. When the feedback value is < 2.85 kg, the AC motor drive starts to run.
⊮ 10.24	Deviation Level of Liquid Leakage	0–50%	0	33	33	Liquid Leakage: Assume that when the AC motor drive does not run and is in a constant pressure status, the variation of the feedback value is less than 0.12 kg (3 kg X 4% = 0.12 kg) within 2 seconds. When the feedback value continues
№ 10.25	Liquid Leakage Change Detection	0–100% (0: Disable)	0	4	4	to decrease to make the deviation of the set point be less than 0.99 kg (3 kg X 33% = 0.99 kg), that is, when the feedback value is less than 2.01 kg, the AC motor drive starts to run. Liquid Usage after Liquid Leakage:
⊮ 10.26	Time Setting for Liquid Leakage Change	0.1–10.0 sec. (0: Disable)	0.5	2	2	Assume that when the AC motor drive does not run and is in a constant pressure status, the variation of the feedback value is higher than 0.12 kg (3 kg X 4% = 0.12 kg) within 2 seconds, the AC motor drive starts to run.
10.35	Multi-pump Control Mode	Disable Fixed time circulation (alternativeoperation) Fixed quantity control (multipump operating at constant pressure)	0	2	2	
10.36	Multi-pump ID	Multi-pump control mode is disabled Master Slave	0	1	2	
⊮ 10.37	Multi-pump's Fixed Time Circulation Period	1–65535 minutes	60	1	1	
⊮ 10.42	Pump's Frequency at Time-out (Disconnection)	0.00 Hz–FMAX	0.00	60	60	


Parameter	Function	Settings	Default	End user's master	End user's slave	Note
10.43	Pump's Error Treatment	Bit0: Determines whether the erroneous pump switches to an alternative pump when an error occurs in the running pump. 0: All pumps stop 1: Switch to an alternative pump Bit1: Determines the erroneous pump to be in a standby or stop status after reset. 0: Standby after reset. 1: Stop after reset. Bit2: Determines whether the master pump receives the RUN command or not when an error occurs in the running pump. 0: Does not receives the RUN command. 1: Choose to run with an alternative pump.	1	1	1	000=0 001=1 010=2 011=3 100=4 101=5 110=6 111=7
10.44	Selection of Pump's Start- up Sequence	0: By pump ID# 1: By running time	0	1	1	Adjusts according to customer's applications
⊮ 10.45	Running Time of Multi-pump Under Alternative Operation	0.0-360.0 sec.	60.0	60.0	60.0	Adjusts according to customer's applications

This page intentionally left blank.


Chapter 5 Troubleshooting

- 5-1 Over-Current (oc)
- 5-2 Over-Voltage (ov)
- 5-3 Low Voltage (Lv)
- 5-4 Overheat (oH1)
- 5-5 Overload (oL)
- 5-6 Keypad Display is Abnormal
- 5-7 Phase Loss (PHL)
- 5-8 Motor Does Not Run
- 5-9 Motor Speed Cannot be Changed
- 5-10 Motor Stalls During Acceleration
- 5-11 The Motor Does Not Run as Expected
- 5-12 Electromagnetic / Induction Noise
- 5-13 Operating Environment Condition
- 5-14 Affecting Other Machines


5.1 Over-Current (oc)

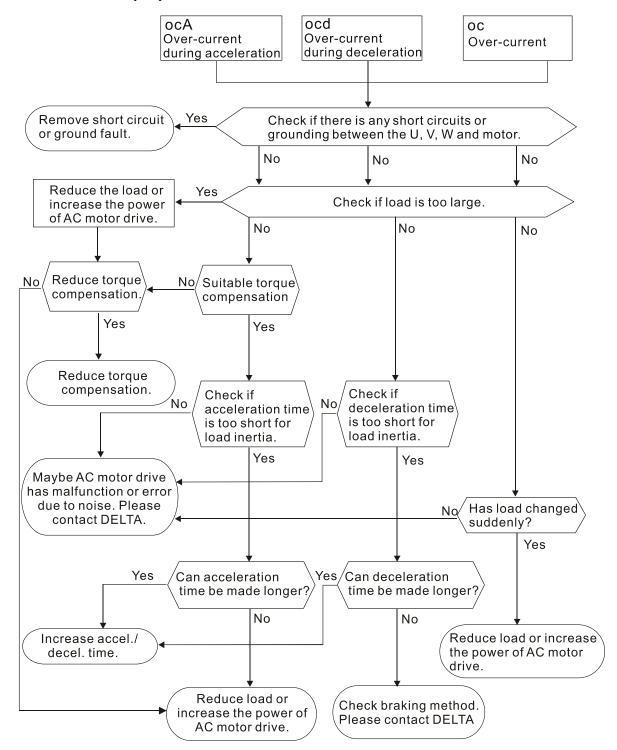


5.2 Over-Voltage (ov)

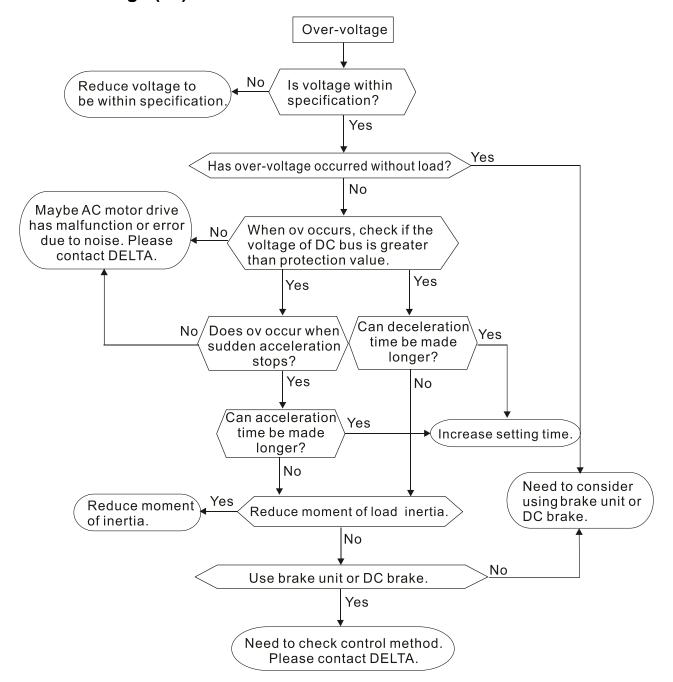


5.3 Low Voltage (Lv)

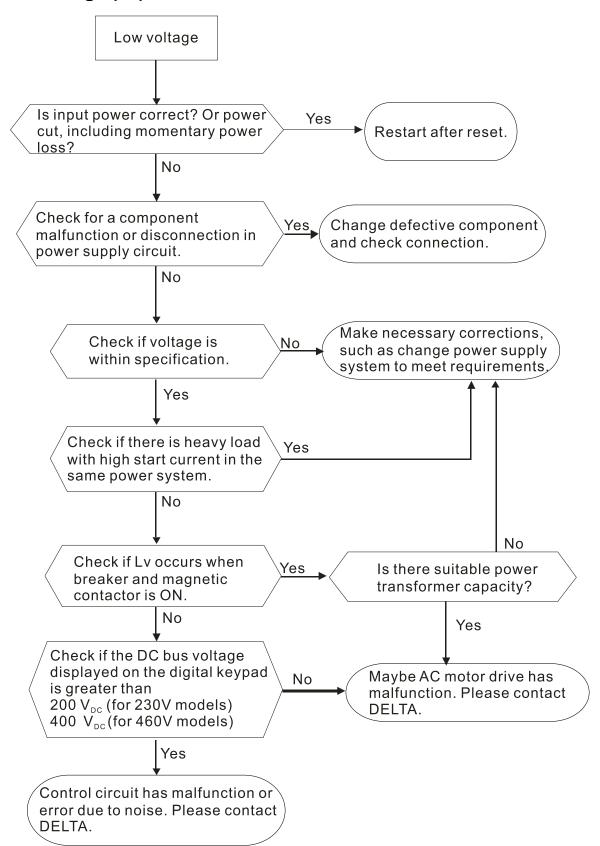


5.4 Overheat (oH1)

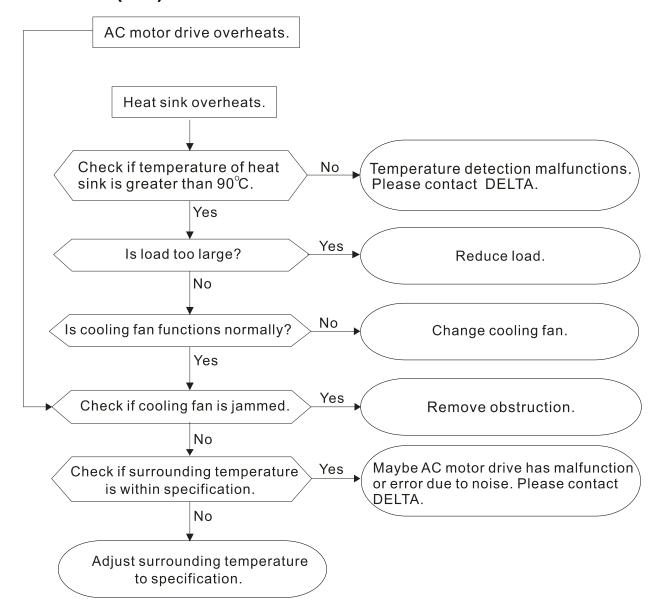


5.5 Overload (oL)

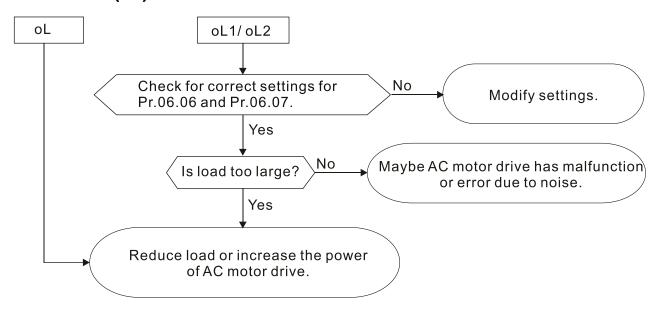


5.6 Keypad Display is Abnormal

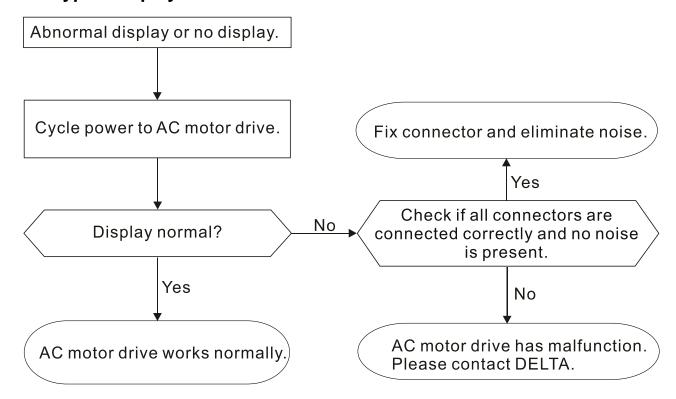


5.7 Phase Loss (PHL)

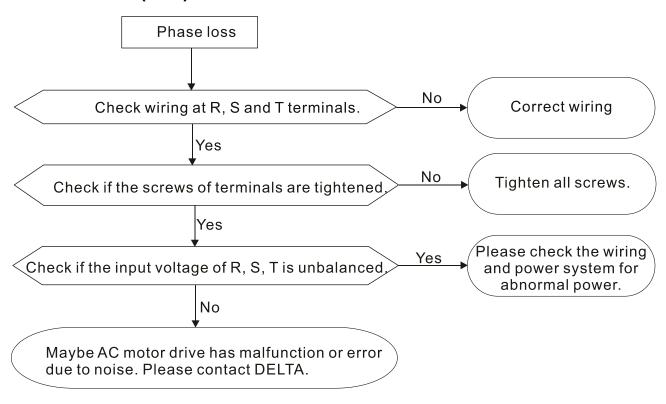


5.8 Motor Does Not Run

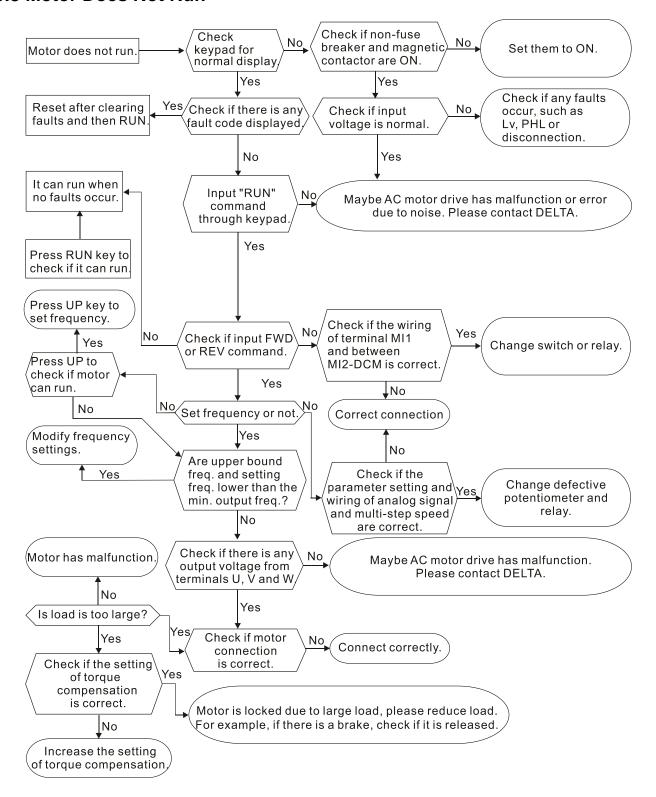


5.9 Motor Speed Cannot be Changed

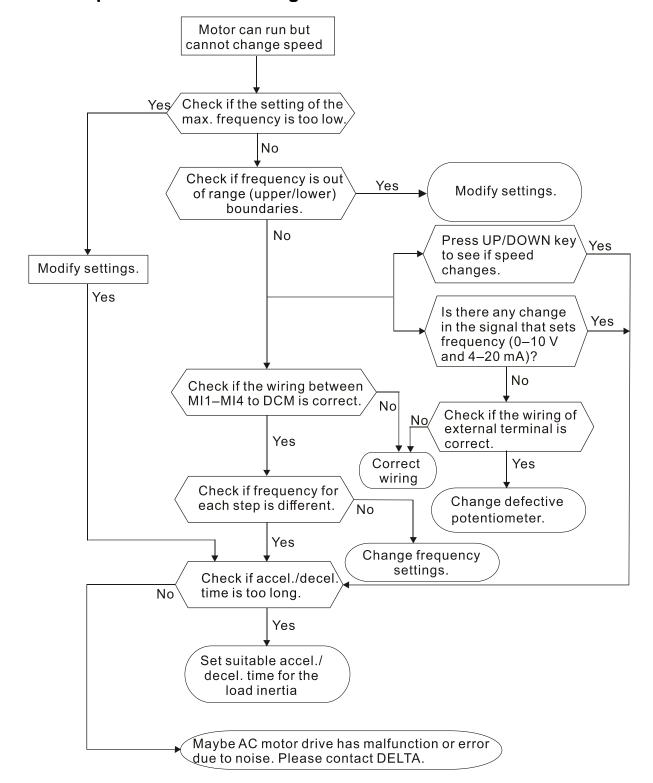

5.10 Motor Stalls During Acceleration

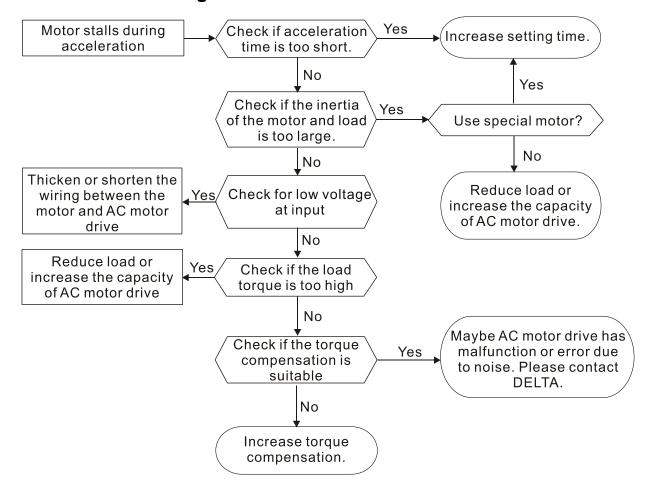

5.11 The Motor Does Not Run as Expected

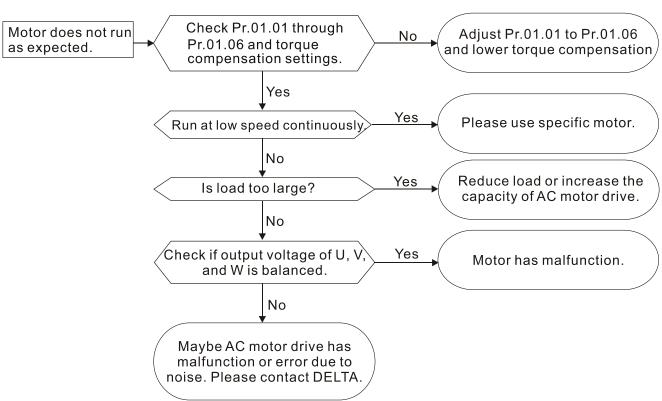

5.12 Electromagnetic/Induction Noise

Many sources of noise surround AC motor drives and affect them by radiation or conduction. This may cause the control circuits to malfunction and even damage the AC motor drive. Of course, there are solutions to increase the noise tolerance of an AC motor drive, but this has its limits. Solving the problem from the outside as follows is the best.

- 1. Add a surge suppressor on the relays and contacts to suppress switching surges.
- 2. Shorten the length of the wiring for the control circuit or serial communication and keep them separated from the power circuit wiring.
- 3. Comply with the wiring regulations by using shielded wires and isolation amplifiers for long wire length.
- 4. The grounding terminal must comply with the local regulations and be grounded independently; that is, do not use a common ground with electric welding machines and other power equipment.
- Connect a noise filter at the mains input terminal of the AC motor drive to filter noise from the power circuit.

In short, solutions for electromagnetic noise exist of "no product" (disconnect disturbing equipment), "no spread" (limit emission from disturbing equipment) and "no receive" (enhance immunity).

5.13 Operating Environment Condition

Since the AC motor drive is an electronic device, you must deal with the operating environment conditions. Here are some remedial measures to use if necessary.

- 1. To prevent vibration, anti-vibration dampers are the last choice. Vibration must be within the specification. Vibration causes mechanical stress and it should not occur frequently, continuously or repeatedly to prevent damage to the AC motor drive.
- 2. Store the AC motor drive in a clean and dry location, free from corrosive fumes/dust to prevent corrosion and poor contacts. Poor insulation in a humid location can cause short circuits. If necessary, install the AC motor drive in a dust-proof and painted enclosure. If necessary in particular situations, use a completely sealed enclosure.
- 3. The ambient temperature should be within the specification. Too high or too low temperature affects the lifetime and reliability of the AC motor drive. For semiconductor components, damage occurs once any specification is out of range. It is necessary to periodically check air quality and the cooling fan and provide extra cooling if required. In addition, the microcomputer may not work in extremely low temperatures, making cabinet heating necessary.
- 4. Store the AC motor drive in a relative humidity range of 0% to 90% (non-condensing). Use an air conditioner and/or desiccator if necessary.


5.14 Affecting Other Machines

An AC motor drive may affect the operation of other machines due to many reasons. Some solutions are listed below:

■ High Harmonics at Power Side

You can reduce high harmonics at the power side during running.

- 1. Separate the power system: use a transformer for the AC motor drive.
- 2. Use a reactor at the power input terminal of the AC motor drive.
- 3. If using phase lead capacitors (never on the AC motor drive output!), use serial reactors to prevent damage to the capacitors from high harmonics.

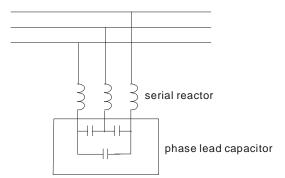

■ Motor Temperature Rises

When the motor is a standard induction motor with a fan, the cooling will be insufficient at low speed, causing the motor to overheat. In addition, high harmonics at the output increases copper and core losses. Use the following measures depending on load and operation range.

- 1. Use a motor with independent ventilation (forced external cooling) or increase the motor rated power.
- 2. Use a special inverter-duty motor.
- 3. Do NOT run at low speed for long periods of time.

This page intentionally left blank.

Chapter 6 Fault Code Information and Maintenance

6.1 Fault Code Information

6.2 Maintenance and Inspections

The AC motor drive has various warnings and protections against errors such as over-voltage, low voltage, or over-current. Once an error occurs, the protections activate, the AC motor drive stops output, activates the error contacts, and the motor coasts to stop. Please refer to the error display from the AC motor drive and look up the corresponding causes and solutions. The fault record is stored in the AC motor drive internal memory and can store the five most recent error messages. You can read it from the digital keypad or through the communications by accessing the parameters.

The AC motor drive includes a large number of electronic components, including ICs, resistors, capacitors, transistors, and cooling fans. These components do not last forever. Even under normal circumstances, they will eventually become error-prone if used past their lifespans. Therefore, you must perform periodic preventive maintenance to identify defective and worn out parts, and eliminate the causes of malfunctions in the AC motor drive at an early stage. At the same time, parts that have exceeded their product life should be replaced whenever possible to ensure safe operation.

Visual checks should be done regularly to monitor the AC motor drive's operation, and to make sure nothing unusual happens. Check the situations listed in the following table.



- ☑ Wait five seconds after a fault has been cleared before pressing RESET with the input terminal keypad.
- ☑ The drive must first be switched off for at least five minutes for ≤ 22 kW models
 until the charging indicator turns off before it is safe to open the cover to begin
 maintenance operations.
- Only qualified personnel can work on maintenance or replace parts. (Remove metal items such as watch, rings, and other metal items before operation, and use only insulated tools.)
- ☑ Never modify internal components or wiring.
- ☑ The performance and the surrounding environment should meet the standard specifications. There should be no abnormal noise, vibration, or odor.
- ☑ Verify if the keypad displays normally. Check if there is any abnormality such as overheating or color change. Prevent the drive from electronic shock and equipment accident.

6.1 Fault Code Information

The following messages display when the operation command source is set as digital keypad.

Fault Name	Fault Descriptions	Corrective Actions				
ОС	Over-current Abnormal increase in current.	 Check if the motor power corresponds with the AC motor drive output power. Check the wiring connections to U/T1, V/T2, and W/T3 for possible short circuits. Check the wiring connections between the AC motor drive and motor for possible short circuits, and for short to ground. Check for loose contacts between the AC motor drive and the motor. Increase the Acceleration Time. Check for possible excessive loading on the motor. 				
٥٥	Over-voltage The DC bus voltage exceeds its maximum allowable value.	 Check if the input voltage is in the rated AC motor drive input voltage range. Check for possible voltage transients. DC bus over-voltage may also be caused by motor regeneration. Either increase the Deceleration Time or add an optional brake resistor (and brake unit). 				
o# !	Overheating Heat sink temperature is too high.	 Ensure that the ambient temperature is in the specified temperature range. Make sure that the ventilation holes are not obstructed. Provide enough spacing for adequate ventilation. (see Chapter 1) 				
Lu	Low voltage The AC motor drive detects that the DC bus voltage has fallen below its minimum value.	 Check whether the input voltage is in the AC motor drive rated input voltage range. Check for abnormal load on the motor. Check for correct input power wiring to R-S-T (for three-phase models) without phase loss. 				
οL	Overload The AC motor drive detects excessive drive output current. NOTE: The AC motor drive can withstand up to 150% of the rated current for a maximum of 60 seconds.	Check whether the motor is overloaded. Reduce the torque compensation setting (Pr.07.02). Use the next higher power AC motor drive model.				
ol I	Overload 1 Internal electronic overload trip	 Check for possible motor overload. Check the electronic thermal overload setting. Replace the drive with a larger capacity model. Reduce the current level so that the drive output current does not exceed the value in the Motor Rated Current (Pr.07.00). 				
015	Overload 2 Motor overload.	Reduce the motor load. Adjust the over-torque detection settings to appropriate values (Pr.06.03–Pr.06.05).				
HPF :	CC (current clamp)	Return the unit to the factory.				
XPF2	OV hardware fault	Return the unit to the factory.				
Xbtd	OC hardware fault	,				

Fault Name	Fault Descriptions	Corrective Actions
55	External Base Block 1. When the external input terminals (B.B) (MI1–MI4) are active, the AC motor drive stops output. 2. When changing the communication address 2002H bit2 = 1, the drive stops output.	The "bb" disappears once the signal source is cleared.
oc8	Over-current during acceleration	 Check if the screws between the drive and motor are loosen. Check for possible poor insulation between the U-V-W terminals to the motor. Increase the Acceleration Time. Decrease the torque compensation setting (Pr.07.02). Replace the drive with a larger capacity model.
ocd	Over-current during deceleration	 Check for possible poor insulation between the U-V-W terminals to the motor. Increase the Deceleration Time. Replace the drive with a larger capacity model.
ocn	Over-current during constant speed operation	 Check for possible poor insulation between the U-V-W terminals to the motor. Check for possible motor stall. Replace the drive with a larger capacity model.
<i>EF</i>	External Fault 1. When multi-function input terminals (MI1–MI4) are set to external fault, the AC motor drive stops output. 2. When changing the communication address 2002H bit0 = 1, the drive stops output.	The "EF" disappears once the signal source is cleared and reset.
c F 10	Internal EEPROM cannot be programmed.	Return the unit to the factory.
c 8 1 1	Internal EEPROM cannot be programmed.	Return the unit to the factory.
c F 2.0	Internal EEPROM cannot be read.	 Press RESET key to reset all parameters to defaults. If the fault still exists, return the unit to the factory.
c F 2. 1	Internal EEPROM cannot be read.	 Press RESET key to reset all parameters to defaults. If the fault still exists, return the unit to the factory.
c F 3.0	Wiring detection fault	U-phase error, return the unit to the factory.
c F 3. 1	Wiring detection fault	V-phase error, return the unit to the factory.
c F 3.2	Wiring detection fault	W-phase error, return the unit to the factory.
c F 3.3	Wiring detection fault	DC bus wiring detection error, return the unit to the factory.
c F 3.4	Wiring detection fault	Temperature sensor error, return the unit to the factory.
c F R	Auto-acceleration/deceleration failure	 Check if the motor is suitable for operation by the AC motor drive. Check if the regenerative energy is too high. Check for sudden load changes.

Fault Name	Fault Descriptions	Corrective Actions			
c E	Communication Fault	 Check the RJ45 connection between the AC motor drive for loose wires and wiring to the correct pins. Check if the communication protocol is properly set. Refer to Parameter Group 09 Communication Parameters in Chapter 4 for detailed information. 			
FBE	PID feedback signal fault	 Check the parameter settings (Pr.10.01) and AVI/ACI wiring. Check for possible fault between the system response time and the PID feedback signal detection time (Pr.10.08) 			
codE	Software protection failure	Password locked.			
8800	Analog signal error	Check if the wiring for ACI is broken.			
σξυ	Unusual PID feedback	Check if wiring for PID feedback is correct and the parameter of PID feedback is properly set.			
PHE	Phase Loss	Check if the input power is three-phase.			
oPXL	Multi-motor fault protection	Check if the motor wiring is normal.			

Reset

Press the "RESET" key (as shown in the figure below) to reset the external terminal after the fault is cleared, and set this terminal to be ON or send the Reset command through communication, then the trip is cleared. Make sure the RUN command or signal is OFF before executing RESET to prevent damage to the drive or personal injury due to immediate operation after reset.



Digital Keypad for EL-W

6.2 Maintenance and Inspections

Before the check-up, always turn off the AC input power for at least five minutes and remove the cover. Even if the power has been turned off, a charge may still remain in the filter capacitors with hazardous voltages before the power is OFF. Make sure the voltage is lower than 25 V_{DC} before you perform any inspections.

Ambient environment

Itama ta Ohaali	Mathada and Oritorian	Maintenance Period			
Items to Check	Methods and Criterion	Daily	Half Year	One Year	
Check the ambient temperature, humidity, vibration and for any dust, gas, oil or water drops.	Visual inspection and measurement with equipment with standard specifications	0			
Check for any dangerous objects in the environment.	Visual inspection	0			

Voltage

		Maintenance Period			
Items to Check	Methods and Criterion	Daily	Half Year	One Year	
Check if the voltages of the main circuit and control circuit are correct.	Measure with multi-meter with standard specifications.	0			

Digital keypad display

Items to Check	Methods and Criterion	Mai	eriod	
items to check	Methods and Chterion	Daily	Half Year	One Year
Check that the display is clear for reading.	Visual inspection	0		
Check for any missing characters in the display.	Visual inspection	0		

Mechanical parts

		Mai	eriod	
Items to Check	Methods and Criterion	Daily	Half Year	One Year
Check for any abnormal sounds or vibrations.	Visual and auditory inspection		0	
Check for any loose screws.	Tighten the screws		0	
Check for deformed or damaged parts.	Visual inspection		0	
Check for any color change due to overheating.	Visual inspection		0	
Check for any dust or dirt.	Visual inspection		0	

Main circuit

		Mai	Period	
Items to Check	Methods and Criterion	Daily	One Year	
Check for any loose or missing screws.	Tighten or replace the screws.	0		
Check for any deformed, cracked, or damaged machinery or insulation and for any color change due to overheating or ageing.	Visual inspection		0	
Check for any dust or dirt.	Visual inspection		0	

Main circuit terminals and wiring

Items to Check	Mathada and Outtonian	Mai	eriod	
items to Check	Methods and Criterion	Daily Half Year Or		One Year
Check for wiring color change or deformation due to overheating.	Visual inspection		0	
Check for wiring insulation damage or color change.	Visual inspection		0	

Main circuit terminal block

Items to Check	Mathada and Cuitarian	Maintenance Period		
	Methods and Criterion	Daily	One Year	
Check for any damage.	Visual inspection		0	

Main circuit filter capacity

		Maintenance Period			
Items to Check	Methods and Criterion	Daily	Half Year	One Year	
Check for any leakage of liquid, color change, cracking or deformation.	Visual inspection	0			
Check if the safety valve is not removed or if the valve is obviously expanded.	Visual inspection	0			
Measure static capacity when required	Static capacity ≥ initial value X 0.85		0		

Main circuit resistor

Items to Check	Methods and Criterion	Maintenance Period			
items to check	Methous and Criterion	Daily	One Year		
Check for any peculiar odors or insulation cracking due to overheating.	Visual inspection, smell.		0		
Check for any disconnections.	Visual inspection		0		
Check for damaged connections	Measure the resistor value with a multi-meter		0		

Main circuit transformer and reactor

Items to Check	Methods and Criterion	Maii	ntenance P	eriod
	metrious and ornerion	Daily Half Year One Ye		
Check for any abnormal vibrations or peculiar odors.	Visual, auditory inspection and smell.	0		

Main circuit electromagnetic contactor and relay

Items to Check	Methods and Criterion	Mai	Period	
items to check	Methods and Criterion	Daily	One Year	
Check for any vibration sounds.	Auditory inspection.	0		
Check that the contact works correctly.	Visual inspection	0		

Main circuit printed circuit board and connector

Itama ta Chaale	Mothede and Criterian	Mai	Period	
Items to Check	Methods and Criterion	Daily	Half Year	One Year
Check for any loose screws and connectors.	Tighten the screws.		0	
Check for any peculiar odors or color changes.	Visual inspection and smell		0	
Check for any cracking, damage, deformation or corrosion.	Visual inspection		0	
Check for any leakage of liquid or deformation in the capacitors.	Visual inspection		0	

Cooling system cooling fan

Items to Check	Methods and Criterion	Maintenance Period		
items to oneck		Daily	Half Year	One Year
Check for any abnormal sounds or vibrations.	Visual, auditory inspection and turn the fan by hand (turn off the power first) to check for smooth rotation.			0
Check for any loose screws.	Tighten the screws.			0
Check for any color change due to overheating.	Change fan.			0

Cooling system ventilation channel

Items to Check	Methods and Criterion	Maintenance Period		
items to oneck	methods and Criterion	Daily	Half Year	One Year
Check for any obstruction around the heat sink, air intake or air outlet.	Visual inspection		0	



Use chemically neutral cloth to clean and use a dust cleaner to remove dust when necessary.

This page intentionally left blank.

Appendix A Specifications

A-1. 230V 1φ Series

A-2. 460V 3φ Series

A-3. General Specifications

A-4. Environment for Operation, Storage and Transportation

A-5. Operation Temperature and Derating Curve of Ambient Temperature



- 1. VFD-EL-W has two types of packaging: Individual Package [suffixed with (-1) at the end of the model name] and 12 pcs/carton.
- 2. The electrical specifications are the same for either packaging.
- 3. The VFD-EL-W Series include the 230V and 460V models. The 230V model is one-phase; the 460V model is three-phase. Refer to following specifications for details.

A1. 230V 1φ Series

V	Model Number 'FD===EL21W (-1)	002	004	007	015	022		
Max. Applicable Motor Output (kW)		0.2	0.4	0.75	1.5	2.2		
Max. Applicable Motor Output (HP)		0.25	0.5	1.0	2.0	3.0		
	Rated Output Capacity (kVA)	0.6	1.0	1.6	2.9	4.2		
ating	Rated Output Current (A)	1.6	2.5	4.2	7.5	11.0		
Output Rating	Maximum Output Voltage (V)	Three-phase Proportional to Input Voltage						
Outp	Output Frequency (Hz)	0.1–400						
	Carrier Frequency (kHz)	2-12 (default: 8)						
- Di	Rated Input Current (A)	4.9	6.5	9.3	15.7	24.0		
Input Rating	Rated Voltage/Frequency	One-phase, 200–240 V, 50 / 60 Hz						
put	Voltage Tolerance	±10% (180-264 V)						
	Frequency Tolerance	±5% (47-63 Hz)						
Cooling Method		Convective Cooling Fan Cooling						
Weight (kg)		1.0	1.0	1.0	1.4	1.4		

A2. 460V 3φ Series

	Model Number VFD□□□EL43W (-1)	004	007	015	022	040	
Max. Applicable Motor Output (kW)		0.4	0.75	1.5	2.2	4.0	
Max. Applicable Motor Output (HP)		0.5	1.0	2.0	3.0	5.5	
ng	Rated Output Capacity (kVA)	1.2	2.0	3.3	4.4	7.4	
kati	Rated Output Current (A)	1.5	2.5	4.2	5.5	9.0	
Output Rating	Maximum Output Voltage (V)	Three-phase Proportional to Input Voltage					
Oul	Output Frequency (Hz)	0.1–400					
Ū	Carrier Frequency (kHz)	2–12 (default: 8)					
	Rated Input Current (A)	1.8	3.2	4.3	7.1	10.0	
int	Rated Voltage/Frequency		Three-ph	hase, 380–480V, 50 / 60Hz			
Input	Voltage Tolerance	±10% (342-528 V)					
	Frequency Tolerance	±5% (47–63 Hz)					
Cooling Method		Convective Cooling Fan Cooling					
Weight (kg)		1.0	1.0	1.0	1.4	1.4	

A3. General Specifications


Characteristics		teristics	Descriptions		
	Control System		SPWM (Sinusoidal Pulse Width Modulation) control (V/F control, Vector Control)		
ics	Frequency Setting Resolution		0.01 Hz		
	Output Frequency Resolution		0.01 Hz		
Control Characteristics	Torque Characteristics		Includes the auto-torque/auto-slip compensation; starting torque can be 150% at 5.0 Hz		
ara	Overload Tolerance		150% of rated current for one minute		
င်	Skip Frequency		Three zones, setting range 0.1–400 Hz		
Ito	Accel/Decel	Time	0.1–600 seconds (2 Independent settings for Accel./ Decel. time)		
Ö	Stall Preven	ntion Level	Setting 20–250% of rated current		
O	DC Brake		Operation frequency 0.1–400.0 Hz, output 0–100% rated current Start time 0–60 seconds, stop time 0–60 seconds		
	V/F Pattern		Adjustable V/F pattern		
		Keypad	Setting by		
S	Frequency Setting	External Signal	Potentiometer-5 k Ω / 0.5 W, 0–10 V _{DC} , 4–20 mA, RS-485 interface; Multifunction inputs 2 to 4 (7 steps, Jog, up/down)		
risti	Operation	Keypad	Set by RUN and STOP		
aracte	Setting Signal	External Signal	Single-wire (default setting MI1) or Two-wire/Three-wire (MI1, MI2, MI3) by setting parameters, JOG operation, RS-485 serial interface (Modbus).		
Operating Characteristics	Multi-function Input Signal		Multi-step selection 0–7, Jog, accel./decel. inhibit, two accel./decel. switches, counter, external Base Block, ACI/AVI selections, drive reset, UP/DOWN key settings, NPN/PNP input selection		
Opera	Multi-function Output Indication		AC drive operating, frequency reached, zero speed, Base Block, fault indication, overheat alarm, emergency stop and status selections for input terminals.		
	Analog Output Signal		Output frequency/current		
Operation Functions			AVR, accel./decel. S-Curve, over-voltage/over-current stall prevention, five fault records, reverse inhibition, momentary power loss restart, DC brake, auto-torque/slip compensation, auto-tuning, adjustable carrier frequency, output frequency limits, parameter lock/reset, PID control, external counter, Modbus communication, abnormality reset, abnormality restart, powersaving, fan control, sleep/wake frequency, first/second frequency source selections, first/second frequency source combination, NPN/PNP selection.		
Protection Functions			Over-voltage, over-current, under-voltage, external fault, overload, ground fault, overheating, electronic thermal, IGBT short circuit, PTC		
Display Keypad			Six-key, seven-segment LED with four-digits, four status LEDs, master frequency, output frequency, output current, custom units, parameter values for setup and lock, faults, RUN, STOP, RESET, FWD/REV.		

A4. Environment for Operation, Storage and Transportation

Built-in EMI Filter		N/A	
	Enclosure Rating	IP20	
	Pollution Degree	2	
2	Installation Location	Altitude 1,000 m or lower, keep from corrosive gasses, liquid and dust.	
tior		Non-condensing, non-freezing	
Conditions		-10–50°C (40°C for side-by-side mounting, except VFD007EL21W(-1) which	
	Ambient Temperature	requires the installation of a cooling fan. Running at full load may reduce	
Jent		the lifespan of the drive)	
Enviromental	Storage/ Transportation Temperature	-20-60°C	
Ш	Ambient Humidity	Below 90% RH (non-condensing)	
	Vibration	1.0 mm, peak to peak 2–13.2 Hz; 0.7–1.0 G, 13.2–55 Hz; 1.0 G, 55–512 Hz; compliance with IEC 60068-2-6	
Certifications		(€ , RoHS, GB 12668.3	

A5. Derating Curve for Ambient Temperature and Carrier Frequency


Ambient Temperature Derating Curve

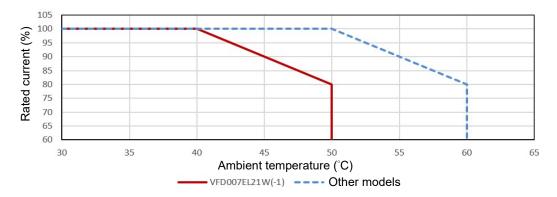

Model	Ambient Temperature Limitation
VFD007EL21W(-1)	If the AC motor drive operates at the rated current, the ambient temperature needs to be between -10–40°C. If the temperature is above 40°C, decrease 2% of the rated current for every 1°C increase in temperature. The maximum allowable temperature is 50°C.
Other models	If the AC motor drive operates at the rated current, the ambient temperature needs to be between -10–50°C. If the temperature is above 50°C, decrease 2% of the rated current for every 1°C increase in temperature. The maximum allowable temperature is 60°C.

Other models: VFD002EL21W(-1), VFD004EL21W(-1), VFD015EL21W(-1), VFD022EL21W(-1), VFD004EL43W(-1), VFD007EL43W(-1), VFD015EL43W(-1), VFD022EL43W(-1), VFD040EL43W(-1)

Carrier Frequency Derating Curve

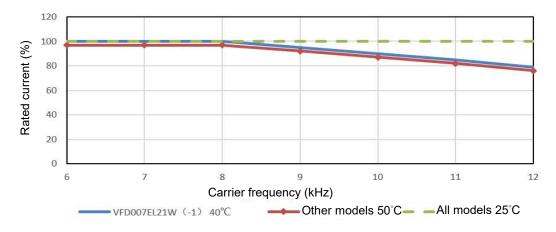

Model	Carrier Frequency Limitation	
VFD007EL21W(-1)	If the AC motor drive is installed at an ambient temperature of 40°C, and operates at the rated current, the carrier frequency needs to be within 8 kHz. If the carrier frequency is higher than 8 kHz, decrease 5% of the rated current for every 1 kHz increase in the carrier frequency. The maximum allowable carrier frequency is 12 kHz.	
Other models	If the AC motor drive is installed at an ambient temperature of 50°C, and operates at the rated current, the carrier frequency needs to be within 8 kHz. If the carrier frequency is higher than 8 kHz, decrease 5% of the rated current for every 1 kHz increase in the carrier frequency. The maximum allowable carrier frequency is 12 kHz.	

This page intentionally left blank.

Appendix B Accessories

B.1 Non-fuse Circuit Breaker Chart

B.2 Reactor

B.2.1 AC Reactor

B.2.2 Zero Phase Reactor

B.3 Digital Keypad

B.3.1 PU06

B.3.2 PU08 and PU08V

B.4 Optional Cooling Fan

B.1 Non-fuse Circuit Breaker Chart

For one-phase/three-phase drives, the current rating of the breaker must be between 2–4 times the rated input current.

One-	phase	Three-phase		
Model Recommended non-fuse breaker (A)		Model	Recommended non-fuse breaker (A)	
VFD002EL21W	10	VFD004EL43W	5	
VFD004EL21W	15	VFD007EL43W	5	
VFD007EL21W	20	VFD015EL43W	10	
VFD015EL21W	30	VFD022EL43W	15	
VFD022EL21W	50	VFD040EL43W	20	

Fuse Specification Chart

Fuse specifications lower than the table below are allowed.

Model	I (A) I (A)		Line Fuse	
Wodei	Input Outpu	Output	I (A)	Bussmann P/N
VFD002EL21W	4.9	1.6	10	JJN-10
VFD004EL21W	6.5	2.5	15	JJN-15
VFD004EL43W	1,8	1,.5	5	JJS-6
VFD007EL21W	9.3	4.2	20	JJN-20
VFD007EL43W	3.2	2.5	5	JJS-6
VFD015EL21W	15.7	7.5	30	JJN-30
VFD015EL43W	4.3	4.2	10	JJS-10
VFD022EL21W	24.0	11.0	50	JJN-50
VFD022EL43W	7.1	5.5	15	JJS-15
VFD040EL43W	10.0	9.0	20	JJS-20

B.2 Reactor

B.2.1 AC Reactor

AC Input Reactor Recommended Value

230V, 50/60Hz, One-Phase

kW	HP	Fundamental Amps	Max. continuous Amps	Inductance (mH)	
				3-5% Impedance	
0.2	0.25	4	6	6.5	
0.4	0.5	5	7.5	3	
0.75	1	8	12	1.5	
1.5	2	12	18	1.25	
2.2	3	18	27	0.8	

460V, 50/60Hz, Three-Phase

kW	ЦΒ	Fundamental Amps	Max. continuous Amps	Inductance (mH)		
KVV	HP			3% Impedance	5% Impedance	
0.4	0.5	2	3	20	32	
0.75	1	4	6	9	12	
1.5	2	4	6	6.5	0	
2.2	3	8	12	5	7.5	
4.0	5.5	8	12	3	5	

AC Output Reactor Recommended Value

230V, 50/60Hz, Three-Phase

kW	HP	Fundamental Amps	Max. continuous Amps	Inductance (mH)		
KVV				3% Impedance	5% Impedance	
0.2	0.25	4	6	9	12	
0.4	0.5	4	6	6.5	9	
0.75	1	8	12	3	5	
1.5	2	8	12	1.5	3	
2.2	3	12	18	1.25	2.5	

460V, 50/60Hz, Three-Phase

kW	HP	Fundamental Amps	Max. continuous Amps	Inductance (mH)		
KVV	ПР			3% Impedance	5% Impedance	
0.4	0.5	2 3 20		20	32	
0.75	1	4	6	9	12	
1.5	2	4	6	6.5	9	
2.2	3	8	12	5	7.5	
4.0	5.5	12	18	3	5	

Applications


Connected in input circuit

Application 1

When more than one AC motor drives are connected to the same mains power and are running, and one of them is ON during operation.

Issues: When applying power to one of the AC motor drives, the charge current of the capacitors may cause voltage dip. The AC motor drive may be damaged when over-current occurs during operation.

Correct wiring:

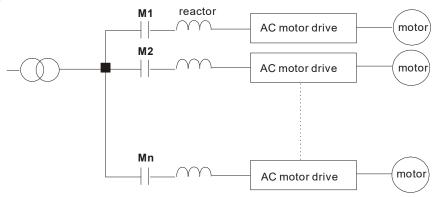


Application 2

A silicon rectifier and AC motor drive are connected to the same power.

Issues: Switching spikes are generated when the silicon rectifier switches ON/OFF. These spikes may damage the mains circuit.

Correct wiring:

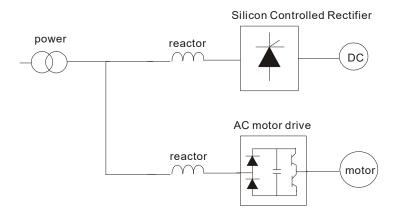


Application 3

The power supply capacity is 10 or above times the AC motor drive capacity.


Issues: When the mains power capacity is too large, line impedance is small and the charge current is too high. This may damage the AC motor drive due to the higher rectifier temperature.

Correct wiring:

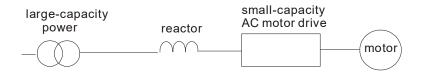

B.2.2 Zero Phase Reactor RF220X00A


UNIT: mm [inch]

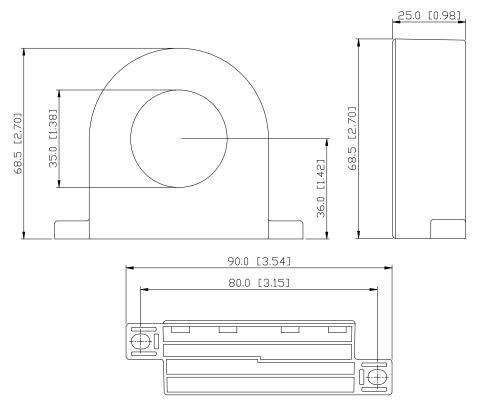

Cable type (Note)	Recom	mended	l Wire Size		Wiring Method	
	AWG	mm²	Nominal (mm²)	Qty.		
Single- core	≤ 10	≤ 5.3	≤ 5.5	1	Diagram A	
	≤2	≤ 33.6	≤ 38	4	Diagram B	
T 1	≤ 12	≤ 3.3	≤ 3.5	1	Diagram A	
Three- core	≤ 1	≤ 42.4	≤ 50	4	Diagram B	

Diagram A

Please wind each wire four times around the core. The reactor must be put as close to the inverter output as possible.

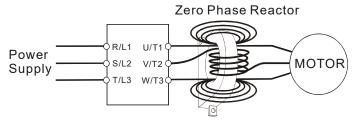




600V Insulated Unshielded Cable

- The table above gives approximate wire size for zero phase reactors, but the selection is ultimately governed by the type and diameter of the cable; that is, the cable must fit through the center hole of zero phase reactors.
- When wiring, do not pass the grounding cable through the zero phase reactor; only pass the motor wire or power cable through the zero phase reactor.
- With longer motor cables the zero-phase reactor can effectively reduce interference at the motor output.

Diagram B


Please put all wires through four cores in series without winding.

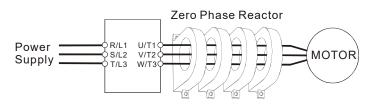

B.3 Digital Keypad

B.3.1 VFD-PU06

B.3.1.1 Digital Keypad VFD-PU06 Description

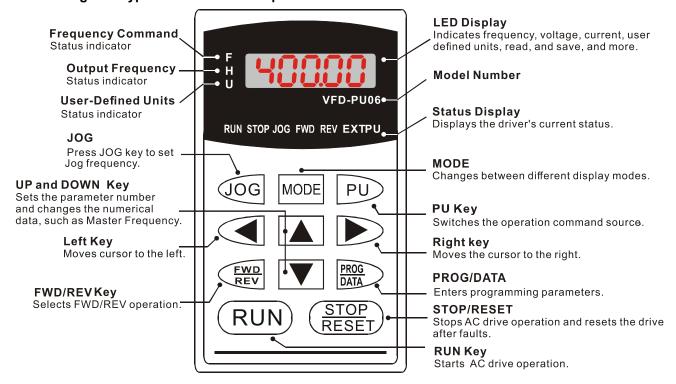


B.3.1.2 Display Message Explanation

Display Message	Descriptions
5888	The current frequency of the drive.
H 5000	The actual operation frequency that the drive outputs to the motor.
. 180.00	The user-defined unit (u)
8 5.8	The loading current of the drive.
r88d8	Read parameters. Press PROG/DATA for 2–3 sec. until it is flashing. Then, you can read four parameters from the AC motor drive to the digital keypad PU06 (read D0–read D3). Press UP or DOWN key to change to SAVE function.
5808-	Write parameters. Press PROG/DATA for 2–3 sec. until it is flashing. Then, you can write the parameters from the digital keypad PU06 to the AC motor drive. Press UP or DOWN key to change to READ function.
08-00	The specified parameter setting.
	The actual value stored in the specified parameter.
E.F.	External Fault

Display Message	Descriptions		
-End-	"End" displays for approximately one second if the entered input data has been accepted. After a parameter value has been set, the new value is automatically stored in memory.		
-6	"Err" displays if the input is invalid or the input exceeds the setting range.		
[8:-3]	Communication Error. Refer to Parameter Group 09 in Chapter 04 for details.		

B.3.1.3 Operation Flow Chart

VFD-PU06 Operation Flow Chart

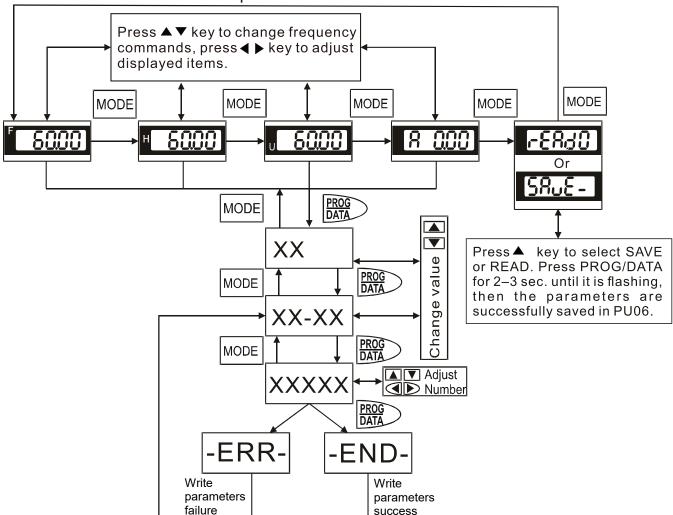


B.3.2 VFD-PU08 and VFD-PU08V





The VFD-PU08 and VFD-PU08V don't not include the extension cord. Please choose the suitable extension cords as needed. (Refer to the table below)

Communication cable

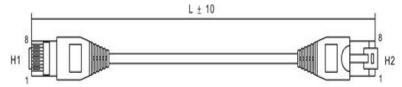

No.	Model Name	L		
NO.		mm	inch	
1	UC-CMC003-01A	300	11.8	
2	UC-CMC005-01A	500	19.6	
3	UC-CMC010-01A	1000	39.0	
4	UC-CMC015-01A	1500	59.0	
5	UC-CMC020-01A	2000	78.7	
6	UC-CMC030-01A	3000	118.1	
7	UC-CMC050-01A	5000	196.8	

B.4 Optional Fan Kit

After you install the cooling fan to the VFD007EL21W(-1), you can increase the ambient temperature of the operating environment up to 50° C without derating. If you choose not to install the cooling fan, the ambient temperature of the operating environment is only up to 40° C without derating. The power supply of the cooling fan is $24V_{DC}$. Internal power is applied from terminal +24V/DCM. Once you install this cooling fan on the motor drive, do not connect any other external accessory to avoid overload on terminal +24V which will damage the motor drive. Use only terminals MI after your install the cooling fan.


Cooling Fan Model	Applicable Motor Drive	Product Appearance
MKEL-AFKM1	VFD007EL21W(-1)	

Note: the power cable of the cooling fan is about 150mm.

Cooling Fan Installation

Follow the direction of the arrow to remove the top cover.	
2.	
As shown in the image on the right, the direction pointed by the arrow on top of the cooling fan should face the heat sink.	
Fix the cooling fan and its grill by fastening screws on the heat sink.	
Positive pole of the cooling fan: Connect the red cable to terminal +24V.	
Negative pole of the cooling fan: Connect the black cable to terminal DCM.	

3.
Replace the top cover to complete the cooling fan installation

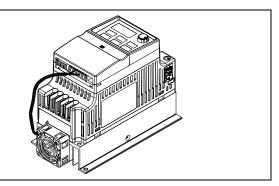

Appendix C How to Select the Right AC Motor Drive

C.1 Capacity Formulas

C.2 General Precautions

C.3 How to Choose a Suitable Motor

The choice of the right AC motor drive for the application is very important and has a big influence on the drive's lifetime. If the capacity of the AC motor drive is too large, it cannot provide complete protection to the motor and motor might be damaged. If the capacity of the AC motor drive is too small, it cannot provide the required performance and the AC motor drive might be damaged due to overloading.

Simply selecting the AC motor drive with the same capacity as the motor cannot completely meet the application requirements. Therefore, a designer should consider all the conditions, including load types, load speeds, load characteristics, operation methods, rated output, rated speed, power and the change in load capacity. The following table lists the factors you need to consider, depending on your requirements.

		Related Specification			
	ltem		Time ratings	Overload capacity	Starting torque
Load type	Friction load and weight load Liquid (viscous) load Inertia load Load with power transmission	•			•
Load speed and torque characteristics	Constant torque Constant output Decreasing torque Decreasing output	•	•		
Load characteristics	Constant load Shock load Repetitive load High starting torque Low starting torque	•	•	•	•
Operation mode	Continuous operation Short-time operation Long-time operation at medium/low speeds		•	•	
Rated output	Maximum output current (instantaneous) Constant output current (continuous)	•		•	
Rated speed	Maximum frequency Base frequency	•			
Power supply	Power supply transformer capacity or percentage impedance Voltage fluctuations and unbalance Number of phases, single phase protection Frequency			•	•
Load capacity	Mechanical friction, losses in wiring			•	•
change	Duty cycle modification		•		

C.1 Capacity Formulas

1. One AC motor drive operates one motor

The starting capacity should be less than 1.5x the rated capacity of the AC motor drive. The starting capacity equals:

$$\frac{k \times N}{973 \times \eta \times \cos \varphi} \left(T_L + \frac{GD^2}{375} \times \frac{N}{t_A} \right) \le 1.5 \times the _capacity _of _AC _motor _drive(kVA)$$

2. One AC motor drive operates more than one motor

- 2.1 The starting capacity should be less than the rated capacity of the AC motor drive.
- Acceleration time ≤ 60 seconds

The starting capacity equals:

$$\frac{k \times N}{\eta \times \cos \varphi} \left[n_{\tau} + n_{s} \left(k_{s-1} \right) \right] = P_{C1} \left[1 + \frac{n_{s}}{n_{\tau}} \left(k_{s-1} \right) \right] \leq 1.5 \times the \ _capacity \ _of \ _AC \ _motor \ _drive(kVA)$$

■ Acceleration time ≥ 60 seconds

The starting capacity equals:

$$\frac{k \times N}{\eta \times \cos \varphi} \left[n_{\tau} + n_{s} \left(k_{s-1} \right) \right] = Pci \left[1 + \frac{n_{s}}{n_{\tau}} \left(k_{s-1} \right) \right] \leq the _capacity _of _AC _motor _drive(kVA)$$

2.2 The current should be less than the rated current of the AC motor drive (A).

■ Acceleration time < 60 seconds

$$n_T + I_M \left[1 + \frac{n_S}{n_T} (k_S - 1) \right] \le 1.5 \times the _rated _current _of _AC _motor _drive(A)$$

■ Acceleration time ≥ 60 seconds

$$n_{\tau} + I_{M} \left[1 + \frac{n_{s}}{n_{\tau}} (k_{s} - 1) \right] \le the _rated _current _of _AC _motor _drive(A)$$

2.3 When running continuously

The load capacity requirement should be less than the capacity of the AC motor drive (kVA).
The load capacity requirement equals:

$$\frac{k \times P_{M}}{\eta \times \cos \varphi} \le the _capacity_of _AC_motor_drive(kVA)$$

■ The motor capacity should be less than the capacity of the AC motor drive.

$$k \times \sqrt{3} \times V_M \times I_M \times 10^{-3} \le the \ capacity \ of \ AC \ motor \ drive(kVA)$$

■ The current should be less than the rated current of the AC motor drive (A).

$$k \times I_M \le the_rated_current_of_AC_motor_drive(A)$$

Symbol explanation

 P_M Motor shaft output for load (kW)

η Motor efficiency (normally approx. 0.85)

 $\cos \varphi$ Motor power factor (normally approx. 0.75)

 V_M Motor rated voltage (V)

 I_M Motor rated current (A), for commercial power

k Correction factor calculated from the current distortion factor

(1.05–1.1, depending on PWM method)

 P_{C1} Continuous motor capacity (kVA)

ks Starting current/rated current of the motor

 n_T Number of motors in parallel

*n*_s Number of simultaneously started motors

Total inertia (GD²) calculated back to motor shaft (kg m²)

 T_L Load torque

t_A Motor acceleration time

N Motor speed

C.2 General Precautions

Selecting an AC Motor Drive

- When connecting the AC motor drive directly to a large-capacity power transformer (600 kVA or higher), or when switching a phase lead capacitor, excess peak currents may occur in the power input circuit and may damage the converter section. To avoid this, use an AC input reactor (optional) before the AC motor drive mains input to reduce the current and improve the input power efficiency.
- ☑ The starting acceleration and deceleration characteristics of a motor are limited by the AC motor drive rated current and the overload protection. Compared to running the motor D.O.L. (Direct On-Line), you can expect a lower starting torque output with the AC motor drive. If a higher starting torque is required (such as for elevators, mixers, tooling machines, etc.), use a higher capacity AC motor drive or increase the capacities of both the motor and the AC motor drive.
- When a fault occurs on the drive, a protective circuit is activated and the AC motor drive output is turned off. The motor coasts to stop. For an emergency stop, use an external mechanical brake to quickly stop the motor.

Setting Parameters


- You can set the AC motor drive to an output frequency up to 400 Hz (less for some models) with the digital keypad. Setting errors may create a dangerous situation. For safety, setting an upper limit frequency function is strongly recommended.
- ☐ High DC brake operating voltages and long operation time (at low frequencies) may cause overheating of the motor. In that case, forced external motor cooling is recommended.
- ☑ Motor acceleration and deceleration time is determined by motor rated torque, load torque, and load inertia.
- If you activate the stall prevention function, the acceleration and deceleration time is automatically extended to a length that the AC motor drive can handle. If the motor must decelerate within a certain time with a higher load inertia than the AC motor drive can handle in the required time, either use an external brake resistor and/or a brake unit (depending on the model) to shorten deceleration time only, or increase the capacity of both the motor and the AC motor drive.

C.3 How to Choose a Suitable Motor

Standard Motors

When using the AC motor drive to operate a standard three-phase induction motor, follow these precautions.

- ☐ The energy loss is greater than that for an inverter-duty motor.
- Avoid running the motor at low speed for a long time. Under this condition, the motor temperature may rise above the motor rating due to limited airflow produced by the motor's fan. Consider adding external forced motor cooling.
- ☑ When the standard motor operates at low speed for a long time, the output load must be decreased.
- ☑ The load tolerance of a standard motor is according to the following diagram.

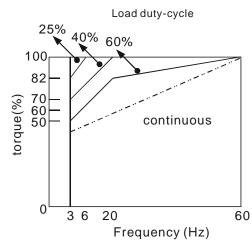

- ☑ If 100% of continuous torque is required at low speed, it may be necessary to use a special inverter-duty motor.
- ☑ Motor dynamic balance and rotor endurance should be considered once the operating speed exceeds the rated speed (60Hz) for a standard motor.
- ☑ Motor torque characteristics vary when driving the motor with an AC motor drive instead of a commercial power supply. Check the load torque characteristics of the machine connected to the motor.
- ☑ Because of the high carrier frequency PWM control of the VFD series, pay attention to the following motor vibration problems:
- Resonant mechanical vibration: use anti-vibration dampers to mount equipment that runs at varying speed.
- Motor imbalance: special care is required for operation at 60 Hz and higher frequencies.
- ☐ The motor fan is very noisy when the motor speed exceeds 60 Hz or above.

Special Motors

☑ Pole-changing (Dahlander) motor:

The rated current differs from that of a standard motor. Check before operation and carefully choose the capacity of the AC motor drive. When changing the number of poles, stop the motor first. If over-current occurs during operation or the regenerative voltage is too high, let the motor free run to stop (coast).

✓ Submersible motor:

The rated current is higher than that of a standard motor. Check before operation and carefully choose the capacity of the AC motor drive. A long motor cable between the AC motor drive and the motor reduces the available motor torque.

☑ Explosion-proof (Ex) motor:

Must be installed in a safe place and the wiring should comply with the (Ex) requirements. Delta AC Motor Drives are not suitable for (Ex) areas that require special precautions.

☑ Gear reduction motor:

The lubricating method of the reduction gearbox and the speed range for continuous operation are different and depend on the motor brand. Carefully consider the lubricating method when operating for a long time at low speed and for high-speed operation.

☑ Synchronous motor:

The rated current and the starting current are higher than those of standard motors. Check before

operation and carefully choose the capacity of the AC motor drive. When one AC motor drive operates more than one motors, pay attention to starting and changing the motor.

Power Transmission Mechanism

Pay attention to reduced lubrication when operating equipment such as gear reduction motors, gearboxes, belts and chains over long periods at low speeds. At high speeds (60 Hz and above), noises and vibrations that reduce the lifetime of the equipment may occur.

Motor Torque

The motor torque characteristics operated by an AC motor drive depend on the motor model selection and AC motor drive parameter settings.

This page intentionally left blank.