

# **ACSM1**

**Firmware Manual**  
**ACSM1 Motion Control Program**





# ACSM1 Motion Control Program

## **Firmware Manual**

3AFE68848270 REV D  
EN  
EFFECTIVE: 08.12.2008



# Table of contents

---

## **Table of contents**

### **Introduction to the manual**

What this chapter contains .....	13
Compatibility .....	13
Safety instructions .....	13
Reader .....	13
Contents .....	14
Product and service inquiries .....	14
Product training .....	14
Providing feedback on ABB Drives manuals .....	14

### **Start-up**

What this chapter contains .....	15
How to start up the drive .....	15
How to control the drive through the I/O interface .....	28

### **Drive programming using PC tools**

What this chapter contains .....	29
General .....	29
Programming via parameters .....	30
Application programming .....	30
Function blocks .....	31
Program execution .....	31
Operation modes .....	32

### **Drive control and features**

What this chapter contains .....	33
Local control vs. external control .....	33
Operating modes of the drive .....	34
Speed control mode .....	34
Torque control mode .....	34
Drive control chain for speed and torque control .....	35
Position control .....	36
Synchron control .....	36
Homing control .....	36
Profile velocity control .....	37
Drive control chain for positioning .....	38
Special control modes .....	39
Motor control features .....	40

Scalar motor control . . . . .	40
Autophasing . . . . .	40
Thermal motor protection . . . . .	41
DC voltage control features . . . . .	44
Overvoltage control . . . . .	44
Undervoltage control . . . . .	44
Voltage control and trip limits . . . . .	44
Braking chopper . . . . .	45
Speed control features . . . . .	46
Jogging . . . . .	46
Motor feedback features . . . . .	48
Motor encoder gear function . . . . .	48
Mechanical brake . . . . .	49
Position/synchron control features . . . . .	52
Load encoder gear function . . . . .	52
Position profile generator . . . . .	53
Dynamic position reference limiter . . . . .	55
Position correction . . . . .	56
Emergency stop . . . . .	71

### ***Default connections of the control unit***

What this chapter contains . . . . .	73
--------------------------------------	----

### ***Parameters and firmware blocks***

What this chapter contains . . . . .	75
Types of parameters . . . . .	75
Firmware blocks . . . . .	76
Group <b>01 ACTUAL VALUES</b> . . . . .	77
ACTUAL VALUES . . . . .	77
Group <b>02 I/O VALUES</b> . . . . .	80
Group <b>03 CONTROL VALUES</b> . . . . .	87
Group <b>04 POS CTRL VALUES</b> . . . . .	89
Group <b>06 DRIVE STATUS</b> . . . . .	91
Group <b>08 ALARMS &amp; FAULTS</b> . . . . .	99
Group <b>09 SYSTEM INFO</b> . . . . .	101
Group <b>10 START/STOP</b> . . . . .	103
DRIVE LOGIC . . . . .	103
Group <b>11 START/STOP MODE</b> . . . . .	109
START/STOP MODE . . . . .	109
Group <b>12 DIGITAL IO</b> . . . . .	112
DIO1 . . . . .	112
DIO2 . . . . .	112
DIO3 . . . . .	112
RO . . . . .	114
DI . . . . .	114
Group <b>13 ANALOGUE INPUTS</b> . . . . .	116
AI1 . . . . .	116
AI2 . . . . .	117

Group <b>15 ANALOGUE OUTPUTS</b> .....	120
AO1 .....	120
AO2 .....	121
Group <b>16 SYSTEM</b> .....	123
Group <b>17 PANEL DISPLAY</b> .....	126
Group <b>20 LIMITS</b> .....	127
LIMITS .....	127
Group <b>22 SPEED FEEDBACK</b> .....	130
SPEED FEEDBACK .....	131
Group <b>24 SPEED REF MOD</b> .....	134
SPEED REF SEL .....	135
SPEED REF MOD .....	136
Group <b>25 SPEED REF RAMP</b> .....	138
SPEED REF RAMP .....	139
Group <b>26 SPEED ERROR</b> .....	142
SPEED ERROR .....	143
Group <b>28 SPEED CONTROL</b> .....	147
SPEED CONTROL .....	148
Group <b>32 TORQUE REFERENCE</b> .....	153
TORQ REF SEL .....	153
TORQ REF MOD .....	154
Group <b>33 SUPERVISION</b> .....	156
SUPERVISION .....	156
Group <b>34 REFERENCE CTRL</b> .....	159
REFERENCE CTRL .....	160
Group <b>35 MECH BRAKE CTRL</b> .....	163
MECH BRAKE CTRL .....	163
Group <b>40 MOTOR CONTROL</b> .....	166
MOTOR CONTROL .....	166
Group <b>45 MOT THERM PROT</b> .....	169
MOT THERM PROT .....	169
Group <b>46 FAULT FUNCTIONS</b> .....	173
FAULT FUNCTIONS .....	173
Group <b>47 VOLTAGE CTRL</b> .....	176
VOLTAGE CTRL .....	176
Group <b>48 BRAKE CHOPPER</b> .....	178
BRAKE CHOPPER .....	178
Group <b>50 FIELDBUS</b> .....	180
FIELDBUS .....	180
Group <b>51 FBA SETTINGS</b> .....	183
Group <b>52 FBA DATA IN</b> .....	185
Group <b>53 FBA DATA OUT</b> .....	186
Group <b>57 D2D COMMUNICATION</b> .....	187
D2D COMMUNICATION .....	187
Group <b>60 POS FEEDBACK</b> .....	191
POS FEEDBACK .....	192
Group <b>62 POS CORRECTION</b> .....	196
HOMING .....	196
PRESET .....	198
CYCLIC CORRECTION .....	199

Group <b>65 PROFILE REFERENCE</b> .....	203
PROFILE REF SEL .....	204
Group <b>66 PROFILE GENERATOR</b> .....	211
PROFILE GENERATOR .....	212
Group <b>67 SYNC REF SEL</b> .....	214
SYNC REF SEL .....	214
Group <b>68 SYNC REF MOD</b> .....	217
SYNC REF MOD .....	217
Group <b>70 POS REF LIMIT</b> .....	219
POS REF LIM .....	219
Group <b>71 POSITION CTRL</b> .....	221
POS CONTROL .....	222
Group <b>90 ENC MODULE SEL</b> .....	224
ENCODER .....	225
Group <b>91 ABSOL ENC CONF</b> .....	229
ABSOL ENC CONF .....	229
Group <b>92 RESOLVER CONF</b> .....	234
RESOLVER CONF .....	234
Group <b>93 PULSE ENC CONF</b> .....	235
PULSE ENC CONF .....	235
Group <b>95 HW CONFIGURATION</b> .....	238
Group <b>97 USER MOTOR PAR</b> .....	239
Group <b>98 MOTOR CALC VALUES</b> .....	241
Group <b>99 START-UP DATA</b> .....	242

### **Parameter data**

What this chapter contains .....	247
Terms .....	247
Fieldbus equivalent .....	248
Fieldbus addresses .....	248
Pointer parameter format in fieldbus communication .....	248
32-bit integer value pointers .....	248
32-bit integer bit pointers .....	249
Actual signals (Parameter groups 1...9) .....	250
Parameter groups 10...99 .....	253

### **Fault tracing**

What this chapter contains .....	267
Safety .....	267
Alarm and fault indications .....	267
How to reset .....	267
Fault history .....	268
Alarm messages generated by the drive .....	269
Fault messages generated by the drive .....	276



## **Standard function blocks**

What this chapter contains	287
Terms	287
Arithmetic	288
ABS	288
ADD	288
DIV	288
EXPT	289
MOD	289
MOVE	290
MUL	290
MULDIV	290
SQRT	291
SUB	291
Bitstring	292
AND	292
NOT	292
OR	293
ROL	293
ROR	294
SHL	294
SHR	295
XOR	295
Bitwise	297
BGET	297
BITAND	297
BITOR	298
BSET	298
REG	299
SR-D	300
Communication	301
D2D_Conf	301
D2D_McastToken	301
D2D_SendMessage	302
DS_ReadLocal	304
DS_WriteLocal	305
Comparison	306
EQ	306
GE	306
GT	306
LE	307
LT	307
NE	308
Conversion	309
BOOL_TO_DINT	309
BOOL_TO_INT	310
DINT_TO_BOOL	311
DINT_TO_INT	312
DINT_TO_REALn	312

DINT_TO_REALn_SIMP .....	313
INT_TO_BOOL .....	314
INT_TO_DINT .....	314
REAL_TO_REAL24 .....	315
REAL24_TO_REAL .....	315
REALn_TO_DINT .....	316
REALn_TO_DINT_SIMP .....	316
Counters .....	318
CTD .....	318
CTD_DINT .....	318
CTU .....	319
CTU_DINT .....	320
CTUD .....	321
CTUD_DINT .....	323
Edge & bistable .....	325
FTRIG .....	325
RS .....	325
RTRIG .....	326
SR .....	327
Extensions .....	328
FIO_01_slot1 .....	328
FIO_01_slot2 .....	329
FIO_11_AI_slot1 .....	330
FIO_11_AI_slot2 .....	332
FIO_11_AO_slot1 .....	334
FIO_11_AO_slot2 .....	335
FIO_11_DIO_slot1 .....	337
FIO_11_DIO_slot2 .....	337
Feedback & algorithms .....	339
CRITSPEED .....	339
CYCLET .....	340
DATA CONTAINER .....	340
FUNG-1V .....	340
INT .....	342
MOTPOT .....	343
PID .....	344
RAMP .....	346
REG-G .....	347
SOLUTION_FAULT .....	348
Filters .....	349
FILT1 .....	349
FILT2 .....	349
LEAD/LAG .....	351
Parameters .....	352
GetBitPtr .....	352
GetValPtr .....	352
PARRD .....	352
PARRDINTR .....	353
PARRDPTR .....	353
PARWR .....	354

Selection .....	355
LIMIT .....	355
MAX .....	355
MIN .....	355
MUX .....	356
SEL .....	356
Switch & Demux .....	357
DEMUX-I .....	357
DEMUX-MI .....	357
SWITCH .....	358
SWITCHC .....	359
Timers .....	360
MONO .....	360
TOF .....	361
TON .....	361
TP .....	362

### ***Application program template***

What this chapter contains .....	363
----------------------------------	-----

### ***Control chain block diagrams***

What this chapter contains .....	379
----------------------------------	-----

### ***Appendix A – Fieldbus control***

What this chapter contains .....	385
System overview .....	385
Setting up communication through a fieldbus adapter module .....	386
Drive control parameters .....	387
The fieldbus control interface .....	388
The Control Word and the Status Word .....	388
Actual values .....	389
FBA communication profile .....	389
Fieldbus references .....	389
State diagram .....	390

### ***Appendix B – Drive-to-drive link***

What this chapter contains .....	391
General .....	391
Wiring .....	391
Datasets .....	392
Types of messaging .....	393
Master point-to-point messaging .....	394
Read remote messaging .....	394
Follower multicast messaging (write only) .....	395
Standard multicast messaging (write only) .....	395

Broadcast messaging (write only) .....	396
Chained multicast messaging .....	397
Examples of using standard function blocks in drive-to-drive communication .....	399
Example of master point-to-point messaging .....	399
Example of read remote messaging .....	400
Releasing tokens for follower-to-follower communication .....	400
Example of follower-to-follower multicasting .....	401
Example of standard master-to-follower(s) multicast messaging .....	402
Example of broadcast messaging .....	402

## ***Appendix C – Homing modes***

What this chapter contains .....	403
----------------------------------	-----

# Introduction to the manual

---

## What this chapter contains

The chapter includes a description of the contents of the manual. In addition it contains information about the compatibility, safety and intended audience.

## Compatibility

The manual is compatible with ACSM1 Motion Control program version UMF11480 and later. See signal [9.04 FIRMWARE VER](#) or PC tool (View - Properties).

## Safety instructions

Follow all safety instructions delivered with the drive.

- Read the **complete safety instructions** before you install, commission, or use the drive. The complete safety instructions are given at the beginning of the *Hardware Manual*.
- Read the **software function specific warnings and notes** before changing the default settings of the function. For each function, the warnings and notes are given in this manual in the section describing the related user-adjustable parameters.

## Reader

The reader of the manual is expected to know the standard electrical wiring practices, electronic components, and electrical schematic symbols.

## Contents

The manual consists of the following chapters:

- [Start-up](#) instructs in setting up the control program and how to control the drive through the I/O interface.
- [Drive programming using PC tools](#) introduces programming via PC tool (DriveStudio and/or DriveSPC).
- [Drive control and features](#) describes the control locations and operation modes of the drive, and the features of the application program.
- [Default connections of the control unit](#) presents the default connections of the JCU Control Unit.
- [Parameters and firmware blocks](#) describes the drive parameters and firmware function blocks.
- [Parameter data](#) contains more information on the parameters of the drive.
- [Fault tracing](#) lists the warning and fault messages with the possible causes and remedies.
- [Standard function blocks](#)
- [Application program template](#)
- [Control chain block diagrams](#)
- [Appendix A – Fieldbus control](#) describes the communication between the drive and a fieldbus.
- [Appendix B – Drive-to-drive link](#) describes the communication between drives connected together by the drive-to-drive link.
- [Appendix C – Homing modes](#) describes homing modes 1...35.

## Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type code and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to [www.abb.com/drives](http://www.abb.com/drives) and selecting *Drives – Sales, Support and Service network*.

## Product training

For information on ABB product training, navigate to [www.abb.com/drives](http://www.abb.com/drives) and select *Drives – Training courses*.

## Providing feedback on ABB Drives manuals

Your comments on our manuals are welcome. Go to [www.abb.com/drives](http://www.abb.com/drives) and select *Document Library – Manuals feedback form (LV AC drives)*.

# Start-up

---

## What this chapter contains

This chapter describes the basic start-up procedure of the drive and instructs in how to control the drive through the I/O interface.

## How to start up the drive

The drive can be operated:

- locally from PC tool or control panel
- externally via I/O connections or fieldbus interface.

The start-up procedure presented uses the DriveStudio PC tool program. Drive references and signals can be monitored with DriveStudio (Data Logger or Monitor Window). For instructions on how to use DriveStudio, see *DriveStudio User Manual* [3AFE68749026 (English)].


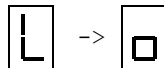


The start-up procedure includes actions which need to be performed only when the drive is powered up for the first time (e.g. entering the motor data). After the first start-up, the drive can be powered up without using these start-up functions. The start-up procedure can be repeated later if start-up data needs to be changed.

In addition to the PC tool commissioning and drive power-up, the start-up procedure includes the following steps:


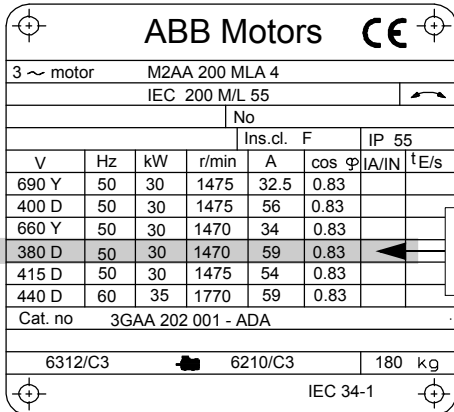
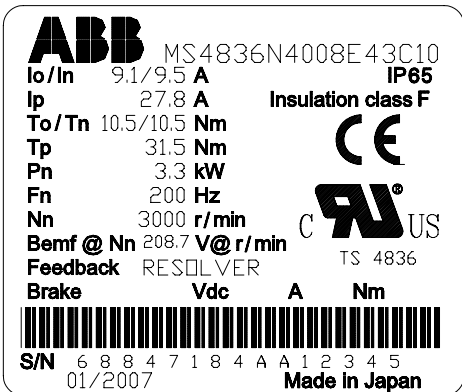
- entering the motor data and performing the motor identification run
- setting up the encoder/resolver communication
- checking the emergency stop and Safe Torque Off circuits
- setting up the voltage control
- setting the drive limits
- setting up the motor overtemperature protection
- tuning the speed controller
- setting up the fieldbus control.

If an alarm or a fault is generated during the start-up, see chapter [Fault tracing](#) for the possible causes and remedies. If problems continue, disconnect the main power and wait 5 minutes for the intermediate circuit capacitors to discharge and check the drive and motor connections.


Before you start, ensure you have the motor nameplate and encoder data (if needed) at your hand.



Safety		
	<p>The start-up may only be carried out by a qualified electrician.</p> <p>The safety instructions must be followed during the start-up procedure. See the safety instructions on the first pages of the appropriate hardware manual.</p>	
<input type="checkbox"/>	Check the installation. See the installation checklist in the appropriate hardware manual.	
<input type="checkbox"/>	<p>Check that the starting of the motor does not cause any danger.</p> <p><b>De-couple the driven machine if</b></p> <ul style="list-style-type: none"><li>- there is a risk of damage in case of an incorrect direction of rotation, or</li><li>- a normal ID run (<b>99.13 IDRUN MODE = (1) NORMAL</b>) is required during the drive start-up, when the load torque is higher than 20% or the machinery is not able to withstand the nominal torque transient during the ID run.</li></ul>	
PC tool		
<input type="checkbox"/>	Install the DriveStudio PC tool to the PC. For instruction, see <i>DriveStudio User Manual</i> [3AFE68749026 (English)].	
<input type="checkbox"/>	<p>Connect the drive to the PC:</p> <p>Connect the other end of the communication cable (OPCA-02, code: 68239745) to the panel link of the drive. Connect the other end of the communication cable via USB adapter or directly to the PC serial port.</p>	
Power up		
<input type="checkbox"/>	Switch the power on.	<p>7-segment display:</p> 
<input type="checkbox"/>	Start the DriveStudio program by clicking the DriveStudio icon on the PC desktop.	 <p>DriveStudio. exe</p>
<input type="checkbox"/>	Check whether an application program exists using the DriveSPC tool. If an application program already exists, NOTE that some of the drive functions may have been disabled. ENSURE, that the application program is suitable for your drive application.	
<input type="checkbox"/>	Switch to local control to ensure that external control is disabled by clicking the Take/Release button of the PC tool control panel.	








Motor data entering		
<input type="checkbox"/>	Open the parameter and signal list by selecting the Parameter Browser of the appropriate drive.	 Parameter Browser
<input type="checkbox"/>	Select the language. Parameters are set as follows: Select the parameter group (in this case 99 START-UP DATA) by double-clicking it. Select the appropriate parameter by double-clicking it and set the new value.	99.01 LANGUAGE
<input type="checkbox"/>	Select the motor type: asynchronous or permanent magnet motor.	99.04 MOTOR TYPE
<input type="checkbox"/>	Select the motor control mode. DTC is suitable for most cases. For information on scalar control, see parameter 99.05 MOTOR CTRL MODE.	99.05 MOTOR CTRL MODE
<input type="checkbox"/>	Enter the motor data from the motor nameplate. Asynchronous motor nameplate example: <div></div> Permanent magnet motor nameplate example: <div></div>	<p><b>Note:</b> Set the motor data to exactly the same value as on the motor nameplate. For example, if the motor nominal speed is 1470 rpm on the nameplate, setting the value of parameter 99.09 MOT NOM SPEED to 1500 rpm results in wrong operation of the drive.</p>
With DTC control (99.05 MOTOR CTRL MODE = (0) DTC) at least parameters 99.06...99.10 must be set. Better control accuracy can be achieved by setting also parameters 99.11...99.12.		

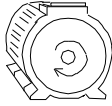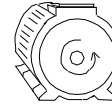	<p>- motor nominal current Allowed range: approximately <math>1/6 \cdot I_{2n} \dots 2 \cdot I_{2n}</math> of the drive (<math>0 \dots 2 \cdot I_{2nd}</math> if parameter <b>99.05 MOTOR CTRL MODE = (1) SCALAR</b>). With multimotor drives, see section <a href="#">Multimotor drives</a> on page 19.</p> <p>- motor nominal voltage Allowed range: <math>1/6 \cdot U_N \dots 2 \cdot U_N</math> of the drive. (<math>U_N</math> refers to the highest voltage in each of the nominal voltage range, i.e. 480 V AC for ACSM1-04). With permanent magnet motors: The nominal voltage is the BackEMF voltage (at motor nominal speed). If the voltage is given as voltage per rpm, e.g. 60 V per 1000 rpm, the voltage for 3000 rpm nominal speed is <math>3 \times 60 \text{ V} = 180 \text{ V}</math>. Note that the nominal voltage is not equal to the equivalent DC motor voltage (E.D.C.M.) value given by some motor manufactures. The nominal voltage can be calculated by dividing the E.D.C.M. voltage by 1.7 (= square root of 3).</p> <p>- motor nominal frequency Range: 5...500 Hz. With multimotor drives, see section <a href="#">Multimotor drives</a> on page 19.</p> <p>With permanent magnet motor: If the frequency is not given on the motor nameplate, it has to be calculated with the following formula: <math>f = n \times p / 60</math> where p = number of pole pairs, n = motor nominal speed.</p> <p>- motor nominal speed Range: 0...10000 rpm. With multimotor drives, see section <a href="#">Multimotor drives</a> on page 19.</p> <p>- motor nominal power Range: 0...10000 kW. With multimotor drives, see section <a href="#">Multimotor drives</a> on page 19.</p> <p>- motor nominal <math>\cos\varphi</math> (not applicable for permanent magnet motors). This value can be set for better DTC control accuracy. If value is not given by the motor manufacturer, use value 0 (i.e. default value). Range: 0...1.</p> <p>- motor nominal shaft torque. This value can be set for better DTC control accuracy. If value is not given by the motor manufacturer, use value 0 (i.e. default value). Range: 0...2147483.647 Nm.</p>	<p><a href="#">99.06 MOT NOM CURRENT</a></p> <p><a href="#">99.07 MOT NOM VOLTAGE</a></p> <p><a href="#">99.08 MOT NOM FREQ</a></p> <p><a href="#">99.09 MOT NOM SPEED</a></p> <p><a href="#">99.10 MOT NOM POWER</a></p> <p><a href="#">99.11 MOT NOM COSFII</a></p> <p><a href="#">99.12 MOT NOM TORQUE</a></p>
<input type="checkbox"/>	After the motor parameters have been set, alarm ID-RUN is generated to inform that the ID run needs to be performed.	Alarm: ID-RUN

Multimotor drives		
I.e. more than one motor is connected to one drive.		
<input type="checkbox"/>	<p>Check that the motors have the same relative slip (only for asynchronous motors), nominal voltage and number of poles. If the manufacturer motor data is insufficient, use the following formulas to calculate the slip and the number of poles:</p> $p = \text{Int}\left(\frac{f_N \cdot 60}{n_N}\right)$ $n_s = \frac{f_N \cdot 60}{p}$ $s = \frac{n_s - n_N}{n_s} \cdot 100\%$ <p>where  <math>p</math> = number of pole pairs (= motor pole number / 2)  <math>f_N</math> = motor nominal frequency [Hz]  <math>n_N</math> = motor nominal speed [rpm]  <math>s</math> = motor slip [%]  <math>n_s</math> = motor synchronous speed [rpm].</p>	
<input type="checkbox"/>	Set the sum of the motor nominal currents.	99.06 MOT NOM CURRENT
<input type="checkbox"/>	Set the nominal motor frequencies. Frequencies must be the same.	99.08 MOT NOM FREQ
<input type="checkbox"/>	<p>Set the sum of the motor nominal powers.</p> <p>If the motor powers are close to each other or the same but the nominal speeds vary slightly, parameter <b>99.09 MOT NOM SPEED</b> can be set to an average value of the motor speeds.</p>	99.10 MOT NOM POWER 99.09 MOT NOM SPEED
External mains choke		
<input type="checkbox"/>	If the drive is equipped with an external choke (specified in <i>Hardware Manual</i> ), set parameter <b>95.02 EXTERNAL CHOKE</b> to YES.	95.02 EXTERNAL CHOKE
Motor overtemperature protection (1)		
<input type="checkbox"/>	Select how the drive reacts when motor overtemperature is detected.	45.01 MOT TEMP PROT
<input type="checkbox"/>	Select the motor temperature protection: motor thermal model or motor temperature measurement. For motor temperature measurement connections, see section <i>Temperature sensors</i> on page 42.	45.02 MOT TEMP SOURCE
ID RUN (motor identification run)		
	<b>WARNING!</b> With Normal or Reduced ID run the motor will run at up to approximately 50... 100% of the nominal speed during the ID run. ENSURE THAT IT IS SAFE TO RUN THE MOTOR BEFORE PERFORMING THE ID RUN!	

<b>Note:</b> Ensure that possible Safe Torque Off and emergency stop circuits are closed during the ID run.		
<input type="checkbox"/>	<p>Check the direction of rotation of the motor before starting the ID run. During the run (Normal or Reduced), the motor will rotate in the forward direction.</p>	<p>When drive output phases U2, V2 and W2 are connected to the corresponding motor terminals:</p> <div style="display: flex; flex-direction: column; align-items: center;">  <p>forward direction</p>  <p>reverse direction</p> </div>
<input type="checkbox"/>	<p>Select the motor identification method by parameter <a href="#">99.13 IDRUN MODE</a>. During the Motor ID run, the drive will identify the characteristics of the motor for optimum motor control. The ID run is performed at the next start of the drive.</p> <p><b>Note:</b> The motor shaft must NOT be locked and the load torque must be &lt; 10% during Normal or Reduced ID run. With permanent magnet motor this restriction applies also when Standstill ID run is selected.</p> <p><b>Note:</b> Mechanical brake (if present) is not opened during the ID run.</p> <p><b>Note:</b> The ID run cannot be performed if par. <a href="#">99.05 MOTOR CTRL MODE = (1) SCALAR</a>.</p> <p>NORMAL ID run should be selected whenever possible.</p> <p><b>Note:</b> The driven machinery must be de-coupled from the motor with Normal ID run if</p> <ul style="list-style-type: none"> <li>• the load torque is higher than 20%, or</li> <li>• the machinery is not able to withstand the nominal torque transient during the ID run.</li> </ul> <p>The REDUCED ID run should be selected instead of the Normal ID run if the mechanical losses are higher than 20%, i.e. the motor cannot be de-coupled from the driven equipment, or full flux is required to keep the motor brake open (conical motor).</p> <p>The STANDSTILL ID run should be selected only if the Normal or Reduced ID run is not possible due to the restrictions caused by the connected mechanics (e.g. with lift or crane applications).</p> <p>AUTOPHASING can only be selected after the Normal/Reduced/Standstill ID run has been performed once. Autophasing is used when an absolute encoder has been added/changed to a permanent magnet motor, but there is no need to perform the Normal/Reduced/Standstill ID run again. See parameter <a href="#">11.07 AUTOPHASING MODE</a> on page <a href="#">111</a> for information on autophasing modes, and section <a href="#">Autophasing</a> on page <a href="#">40</a>.</p>	<p><a href="#">99.13 IDRUN MODE</a> <a href="#">11.07 AUTOPHASING MODE</a></p>

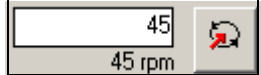
<input type="checkbox"/>	<p>Check the drive limits. The following must apply for all ID run methods:</p> <ul style="list-style-type: none"> <li>• <a href="#">20.05 MAXIMUM CURRENT</a> <math>\geq</math> <a href="#">99.06 MOT NOM CURRENT</a></li> </ul> <p>In addition, the following must apply for Reduced and Normal ID run:</p> <ul style="list-style-type: none"> <li>• <a href="#">20.01 MAXIMUM SPEED</a> <math>&gt;</math> 55% of <a href="#">99.09 MOT NOM SPEED</a></li> <li>• <a href="#">20.02 MINIMUM SPEED</a> <math>\leq 0</math></li> <li>• supply voltage must be <math>\geq</math> 65% of <a href="#">99.07 MOT NOM VOLTAGE</a></li> <li>• <a href="#">20.06 MAXIMUM TORQUE</a> <math>\geq</math> 100% (only for Normal ID run).</li> </ul> <p>When the ID run has been successfully completed, set the limit values as required by the application.</p>	
<input type="checkbox"/>	<p>Start the motor to activate the ID run.</p> <p><b>Note:</b> RUN ENABLE must be active.</p> <p>ID run is indicated by alarm ID-RUN and by a rotating display on the 7-segment display.</p>	 <p><a href="#">10.09 RUN ENABLE</a></p> <p>Alarm: ID-RUN</p> <p>7-segment display:</p>  rotating display ↙
<input type="checkbox"/>	If the ID run is not successfully completed, fault ID-RUN FAULT is generated.	Fault ID-RUN FAULT
<b>Speed measurement with encoder/resolver</b>		
<p>An encoder/resolver feedback can be used for more accurate motor control.</p> <p>Follow these instructions when encoder/resolver interface module FEN-xx is installed in drive option Slot 1 or 2. <b>Note:</b> Two encoder interface modules of the same type are not allowed.</p>		
<input type="checkbox"/>	Select the used encoder/resolver. For more information, see parameter group <a href="#">90 ENC MODULE SEL</a> on page <a href="#">225</a> .	<a href="#">90.01 ENCODER 1 SEL</a> / <a href="#">90.02 ENCODER 2 SEL</a>
<input type="checkbox"/>	<p>Set other necessary encoder/resolver parameters:</p> <ul style="list-style-type: none"> <li>- Absolute encoder parameters (group <a href="#">91</a>, page <a href="#">229</a>)</li> <li>- Resolver parameters (group <a href="#">92</a>, page <a href="#">234</a>).</li> <li>- Pulse encoder parameters (group <a href="#">93</a>, page <a href="#">235</a>).</li> </ul>	<a href="#">91.01...91.31</a> / <a href="#">92.01...92.03</a> / <a href="#">93.01...93.22</a>
<input type="checkbox"/>	Save new parameters settings into the permanent memory by setting parameter <a href="#">16.07 PARAM SAVE</a> to value <a href="#">(1) SAVE</a> .	<a href="#">16.07 PARAM SAVE</a>
<input type="checkbox"/>	Set parameter <a href="#">90.10 ENC PAR REFRESH</a> to <a href="#">(1) CONFIGURE</a> (or switch the drive power off and on again) so that the new parameter settings take effect.	<a href="#">90.10 ENC PAR REFRESH</a>
<b>Checking the encoder/resolver connection</b>		
<p>Follow these instructions when encoder/resolver interface module FEN-xx is installed in drive option Slot 1 or 2. <b>Note:</b> Two encoder interface modules of the same type are not allowed.</p>		
<input type="checkbox"/>	Set parameter <a href="#">22.01 SPEED FB SEL</a> to <a href="#">(0) ESTIMATED</a> .	<a href="#">22.01 SPEED FB SEL</a>




<input type="checkbox"/>	Enter a small speed reference value (for example 3% of the nominal motor speed).	
<input type="checkbox"/>	Start the motor.	
<input type="checkbox"/>	<p>Check that the estimated (<a href="#">1.14 SPEED ESTIMATED</a>) and actual speed (<a href="#">1.08 ENCODER 1 SPEED</a> / <a href="#">1.10 ENCODER 2 SPEED</a>) are equal. If the values differ, check the encoder/resolver parameter settings.</p> <p><b>Hint:</b> If the actual speed (with absolute or pulse encoder) differs from the reference value by a factor of 2, check the pulse number setting (<a href="#">91.01 SINE COSINE NR</a> / <a href="#">93.01 ENC1 PULSE NR</a> / <a href="#">93.11 ENC2 PULSE NR</a>).</p>	<a href="#">1.14 SPEED ESTIMATED</a>  <a href="#">1.08 ENCODER 1 SPEED</a> / <a href="#">1.10 ENCODER 2 SPEED</a>
<input type="checkbox"/>	<p>If the direction of rotation is selected as forward, check that the actual speed (<a href="#">1.08 ENCODER 1 SPEED</a> / <a href="#">1.10 ENCODER 2 SPEED</a>) is positive:</p> <ul style="list-style-type: none"> <li>• If the actual direction of the rotation is forward and the actual speed negative, the phasing of the pulse encoder wires is reversed.</li> <li>• If the actual direction of the rotation is reverse and the actual speed negative, the motor cables are incorrectly connected.</li> </ul> <p>Changing the connection: Disconnect the main power, and wait for 5 minutes for the intermediate circuit capacitors to discharge. Do the necessary changes. Switch the power on and start the motor again. Check that the estimated and actual speed values are correct.</p> <ul style="list-style-type: none"> <li>• If the direction of rotation is selected as reverse, the actual speed must be negative.</li> </ul> <p><b>Note:</b> Resolver autotuning routines should always be performed after resolver cable connection has been modified. Autotuning routines can be activated by setting parameter <a href="#">92.02 EXC SIGNAL AMPL</a> or <a href="#">92.03 EXC SIGNAL FREQ</a>, and then setting parameter <a href="#">90.10 ENC PAR REFRESH</a> to <a href="#">(1) CONFIGURE</a>. If the resolver is used with a permanent magnet motor, an AUTOPHASING ID run should be performed as well.</p>	<a href="#">1.08 ENCODER 1 SPEED</a> / <a href="#">1.10 ENCODER 2 SPEED</a>
<input type="checkbox"/>	Stop the motor.	
<input type="checkbox"/>	<p>Set parameter <a href="#">22.01 SPEED FB SEL</a> to <a href="#">(1) ENC1 SPEED</a> or <a href="#">(2) ENC2 SPEED</a>.</p> <p>If the speed feedback cannot be used in motor control: In special applications parameter <a href="#">40.06 FORCE OPEN LOOP</a> must be set to TRUE.</p>	<a href="#">22.01 SPEED FB SEL</a>
<input type="checkbox"/>	<p><b>Note:</b> Speed filtering needs to be adjusted especially when the encoder pulse number is small. See section <a href="#">Speed filtering</a> on page <a href="#">25</a>.</p>	

Emergency stop circuit		
<input type="checkbox"/>	If there is an emergency stop circuit in use, check that the circuit functions (emergency stop signal is connected to the digital input which is selected as the source for the emergency stop activation).	<a href="#">10.10 EM STOP OFF3</a> or <a href="#">10.11 EM STOP OFF1</a> (emergency stop control through fieldbus <a href="#">2.12 FBA MAIN CW</a> bits 2...4)
Safe Torque Off		
The Safe Torque Off function disables the control voltage of the power semiconductors of the drive output stage, thus preventing the inverter from generating the voltage required to rotate the motor. For Safe Torque Off wiring, see the appropriate hardware manual.		
<input type="checkbox"/>	If there is a Safe Torque Off circuit in use, check that the circuit functions.	
<input type="checkbox"/>	Selects how the drive reacts when the Safe Torque Off function is active (i.e. when the control voltage of the power semiconductors of the drive output stage is disabled).	<a href="#">46.07 STO DIAGNOSTIC</a>
Voltage control		
<p>If the DC voltage drops due to input power cut off, the undervoltage controller will automatically decrease the motor torque in order to keep the voltage above the lower limit.</p> <p>To prevent the DC voltage from exceeding the overvoltage control limit, the overvoltage controller automatically decreases the generating torque when the limit is reached.</p> <p>When the overvoltage controller is limiting the generating torque, quick deceleration of the motor is not possible. Thus electrical braking (brake chopper and brake resistor) is needed in some applications to allow the drive to dissipate regenerative energy. The chopper connects the brake resistor to the intermediate circuit of the drive whenever the DC voltage exceeds the maximum limit.</p>		
<input type="checkbox"/>	Check that the overvoltage and undervoltage controllers are active.	<a href="#">47.01 OVERVOLTAGE CTRL</a> <a href="#">47.02 UNDERVOLT CTRL</a>
<input type="checkbox"/>	<p>If the application requires a brake resistor (the drive has a built-in brake chopper):</p> <ul style="list-style-type: none"> <li>Set the brake chopper and resistor settings.</li> </ul> <p><b>Note:</b> When a brake chopper and resistor are used, the overvoltage controller must be deactivated by parameter <a href="#">47.01 OVERVOLTAGE CTRL</a>.</p> <ul style="list-style-type: none"> <li>Check that the connection functions.</li> </ul> <p>For more information on the brake resistor connection, see the appropriate hardware manual.</p>	<a href="#">48.01...48.07</a> <a href="#">47.01 OVERVOLTAGE CTRL</a>

Start function		
<input type="checkbox"/>	<p>Select the start function.</p> <p>Setting <a href="#">11.01 START MODE</a> to <a href="#">(2) AUTOMATIC</a> selects a general-purpose start function. This setting also makes flying start (starting to a rotating motor) possible.</p> <p>The highest possible starting torque is achieved when <a href="#">11.01 START MODE</a> is set to <a href="#">(0) FAST</a> (automatic optimised DC magnetising) or <a href="#">(1) CONST TIME</a> (constant DC magnetising with user-defined magnetising time).</p> <p><b>Note:</b> When <a href="#">11.01 START MODE</a> setting is <a href="#">(0) FAST</a> or <a href="#">(1) CONST TIME</a>, flying start (start to a rotating motor) is not possible.</p>	<a href="#">11.01 START MODE</a>
Limits		
<input type="checkbox"/>	<p>Set the operation limits according to the process requirements.</p> <p><b>Note:</b> If load torque is suddenly lost when the drive is operating in torque control mode, the drive will rush to the defined negative or positive maximum speed. For safe operation, ensure the set limits are suitable for your application.</p>	<a href="#">20.01...20.07</a>
Motor overtemperature protection (2)		
<input type="checkbox"/>	Set the alarm and fault limits for the motor overtemperature protection.	<a href="#">45.03 MOT TEMP ALM LIM</a> <a href="#">45.04 MOT TEMP FLT LIM</a>
<input type="checkbox"/>	Set the typical ambient temperature of the motor.	<a href="#">45.05 AMBIENT TEMP</a>
<input type="checkbox"/>	<p>When <a href="#">45.02 MOT TEMP SOURCE</a> is set to <a href="#">(0) ESTIMATED</a>, the motor thermal protection model must be configured as follows:</p> <ul style="list-style-type: none"> <li>- Set the maximum allowed operating load of the motor.</li> <li>- Set the zero speed load. A higher value can be used if the motor has an external motor fan to boost the cooling.</li> <li>- Set the break point frequency of the motor load curve.</li> <li>- Set the motor nominal temperature rise.</li> <li>- Set the time inside which the temperature has reached 63% of the nominal temperature.</li> </ul>	<a href="#">45.06 MOT LOAD CURVE</a> <a href="#">45.07 ZERO SPEED LOAD</a> <a href="#">45.08 BREAK POINT</a> <a href="#">45.09 MOTNOMTEMPRISE</a> <a href="#">45.10 MOT THERM TIME</a>
<input type="checkbox"/>	If possible, perform the motor ID run again at this point (see page 19).	<a href="#">99.13 IDRUN MODE</a>

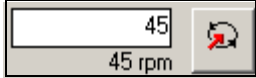


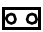
Speed filtering		
<p>The measured speed always has a small ripple because of electrical and mechanical interferences, couplings and encoder resolution (i.e. small pulse number). A small ripple is acceptable as long as it does not affect the speed control chain. The interferences in the speed measurement can be filtered with a speed error filter or with an actual speed filter.</p> <p>Reducing the ripple with filters may cause speed controller tuning problems. A long filter time constant and fast acceleration time contradict one another. A very long filter time results in unstable control.</p>		
<input type="checkbox"/>	<p>If the used speed reference changes rapidly (servo application), use the speed error filter to filter the possible interferences in the speed measurement. In this case the speed error filter is more suitable than the actual speed filter:</p> <ul style="list-style-type: none"> <li>- Set the filter time constant.</li> </ul>	26.06 SPD ERR FTIME
<input type="checkbox"/>	<p>If the used speed reference remains constant, use the actual speed filter to filter the possible interferences in the speed measurement. In this case the actual speed filter is more suitable than the speed error filter:</p> <ul style="list-style-type: none"> <li>- Set the filter time constant.</li> </ul> <p>If there are substantial interferences in the speed measurement, the filter time constant should be proportional to the total inertia of the load and motor, i.e. approximately 10...30% of the mechanical time constant</p> $t_{\text{mech}} = (n_{\text{nom}} / T_{\text{nom}}) \times J_{\text{tot}} \times 2\pi / 60$ , where $J_{\text{tot}}$ = total inertia of the load and motor (the gear ratio between the load and the motor must be taken into account) $n_{\text{nom}}$ = motor nominal speed $T_{\text{nom}}$ = motor nominal torque	22.02 SPEED ACT FTIME
Manual speed controller tuning		
<input type="checkbox"/>	<p>Select the following signals to be monitored with the DriveStudio Data Logger or Monitoring Window:</p> <ul style="list-style-type: none"> <li>- 1.01 SPEED ACT, filtered actual speed</li> <li>- 1.06 TORQUE, motor torque.</li> </ul>	
<input type="checkbox"/>	Start the motor with a small speed reference.	
Give a speed reference step and monitor the response. Repeat the test for few speed reference steps across the whole speed range:		
<input type="checkbox"/>	Set the speed ramp time to a suitable value (according to the used application).	25.03 ACC TIME
<input type="checkbox"/>	Set a suitable speed step (according to the used application): 10% or 20% of the maximum speed of the drive. Accept the new value by pressing the Set new reference button.	

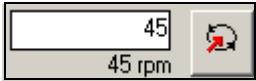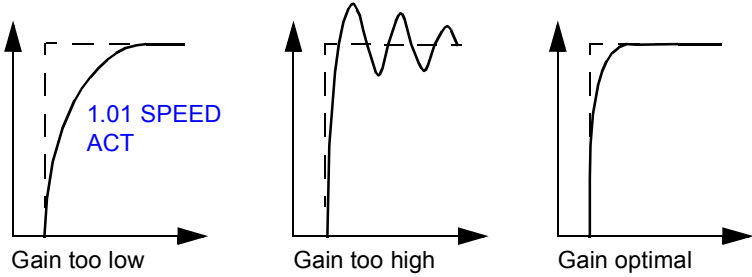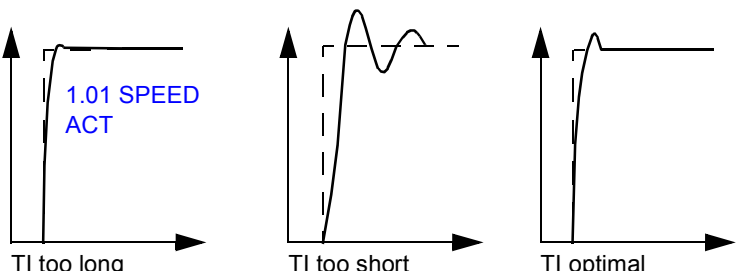□	Optimise the P-part of the speed controller: Set the integration time to 0 to change the PI (proportional integral) controller into a P controller:	28.03 INTEGRATION TIME
□	Give a step change up, for example 10% (of the maximum speed of the drive). When the speed is stabilised, give a step change down, for example -10% (of the maximum speed of the drive).	
□	<p>Increase the proportional gain until the response is sufficient:</p>  <p>Gain too low      Gain too high      Gain optimal</p>	28.02 PROPORT GAIN
□	<p>Reduce the integration time (TI) until an overshoot is observed in the response.</p> <p>Adjust the integration time so that there is no overshoot or only a slight overshoot (depending on the drive application). The integral part is used to correct the error between the reference and actual value (which is caused by the proportional control) as quickly as possible.</p> <p>If the drive is stable and allows a high proportional gain, an overcompensated step response is obtained if the integration time is set short.</p>  <p>TI too long      TI too short      TI optimal</p>	28.03 INTEGRATION TIME
□	<p>Acceleration (deceleration) compensation can be used to improve the speed control dynamic reference change (when the speed ramp times &gt; 0). In order to compensate inertia during acceleration, a derivative of the speed reference is added to the output of the speed controller.</p> <p>Set the derivation time for acceleration (deceleration) compensation. The value should be proportional to the total inertia of the load and motor, i.e. approximately 10...30% of the mechanical time constant (<math>t_{\text{mech}}</math>). See the mechanical time constant equation in section <a href="#">Speed filtering</a> on page 25.</p>	26.08 ACC COMP DERTIME

Fieldbus control		
Follow these instructions when the drive is controlled from a fieldbus control system via fieldbus adapter Fxxx. The adapter is installed in drive Slot 3.		
<input type="checkbox"/>	Enable the communication between the drive and fieldbus adapter.	<a href="#">50.01 FBA ENABLE</a>
<input type="checkbox"/>	Connect the fieldbus control system to the fieldbus adapter module.	
<input type="checkbox"/>	Set the communication and adapter module parameters: See section <a href="#">Setting up communication through a fieldbus adapter module</a> on page 386.	
<input type="checkbox"/>	Test that the communication functions.	

## How to control the drive through the I/O interface

The table below instructs how to operate the drive through the digital and analogue inputs, when the default parameter settings are valid.

PRELIMINARY SETTINGS	
Ensure the original parameter settings (default) are valid.	<a href="#">16.04 PARAM RESTORE</a>
Ensure the control connections are wired according to the connection diagram given in chapter <a href="#">Default connections of the control unit</a> .	
Switch to external control by clicking the Take/Release button of the PC tool control panel.	
STARTING AND CONTROLLING THE SPEED OF THE MOTOR	
Start the drive by switching digital input DI1 on. Digital input status can be monitored with signal <a href="#">2.01 DI STATUS</a> .	<a href="#">2.01 DI STATUS</a>
Check that analogue input AI1 is used as a voltage input (selected by jumper J1).	Voltage: J1    ○ ○ 
Regulate the speed by adjusting the voltage of analogue input AI1.	
Check analogue input AI1 signal scaling. AI1 values can be monitored with signals <a href="#">2.04 AI1</a> and <a href="#">2.05 AI1 SCALED</a> . When AI1 is used as a voltage input, the input is differential and the negative value corresponds to the negative speed and the positive value to the positive speed.	<a href="#">13.02...13.04</a> <a href="#">2.04 AI1</a> <a href="#">2.05 AI1 SCALED</a>
STOPPING THE MOTOR	
Stop the drive by switching digital input DI1 off.	<a href="#">2.01 DI STATUS</a>

# Drive programming using PC tools

---

## What this chapter contains

This chapter introduces the drive programming using the DriveStudio and DriveSPC applications. For more information, see *DriveStudio User Manual* [3AFE68749026 (English)] and *DriveSPC User Manual* [3AFE68836590 (English)].

## General


The drive control program is divided into two parts:

- firmware program
- application program.


The firmware program performs the main control functions, including speed and torque control, drive logic (start/stop), I/O, feedback, communication and protection functions. Firmware functions are configured and programmed with parameters. The functions of the firmware program can be extended with application programming. Application programs are built out of function blocks.

The drive supports two different programming methods:

- parameter programming
- application programming with function blocks (the blocks are based on the IEC-61131 standard).

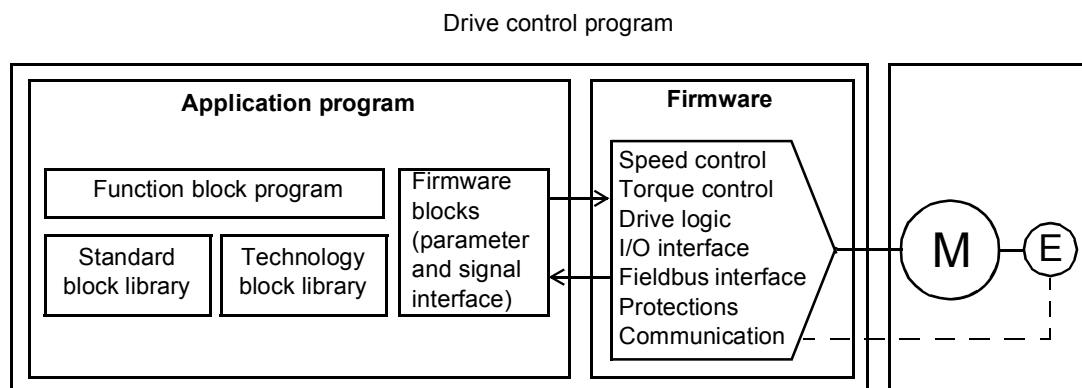

The following picture presents a view from DriveSPC.

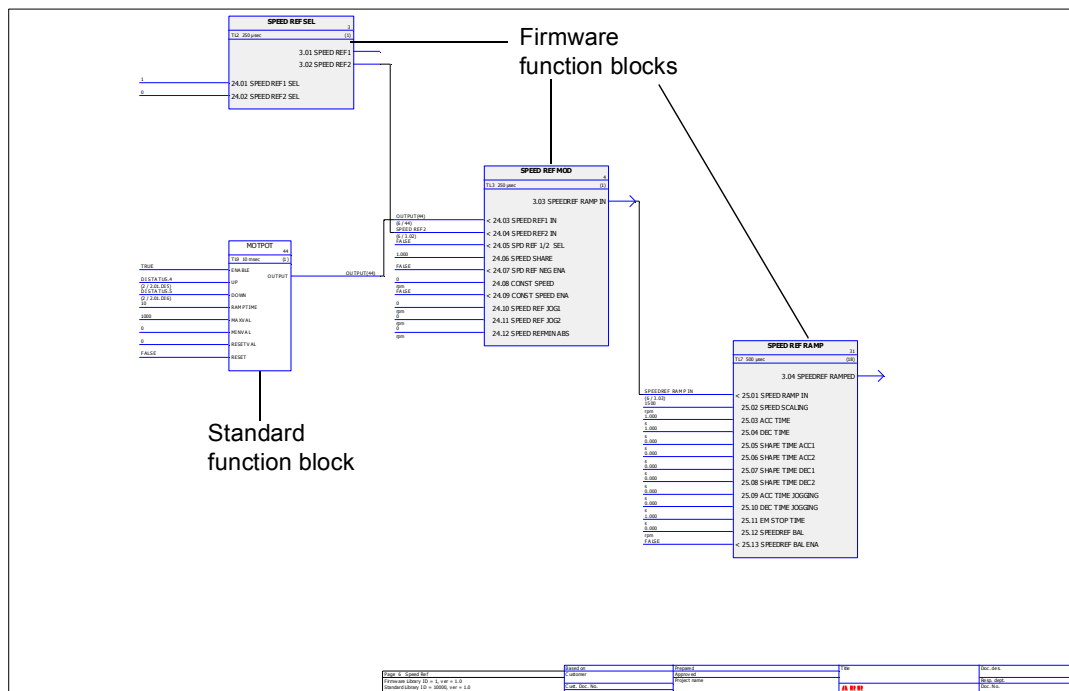

The application program template visible through DriveSPC is presented in chapter [Application program template](#) (page 363).

## Programming via parameters

Parameters can be set via DriveStudio, drive control panel (keypad) or the fieldbus interface. All parameter settings are stored automatically to the permanent memory of the drive. (Exception: Parameters set via the fieldbus interface must be saved by par. [16.07 PARAM SAVE](#)). Values are restored after the power switch-off. Default values can be restored by a parameter ([16.04 PARAM RESTORE](#)).

Because most parameters are used as firmware function block inputs, parameter values can also be modified via the DriveSPC tool.

## Application programming

Application programs are created with the DriveSPC PC tool.

The normal delivery of the drive does not include an application program. The user can create an application program with the standard and firmware function blocks. ABB also offers customised application programs and technology function blocks for specific applications. For more information, contact your local ABB representative.

## Function blocks

The application program uses three types of function blocks: firmware function blocks, standard function blocks and technology function blocks.

### *Firmware function blocks*

Most of the firmware functions are represented as function blocks in the DriveSPC tool. Firmware function blocks are part of the drive control firmware, and used as an interface between the application and firmware programs. Drive parameters in groups 10...99 are used as function block inputs and parameters in groups 1...9 as function block outputs. Firmware function blocks are presented in chapter [Parameters and firmware blocks](#).

### *Standard function blocks (library)*

Standard function blocks (e.g. ADD, AND) are used to create an executable application program. Blocks are based on the IEC-61131 standard. Standard function blocks are presented in chapter [Standard function blocks](#).

Standard function block library is always included in the drive delivery.

### *Technology function blocks*

Several technology function block libraries are available for different types of applications. One technology library can be used at a time. Technology blocks are used in a similar way as the standard blocks.

## Program execution

The application program is loaded to the permanent memory (non-volatile) of the memory unit (JMU). The execution of the downloaded program starts after the next reset of the drive control board. The program is executed in real time on the same Central Processing Unit (CPU of the drive control board) as the drive firmware. The program is executed with two cyclical tasks. The time level for these tasks can be defined by the programmer ( $\geq 1\text{ms}$ ).

**Note:** Because the firmware and application programs use the same CPU, the programmer must ensure that the drive CPU is not overloaded. See parameter [1.21 CPU USAGE](#).

## Operation modes

The DriveSPC tool offers the following operation modes:

### *Off-line*

When the off-line mode is used without a drive connection, the user can

- open a application program file (if exists).
- modify and save the application program.
- print the program pages.

When the off-line mode is used with a drive(s) connection, the user can

- connect the selected drive to DriveSPC.
- upload a application program from the connected drive (an empty template which includes only the firmware blocks is available as default.)
- download the configured application program to the drive and start the program execution. The downloaded program contains the function block program and the parameter values set in DriveSPC.
- remove the program from the connected drive.

### *On-line*

In the on-line mode, the user can

- modify firmware parameters (changes are stored directly to the drive memory).
- modify application program parameters (i.e. parameters created in DriveSPC).
- monitor the actual values of all function blocks in real time.




# Drive control and features

## What this chapter contains

This chapter describes the control locations and operation modes of the drive, and the features of the application program.

## Local control vs. external control

The drive has two main control locations: external and local. The control location is selected with the PC tool (Take/Release button) or with the LOC/REM key on the control panel.

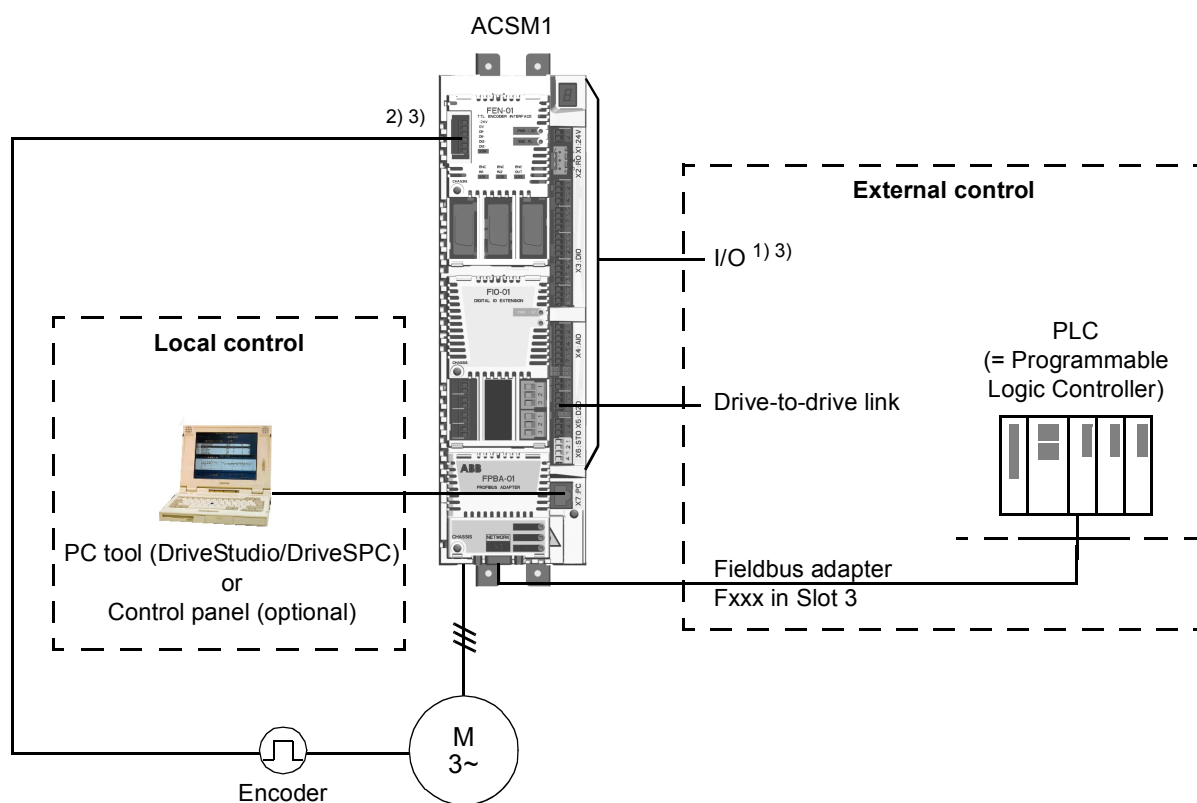

- 1) Extra inputs/outputs can be added by installing optional I/O extension modules (FIO-xx) in drive Slot 1/2.
- 2) Incremental or absolute encoder, or resolver interface module (FEN-xx) installed in drive Slot 1/2
- 3) Two encoder/resolver interface modules or two I/O extension modules of the same type are not allowed.

### Local control

The control commands are given from a PC equipped with DriveStudio and/or DriveSPC, or from the control panel keypad when the drive is in local control. Speed and torque control modes are available for local control.

Local control is mainly used during commissioning and maintenance. The control panel always overrides the external control signal sources when used in local control. Changing the control location to local can be disabled by parameter [16.01 LOCAL LOCK](#).

The user can select by a parameter ([46.03 LOCAL CTRL LOSS](#)) how the drive reacts to a control panel or PC tool communication break.

#### *External control*

When the drive is in external control, control commands (start/stop and reference) are given through the fieldbus interface (via an optional fieldbus adapter module), the I/O terminals (digital and analogue inputs), optional I/O extension modules or the drive-to-drive link. External references are given through the fieldbus interface, analogue inputs, drive to drive link and encoder inputs.

Two external control locations, EXT1 and EXT2, are available. The user can select control signals (e.g. start/stop and reference) and control modes for both external control locations. Depending on the user selection, either EXT1 or EXT2 is active at a time. Selection between EXT1/EXT2 is done via digital inputs or fieldbus control word.

## **Operating modes of the drive**

The drive can operate in speed and torque control modes as well as position, synchron, homing and profile velocity modes. Block diagrams of the control chain for speed and torque control as well as positioning are presented on page [38](#); more detailed diagrams are presented in chapter [Control chain block diagrams](#) (page [379](#)).

### **Speed control mode**

Motor rotates at a speed proportional to the speed reference given to the drive. This mode can be used either with estimated speed used as feedback, or with an encoder or resolver for better speed accuracy.


Speed control mode is available in both local and external control.

### **Torque control mode**

Motor torque is proportional to the torque reference given to the drive. This mode can be used either with estimated speed used as feedback, or with an encoder or resolver for more accurate and dynamic motor control.

Torque control mode is available in both local and external control.

## Drive control chain for speed and torque control

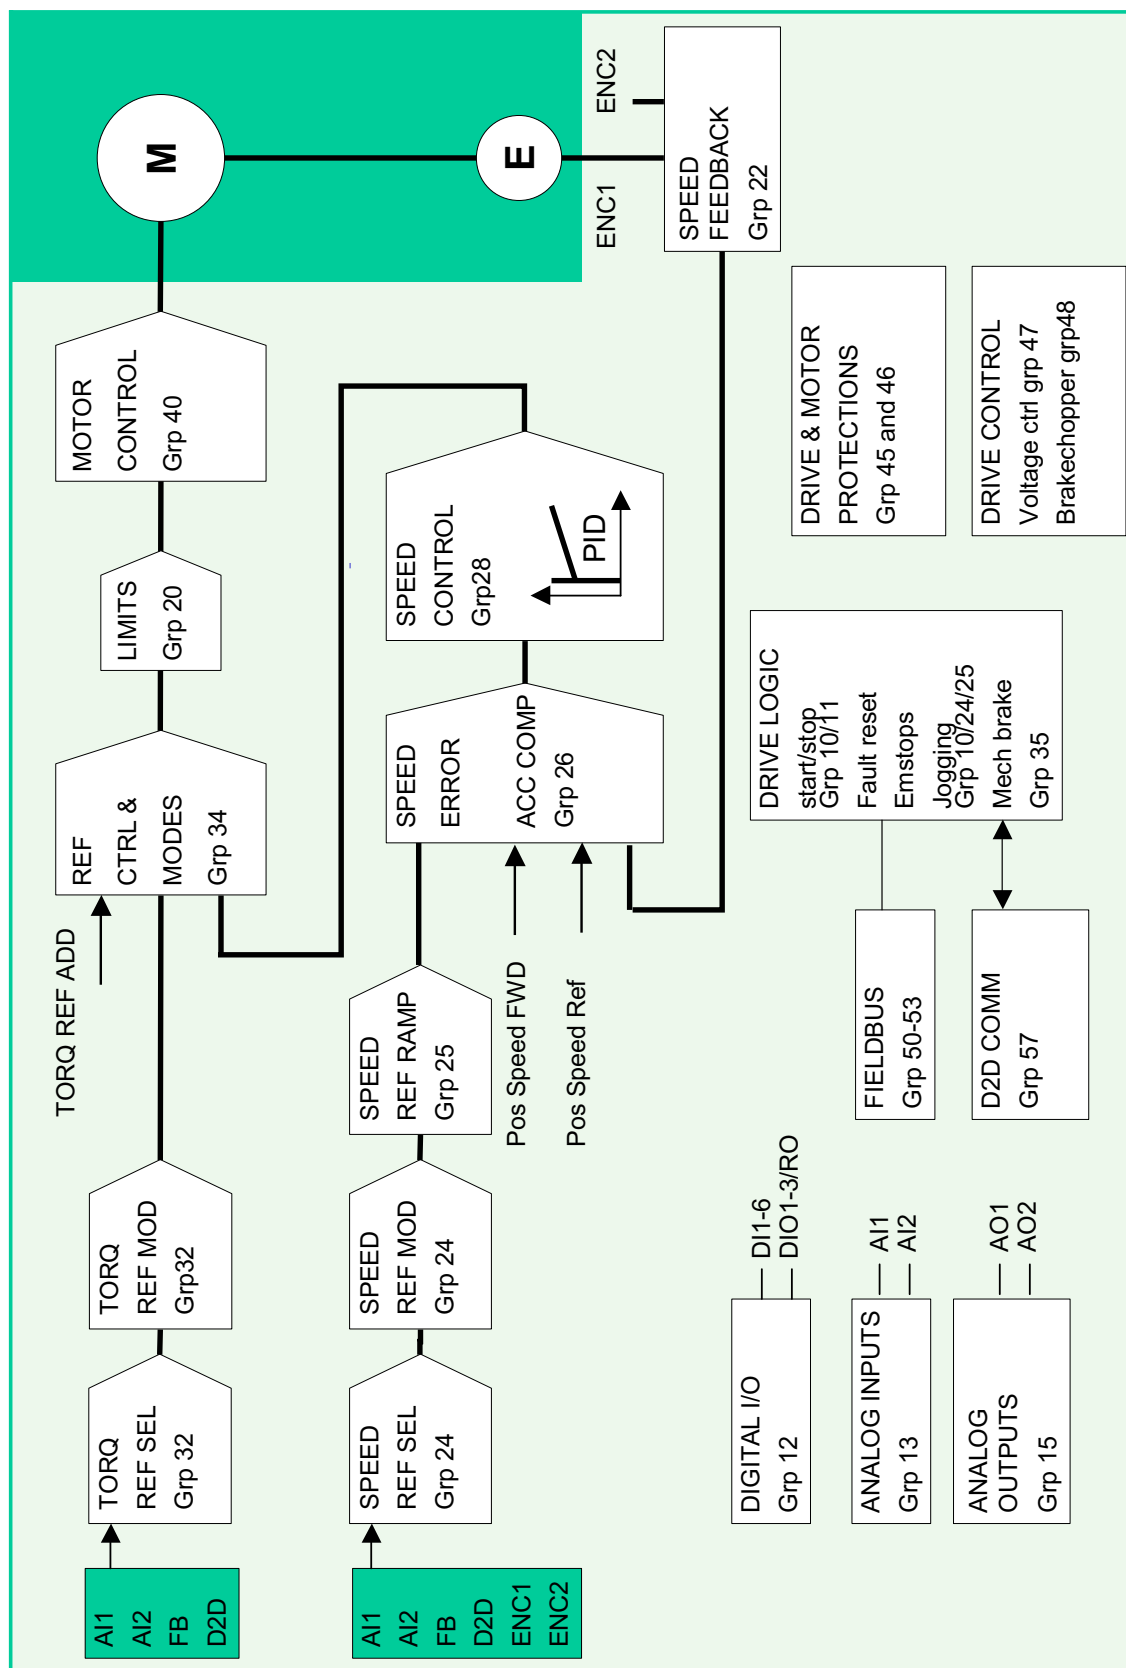

## Position control

In position control, the load is positioned along a single axis from the start position to the defined target position. A position reference is given to the drive to indicate the target position. The path to the target position is calculated by the position profile generator, controlled by position reference sets.

Position feedback (encoder or resolver) must always be used in position control to determine the actual position of the load. The same encoder can also be used to provide speed feedback. It is also possible to have separate encoders for the load (position feedback) and motor sides (speed feedback).

---

**Note:** It is emphasised that all position relevant parameters are load side related, e.g. the setting of parameter **70.04 POS SPEED LIM** (dynamic limiter speed limitation) of 300 rpm denotes that, with a load gear ratio of 1:10, the motor can run at up to 3000 rpm.

---

If the actual position exceeds the defined minimum and maximum position limits, fault POSITION ERROR MAX / POSITION ERROR MIN is created. The actual position monitoring is active in position, synchron, homing and profile velocity modes if the drive is enabled.

## Synchron control

Synchron control is used to synchronise several mechanical systems (axes). The control is similar to position control, but in synchron control the position reference is taken from a moving target via an encoder, the master drive, the PLC, or from the virtual master function.

Position feedback (encoder or resolver) must always be used in synchron control to determine the actual position of the load.

Mechanical slippage etc. can be compensated using the cyclic correction functions.

**Note:** Synchron control is not available in local control mode.

### *Virtual master function*

With the virtual master function, a physical master drive or PLC is not needed in a synchron-controlled follower. The follower will generate its own synchron reference by converting the speed reference selected by parameter **67.02 SPEED REF VIRT M** into a position reference by integration.

## Homing control

Homing establishes a correspondence between the actual position of the driven machinery and the drive internal zero position.

An encoder must always be used in homing control.

See section [Position correction](#) on page 56.

---

**Note:** Homing control is not available in local control mode.

---

**Profile velocity control**

In profile velocity control, the motor rotates at a speed proportional to the speed reference given to the drive. The reference is given in position scale units (e.g. m/s) and handled by the position control reference chain (instead of the speed reference chain).


Profile velocity control is used e.g. with CANopen profile.

---

**Note:** Profile velocity control is not available in local control mode.

---

Drive control chain for positioning

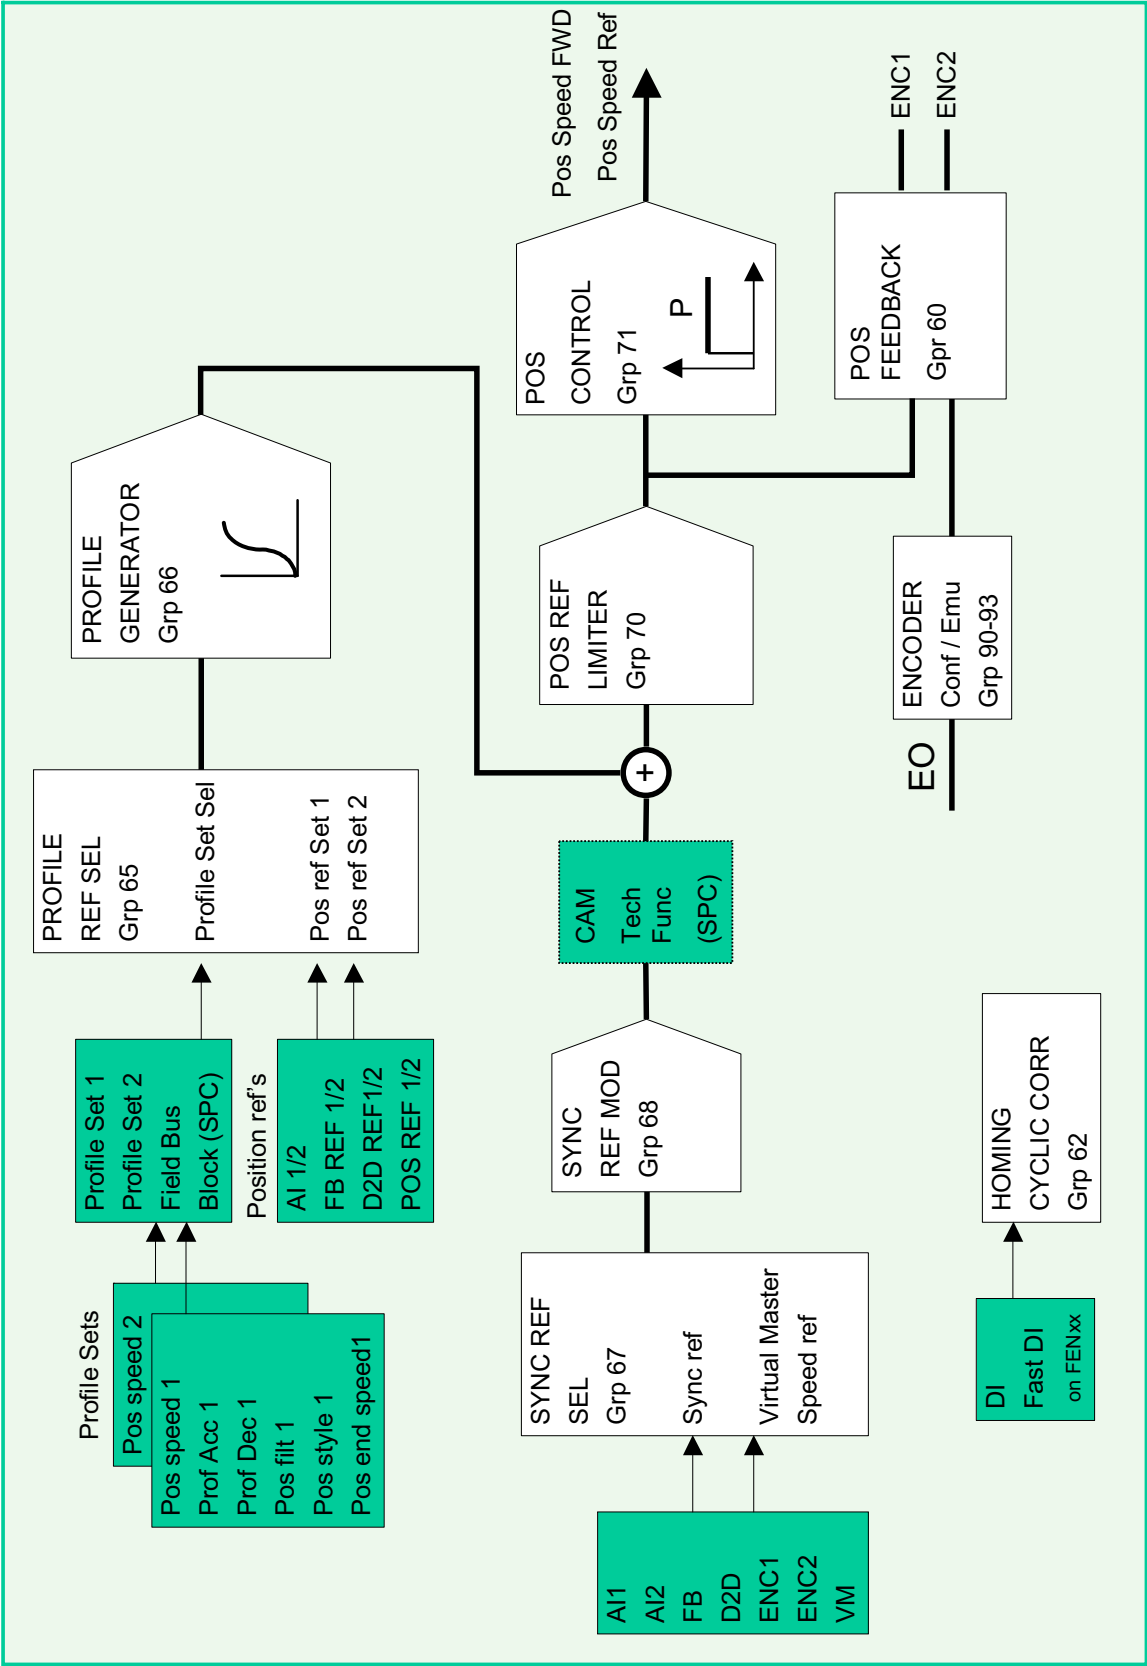

### Special control modes

In addition to the above-mentioned control modes, the following special control modes are available:

- Emergency Stop modes OFF1 and OFF3: Drive stops along the defined deceleration ramp and drive modulation stops.
- Jogging mode: Drive starts and accelerates to the defined speed when the jogging signal is activated.

For more information, see parameter group [10 START/STOP](#) on page [103](#).

## Motor control features

### Scalar motor control

It is possible to select scalar control as the motor control method instead of Direct Torque Control (DTC). In scalar control mode, the drive is controlled with a frequency reference. However, the outstanding performance of DTC is not achieved in scalar control.

It is recommended to activate the scalar motor control mode in the following situations:


- In multimotor drives: 1) if the load is not equally shared between the motors, 2) if the motors are of different sizes, or 3) if the motors are going to be changed after motor identification (ID run)
- If the nominal current of the motor is less than 1/6 of the nominal output current of the drive
- If the drive is used without a motor connected (for example, for test purposes)
- If the drive runs a medium-voltage motor through a step-up transformer.

In scalar control, some standard features are not available.

#### *IR compensation for a scalar controlled drive*

IR compensation is active only when the motor control mode is scalar. When IR compensation is activated, the drive gives an extra voltage boost to the motor at low speeds. IR compensation is useful in applications that require a high break-away torque.

In direct torque control (DTC) mode, IR compensation is automatic and manual adjustment is not needed.

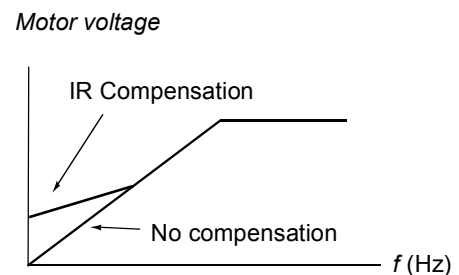

### Autophasing

Autophasing is an automatic measurement routine to determine the angular position of the magnetic flux of a permanent magnet synchronous motor. The motor control requires the absolute position of the rotor flux in order to control motor torque accurately.

Autophasing is applicable to permanent magnet synchronous motors in these cases:

1. One-time measurement of the rotor and encoder position difference when an absolute encoder or resolver (one pole pair) is used
2. With open-loop motor control, repetitive measurement of the rotor position at every start.

Several autophasing modes are available (see parameter [11.07 AUTOPHASING MODE](#)).


The turning mode is recommended especially with case 1 as it is the most robust and accurate method. In turning mode, the motor shaft is turned back and forward



( $\pm 360/\text{polepairs}$ )° in order to determine the rotor position. In case 2 (open-loop control), the shaft is turned only in one direction and the angle is smaller.

The standstill modes can be used if the motor cannot be turned (for example, when the load is connected). As the characteristics of motors and loads differ, testing must be done to find out the most suitable standstill mode.

The drive is also capable of determining the rotor position when started to a running motor in open-loop or closed-loop modes. In this situation, the setting of [11.07 AUTOPHASING MODE](#) has no effect.

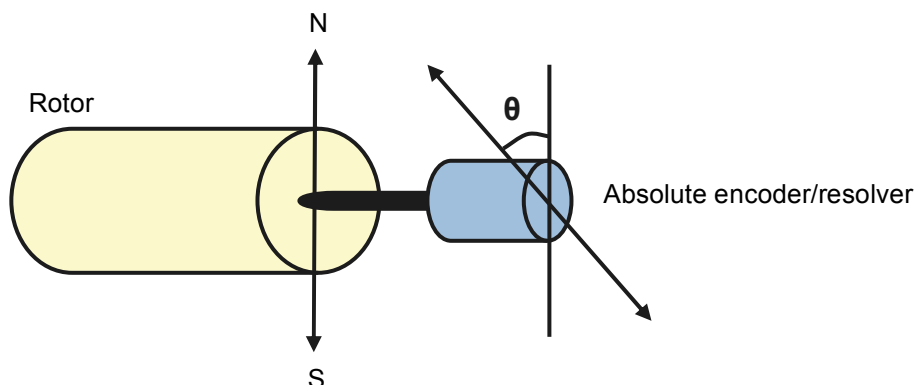

### Thermal motor protection

With the parameters in group [45 MOT THERM PROT](#), the user can set up the motor overtemperature protection and configure motor temperature measurement (if present). This block also shows the estimated and measured motor temperature.

The motor can be protected against overheating by

- the motor thermal protection model
- measuring the motor temperature with PTC or KTY84 sensors. This will result in a more accurate motor model.

#### *Thermal motor protection model*

The drive calculates the temperature of the motor on the basis of the following assumptions:

1) When power is applied to the drive for the first time, the motor is at ambient temperature (defined by parameter [45.05 AMBIENT TEMP](#)). After this, when power is applied to the drive, the motor is assumed to be at the estimated temperature (value of [1.18 MOTOR TEMP EST](#), saved at power switch-off).

2) Motor temperature is calculated using the user-adjustable motor thermal time and motor load curve. The load curve should be adjusted in case the ambient temperature exceeds 30 °C.

It is possible to adjust the motor temperature supervision limits and select how the drive reacts when overtemperature is detected.


**Note:** The motor thermal model can be used when only one motor is connected to the inverter.

Temperature sensors


It is possible to detect motor overtemperature by connecting a motor temperature sensor to thermistor input TH of the drive or to optional encoder interface module FEN-xx.

Constant current is fed through the sensor. The resistance of the sensor increases as the motor temperature rises over the sensor reference temperature  $T_{ref}$ , as does the voltage over the resistor. The temperature measurement function reads the voltage and converts it into ohms.

The figure below shows typical PTC sensor resistance values as a function of the motor operating temperature.

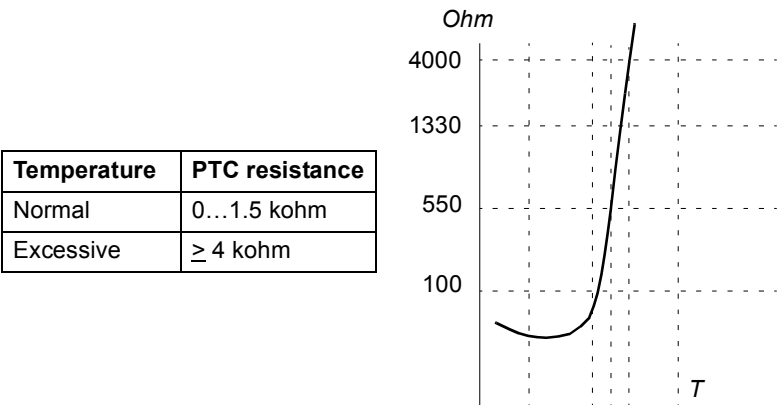

The figure below shows typical KTY84 sensor resistance values as a function of the motor operating temperature.

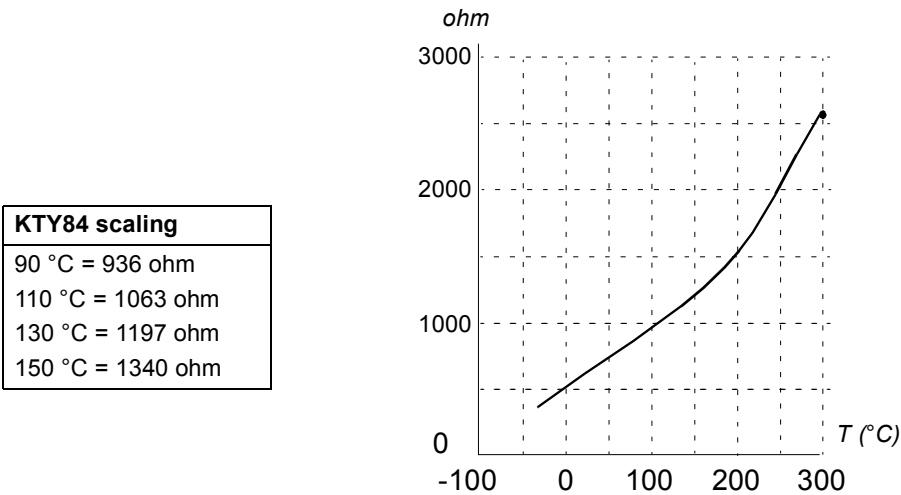

It is possible to adjust the motor temperature supervision limits and select how the drive reacts when overtemperature is detected.




**WARNING!** As the thermistor input on the JCU Control Unit is not insulated according to IEC 60664, the connection of the motor temperature sensor requires double or reinforced insulation between motor live parts and the sensor. If the assembly does not fulfil the requirement,  
- the I/O board terminals must be protected against contact and must not be

connected to other equipment

or

- the temperature sensor must be isolated from the I/O terminals.

The figure below shows a motor temperature measurement when thermistor input TH is used.

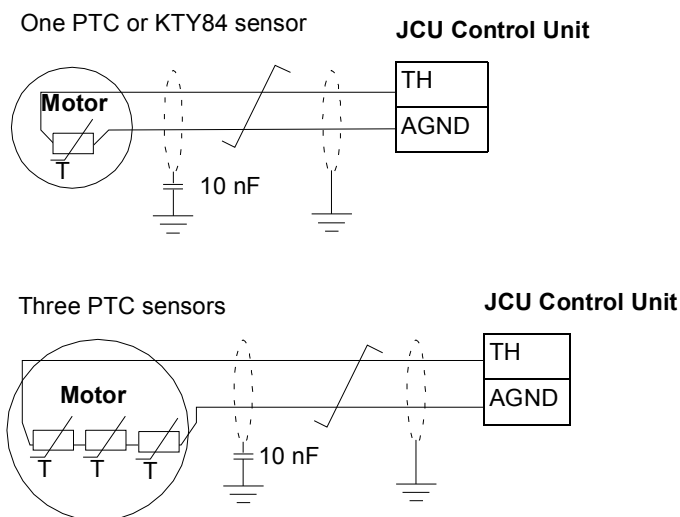

For encoder interface module FEN-xx connection, see the *User's Manual* of the appropriate encoder interface module.

## DC voltage control features


### Overvoltage control

Overvoltage control of the intermediate DC link is needed with two-quadrant line-side converters when the motor operates within the generating quadrant. To prevent the DC voltage from exceeding the overvoltage control limit, the overvoltage controller automatically decreases the generating torque when the limit is reached.

### Undervoltage control

If the incoming supply voltage is cut off, the drive will continue to operate by utilising the kinetic energy of the rotating motor. The drive will be fully operational as long as the motor rotates and generates energy to the drive. The drive can continue the operation after the break if the main contactor remained closed.

**Note:** Units equipped with main contactor option must be equipped with a hold circuit (e.g. UPS) which keeps the contactor control circuit closed during a short supply break.

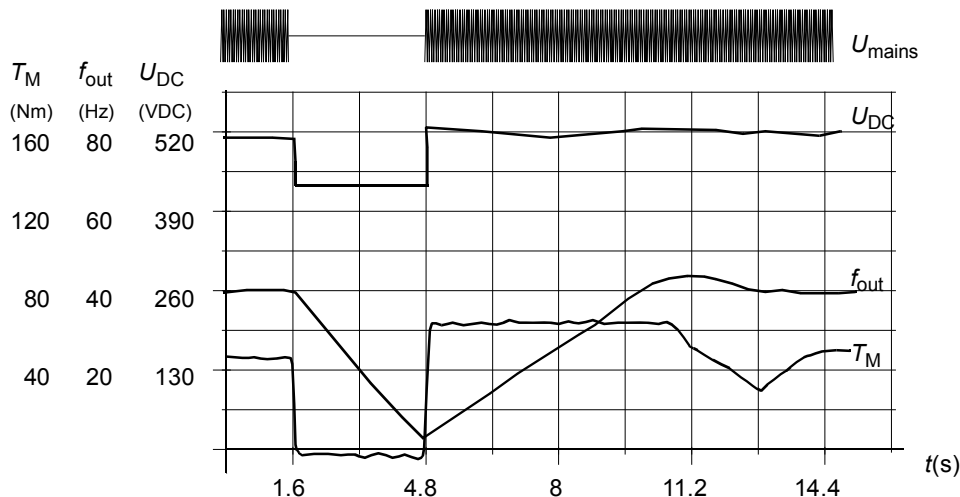

$U_{DC}$  = intermediate circuit voltage of the drive,  $f_{out}$  = output frequency of the drive,  $T_M$  = motor torque


*Loss of supply voltage at nominal load ( $f_{out} = 40$  Hz). The intermediate circuit DC voltage drops to the minimum limit. The controller keeps the voltage steady as long as the mains is switched off. The drive runs the motor in generator mode. The motor speed falls but the drive is operational as long as the motor has enough kinetic energy.*

### Voltage control and trip limits

The control and trip limits of the intermediate DC voltage regulator are relative either to a supply voltage value provided by the user or to an automatically-determined supply voltage. The actual voltage used is shown by parameter **1.19 USED SUPPLY VOLT**. The DC voltage ( $U_{DC}$ ) equals 1.35 times this value.

Automatic identification of the supply voltage is performed every time the drive is powered. Automatic identification can be disabled by parameter **47.03**

**SUPPLVOLTAUTO-ID**; the user can define the voltage manually at parameter **47.04 SUPPLY VOLTAGE**.

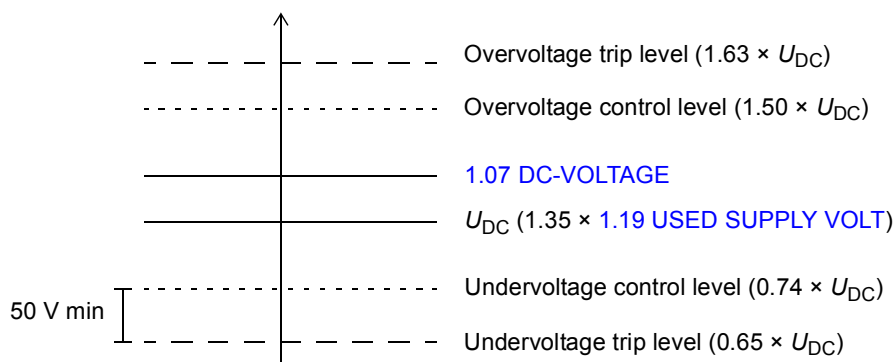

The intermediate DC circuit is charged over an internal resistor which is bypassed when the correct level (80% of  $U_{DC}$ ) is reached and voltage is stabilised.

### Braking chopper

The built-in braking chopper of the drive can be used to handle the energy generated by a decelerating motor.

When the braking chopper is enabled and a resistor connected, the chopper will start conducting when the DC link voltage of the drive reaches 780 V. The maximum braking power is achieved at 840 V.


## Speed control features

### Jogging

Two jogging functions (1 or 2) are available. When a jogging function is activated, the drive starts and accelerates to the defined jogging speed along the defined jogging acceleration ramp. When the function is deactivated, the drive decelerates to a stop along the defined jogging deceleration ramp. One push button can be used to start and stop the drive during jogging. The jogging function is typically used during servicing or commissioning to control the machinery locally.

Jogging functions 1 and 2 are activated by a parameter or through fieldbus. For activation through fieldbus, see [2.12 FBA MAIN CW](#).

The figure and table below describe the operation of the drive during jogging. (Note that they cannot be directly applied to jogging commands through fieldbus as those require no enable signal; see parameter [10.15 JOG ENABLE](#).) They also represent how the drive shifts to normal operation (= jogging inactive) when the drive start command is switched on. Jog cmd = State of the jogging input; Jog enable = Jogging enabled by the source set by parameter [10.15 JOG ENABLE](#); Start cmd = State of the drive start command.

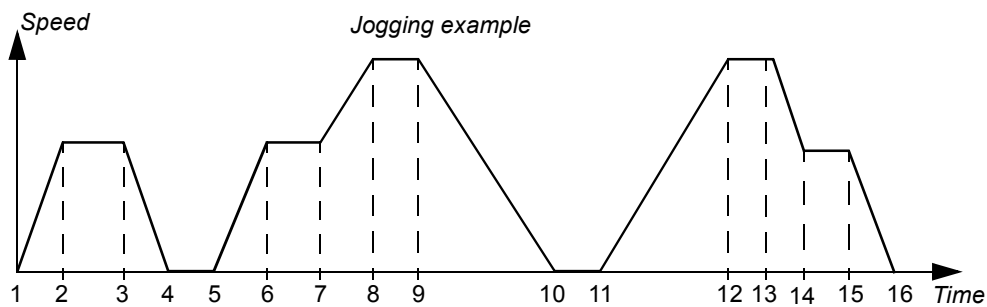

Phase	Jog cmd	Jog enable	Start cmd	Description
1-2	1	1	0	Drive accelerates to the jogging speed along the acceleration ramp of the jogging function.
2-3	1	1	0	Drive runs at the jogging speed.
3-4	0	1	0	Drive decelerates to zero speed along the deceleration ramp of the jogging function.
4-5	0	1	0	Drive is stopped.
5-6	1	1	0	Drive accelerates to the jogging speed along the acceleration ramp of the jogging function.
6-7	1	1	0	Drive runs at the jogging speed.
7-8	x	0	1	Jog enable is not active; normal operation continues.
8-9	x	0	1	Normal operation overrides the jogging. Drive follows the speed reference.
9-10	x	0	0	Drive decelerates to zero speed along the active deceleration ramp.
10-11	x	0	0	Drive is stopped.
11-12	x	0	1	Normal operation overrides the jogging. Drive accelerates to the speed reference along the active acceleration ramp.
12-13	1	1	1	Start command overrides the jog enable signal.
13-14	1	1	0	Drive decelerates to the jogging speed along the deceleration ramp of the jogging function.
14-15	1	1	0	Drive runs at the jogging speed.
15-16	x	0	0	Drive decelerates to zero speed along the deceleration ramp of the jogging function.

**Notes:**

- Jogging is not operational when the drive start command is on, or when the drive is in local control.
- Normal start is inhibited when jog enable is active.
- The ramp shape time is set to zero during jogging.


## Motor feedback features

### Motor encoder gear function

The drive provides motor encoder gear function for compensating of mechanical gears between the motor shaft, the encoder and the load.

Motor encoder gear application example:

Speed control uses the motor speed. If no encoder is mounted on the motor shaft, the motor encoder gear function must be applied in order to calculate the actual motor speed on the basis of the measured load speed.

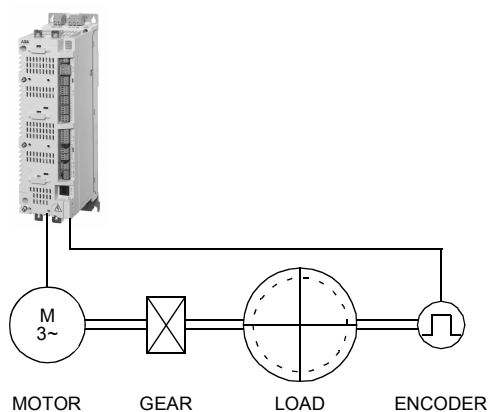

The motor encoder gear parameters [22.03 MOTOR GEAR MUL](#) and [22.04 MOTOR GEAR DIV](#) are set as follows:

$$\frac{\text{22.03 MOTOR GEAR MUL}}{\text{22.04 MOTOR GEAR DIV}} = \frac{\text{Actual speed}}{\text{Encoder 1/2 speed or Estimated speed}}$$


**Note:** If the motor gear ratio differs from 1, the motor model uses an estimated speed instead of the speed feedback value.





Operation time scheme

The simplified time scheme below illustrates the operation of the brake control function.

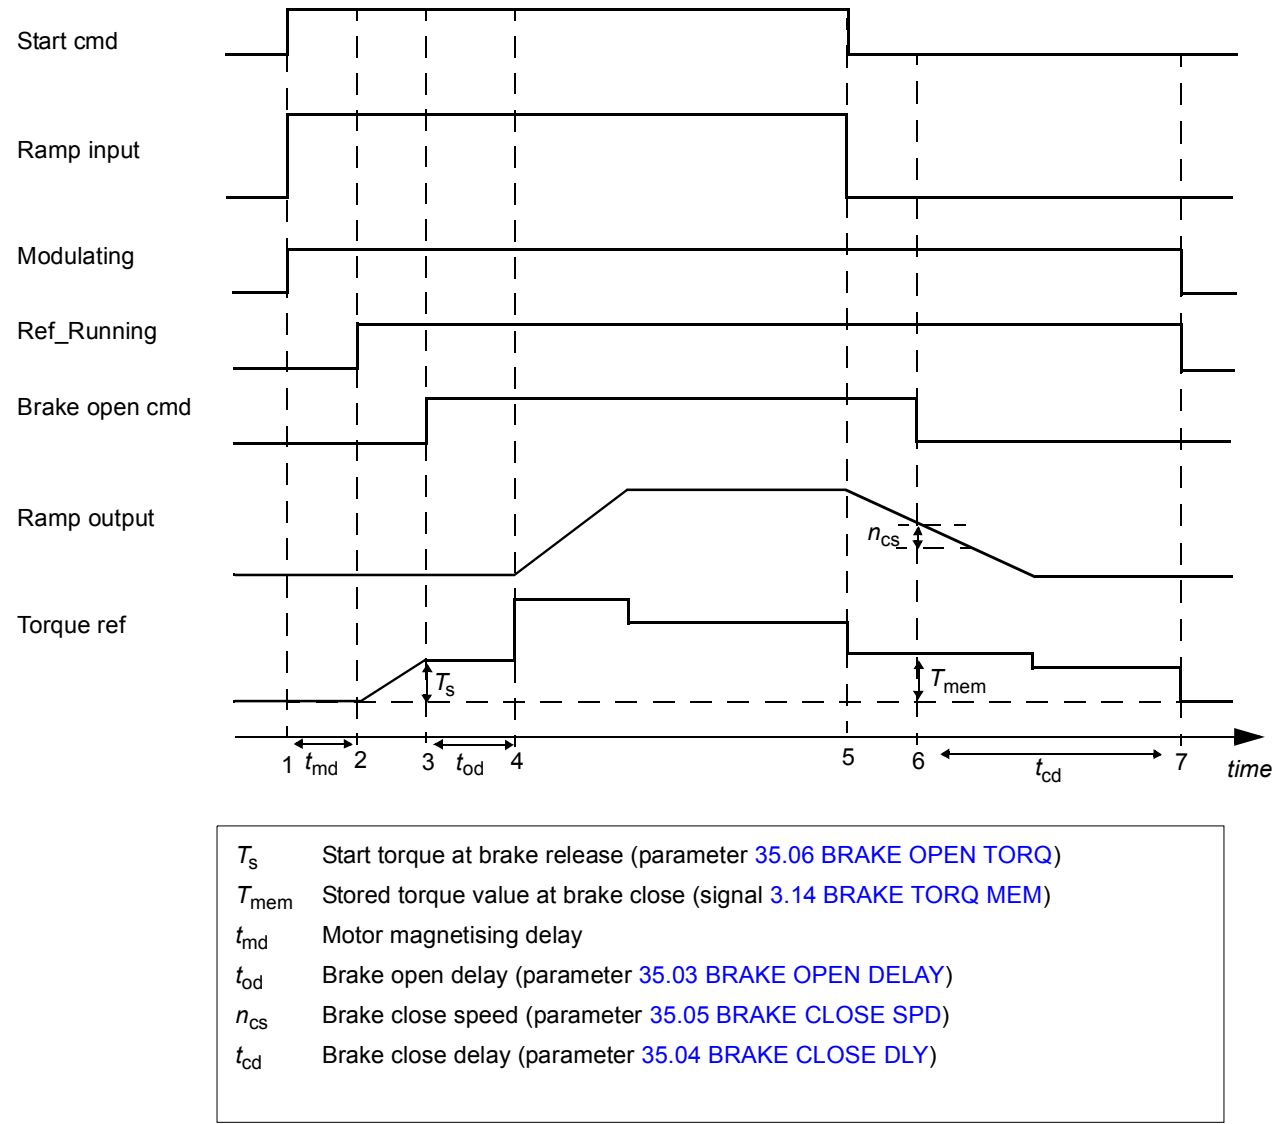

Example

The figure below shows a brake control application example.




**WARNING!** Make sure that the machinery into which the drive with brake control function is integrated fulfils the personnel safety regulations. Note that the frequency converter (a Complete Drive Module or a Basic Drive Module, as defined in IEC 61800-2), is not considered as a safety device mentioned in the European Machinery Directive and related harmonised standards. Thus, the personnel safety of the complete machinery must not be based on a specific frequency converter feature (such as the brake control function), but it has to be implemented as defined in the application specific regulations.

The brake on/off is controlled via signal [3.15 BRAKE COMMAND](#). The source for the brake supervision is selected by parameter [35.02 BRAKE ACKNOWL](#).

The brake control hardware and wirings need to be done by the user.

- Brake on/off control through selected relay/digital output.
  - Brake supervision through selected digital input.
  - Emergency brake switch in the brake control circuit.
- 
- Brake on/off control through relay output (i.e. parameter [12.12 RO1 OUT PTR](#) is set to P.03.15 = [3.15 BRAKE COMMAND](#)).
  - Brake supervision through digital input DI5 (i.e. parameter [35.02 BRAKE ACKNOWL](#) is set to P.02.01.04 = [2.01 DI STATUS](#) bit 4)

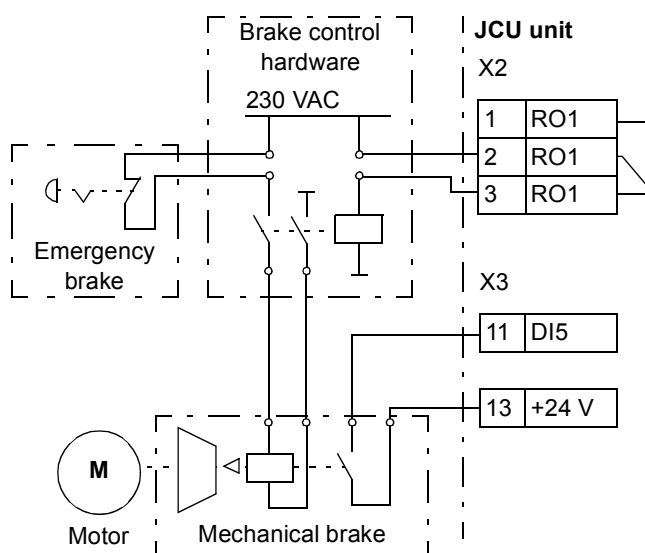


## Position/synchron control features

### Load encoder gear function


Positioning uses the measured speed and position of the load. The load encoder gear function calculates the actual load position on the basis of the measured motor shaft position.

Load encoder gear application examples:

Positioning uses the measured speed and position of the load. If no encoder is mounted on the load side, the load encoder gear function must be applied in order to calculate the actual load position on the basis of the measured motor shaft position.

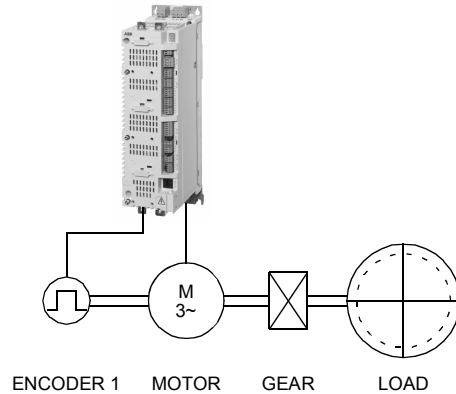

A second encoder (encoder 2) mounted on the load side is used as the source for the actual position value. (Note: Inverted gear ratio is considered when the position control output (speed reference) is produced).

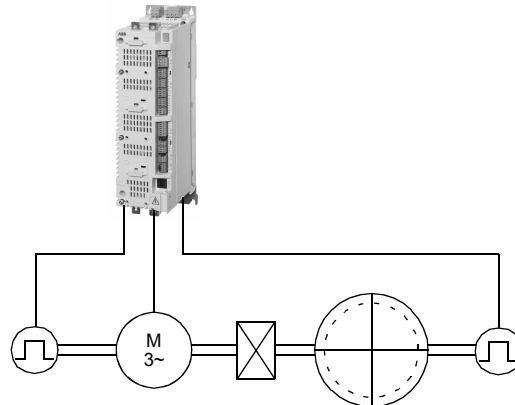

The load encoder gear parameters [60.03 LOAD GEAR MUL](#) and [60.04 LOAD GEAR DIV](#) are set as follows:

$$\frac{\text{60.03 LOAD GEAR MUL}}{\text{60.04 LOAD GEAR DIV}} = \frac{\text{Load speed}}{\text{Encoder 1/2 speed}}$$

**Note:** The sign of the programmed gear ratio has to match the sign of the mechanical gear ratio.

Because the drive speed control uses motor speed, a gear function between position control (load side) and speed control (motor side) is needed. This gear function is formed from the motor gear function and inverted load gear function. The gear function is applied to the position control output (speed reference) as follows:

$$\frac{\text{71.07 GEAR RATIO MUL}}{\text{71.08 GEAR RATIO DIV}} = \frac{\text{Motor speed}}{\text{Load speed}}$$

The equation quite often translates to


$$\frac{71.07 \text{ GEAR RATIO MUL}}{71.08 \text{ GEAR RATIO DIV}} = \frac{22.03 \text{ MOTOR GEAR MUL} \times 60.04 \text{ LOAD GEAR DIV}}{22.04 \text{ MOTOR GEAR DIV} \times 60.03 \text{ LOAD GEAR MUL}}$$

Parameters [71.07 GEAR RATIO MUL](#) and [71.08 GEAR RATIO DIV](#) are also inputs of the firmware block [POS CONTROL](#) (see page [222](#)).


**Note:** It is emphasised that all position relevant parameters are load side related, e.g. the setting of parameter [70.04 POS SPEED LIM](#) (dynamic limiter speed limitation) of 300 rpm denotes that, with a load gear ratio of 1:10, the motor can run at up to 3000 rpm.

### Position profile generator

The position profile generator calculates the speed from which the drive can decelerate to a stop within the target distance using the defined deceleration reference. The calculated speed is used to generate an optimised position reference, which guides the drive to its target position.

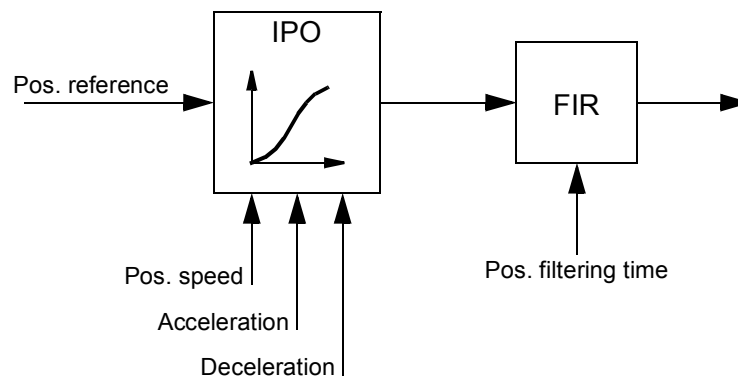


The following figure shows how the position profile generator generates a position reference.

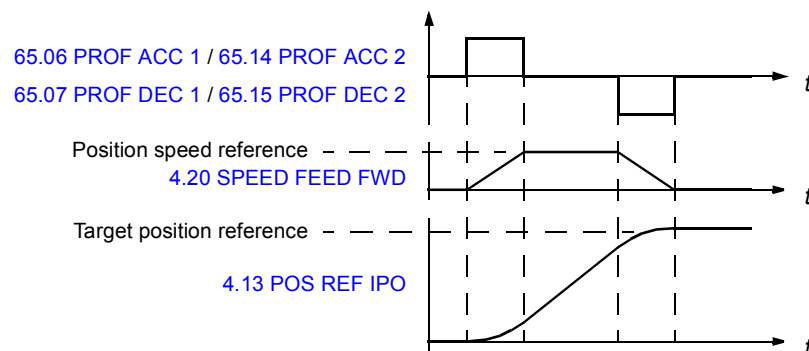


The position profile generator is also used to compensate synchronising errors.

Parameters [66.05 POS ENABLE](#) and [65.03 POS START 1 / 65.11 POS START 2](#) control the operation of the position profile generator. The following figure shows the

positioning commands and signals when parameter **65.24 POS START MODE** is set to **(0) NORMAL**.

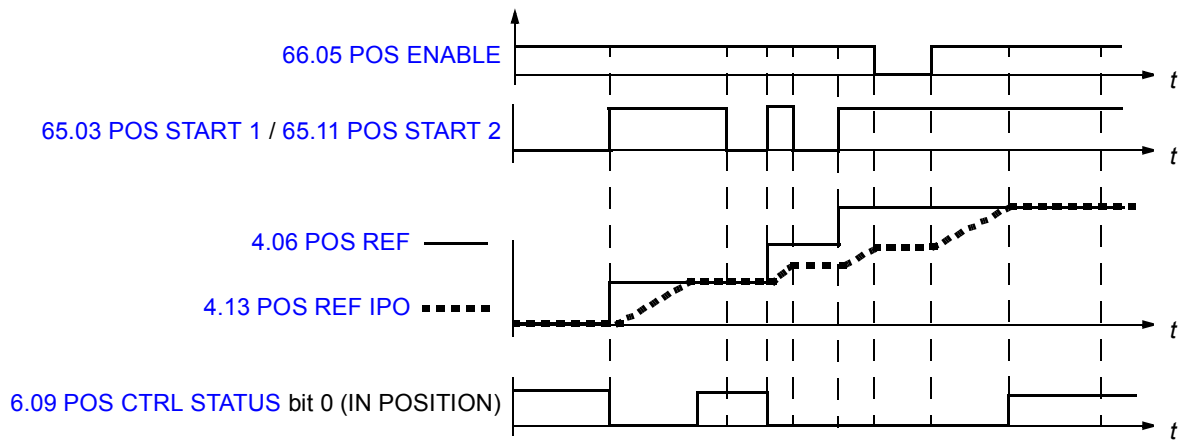

The following figure shows the positioning commands and signals when parameter **65.24 POS START MODE** is set to **(1) PULSE**.

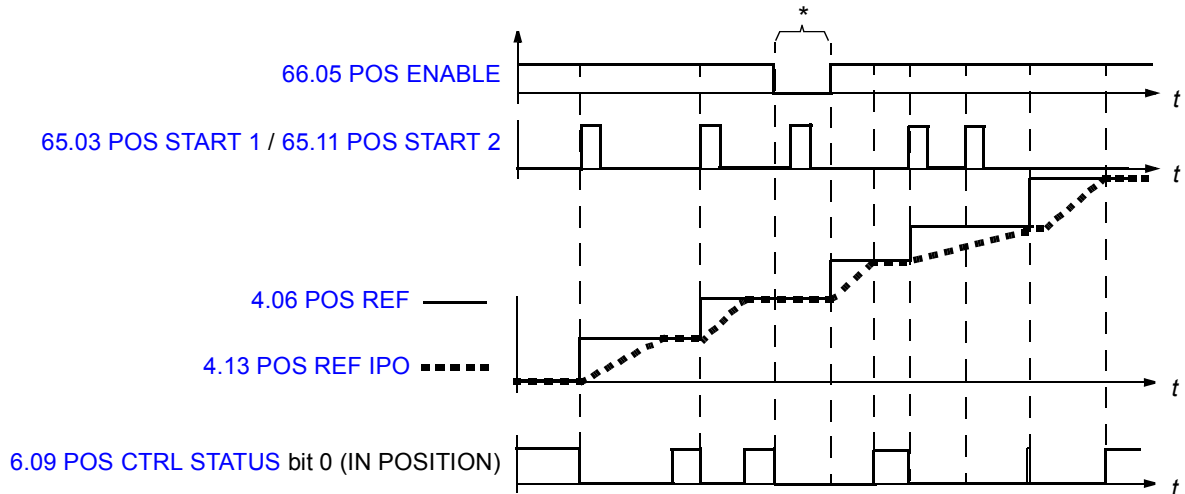

\* If a pulse start (**65.03 POS START 1 / 65.11 POS START 2**) is received while the positioning enable signal (**66.05 POS ENABLE**) is 0, the start command is stored to drive memory and new positioning is started when the enable signal is set to 1. In this case, the positioning start can be cancelled only by changing the start mode (**65.24 POS START MODE**).

### Position reference sets

The user can define two different positioning reference sets. Each reference set consists of

- position reference
- positioning speed reference
- positioning acceleration reference
- positioning deceleration reference
- positioning reference filter time
- positioning style
- positioning speed when target is reached.

One reference set is used at a time. The definition and selection of position reference sets are done using the parameters in [Group 65 PROFILE REFERENCE](#).

### Dynamic position reference limiter

The dynamic limiter controls the position reference limitation in position control and synchron control modes. Dynamic limitation of the position reference causes a synchron error ([4.18 SYNC ERROR](#)). The error is accumulated and fed back to the position profile generator.

#### Start/stop examples with dynamic limiter

The speed curves of the master and follower during the start and stop are presented in the figures below.


When the follower is in synchron control, the reference can be taken from the encoder or from another drive. The master can be in any control mode.

#### Start: linear axis, relative synchronisation

Used when the master is to be distance C ahead of the follower at start.

[60.02 POS AXIS MODE](#) is set to (0) LINEAR. [68.07 SYNCHRON MODE](#) is set to (1) RELATIVE.

To catch the master position, the follower accelerates up to its maximum allowed speed. Only master position changes which take place after the follower is started are taken into account.

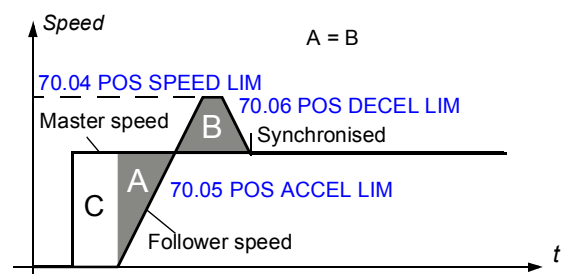


#### Start: linear axis, absolute synchronisation

Used when the master and the follower are to be driven equal distances.

[60.02 POS AXIS MODE](#) is set to (0) LINEAR. [68.07 SYNCHRON MODE](#) is set to (0) ABSOLUTE.


To catch the master position, the follower accelerates up to its maximum allowed speed. Master position changes which take place before and after the follower is started are taken into account.

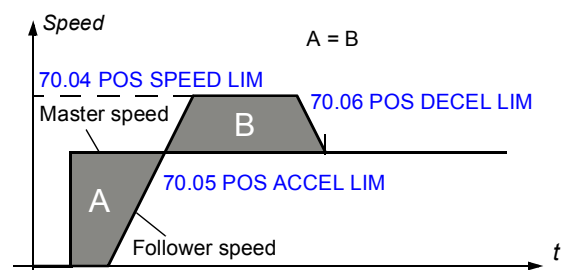

#### Start: rollover axis

[60.02 POS AXIS MODE](#) is set to (1) ROLLOVER.


The follower accelerates until it has reached the master shaft position angle (position per one revolution, 0...360°). Rotations of the master are not counted.

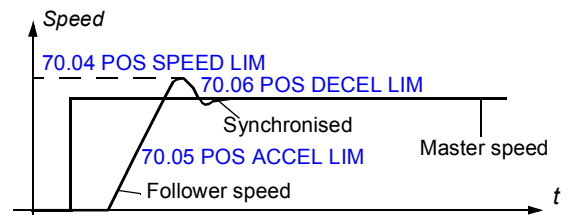

**Stop: linear axis**

**60.02 POS AXIS MODE** is set to (0) **LINEAR**.

The figure shows how the dynamic limiter works together with the position profile generator when the drives are stopped: Before the stop command of the master, the speed of the follower is limited by the dynamic speed limiter (**70.04 POS SPEED LIM**), which results in a position error. When the master starts to decelerate, the follower uses positioning deceleration, and, eventually, positioning speed to overcome the position error.

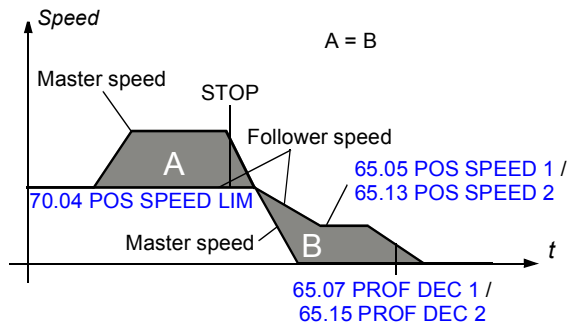**Position correction***Homing*

If an incremental encoder is used in position feedback, the drive actual position is set to zero at power-up. Normally, before first homing, the actual position of the driven machinery does not correspond to the internal zero position in the drive position control. Homing establishes a correspondence between these two positions. Because all homing functions use the same latching function, only one can be performed at a time.


Homing is implemented according to the CANopen Standard Proposal 402 for Device Profile Drives and Motion Control. The profile includes 35 different homing sequences (see the following homing mode table and chapter [Appendix C – Homing modes](#)). The start direction and used latch signals depend on the selected homing mode.

Homing sequence can be executed only in the homing control mode when the drive is modulating. When homing is activated by the homing start signal, the drive accelerates according to the active ramp time\* to homing speed 1. The start direction depends on the selected homing method and the status of an external latch signal (home switch signal). During homing the direction can be changed by an external latch signal. Homing speed 1 is maintained until an external latch signal for homing speed 2 or for the home position is received. Homing is stopped with an index pulse or switch signal from an external latch and drive actual position is set as the zero position (or the user defined home position).

\* Acceleration and deceleration ramp times are defined by the active position reference set (see parameter group **65 PROFILE REFERENCE** on page 204).



The following state diagram presents the homing sequence.

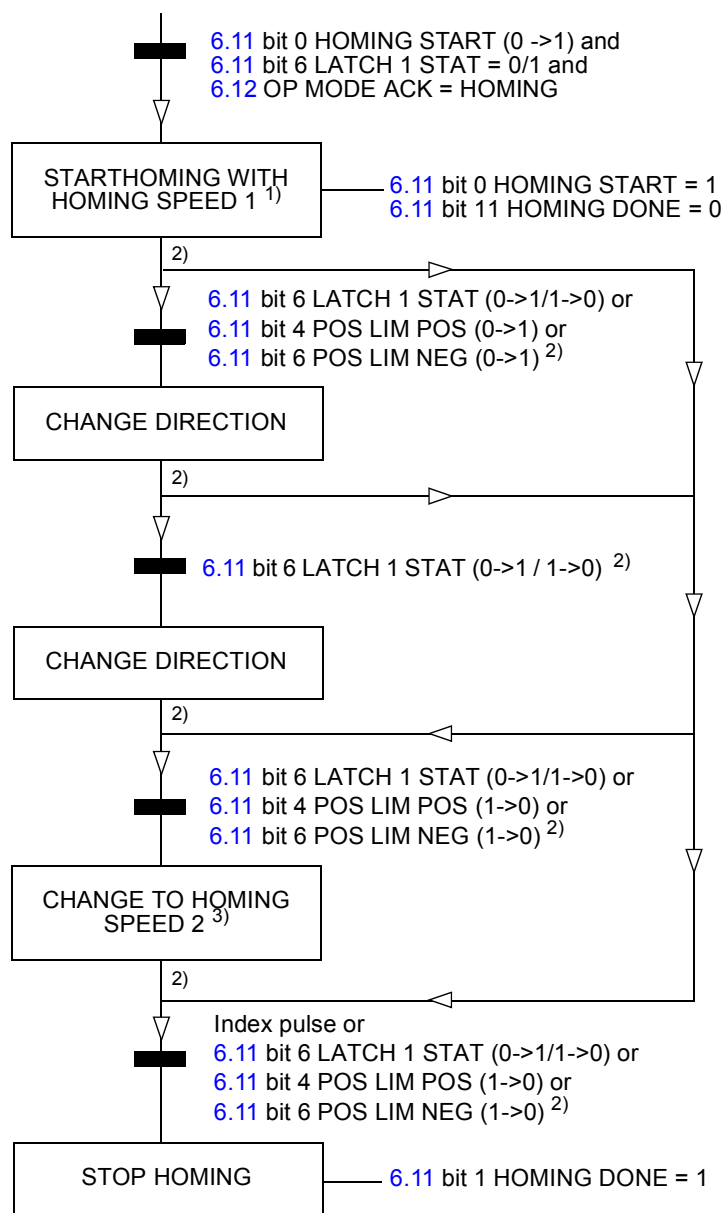

1) The direction depends on the selected homing mode (par. 62.01 HOMING METHOD). The speed is defined by par. 62.07 HOMING SPEEDREF1.

2) Depends on the selected homing mode (par. 62.01 HOMING METHOD).

3) The speed is defined by par. 62.08 HOMING SPEEDREF2.

Source for the homing start signal is selected by par. 62.03 HOMING START.

Source for the latch signal (i.e. home switch) is selected by par. 62.04 HOME SWITCH TRIG.

Source for the positive limit switch is selected by par. 62.06 POS LIMIT SWITCH.

Source for the negative limit switch is selected by par. 62.05 NEG LIMIT SWITCH.

The following table presents homing modes 1...35. For more detailed descriptions, see chapter [Appendix C – Homing modes](#).

No.	Latch state at start	Start direction	Change direction	Change to speed 2	Stop
1	Any	Negative	Negative limit switch: 0 -> 1	Negative limit switch: 1 -> 0	Index pulse
2	Any	Positive	Positive limit switch: 0 -> 1	Positive limit switch: 1 -> 0	Index pulse
3	0	Positive	Home switch: 0 -> 1	Home switch: 1 -> 0	Index pulse
	1	Negative	-	Home switch: 1 -> 0	Index pulse
4	0	Positive	-	Home switch: 0 -> 1	Index pulse
	1	Negative	Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
5	0	Negative	Home switch: 0 -> 1	Home switch: 1 -> 0	Index pulse
	1	Positive	-	Home switch: 1 -> 0	Index pulse
6	0	Negative	-	Home switch: 0 -> 1	Index pulse
	1	Positive	Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
7	0	Positive	Home switch: 0 -> 1	Home switch: 1 -> 0	Index pulse
	0	Positive	Positive limit switch: 0 -> 1	Home switch: 1 -> 0	Index pulse
	1	Negative	-	Home switch: 1 -> 0	Index pulse
8	0	Positive	-	Home switch: 0 -> 1	Index pulse
	0	Positive	1) Positive limit switch: 0 -> 1 2) Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
	1	Negative	Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
9	0	Positive	Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
	0	Positive	Positive limit switch: 0 -> 1	Home switch: 0 -> 1	Index pulse
	1	Positive	Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
10	0	Positive	-	Home switch: 1 -> 0	Index pulse
	0	Positive	1) Positive limit switch: 0 -> 1 2) Home switch: 0 -> 1	Home switch: 1 -> 0	Index pulse
	1	Positive	-	Home switch: 1 -> 0	Index pulse
11	0	Negative	Home switch: 0 -> 1	Home switch: 1 -> 0	Index pulse
	1	Positive	-	Home switch: 1 -> 0	Index pulse
	0	Negative	Negative limit switch: 0 -> 1	Home switch: 1 -> 0	Index pulse
12	0	Negative	-	Home switch: 0 -> 1	Index pulse
	1	Positive	Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
	0	Negative	1) Negative limit switch: 0 -> 1 2) Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse

No.	Latch state at start	Start direction	Change direction	Change to speed 2	Stop
13	0	Negative	Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
	0	Negative	Negative limit switch: 0 -> 1	Home switch: 0 -> 1	Index pulse
	1	Negative	Home switch: 1 -> 0	Home switch: 0 -> 1	Index pulse
14	0	Negative	-	Home switch: 1 -> 0	Index pulse
	0	Negative	1) Negative limit switch: 0 -> 1 2) Home switch: 0 -> 1	Home switch: 1 -> 0	Index pulse
	1	Negative	-	Home switch: 1 -> 0	Index pulse
15	-	-	-	-	-
16	-	-	-	-	-
17	Any	Negative	Negative limit switch: 0 -> 1	-	Negative limit switch: 1 -> 0
18	Any	Positive	Positive limit switch: 0 -> 1	-	Positive limit switch: 1 -> 0
19	0	Positive	Home switch: 0 -> 1	-	Home switch: 1 -> 0
	1	Negative	-	-	Home switch: 1 -> 0
20	0	Positive	-	-	Home switch: 0 -> 1
	1	Negative	Home switch: 1 -> 0	-	Home switch: 0 -> 1
21	0	Negative	Home switch: 0 -> 1	-	Home switch: 1 -> 0
	1	Positive	-	-	Home switch: 1 -> 0
22	0	Negative	-	-	Home switch: 0 -> 1
	1	Positive	Home switch: 1 -> 0	-	Home switch: 0 -> 1
23	0	Positive	Home switch: 0 -> 1	-	Home switch: 1 -> 0
	0	Positive	Positive limit switch: 0 -> 1	-	Home switch: 1 -> 0
	1	Negative	-	-	Home switch: 1 -> 0
24	0	Positive	-	-	Home switch: 0 -> 1
	1	Negative	Home switch: 1 -> 0	-	Home switch: 0 -> 1
	0	Positive	1) Positive limit switch: 0 -> 1 2) Home switch: 1 -> 0	-	Home switch: 0 -> 1
25	0	Positive	Home switch: 1 -> 0	-	Home switch: 0 -> 1
	0	Positive	Positive limit switch: 0 -> 1	-	Home switch: 0 -> 1
	1	Positive	Home switch: 1 -> 0	-	Home switch: 0 -> 1

No.	Latch state at start	Start direction	Change direction	Change to speed 2	Stop
26	0	Positive	-	-	Home switch: 1 -> 0
	1	Positive	-	-	Home switch: 1 -> 0
	0	Positive	1) Positive limit switch: 0 -> 1 2) Home switch: 0 -> 1	-	Home switch: 1 -> 0
27	0	Negative	Home switch: 0 -> 1	-	Home switch: 1 -> 0
	0	Negative	Negative limit switch: 0 -> 1	-	Home switch: 1 -> 0
	1	Positive	-	-	Home switch: 1 -> 0
28	0	Negative	-	-	Home switch: 0 -> 1
	0	Negative	1) Negative limit switch: 0 -> 1 2) Home switch: 1 -> 0	-	Home switch: 0 -> 1*
	1	Positive	Home switch: 1 -> 0	-	Home switch: 0 -> 1
29	0	Negative	Home switch: 1 -> 0	-	Home switch: 0 -> 1*
	0	Negative	Negative limit switch: 0 -> 1	-	Home switch: 0 -> 1
	1	Negative	Home switch: 1 -> 0	-	Home switch: 0 -> 1*
30	0	Negative	-	-	Home switch: 1 -> 0
	0	Negative	1) Negative limit switch: 0 -> 1 2) Home switch: 0 -> 1	-	Home switch: 1 -> 0
	1	Negative	-	-	Home switch: 1 -> 0
31	-	-	-	-	-
32	-	-	-	-	-
33	Any	Negative	-	-	Index pulse
34	Any	Positive	-	-	Index pulse
35	-	-	-	-	-

Negative direction = left. Positive direction = right.

Index pulse = encoder zero pulse.

Home switch: source selected by par. [62.04 HOME SWITCH TRIG](#)

Negative limit switch: source selected by par. [62.05 NEG LIMIT SWITCH](#)

Positive limit switch: source selected by par. [62.06 POS LIMIT SWITCH](#)

\* Stop is only possible after a falling edge of the home switch has been detected.

### Preset functions

Preset functions are used to set the position system according to a parameter value (preset position) or actual position. The physical position of the driven machinery is not changed, but the new position value is used as home position. Preset functions can be used e.g. in synchron control to change the follower position without moving the master.

The preset function trigger signal is selected by parameter [62.12 PRESET TRIG](#).

There are three different preset functions:

- SYNCH REF: Preset drive synchron reference chain (4.16 SYNC REF GEARED) to the value of 62.12 PRESET POSITION.
- ACT TO SYNCH: Preset drive synchron reference chain (4.16 SYNC REF GEARED) to the value of actual position (1.12 POS ACT).
- WHOLE SYSTEM: Preset whole position system of the drive to the value of 62.12 PRESET POSITION.

In addition, homing mode 35 (selectable by parameter 62.01 HOMING METHOD), can be used to set the position reference chain (4.13 POS REF IPO, 4.16 SYNC REF GEARED, 4.17 POS REF LIMITED, 1.12 POS ACT) to the value of 62.09 HOME POSITION on a rising edge of 62.04 HOME SWITCH TRIG.

#### *Cyclic position correction*

Cyclic position correction functions are used to change or correct the system position continuously according to data measured by external probe signals, for example, if there is play in the machinery. There are five different cyclic position correction functions selectable by parameter 62.14 CYCLIC CORR MODE:

- CORR ACT POS: Drive actual position correction.
- CORR MAST REF: Synchronised master drive reference correction.
- CORR M/F DIST: Master and follower distance correction.
- 1 PROBE DIST: Drive actual position correction according to the distance between two latches from one probe.
- 2 PROBE DIST: Drive actual position correction according to the distance between two latches from two different probes.

#### Actual position correction


The purpose of the actual position correction is to measure a position and compare it with the actual encoder position. If there is a deviation, a corresponding correction is carried out. The required transition is determined by the position profile generator parameters.

**Note:** Probe 1 settings must always be used for the actual position correction.


#### **Example:**

The following figure presents a roll-over application. The motor rotates a round table. There is a mechanical gear between the motor and load. The gear is prone to

produce some drift on the load side. In order to compensate this drift, actual position correction is used. A proximity switch is located on the load side at 90°.

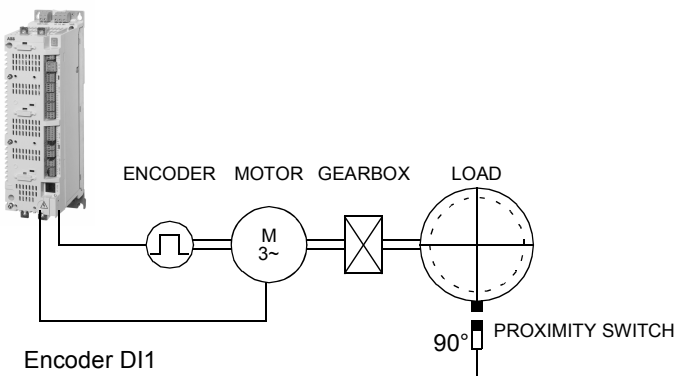

Parameter	Setting	Information
60.05 POS UNIT	(1) DEGREE	All position values are in degrees
62.14 CYCLIC CORR MODE	(1) COR ACT POS	Actual position correction
62.15 TRIG PROBE1	(1) ENC1 DI1 _-	Rising edge of encoder 1 digital input DI1. Source of the actual position latching command (proximity switch signal source)
60.02 POS AXIS MODE	(1) ROLLOVER	Positioning is between 0 and 1 revolutions, i.e. after 360°, the position calculation starts from 0° again.
62.16 PROBE1 POS	90°	Reference position for the actual position probe

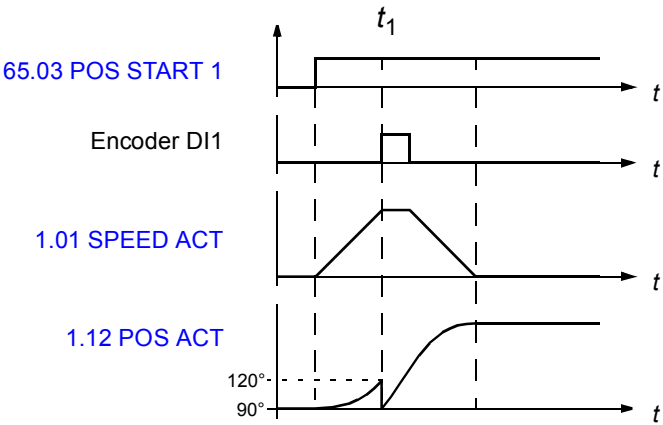

$t_1$ : Rising edge of encoder digital input DI1 signal (proximity switch signal) is detected when the load position should be 90°. The actual position of the encoder is 120° (stored to signal 4.03 PROBE1 POS MEAS).

Distance between the load position and the actual position is  $90^\circ - 120^\circ = -30^\circ$  (= 4.05 CYCLIC POS ERR). Actual position of the encoder, 1.12 POS ACT, is corrected according to 4.05 CYCLIC POS ERR using positioning parameter and dynamic limiter settings.


### Master reference correction

The purpose of the master reference correction is to correct the difference between the master and reference positions.

**Note:** In master reference correction the follower must always be in synchron control mode.

#### Example:

Parameter	Setting	Information
60.05 POS UNIT	(1) DEGREE	All position values are in degrees
60.02 POS AXIS MODE	(1) ROLLOVER	Positioning is between 0 and 1 revolutions, i.e. after 360°, the position calculation starts from 0° again.
68.02 SYNC GEAR MUL	Same as for 68.03 SYNC GEAR DIV	Synchron gear ratio is 1.
62.14 CYCLIC CORR MODE	(2) COR MAS REF	Master (motor) reference correction
62.15 TRIG PROBE1	(1) ENC1 DI1 _-	Rising edge of encoder 1 digital input DI1. Source of the master (motor) position reference latching command (proximity switch signal source)
62.16 PROBE1 POS	60°	Reference position for the master (motor) reference position probe

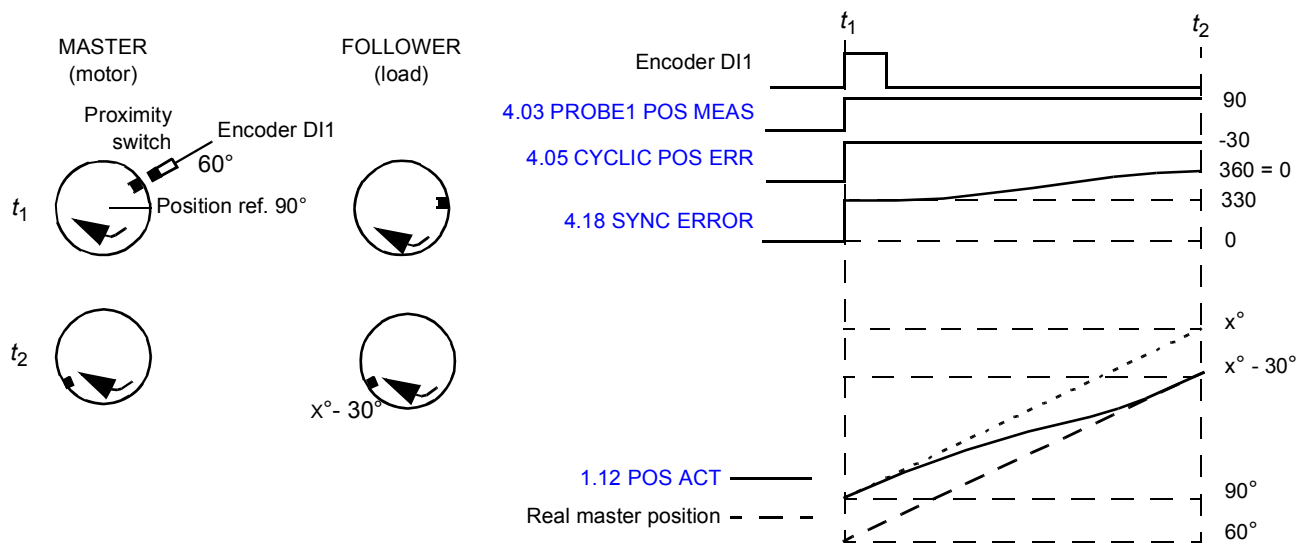

$t_1$ : Rising edge of encoder digital input DI1 signal (proximity switch signal) is detected when the master (motor) position should be 60°. The used position reference is 90° (stored to signal 4.03 PROBE1 POS MEAS).

The master reference correction function calculates the position error, 4.05 CYCLIC POS ERR, which is the difference between the master (motor) position and the reference position:

$$4.05 \text{ CYCLIC POS ERR} = 62.16 \text{ PROBE1 POS} - 4.03 \text{ PROBE1 POS MEAS} = 60^\circ - 90^\circ = -30^\circ$$

The position error is corrected using positioning parameter and dynamic limiter settings.

$t_2$ : Error has been corrected and the follower (load) is in line with the master (motor).  
Cyclic function is ready for a new correction if necessary.

#### Master/Follower distance correction


The purpose of the master/follower distance correction is to measure the distance between two positions and compare it with the defined reference. If there is a deviation, a correction is carried out.

**Note:** In master/follower distance correction the follower must always be in synchron control mode.

**Example 1:** Rollover axis application. Master and follower proximity switches are located at 0°.

Parameter	Setting	Information
60.02 POS AXIS MODE	(1) ROLLOVER	Positioning is between 0 and 1 revolutions, i.e. after 360°, the position calculation starts from 0° again.
60.05 POS UNIT	(1) DEGREE	All position values are in degrees
68.02 SYNC GEAR MUL	Same as for 68.03 SYNC GEAR DIV	Synchron gear ratio is 1.
62.14 CYCLIC CORR MODE	(5) COR M/F DIST	Cyclic master/follower distance correction
62.15 TRIG PROBE1	(1) ENC1 DI1 _-	Rising edge of encoder 1 digital input DI1. Source of the actual position latching command (proximity switch signal source)
62.17 TRIG PROBE2	(3) ENC1 DI2 _-	Rising edge of encoder 1 digital input DI2. Source of the master position latching command (proximity switch signal source)
62.16 PROBE1 POS	0°	Reference position for the actual position probe
62.18 PROBE2 POS	-120°	Reference position for the master position probe i.e. follower is 120° [(0°-120°)-(0°-0°)] behind the master.



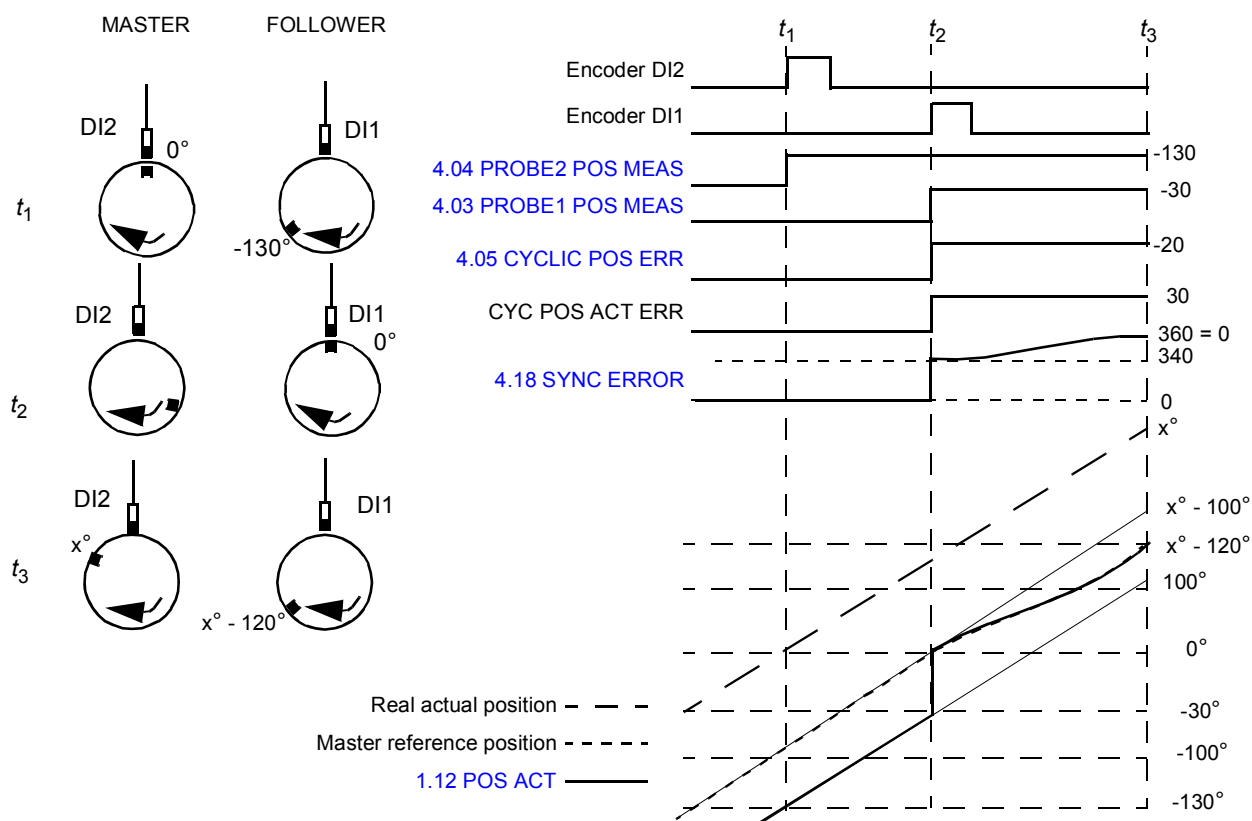

$t_1$ : Rising edge of encoder DI2 signal (proximity switch signal) is detected when the master position is  $0^\circ$ . The follower position is  $-130^\circ$  (stored to signal [4.04 PROBE2 POS MEAS](#)).

$t_2$ : Rising edge of encoder DI1 signal (proximity switch signal) is detected when the follower position is  $0^\circ$ . The actual position of the encoder is  $-30^\circ$  (stored to signal [4.03 PROBE1 POS MEAS](#)). Distance between the follower position and the actual position is  $0^\circ - (-30^\circ) = 30^\circ$ .

According to parameter [62.16 PROBE1 POS](#) and [62.18 PROBE2 POS](#) settings the follower should be  $120^\circ$  behind the master.

The following phase shift between the master and follower is calculated and stored as reference error [4.05 CYCLIC POS ERR](#).

$(62.18 \text{ PROBE2 POS} - 4.04 \text{ PROBE2 POS MEAS}) - (62.16 \text{ PROBE1 POS} - 4.03 \text{ PROBE1 POS MEAS}) = [-120^\circ - (-130^\circ)] - [0^\circ - (-30^\circ)] = -20^\circ$

This error is added to [4.18 SYNC ERROR](#). The synchron error is corrected using positioning parameters.

$t_3$ : Error has been corrected and the follower is  $120^\circ$  behind the master. Cyclic function is ready for a new correction if necessary.

**Note 1:** Only after the active correction is finished is the next position latching enabled.


**Note 2:** The cyclic corrections are always performed along the shortest path. This must be taken into account in all rollover applications.

**Note 3:** In rollover applications, the correction range is limited to  $\pm 180^\circ$ .


### Example 2: Linear axis application

Two conveyer systems are synchronised using two encoders. The follower is in synchron control and follows the master encoder 2 position.

**Note:** In linear axis applications, only the difference between the master and follower positions is corrected.

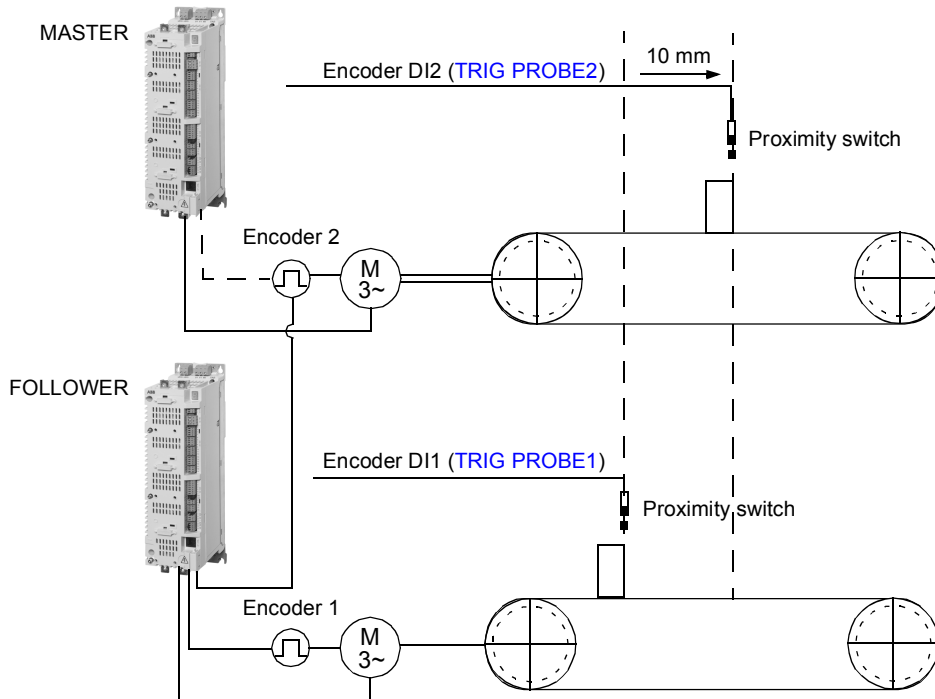

Parameter	Setting	Information
60.02 POS AXIS MODE	(0) LINEAR	Positioning between minimum position 60.14 MINIMUM POS and maximum position 60.13 MAXIMUM POS
60.05 POS UNIT	(2) METER	All position values are in metres
67.01 SYNC REF SEL	(8) POS 2ND ENC	Synchron position reference (master position) from encoder 2.
68.07 SYNCHRON MODE	(0) ABSOLUTE	Absolute synchronisation of the follower. The follower follows the master position after start.
62.14 CYCLIC CORR MODE	(5) COR M/F DIST	Cyclic master follower distance correction
62.15 TRIG PROBE1	(1) ENC1 DI1 _-	Rising edge of encoder 1 digital input DI1. Source of the actual position latching command (proximity switch signal source)
62.17 TRIG PROBE2	(17) ENC2 DI2 _-	Rising edge of encoder 2 digital input DI2. Source of the master position reference latching command (proximity switch signal source)
62.16 PROBE1 POS	0,015 m	Reference position for the actual position probe
62.18 PROBE2 POS	0,025 m	Reference position for the master position probe

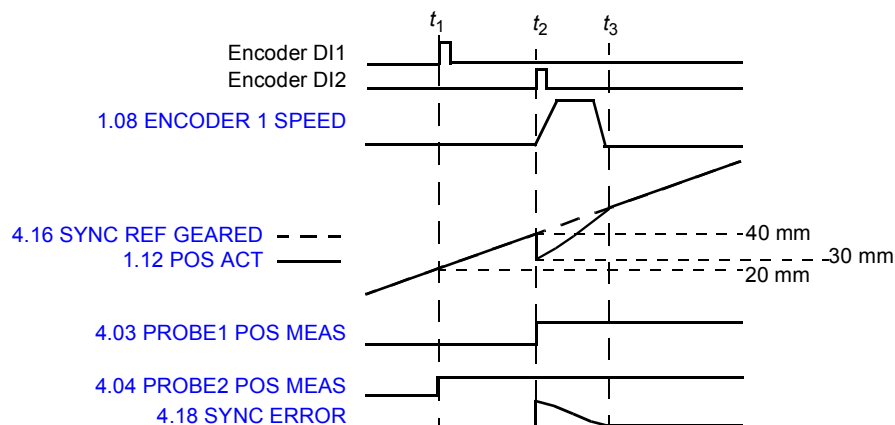

$t_1$ : Rising edge of encoder digital input DI1 (proximity switch signal) is detected. The follower position is 20 mm (stored to signal [4.04 PROBE2 POS MEAS](#)).

$t_2$ : Rising edge of encoder digital input DI2 signal (proximity switch signal) is detected when the follower position is 40 mm (stored to signal [4.03 PROBE1 POS MEAS](#)).

According to parameter [62.16 PROBE1 POS](#) and [62.18 PROBE2 POS](#) settings the follower should be 10 mm behind the master.

The following correction is calculated and stored as reference error [4.05 CYCLIC POS ERR](#):

$$(\text{62.16 PROBE1 POS} - \text{62.18 PROBE2 POS}) - (\text{4.04 PROBE2 POS MEAS} - \text{4.03 PROBE1 POS MEAS}) = (15 \text{ mm} - 25 \text{ mm}) - (20 \text{ mm} - 40 \text{ mm}) = 10 \text{ mm}$$

This error is added to [4.18 SYNC ERROR](#). The synchron error is corrected using positioning parameters.


$t_3$ : Error has been corrected and the follower is 10 mm behind the master. Cyclic function is ready for a new correction if necessary.

#### Distance correction with one probe


The purpose is to correct actual position according to the distance between the latched positions and measured positions when two consecutive latches from one probe are used. Both latches use the same latch signal source (e.g. encoder digital input DI1) and latch command (e.g. rising edge). If the application requires different latch commands, see section [Distance correction with two probes](#) on page [69](#).

Example:

The following figure shows a conveyer system where a box should be positioned. The conveyer belt is marked every 40 mm.

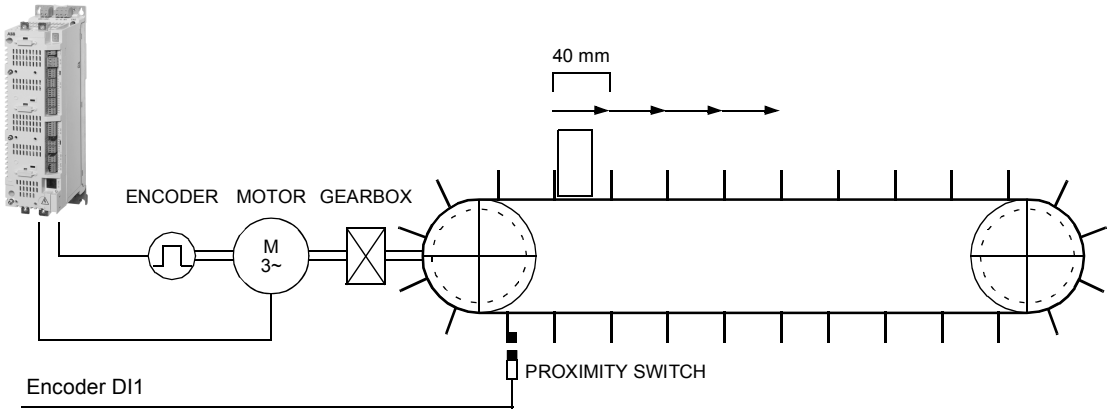

Parameter	Setting	Information
60.02 POS AXIS MODE	(0) LINEAR	Positioning between minimum position 60.14 MINIMUM POS and maximum position 60.13 MAXIMUM POS
60.05 POS UNIT	(2) METER	All position values are in metres
62.14 CYCLIC CORR MODE	(3) 1 PROBE DIST	Distance correction with one probe
62.15 TRIG PROBE1	(1) ENC1 DI1 _-	Rising edge of encoder 1 digital input DI1. Source of the actual position latching command (proximity switch signal source)
62.16 PROBE1 POS	0 m	Reference position for position probe 1
62.18 PROBE2 POS	0.040 m (= 40 mm)	Reference position for position probe 1

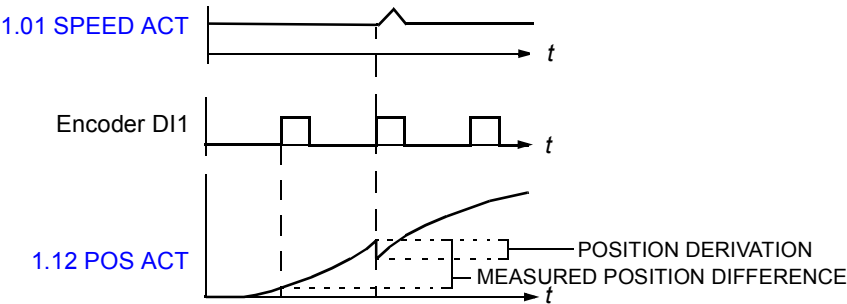

- Rising edge of encoder DI1 (proximity switch signal) is detected at the first mark of the belt. Position 0 mm is stored to signal 4.03 PROBE1 POS MEAS.
- Next rising edge of encoder DI1 (proximity switch signal) is detected at the second mark of the belt. Position 30 mm is stored to signal 4.04 PROBE2 POS MEAS.
- The reference distance between the marks is 40 mm and the measured distance between the marks is 30 mm, thus the error is 10 mm:

$$[(62.18 \text{ PROBE2 POS} - 62.16 \text{ PROBE1 POS}) - (4.04 \text{ PROBE2 POS MEAS} - 4.03 \text{ PROBE1 POS MEAS})] = (40 - 0) - (30 - 0) = 10 \text{ mm}$$

The error is stored to [4.18 SYNC ERROR](#).

Actual position of the encoder [1.12 POS ACT](#) is corrected according to [4.18 SYNC ERROR](#) using positioning parameter and dynamic limiter settings.

**Note:** Only after the active correction is finished is the next position latching enabled.


#### Distance correction with two probes

The purpose is to correct actual position according to the distance between the latched positions and measured positions when latches from two probes are used. The latches use different latch sources (e.g. encoder digital input DI1 and DI2) and latch commands (e.g. rising and falling edge).

In special applications, this correction function can also be executed by using two consecutive latches from one probe. The latches use the same latch source (e.g. encoder digital input DI1) and different latch commands (e.g. rising and falling edge).


#### **Example:**

The following figure shows a conveyor system where a box should be positioned. The conveyor belt is marked every 60 mm.

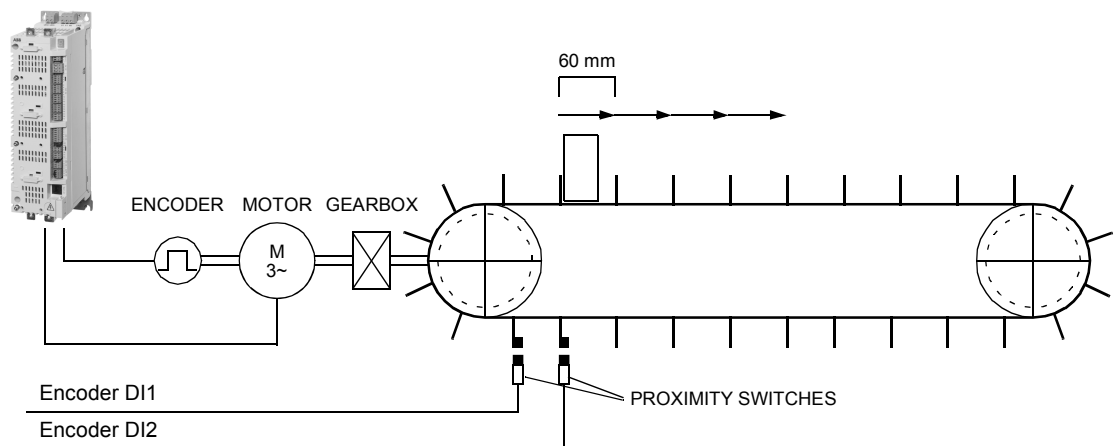

Parameter	Setting	Information
<a href="#">60.02 POS AXIS MODE</a>	<a href="#">(0) LINEAR</a>	Positioning between minimum position <a href="#">60.14 MINIMUM POS</a> and maximum position <a href="#">60.13 MAXIMUM POS</a>
<a href="#">60.05 POS UNIT</a>	<a href="#">(2) METER</a>	All position values are in metres
<a href="#">62.14 CYCLIC CORR MODE</a>	<a href="#">(4) 2 PROBE DIST</a>	Distance correction with two probes
<a href="#">62.15 TRIG PROBE1</a>	<a href="#">(1) ENC1 DI1 _-</a>	Rising edge of encoder 1 digital input DI1. Source of the actual position latching command (proximity switch signal source)
<a href="#">62.17 TRIG PROBE2</a>	<a href="#">(3) ENC1 DI2 _-</a>	Falling edge of encoder 1 digital input DI2. Source of the actual position reference latching command (proximity switch signal source)
<a href="#">62.16 PROBE1 POS</a>	0 m	Reference position for actual position probe 1

Parameter	Setting	Information
62.18 PROBE2 POS	0.060 m (=60 mm)	Reference position for actual position probe 2

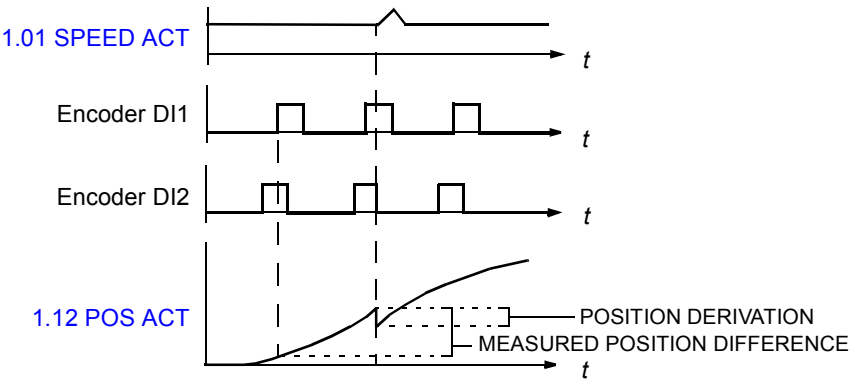

- Rising edge of encoder DI1 (proximity switch signal) is detected at the first mark of the belt. Position 0 mm is stored to signal 4.03 PROBE1 POS MEAS.
- Falling edge of encoder DI2 (proximity switch signal) is detected at the second mark of the belt. Position 40 mm is stored to signal 4.04 PROBE2 POS MEAS.
- The reference distance between the marks is 60 mm and the measured distance between the marks is 40 mm, thus the error is 20 mm:

$$(62.18 \text{ PROBE2 POS} - 62.16 \text{ PROBE1 POS}) - (4.04 \text{ PROBE2 POS MEAS} - 4.03 \text{ PROBE1 POS MEAS}) = (60 - 0) - (40 - 0) = 20 \text{ mm}$$

The error is stored to 4.18 SYNC ERROR:

Actual position of the encoder 1.12 POS ACT is corrected according to 4.18 SYNC ERROR using positioning parameter and dynamic limiter settings.

**Note:** Only after the active correction is finished is the next position latching enabled.

## Emergency stop

**Note:** The user is responsible for installing the emergency stop devices and all the additional devices needed for the emergency stop to fulfil the required emergency stop category classes.

The emergency stop signal is connected to the digital input which is selected as the source for the emergency stop activation (parameter [10.10 EM STOP OFF3](#) or [10.11 EM STOP OFF1](#)). Emergency stop can also be activated through fieldbus ([2.12 FBA MAIN CW](#)).

**Note:** When an emergency stop signal is detected, the emergency stop function cannot be cancelled even though the signal is cancelled.

For more information, refer to *Application Guide: Functional Safety Solutions with ACSM1 Drives* (3AUA0000031517 [English]).





# Default connections of the control unit

---

## What this chapter contains

This chapter shows the default control connections of the JCU Control Unit.

More information on the connectivity of the JCU is given in the *Hardware Manual* of the drive.

**Notes:**

\*Total maximum current:  
200 mA

1) Selected by par. 12.01  
DIO1 CONF.


2) Selected by par. 12.02  
DIO2 CONF.

3) Selected by par. 12.03  
DIO3 CONF.

4) Selected by jumper J1.

5) Selected by jumper J2.

Current:

J1/2  ○ ○

Voltage:

J1/2 ○ ○ 

X1		
External power input	+24VI	1
24 V DC, 1.6 A	GND	2

X2		
Relay output: Brake close/open	NO	1
250 V AC / 30 V DC	COM	2
2 A	NC	3

X3		
+24 V DC*	+24VD	1
Digital I/O ground	DGND	2
Digital input 1: Stop/start (par. 10.02 and 10.05)	DI1	3
Digital input 2: EXT1/EXT2 (par. 34.01)	DI2	4
+24 V DC*	+24VD	5
Digital I/O ground	DGND	6
Digital input 3: Fault reset (par. 10.08)	DI3	7
Digital input 4: Positioning start (par. 65.03/65.11)	DI4	8
+24 V DC*	+24VD	9
Digital I/O ground	DGND	10
Digital input 5: Position reference set 1/2 (par. 65.02)	DI5	11
Digital input 6: Homing start (par. 62.03 and 34.02)	DI6	12
+24 V DC*	+24VD	13
Digital I/O ground	DGND	14
Digital input/output 1 <sup>1)</sup> : Ready	DIO1	15
Digital input/output 2 <sup>2)</sup> : Running	DIO2	16
+24 V DC*	+24VD	17
Digital I/O ground	DGND	18
Digital input/output 3 <sup>3)</sup> : Fault	DIO3	19

X4		
Reference voltage (+)	+VREF	1
Reference voltage (-)	-VREF	2
Ground	AGND	3
Analogue input 1 (mA or V) <sup>4)</sup> : Speed reference (par. 24.01)	AI1+	4
	AI1-	5
Analogue input 2 (mA or V) <sup>5)</sup> : Torque reference (par. 32.01)	AI2+	6
	AI2-	7
AI1 current/voltage selection		J1
AI2 current/voltage selection		J2
Thermistor input	TH	8
Ground	AGND	9
Analogue output 1 (mA): Output current	AO1 (I)	10
Analogue output 2 (V): Actual speed	AO2 (U)	11
Ground	AGND	12

X5		
Drive-to-drive link termination		J3
Drive-to-drive link	B	1
	A	2
	BGND	3

X6		
Safe Torque Off. Both circuits must be closed for the drive to start. See the appropriate drive hardware manual.	OUT1	1
	OUT2	2
	IN1	3
	IN2	4

X7		
Control panel connection		

# Parameters and firmware blocks

---

## What this chapter contains

This chapter lists and describes the parameters provided by the firmware.

## Types of parameters

Parameters are user-adjustable operation instructions of the drive (groups 10...99). There are four basic types of parameters: Actual signals, value parameters, value pointer parameters and bit pointer parameters.

### *Actual signal*

Type of parameter that is the result of a measurement or calculation by the drive. Actual signals can be monitored, but not adjusted, by the user. Actual signals are typically contained within parameter groups 1...9.

For additional actual signal data, e.g. update cycles and fieldbus equivalents, see chapter [Parameter data](#).

### *Value parameter*

A value parameter has a fixed set of choices or a setting range.

Example 1: Motor phase loss supervision is activated by selecting [\(1\) FAULT](#) from the selection list of parameter [46.06 MOT PHASE LOSS](#).

Example 2: The motor nominal power (kW) is set by writing the appropriate value to parameter [99.10 MOT NOM POWER](#), e.g. 10.

### *Value pointer parameter*

A value pointer parameter points to the value of another parameter. The source parameter is given in format **P.xx.yy**, where xx = Parameter group; yy = Parameter index. In addition, value pointer parameters often have a set of pre-selected choices.

Example: Motor current signal, [1.05 CURRENT PERC](#), is connected to analogue output AO1 by setting parameter [15.01 AO1 PTR](#) to value P.01.05.

### *Bit pointer parameter*

A bit pointer parameter points to the value of a bit in another parameter, or can be fixed to 0 (FALSE) or 1 (TRUE). In addition, bit pointer parameters often have a set of pre-selected choices.

When adjusting a bit pointer parameter on the optional control panel, CONST is selected in order to fix the value to 0 (displayed as "C.FALSE") or 1 ("C.TRUE"). POINTER is selected to define a source from another parameter.

A pointer value is given in format **P.xx.yy.zz**, where xx = Parameter group, yy = Parameter index, zz = Bit number.

Example: Digital input DI5 status, [2.01 DI STATUS](#) bit 4, is used for brake supervision by setting parameter [35.02 BRAKE ACKNOWL](#) to value P.02.01.04.


**Note:** Pointing to a nonexistent bit will be interpreted as 0 (FALSE).

For additional parameter data, e.g. update cycles and fieldbus equivalents, see chapter [Parameter data](#).

## Firmware blocks

Firmware blocks accessible from the DriveSPC PC tool are described in the parameter group most of the block inputs/outputs are included in. Whenever a block has inputs or outputs outside the current parameter group, a reference is given. Likewise, parameters have a reference to the firmware block they are included in (if any).

**Note:** Not all parameters are available through firmware blocks.

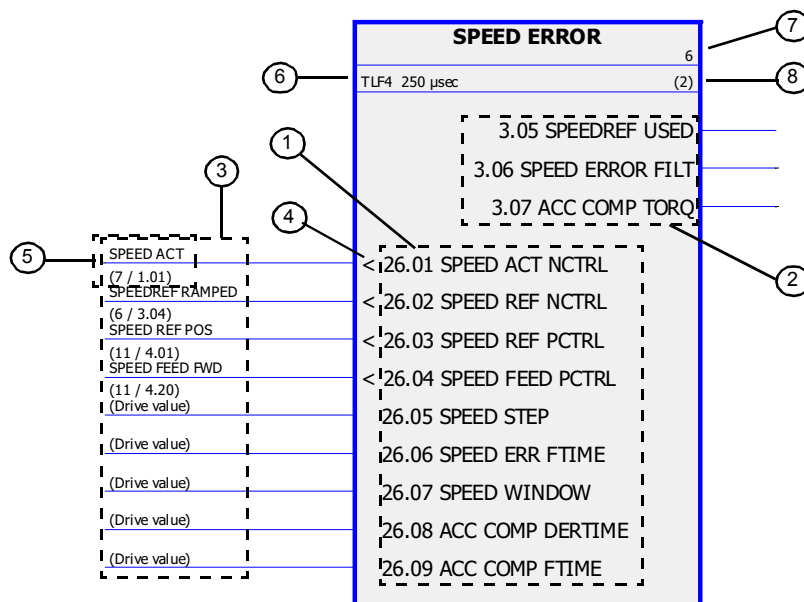

1	Inputs
2	Outputs
3	Input parameter values
4	Pointer parameter indicator "<"
5	Parameter 26.01 is set to value P.1.1, i.e. signal 1.01 SPEED ACT. The "7" means the signal can be found on page 7 of DriveSPC.
6	ID of the time level (TL4) and time level (250 µs). Time level, i.e. update cycle, is application-specific. See the time level of the block in DriveSPC.
7	Firmware block ID number in the application program
8	Firmware block execution order for the selected update cycle ID

## Group 01 ACTUAL VALUES

This group contains basic actual signals for monitoring the drive.

01 ACTUAL VALUES		
Firmware block: <b>ACTUAL VALUES</b> (1)		
<b>1.01</b>	SPEED ACT	FW block: <a href="#">SPEED FEEDBACK</a> (page 131)
	Filtered actual speed in rpm. Used speed feedback is defined by parameter <a href="#">22.01 SPEED FB SEL.</a> Filter time constant can be adjusted by parameter <a href="#">22.02 SPEED ACT FTIME.</a>	
<b>1.02</b>	SPEED ACT PERC	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Actual speed in percent of the motor synchronous speed.	
<b>1.03</b>	FREQUENCY	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Estimated drive output frequency in Hz.	
<b>1.04</b>	CURRENT	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Measured motor current in A.	
<b>1.05</b>	CURRENT PERC	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Motor current in percent of the nominal motor current.	
<b>1.06</b>	TORQUE	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Motor torque in percent of the motor nominal torque.	
<b>1.07</b>	DC-VOLTAGE	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Measured intermediate circuit voltage in V.	
<b>1.08</b>	ENCODER 1 SPEED	FW block: <a href="#">ENCODER</a> (page 225)
	Encoder 1 speed in rpm.	
<b>1.09</b>	ENCODER 1 POS	FW block: <a href="#">ENCODER</a> (page 225)
	Actual position of encoder 1 within one revolution.	

<b>1.10</b>	ENCODER 2 SPEED	FW block: <a href="#">ENCODER</a> (page 225)
	Encoder 2 speed in rpm.	
<b>1.11</b>	ENCODER 2 POS	FW block: <a href="#">ENCODER</a> (page 225)
	Actual position of encoder 2 within one revolution.	
<b>1.12</b>	POS ACT	FW block: <a href="#">POS FEEDBACK</a> (page 192)
	Actual position of the encoder. The unit depends on parameter 60.05 POS UNIT selection.	
<b>1.13</b>	POS 2ND ENC	FW block: <a href="#">POS FEEDBACK</a> (page 192)
	Scaled actual position of encoder 2 in revolutions.	
<b>1.14</b>	SPEED ESTIMATED	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Estimated motor speed in rpm.	
<b>1.15</b>	TEMP INVERTER	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Measured temperature of the heatsink in Celsius.	
<b>1.16</b>	TEMP BC	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Brake chopper IGBT temperature in Celsius.	
<b>1.17</b>	MOTOR TEMP	FW block: <a href="#">MOT THERM PROT</a> (page 169)
	Measured motor temperature in Celsius.	
<b>1.18</b>	MOTOR TEMP EST	FW block: <a href="#">MOT THERM PROT</a> (page 169)
	Estimated motor temperature in Celsius.	
<b>1.19</b>	USED SUPPLY VOLT	FW block: <a href="#">VOLTAGE CTRL</a> (page 176)
	Either the nominal supply voltage defined by parameter 47.04 <a href="#">SUPPLY VOLTAGE</a> , or the automatically determined supply voltage if auto-identification is enabled by parameter 47.03 <a href="#">SUPPLVOLTAUTO-ID</a> .	
<b>1.20</b>	BRAKE RES LOAD	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Estimated temperature of the braking resistor. The value is given in percent of the temperature the resistor reaches when loaded with the power defined by parameter 48.04 <a href="#">BR POWER MAX CNT</a> .	
<b>1.21</b>	CPU USAGE	FW block: None
	Microprocessor load in percent.	
<b>1.22</b>	INVERTER POWER	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Drive output power in kilowatts.	
<b>1.26</b>	ON TIME COUNTER	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	This counter runs when the drive is powered. The counter can be reset using the DriveStudio tool.	

<b>1.27</b>	RUN TIME COUNTER	FW block: <a href="#">ACTUAL VALUES</a> (see above)
	Motor run time counter. The counter run when the drive modulates. The counter can be reset using the DriveStudio tool.	
<b>1.31</b>	MECH TIME CONST	FW block: None
	Calculated mechanical time constant of the system as identified by the speed control autotuning routine.	

## Group 02 I/O VALUES

This group contains information on the I/Os of the drive.

02 I/O VALUES		
2.01	DI STATUS	FW block: <a href="#">DI</a> (page 114)
	Status word of the digital inputs. Example: 000001 = DI1 is on, DI2 to DI6 are off.	
2.02	RO STATUS	FW block: <a href="#">RO</a> (page 114)
	Status of relay output. 1 = RO is energized.	
2.03	DIO STATUS	FW blocks: <a href="#">DIO1</a> (page 112), <a href="#">DIO2</a> (page 112), <a href="#">DIO3</a> (page 112)
	Status word of digital inputs/outputs DIO1...3. Example: 001 = DIO1 is on, DIO2 and DIO3 are off.	
2.04	AI1	FW block: <a href="#">AI1</a> (page 116)
	Analogue input AI1 value in V or mA. The type is selected with jumper J1 on the JCU Control Unit.	
2.05	AI1 SCALED	FW block: <a href="#">AI1</a> (page 116)
	Scaled value of analogue input AI1. See parameters <a href="#">13.04 AI1 MAX SCALE</a> and <a href="#">13.05 AI1 MIN SCALE</a> .	
2.06	AI2	FW block: <a href="#">AI2</a> (page 117)
	Analogue input AI2 value in V or mA. The type is selected with jumper J2 on the JCU Control Unit.	
2.07	AI2 SCALED	FW block: <a href="#">AI2</a> (page 117)
	Scaled value of analogue input AI2. See parameters <a href="#">13.09 AI2 MAX SCALE</a> and <a href="#">13.10 AI2 MIN SCALE</a> .	
2.08	AO1	FW block: <a href="#">AO1</a> (page 120)
	Analogue output AO1 value in mA	
2.09	AO2	FW block: <a href="#">AO2</a> (page 121)
	Analogue output AO2 value in V	
2.10	DIO2 FREQ IN	FW block: <a href="#">DIO2</a> (page 112)
	Frequency input value in Hz when DIO2 is used as frequency input ( <a href="#">12.02 DIO2 CONF</a> is set to <a href="#">(2) FREQ INPUT</a> ).	
2.11	DIO3 FREQ OUT	FW block: <a href="#">DIO3</a> (page 112)
	Frequency output value in Hz when DIO3 is used as frequency output ( <a href="#">12.03 DIO3 CONF</a> is set to <a href="#">(2) FREQ OUTPUT</a> ).	



2.12

FBA MAIN CW

FW block: [FIELDBUS](#) (page 180)

Control Word for fieldbus communication.

Log. = Logical combination (i.e. Bit AND/OR Selection parameter). Par. = Selection parameter. See [State diagram](#) on page 390.

Bit	Name	Val.	Information	Log.	Par.
0	STOP*	1	Stop according to the stop mode selected by <a href="#">11.03 STOP MODE</a> or according to the requested stop mode (bits 2...6). <b>Note:</b> Simultaneous STOP and START commands result in a stop command.	OR	<a href="#">10.02</a> , <a href="#">10.03</a> , <a href="#">10.05</a> , <a href="#">10.06</a>
		0	No operation		
1	START	1	Start. <b>Note:</b> Simultaneous STOP and START commands result in a stop command.	OR	<a href="#">10.02</a> , <a href="#">10.03</a> , <a href="#">10.05</a> , <a href="#">10.06</a>
		0	No operation		
2	STPMODE EM OFF*	1	Emergency OFF2 (bit 0 must be 1): Drive is stopped by cutting off the motor power supply (the inverter IGBTs are blocked). The motor coasts to stop. The drive will restart only with the next rising edge of the start signal when the run enable signal is on.	AND	-
		0	No operation		
3	STPMODE EM STOP*	1	Emergency stop OFF3 (bit 0 must be 1): Stop within the time defined by <a href="#">25.11 EM STOP TIME</a> .	AND	<a href="#">10.10</a>
		0	No operation		
4	STPMODE OFF1*	1	Emergency stop OFF1 (bit 0 must be 1): Stop along the currently active deceleration ramp.	AND	<a href="#">10.11</a>
		0	No operation		
5	STPMODE RAMP*	1	Stop along the currently active deceleration ramp.	-	<a href="#">11.03</a>
		0	No operation		
6	STPMODE COAST*	1	Coast to stop.	-	<a href="#">11.03</a>
		0	No operation		
7	RUN ENABLE	1	Activate run enable.	AND	<a href="#">10.09</a>
		0	Activate run disable.		
8	RESET	0->1	Fault reset if an active fault exists.	OR	<a href="#">10.08</a>
		other	No operation		
9	JOGGING 1	1	Activate jogging function 1. See section <a href="#">Jogging</a> on page 46.	OR	<a href="#">10.07</a>
		0	Jogging function 1 disabled		

\* If all stop mode bits 2...6 are 0, stop mode is selected by [11.03 STOP MODE](#). Coast stop (bit 6) overrides the emergency stop (bit 2/3/4). Emergency stop overrides the normal ramp stop (bit 5).

2.12	FBA MAIN CW (continued from previous page)				
	<b>Bit</b>	<b>Name</b>	<b>Val.</b>	<b>Information</b>	<b>Log. Par.</b>
	10	JOGGING 2	1	Activate jogging function 2. See section <a href="#">Jogging</a> on page <a href="#">46</a> .	OR <a href="#">10.14</a>
			0	Jogging function 2 disabled	
	11	REMOTE CMD	1	Fieldbus control enabled	- -
			0	Fieldbus control disabled	
	12	RAMP OUT 0	1	Force Ramp Function Generator output to zero. Drive ramps to a stop (current and DC voltage limits in force).	- -
			0	No operation	
	13	RAMP HOLD	1	Halt ramping (Ramp Function Generator output held).	- -
			0	No operation	
	14	RAMP IN 0	1	Force Ramp Function Generator input to zero.	- -
			0	No operation	
	15	EXT1/EXT2	1	Switch to external control location EXT2.	OR <a href="#">34.01</a>
			0	Switch to external control location EXT1.	
	16	REQ STARTINH	1	Activate start inhibit.	- -
			0	No start inhibit	
	17	LOCAL CTL	1	Request local control for Control Word. Used when the drive is controlled via PC tool or panel or through local fieldbus. - Local fieldbus: Transfer to fieldbus local control (control via fieldbus control word or reference). Fieldbus steals the control. - Panel or PC tool: Transfer to local control.	- -
			0	Request external control.	
	18	FBLOCAL REF	1	Request fieldbus local control.	- -
			0	No fieldbus local control	
	19	ABS POSIT	1	Use absolute positioning.	OR <a href="#">65.09</a> , <a href="#">65.17</a> bit 4
			0	Use relative positioning.	
	20	POS START MODE	1	Select pulse start for positioning: Start by rising edge of a pulse.	OR <a href="#">65.24</a>
			0	Select normal start for positioning: Start by signal rising edge. The signal has to stay TRUE during the positioning task.	

2.12	FBA MAIN CW (continued from previous page)					
	Bit	Name	Val.	Information	Log.	Par.
	21	POSITION- ING ENA	1	Enable position control.	OR	66.05
			0	Disable position control.		
	22	PO REF LIM ENA	1	Enable position reference.	OR	70.03
			0	Disable position reference. Position reference speed limit is set to zero. Positioning task is rejected.		
	23	Not in use				
	24	CHG SET IMMED	1	Interrupt actual positioning and start next positioning.	-	-
			0	Finish actual positioning and then start next positioning.		
	25	POS START	1	Activate positioning start. Operation depends on selected start mode (bit 20 POS START MODE).	OR	65.03, 65.11
			0	Deactivate positioning start.		
	26	START HOMING	1	Start homing.	OR	62.03
			0	Normal operation.		
	27	Not in use				
	28	CW B28		Freely programmable control bits.	-	-
29	CW B29					
30	CW B30					
31	CW B31					

2.13

FBA MAIN SW

FW block: [FIELDBUS](#) (page 180)

Status Word for fieldbus communication. See [State diagram](#) on page 390.

Bit	Name	Value	Information
0	READY	1	Drive is ready to receive start command.
		0	Drive is not ready.
1	ENABLED	1	External run enable signal is received.
		0	No external run enable signal is received.
2	RUNNING	1	Drive is modulating.
		0	Drive is not modulating.
3	REF RUNNING	1	Normal operation is enabled. Drive is running and following given reference.
		0	Normal operation is disabled. Drive is not following given reference (for example, modulating during magnetization).
4	EM OFF (OFF2)	1	Emergency OFF2 is active.
		0	Emergency OFF2 is inactive.
5	EM STOP (OFF3)	1	Emergency stop OFF3 (ramp stop) is active.
		0	Emergency OFF3 is inactive.
6	ACK STARTINH	1	Start inhibit is active.
		0	Start inhibit is inactive.
7	ALARM	1	An alarm is active. See chapter <a href="#">Fault tracing</a> .
		0	No alarm is active.
8	AT SETPOINT	1	Drive is at setpoint. Actual value equals reference value (i.e. the difference between the actual speed and the speed reference is within the speed window defined by <a href="#">26.07 SPEED WINDOW</a> ).
		0	Drive has not reached setpoint.
9	LIMIT	1	Operation is limited by torque limit (any torque limit).
		0	Operation is within torque limits.
10	ABOVE LIMIT	1	Actual speed exceeds the defined limit, <a href="#">22.07 ABOVE SPEED LIM</a> .
		0	Actual speed is within the defined limits.
11	EXT2 ACT	1	External control location EXT2 is active.
		0	External control location EXT1 is active.
12	LOCAL FB	1	Fieldbus local control is active.
		0	Fieldbus local control is inactive.
13	ZERO SPEED	1	Drive speed is below limit set by par. <a href="#">22.05 ZERO SPEED LIMIT</a> .
		0	Drive has not reached zero speed limit.
14	REV ACT	1	Drive is running in reverse direction.
		0	Drive is running in forward direction.
15	Not in use		
16	FAULT	1	Fault is active. See chapter <a href="#">Fault tracing</a> .
		0	No fault is active.
17	LOCAL PANEL	1	Local control is active, i.e. drive is controlled from PC tool or control panel.
		0	Local control is inactive.

2.13	FBA MAIN SW (continued from previous page)																																																																																
	<table><tr><th>Bit</th><th>Name</th><th>Value</th><th>Information</th></tr><tr><td rowspan="2">18</td><td rowspan="2">FOLLOWING ERROR</td><td>1</td><td>The difference between the reference and the actual position is within the defined following error window <a href="#">71.09 FOLLOW ERR WIN</a>.</td></tr><tr><td>0</td><td>The difference between the reference and the actual position is outside the defined following error window.</td></tr><tr><td rowspan="2">19</td><td rowspan="2">TGT REACHED</td><td>1</td><td>Target position is reached.</td></tr><tr><td>0</td><td>Target position is not reached.</td></tr><tr><td rowspan="2">20</td><td rowspan="2">HOMING DONE</td><td>1</td><td>Homing sequence is completed.</td></tr><tr><td>0</td><td>Homing sequence is not completed.</td></tr><tr><td rowspan="2">21</td><td rowspan="2">TRAV TASK ACK</td><td>1</td><td>New positioning task or setpoint is accepted.</td></tr><tr><td>0</td><td>No operation</td></tr><tr><td rowspan="2">22</td><td rowspan="2">MOVING</td><td>1</td><td>Positioning task is active. Drive speed is <math>&lt; &gt; 0</math>.</td></tr><tr><td>0</td><td>Positioning task is completed or drive is at standstill.</td></tr><tr><td rowspan="2">23</td><td rowspan="2">IP MODE ACTIVE</td><td>1</td><td>Position reference generator is active.</td></tr><tr><td>0</td><td>Position reference generator is inactive.</td></tr><tr><td rowspan="2">24</td><td rowspan="2">REG LEVEL</td><td>1</td><td>Position latch signal 1 is active (source selected by parameter <a href="#">62.15 TRIG PROBE1</a>).</td></tr><tr><td>0</td><td>Position latch signal 1 is inactive.</td></tr><tr><td rowspan="2">25</td><td rowspan="2">POSITIVE LIMIT</td><td>1</td><td>Positive limit switch is active (source selected by parameter <a href="#">62.06 POS LIMIT SWITCH</a>).</td></tr><tr><td>0</td><td>Positive limit switch is inactive.</td></tr><tr><td rowspan="2">26</td><td rowspan="2">NEGATIVE LIMIT</td><td>1</td><td>Negative limit switch is active (source selected by parameter <a href="#">62.05 NEG LIMIT SWITCH</a>).</td></tr><tr><td>0</td><td>Negative limit switch is inactive.</td></tr><tr><td rowspan="2">27</td><td rowspan="2">REQUEST CTL</td><td>1</td><td>Control word is requested from fieldbus.</td></tr><tr><td>0</td><td>Control word is not requested from fieldbus.</td></tr><tr><td>28</td><td>SW B28</td><td></td><td rowspan="4">Programmable status bits (unless fixed by the used profile). See parameters <a href="#">50.08...50.11</a> and the user manual of the fieldbus adapter.</td></tr><tr><td>29</td><td>SW B29</td><td></td></tr><tr><td>30</td><td>SW B30</td><td></td></tr><tr><td>31</td><td>SW B31</td><td></td></tr></table>				Bit	Name	Value	Information	18	FOLLOWING ERROR	1	The difference between the reference and the actual position is within the defined following error window <a href="#">71.09 FOLLOW ERR WIN</a> .	0	The difference between the reference and the actual position is outside the defined following error window.	19	TGT REACHED	1	Target position is reached.	0	Target position is not reached.	20	HOMING DONE	1	Homing sequence is completed.	0	Homing sequence is not completed.	21	TRAV TASK ACK	1	New positioning task or setpoint is accepted.	0	No operation	22	MOVING	1	Positioning task is active. Drive speed is $< > 0$ .	0	Positioning task is completed or drive is at standstill.	23	IP MODE ACTIVE	1	Position reference generator is active.	0	Position reference generator is inactive.	24	REG LEVEL	1	Position latch signal 1 is active (source selected by parameter <a href="#">62.15 TRIG PROBE1</a> ).	0	Position latch signal 1 is inactive.	25	POSITIVE LIMIT	1	Positive limit switch is active (source selected by parameter <a href="#">62.06 POS LIMIT SWITCH</a> ).	0	Positive limit switch is inactive.	26	NEGATIVE LIMIT	1	Negative limit switch is active (source selected by parameter <a href="#">62.05 NEG LIMIT SWITCH</a> ).	0	Negative limit switch is inactive.	27	REQUEST CTL	1	Control word is requested from fieldbus.	0	Control word is not requested from fieldbus.	28	SW B28		Programmable status bits (unless fixed by the used profile). See parameters <a href="#">50.08...50.11</a> and the user manual of the fieldbus adapter.	29	SW B29		30	SW B30		31	SW B31	
Bit	Name	Value	Information																																																																														
18	FOLLOWING ERROR	1	The difference between the reference and the actual position is within the defined following error window <a href="#">71.09 FOLLOW ERR WIN</a> .																																																																														
		0	The difference between the reference and the actual position is outside the defined following error window.																																																																														
19	TGT REACHED	1	Target position is reached.																																																																														
		0	Target position is not reached.																																																																														
20	HOMING DONE	1	Homing sequence is completed.																																																																														
		0	Homing sequence is not completed.																																																																														
21	TRAV TASK ACK	1	New positioning task or setpoint is accepted.																																																																														
		0	No operation																																																																														
22	MOVING	1	Positioning task is active. Drive speed is $< > 0$ .																																																																														
		0	Positioning task is completed or drive is at standstill.																																																																														
23	IP MODE ACTIVE	1	Position reference generator is active.																																																																														
		0	Position reference generator is inactive.																																																																														
24	REG LEVEL	1	Position latch signal 1 is active (source selected by parameter <a href="#">62.15 TRIG PROBE1</a> ).																																																																														
		0	Position latch signal 1 is inactive.																																																																														
25	POSITIVE LIMIT	1	Positive limit switch is active (source selected by parameter <a href="#">62.06 POS LIMIT SWITCH</a> ).																																																																														
		0	Positive limit switch is inactive.																																																																														
26	NEGATIVE LIMIT	1	Negative limit switch is active (source selected by parameter <a href="#">62.05 NEG LIMIT SWITCH</a> ).																																																																														
		0	Negative limit switch is inactive.																																																																														
27	REQUEST CTL	1	Control word is requested from fieldbus.																																																																														
		0	Control word is not requested from fieldbus.																																																																														
28	SW B28		Programmable status bits (unless fixed by the used profile). See parameters <a href="#">50.08...50.11</a> and the user manual of the fieldbus adapter.																																																																														
29	SW B29																																																																																
30	SW B30																																																																																
31	SW B31																																																																																
2.14	FBA MAIN REF1	FW block: <a href="#">FIELD BUS</a> (page <a href="#">180</a> )																																																																															
	Scaled fieldbus reference 1. See parameter <a href="#">50.04 FBA REF1 MODESEL</a> .																																																																																
2.15	FBA MAIN REF2	FW block: <a href="#">FIELD BUS</a> (page <a href="#">180</a> )																																																																															
	Scaled fieldbus reference 2. See parameter <a href="#">50.05 FBA REF2 MODESEL</a> .																																																																																
2.16	FEN DI STATUS	FW block: <a href="#">ENCODER</a> (page <a href="#">225</a> )																																																																															
	Status of digital inputs of FEN-xx encoder interfaces in drive option Slots 1 and 2. Examples: 000001 (01h) = DI1 of FEN-xx in Slot 1 is ON, all others are OFF. 000010 (02h) = DI2 of FEN-xx in Slot 1 is ON, all others are OFF. 010000 (10h) = DI1 of FEN-xx in Slot 2 is ON, all others are OFF. 100000 (20h) = DI2 of FEN-xx in Slot 2 is ON, all others are OFF.																																																																																

2.17	D2D MAIN CW	FW block: <a href="#">D2D COMMUNICATION</a> (page 187)																																		
Drive-to-drive control word received through the drive-to-drive link. See also actual signal <a href="#">2.18</a> below.																																				
<table><tr><th>Bit</th><th>Information</th></tr><tr><td>0</td><td>Stop.</td></tr><tr><td>1</td><td>Start.</td></tr><tr><td>2</td><td>Reserved.</td></tr><tr><td>3</td><td>Reserved.</td></tr><tr><td>4</td><td>Reserved.</td></tr><tr><td>5</td><td>Reserved.</td></tr><tr><td>6</td><td>Reserved.</td></tr><tr><td>7</td><td>Run enable. By default, not connected in a follower drive.</td></tr><tr><td>8</td><td>Reset. By default, not connected in a follower drive.</td></tr><tr><td>9</td><td>Freely assignable through bit pointer parameters.</td></tr><tr><td>10</td><td>Freely assignable through bit pointer parameters.</td></tr><tr><td>11</td><td>Freely assignable through bit pointer parameters.</td></tr><tr><td>12</td><td>Freely assignable through bit pointer parameters.</td></tr><tr><td>13</td><td>Freely assignable through bit pointer parameters.</td></tr><tr><td>14</td><td>Freely assignable through bit pointer parameters.</td></tr><tr><td>15</td><td>EXT1/EXT2 selection. 0 = EXT1 active, 1 = EXT2 active. By default, not connected in a follower drive.</td></tr></table>			Bit	Information	0	Stop.	1	Start.	2	Reserved.	3	Reserved.	4	Reserved.	5	Reserved.	6	Reserved.	7	Run enable. By default, not connected in a follower drive.	8	Reset. By default, not connected in a follower drive.	9	Freely assignable through bit pointer parameters.	10	Freely assignable through bit pointer parameters.	11	Freely assignable through bit pointer parameters.	12	Freely assignable through bit pointer parameters.	13	Freely assignable through bit pointer parameters.	14	Freely assignable through bit pointer parameters.	15	EXT1/EXT2 selection. 0 = EXT1 active, 1 = EXT2 active. By default, not connected in a follower drive.
Bit	Information																																			
0	Stop.																																			
1	Start.																																			
2	Reserved.																																			
3	Reserved.																																			
4	Reserved.																																			
5	Reserved.																																			
6	Reserved.																																			
7	Run enable. By default, not connected in a follower drive.																																			
8	Reset. By default, not connected in a follower drive.																																			
9	Freely assignable through bit pointer parameters.																																			
10	Freely assignable through bit pointer parameters.																																			
11	Freely assignable through bit pointer parameters.																																			
12	Freely assignable through bit pointer parameters.																																			
13	Freely assignable through bit pointer parameters.																																			
14	Freely assignable through bit pointer parameters.																																			
15	EXT1/EXT2 selection. 0 = EXT1 active, 1 = EXT2 active. By default, not connected in a follower drive.																																			
2.18	D2D FOLLOWER CW	FW block: <a href="#">DRIVE LOGIC</a> (page 103)																																		
Drive-to-drive control word sent to the followers by default. See also firmware block <a href="#">D2D COMMUNICATION</a> on page 187.																																				
<table><tr><th>Bit</th><th>Information</th></tr><tr><td>0</td><td>Stop.</td></tr><tr><td>1</td><td>Start.</td></tr><tr><td>2...6</td><td>Reserved.</td></tr><tr><td>7</td><td>Run enable.</td></tr><tr><td>8</td><td>Reset.</td></tr><tr><td>9...14</td><td>Reserved.</td></tr><tr><td>15</td><td>EXT1/EXT2 selection. 0 = EXT1 active, 1 = EXT2 active.</td></tr></table>			Bit	Information	0	Stop.	1	Start.	2...6	Reserved.	7	Run enable.	8	Reset.	9...14	Reserved.	15	EXT1/EXT2 selection. 0 = EXT1 active, 1 = EXT2 active.																		
Bit	Information																																			
0	Stop.																																			
1	Start.																																			
2...6	Reserved.																																			
7	Run enable.																																			
8	Reset.																																			
9...14	Reserved.																																			
15	EXT1/EXT2 selection. 0 = EXT1 active, 1 = EXT2 active.																																			
2.19	D2D REF1	FW block: <a href="#">D2D COMMUNICATION</a> (page 187)																																		
Drive-to-drive reference 1 received through the drive-to-drive link.																																				
2.20	D2D REF2	FW block: <a href="#">D2D COMMUNICATION</a> (page 187)																																		
Drive-to-drive reference 2 received through the drive-to-drive link.																																				

## Group 03 CONTROL VALUES

Actual signals containing information on e.g. the reference.

03 CONTROL VALUES		
3.01	SPEED REF1	FW block: <a href="#">SPEED REF SEL</a> (page 135)
	Speed reference 1 in rpm.	
3.02	SPEED REF2	FW block: <a href="#">SPEED REF SEL</a> (page 135)
	Speed reference 2 in rpm.	
3.03	SPEEDREF RAMP IN	FW block: <a href="#">SPEED REF MOD</a> (page 136)
	Used speed reference ramp input in rpm.	
3.04	SPEEDREF RAMPED	FW block: <a href="#">SPEED REF RAMP</a> (page 139)
	Ramped and shaped speed reference in rpm.	
3.05	SPEEDREF USED	FW block: <a href="#">SPEED ERROR</a> (page 143)
	Used speed reference in rpm (reference before the speed error calculation).	
3.06	SPEED ERROR FILT	FW block: <a href="#">SPEED ERROR</a> (page 143)
	Filtered speed error value in rpm.	
3.07	ACC COMP TORQ	FW block: <a href="#">SPEED ERROR</a> (page 143)
	Output of the acceleration compensation (torque in %).	
3.08	TORQ REF SP CTRL	FW block: <a href="#">SPEED CONTROL</a> (page 148)
	Limited speed controller output torque in %.	
3.09	TORQ REF1	FW block: <a href="#">TORQ REF SEL</a> (page 153)
	Torque reference 1 in %.	
3.10	TORQ REF RAMPED	FW block: <a href="#">TORQ REF MOD</a> (page 154)
	Ramped torque reference in %.	
3.11	TORQ REF RUSHLIM	FW block: <a href="#">TORQ REF MOD</a> (page 154)
	Torque reference limited by the rush control (value in %). Torque is limited to ensure that the speed is between the defined minimum and maximum speed limits (parameters <a href="#">20.01 MAXIMUM SPEED</a> and <a href="#">20.02 MINIMUM SPEED</a> ).	
3.12	TORQUE REF ADD	FW block: <a href="#">TORQ REF SEL</a> (page 153)
	Torque reference additive in %.	

<b>3.13</b>	<b>TORQ REF TO TC</b>	FW block: <a href="#">REFERENCE CTRL</a> (page 160)
	Torque reference in % for the torque control. When <a href="#">99.05 MOTOR CTRL MODE</a> is set to (1) <a href="#">SCALAR</a> , this value is forced to 0.	
<b>3.14</b>	<b>BRAKE TORQ MEM</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (page 163)
	Torque value (in %) stored when the mechanical brake close command is issued.	
<b>3.15</b>	<b>BRAKE COMMAND</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (page 163)
	Brake on/off command. 0 = Close. 1 = Open. For brake on/off control, connect this signal to a relay output (can also be connected to a digital output). See section <a href="#">Mechanical brake</a> on page 49.	
<b>3.16</b>	<b>FLUX REF USED</b>	FW block: <a href="#">MOTOR CONTROL</a> (page 166)
	Used flux reference in percent.	
<b>3.17</b>	<b>TORQUE REF USED</b>	FW block: <a href="#">MOTOR CONTROL</a> (page 166)
	Used/limited torque reference in percent.	



## Group 04 POS CTRL VALUES

Actual signals containing positioning information.

04 POS CTRL VALUES		
4.01	SPEED REF POS	FW block: <a href="#">POS CONTROL</a> (page 222)
	Position controller output (speed reference) for the speed controller in rpm.	
4.02	SPEED ACT LOAD	FW block: <a href="#">POS FEEDBACK</a> (page 192)
	Filtered actual speed of the load. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection. If the load gear ratio is 1:1, <a href="#">4.02 SPEED ACT LOAD</a> equals <a href="#">1.01 SPEED ACT</a> .	
4.03	PROBE1 POS MEAS	FW block: <a href="#">HOMING</a> (page 196)
	Measured position (triggered according to latch setting <a href="#">62.15 TRIG PROBE1</a> ). The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
4.04	PROBE2 POS MEAS	FW block: <a href="#">HOMING</a> (page 196)
	Measured position (triggered according to latch setting <a href="#">62.17 TRIG PROBE2</a> ). The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection. Used only with cyclic corrections.	
4.05	CYCLIC POS ERR	FW block: <a href="#">HOMING</a> (page 196)
	Calculated cyclic position error for the cyclic correction function (error = reference latch position - measured latch position). The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection. The error is added to synchron error ( <a href="#">4.18 SYNC ERROR</a> ). Used only with cyclic corrections.	
4.06	POS REF	FW block: <a href="#">PROFILE REF SEL</a> (page 204)
	Used position reference. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
4.07	PROF SPEED	FW block: <a href="#">PROFILE REF SEL</a> (page 204)
	Used positioning speed. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
4.08	PROF ACC	FW block: <a href="#">PROFILE REF SEL</a> (page 204)
	Used positioning acceleration. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
4.09	PROF DEC	FW block: <a href="#">PROFILE REF SEL</a> (page 204)
	Used positioning deceleration. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
4.10	PROF FILT TIME	FW block: <a href="#">PROFILE REF SEL</a> (page 204)
	Used position reference filter time in ms.	
4.11	POS STYLE	FW block: <a href="#">PROFILE REF SEL</a> (page 204)
	Used positioning behaviour. Defined by parameter <a href="#">65.09 POS STYLE 1</a> / <a href="#">65.17 POS STYLE 2</a> .	

<b>4.12</b>	POS END SPEED	FW block: <a href="#">PROFILE REF SEL</a> (page 204)
	Positioning speed used after the target has been reached. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
<b>4.13</b>	POS REF IPO	FW block: <a href="#">PROFILE GENERATOR</a> (page 212)
	Position reference from the position profile generator. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
<b>4.14</b>	DIST TGT	FW block: <a href="#">PROFILE GENERATOR</a> (page 212)
	Position profile generator distance to target. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
<b>4.15</b>	SYNC REF UNGEAR	FW block: <a href="#">SYNC REF SEL</a> (page 214)
	Ungearing synchron reference input. By default, this signal is connected to the input of the <a href="#">SYNC REF MOD</a> firmware block (see page 217). The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
<b>4.16</b>	SYNC REF GEARED	FW block: <a href="#">SYNC REF MOD</a> (page 217)
	Position reference in synchron control mode (output of the synchron reference chain). The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
<b>4.17</b>	POS REF LIMITED	FW block: <a href="#">POS REF LIM</a> (page 219)
	Limited position reference. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
<b>4.18</b>	SYNC ERROR	FW block: <a href="#">POS REF LIM</a> (page 219)
	Synchronising error, caused by the dynamic limitations or the position correction, fed to the position profile generator. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
<b>4.19</b>	POS ERROR	FW block: <a href="#">POS CONTROL</a> (page 222)
	Position error. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
<b>4.20</b>	SPEED FEED FWD	FW block: <a href="#">POS CONTROL</a> (page 222)
	Position speed reference in rpm (from the dynamic limiter for the speed controller) multiplied with the speed feed forward gain ( <a href="#">71.04 P CTRL FEED GAIN</a> ). To improve speed control, this reference is added to the position error (difference between the position reference and actual position).	

## Group 06 DRIVE STATUS

Status words.

06 DRIVE STATUS

6.01	STATUS WORD 1	FW block: <a href="#">DRIVE LOGIC</a> (page 103)	
Status word 1.			
Bit	Name	Val.	Information
0	READY	1	Drive is ready to receive start command.
		0	Drive is not ready.
1	ENABLED	1	External run enable signal is received.
		0	No external run enable signal is received.
2	STARTED	1	Drive has received start command.
		0	Drive has not received start command.
3	RUNNING	1	Drive is modulating.
		0	Drive is not modulating.
4	EM OFF (OFF2)	1	Emergency OFF2 is active.
		0	Emergency OFF2 is inactive.
5	EM STOP (OFF3)	1	Emergency stop OFF3 (ramp stop) is active.
		0	Emergency OFF3 is inactive.
6	ACK STARTINH	1	Start inhibit is active.
		0	Start inhibit is inactive.
7	ALARM	1	An alarm is active. See chapter <a href="#">Fault tracing</a> .
		0	No alarm
8	EXT2 ACT	1	External control EXT2 is active.
		0	External control EXT1 is active.
9	LOCAL FB	1	Fieldbus local control is active.
		0	Fieldbus local control is inactive.
10	FAULT	1	A fault is active. See chapter <a href="#">Fault tracing</a> .
		0	No fault
11	LOCAL PANEL	1	Local control is active, i.e. drive is controlled from PC tool or control panel.
		0	Local control is inactive.
12...15	Reserved		

6.02

STATUS WORD 2

FW block: [DRIVE LOGIC](#) (page 103)

Status word 2.

Bit	Name	Val.	Information
0	START ACT	1	Drive start command is active.
		0	Drive start command is inactive.
1	STOP ACT	1	Drive stop command is active.
		0	Drive stop command is inactive.
2	READY RELAY	1	Ready to function: run enable signal on, no fault, emergency stop signal off, no ID run inhibition. Connected by default to DIO1 by par. <a href="#">12.04 DIO1 OUT PTR</a> . (Can be freely connected anywhere.)
		0	Not ready to function
3	MODULATING	1	Modulating: IGBTs are controlled, i.e. the drive is RUNNING.
		0	No modulation: IGBTs are not controlled.
4	REF RUNNING	1	Normal operation is enabled. Running. Drive follows the given reference.
		0	Normal operation is disabled, Drive is not following the given reference (e.g. in magnetisation phase drive is modulating).
5	JOGGING	1	Jogging function 1 or 2 is active.
		0	Jogging function is inactive.
6	OFF1	1	Emergency stop OFF1 is active.
		0	Emergency stop OFF1 is inactive.
7	START INH MASK	1	Maskable (by par. <a href="#">10.12 START INHIBIT</a> ) start inhibit is active.
		0	No start inhibit (maskable)
8	START INH NOMASK	1	Non-maskable start inhibit is active.
		0	No start inhibit (non-maskable)
9	CHRG REL CLOSED	1	Charging relay is closed.
		0	Charging relay is open.
10	STO ACT	1	Safe Torque Off function is active. See parameter <a href="#">46.07 STO DIAGNOSTIC</a> .
		0	Safe Torque Off function is inactive.
11	Reserved		
12	RAMP IN 0	1	Ramp Function Generator input is forced to zero.
		0	Normal operation
13	RAMP HOLD	1	Ramp Function Generator output is held.
		0	Normal operation
14	RAMP OUT 0	1	Ramp Function Generator output is forced to zero.
		0	Normal operation
15	Reserved		

6.03

SPEED CTRL STAT

FW block: [DRIVE LOGIC](#) (page 103)

Speed control status word.

Bit	Name	Val.	Information
0	SPEED ACT NEG	1	Actual speed is negative.
1	ZERO SPEED	1	Actual speed has reached the zero speed limit ( <a href="#">22.05 ZERO SPEED LIMIT</a> ).
2	ABOVE LIMIT	1	Actual speed has exceeded the supervision limit ( <a href="#">22.07 ABOVE SPEED LIM</a> ).
3	AT SETPOINT	1	The difference between the actual speed and the unramped speed reference is within the speed window ( <a href="#">26.07 SPEED WINDOW</a> ).
4	BAL ACTIVE	1	Speed controller output balancing is active ( <a href="#">28.09 SPEEDCTRL BAL EN</a> ).
5...15	Reserved		

6.05

LIMIT WORD 1

FW block: [DRIVE LOGIC](#) (page 103)

Limit word 1.

Bit	Name	Val.	Information
0	TORQ LIM	1	Drive torque is being limited by the motor control (undervoltage control, overvoltage control, current control, load angle control or pull-out control), or by parameter <a href="#">20.06 MAXIMUM TORQUE</a> or <a href="#">20.07 MINIMUM TORQUE</a> .
1	SPD CTL TLIM MIN	1	Speed controller output minimum torque limit is active. The limit is defined by parameter <a href="#">28.10 MIN TORQ SP CTRL</a> .
2	SPD CTL TLIM MAX	1	Speed controller output maximum torque limit is active. The limit is defined by parameter <a href="#">28.11 MAX TORQ SP CTRL</a> .
3	TORQ REF MAX	1	Torque reference ( <a href="#">3.09 TORQ REF1</a> ) maximum limit is active. The limit is defined by parameter <a href="#">32.04 MAXIMUM TORQ REF</a> .
4	TORQ REF MIN	1	Torque reference ( <a href="#">3.09 TORQ REF1</a> ) minimum limit is active. The limit is defined by parameter <a href="#">32.05 MINIMUM TORQ REF</a> .
5	TLIM MAX SPEED	1	Torque reference maximum value is limited by the rush control, because of maximum speed limit <a href="#">20.01 MAXIMUM SPEED</a> .
6	TLIM MIN SPEED	1	Torque reference minimum value is limited by the rush control, because of minimum speed limit <a href="#">20.02 MINIMUM SPEED</a> .
7...15	Reserved		

6.07

TORQ LIM STATUS

FW block: [DRIVE LOGIC](#) (page [103](#))

Torque controller limitation status word.

Bit	Name	Val.	Information
0	UNDERVOLTAGE	1	Intermediate circuit DC undervoltage *
1	OVERVOLTAGE	1	Intermediate circuit DC overvoltage *
2	MINIMUM TORQUE	1	Torque reference minimum limit is active. The limit is defined by parameter <a href="#">20.07 MINIMUM TORQUE</a> . *
3	MAXIMUM TORQUE	1	Torque reference maximum limit is active. The limit is defined by parameter <a href="#">20.06 MAXIMUM TORQUE</a> . *
4	INTERNAL CURRENT	1	An inverter current limit is active. The limit is identified by bits 8...11.
5	LOAD ANGLE	1	For permanent magnet motor only: Load angle limit is active, i.e. the motor cannot produce more torque.
6	MOTOR PULLOUT	1	For asynchronous motor only: Motor pull-out limit is active, i.e. the motor cannot produce more torque.
7	Reserved		
8	THERMAL	1	Bit 4 = 0: Input current is limited by main circuit thermal limit. Bit 4 = 1: Output current is limited by main circuit thermal limit.
9	SOA CURRENT	1	Internal Safe Operating Area current limit is active (limits the drive output current). **
10	USER CURRENT	1	Maximum inverter output current limit is active. The limit is defined by parameter <a href="#">20.05 MAXIMUM CURRENT</a> . **
11	THERMAL IGBT	1	Calculated thermal current value limits the inverter output current. Thermal current limitation is enabled by parameter <a href="#">20.08 THERM CURR LIM</a> . **
12...15	Reserved		
* Only one of bits 0...3 can be on simultaneously. The bit typically indicates the limit that is exceeded first. ** Only one of bits 9...11 can be on simultaneously. The bit typically indicates the limit that is exceeded first.			

6.09	POS CTRL STATUS	FW block: <a href="#">DRIVE LOGIC</a> (page 103)	
Position control status word.			
Bit	Name	Val.	Information
0	IN POSITION	1	Position reference generator has reached the used position reference.
		0	Position reference generator is active, i.e. calculating the position reference.
1	IN POS WIN	1	Position is within the defined position window, <a href="#">66.04 POS WIN</a> .
		0	Position reference is outside the defined position window.
2	POS START	1	Positioning start command is active. Source for the start signal is selected by parameter <a href="#">65.03 POS START 1</a> / <a href="#">65.11 POS START 2</a> .
		0	Position start command is inactive.
3	POS ENA-BLED	1	Position control is enabled by parameter <a href="#">66.05 POS ENABLE</a> or by fieldbus control word <a href="#">2.12 FBA MAIN CW</a> bit 21.
		0	Position control is not enabled.
4	MOVING	1	Positioning task is active. Drive speed is <> 0.
		0	Positioning task is completed or drive is at standstill.
5	TRAVERSE ACK	1	New positioning task or setpoint is accepted.
		0	No operation
6	IP MODE ACT	1	Position reference generator is active.
		0	Position reference generator is inactive.
7	FOLLOW ERR	1	The difference between the reference and the actual position is within the defined following error window <a href="#">71.09 FOLLOW ERR WIN</a> .
		0	The difference between the reference and the actual position is outside the defined following error window.
8	ABOVE MAX	1	Actual position ( <a href="#">1.12 POS ACT</a> ) exceeds the defined maximum position, <a href="#">60.13 MAXIMUM POS</a> .
		0	Actual position does not exceed the maximum value.
9	BELOW MIN	1	Actual position ( <a href="#">1.12 POS ACT</a> ) exceeds the defined minimum position, <a href="#">60.14 MINIMUM POS</a> .
		0	Actual position does not exceed the minimum value.
10	ABOVE THRES	1	Actual position ( <a href="#">1.12 POS ACT</a> ) exceeds the position threshold supervision limit. The limit is defined by parameter <a href="#">60.15 POS THRESHOLD</a> .
		0	Actual position does not exceed the position threshold supervision limit.
11	Reserved		
12	PREF SPD LIM	1	Position reference speed is limited to the value defined by parameter <a href="#">70.04 POS SPEED LIM</a> .
		0	Position reference speed is not limited.
13	PREF ACC LIM	1	Position reference acceleration is limited to the value defined by parameter <a href="#">70.05 POS ACCEL LIM</a> .
		0	Position reference acceleration is not limited.
14	PREF DEC LIM	1	Position reference deceleration is limited to the value defined by parameter <a href="#">70.06 POS DECEL LIM</a> .
		0	Position reference deceleration is not limited.
15	Reserved		

6.10	POS CTRL STATUS2	FW block: <a href="#">DRIVE LOGIC</a> (page <a href="#">103</a> )	
Additional position control status word.			
Bit	Name	Val.	Information
0*	IN SYNC POS	1	Position profile generator distance to target is below the absolute value of the synchron error limit, i.e. value of actual signal <a href="#">4.14 DIST TGT</a> is smaller than value of parameter <a href="#">70.07 SYNC ERR LIM</a> .
		0	Distance to target is greater than synchron error limit.
1*	IN SYNC	1	The difference of synchronous speed and drive load speed ( <a href="#">4.02 SPEED ACT LOAD</a> ) is below the defined velocity window ( <a href="#">70.08 SYNC VEL WINDOW</a> ).
		0	The system is not in synchron as defined by the synchron velocity window ( <a href="#">70.08 SYNC VEL WINDOW</a> ).
2	END SPEED ACTIVE	1	Positioning end speed (defined by parameter <a href="#">65.10 POS END SPEED 1</a> or <a href="#">65.18 POS END SPEED 2</a> depending on selected position reference set) has been reached.
		0	Positioning end speed has not been reached or end speed is defined as zero.
3...15	Reserved		
* Active in synchron control.			



6.11	POS CORR STATUS	FW block: <a href="#">DRIVE LOGIC</a> (page 103)																																																																																					
	Position correction status word.																																																																																						
	<table><thead><tr><th>Bit</th><th>Name</th><th>Val.</th><th>Information</th></tr></thead><tbody><tr><td rowspan="2">0</td><td rowspan="2">HOMING START</td><td>1</td><td>Homing start is active. Source for the homing start is selected by parameter <a href="#">62.03 HOMING START</a>.</td></tr><tr><td>0</td><td>Homing start is inactive.</td></tr><tr><td rowspan="2">1</td><td rowspan="2">HOMING DONE</td><td>1</td><td>Homing has been performed.</td></tr><tr><td>0</td><td>Homing has not been performed (if bit 2 = 0) or homing is being executed.</td></tr><tr><td rowspan="2">2</td><td rowspan="2">HOM DONE ONCE</td><td>1</td><td>Homing has been performed at least once.</td></tr><tr><td>0</td><td>Homing has not been performed after power up or there is an error with the actual position encoder.</td></tr><tr><td rowspan="2">3</td><td rowspan="2">COR DONE ONCE</td><td>1</td><td>Cyclic correction has been performed at least once (<a href="#">62.14 CYCLIC CORR MODE</a>).</td></tr><tr><td>0</td><td>Cyclic correction has not been performed after power up or there is an error with the actual position encoder.</td></tr><tr><td rowspan="2">4</td><td rowspan="2">POS LIM POS</td><td>1</td><td>Positive limit switch is active (source selected by parameter <a href="#">62.06 POS LIMIT SWITCH</a>).</td></tr><tr><td>0</td><td>Positive limit switch is inactive.</td></tr><tr><td rowspan="2">5</td><td rowspan="2">POS LIM NEG</td><td>1</td><td>Negative limit switch is active (source selected by parameter <a href="#">62.05 NEG LIMIT SWITCH</a>).</td></tr><tr><td>0</td><td>Negative limit switch is inactive.</td></tr><tr><td rowspan="2">6</td><td rowspan="2">LATCH1 STAT</td><td>1</td><td>Position latch signal 1 is active (source selected by parameter <a href="#">62.15 TRIG PROBE1</a>).</td></tr><tr><td>0</td><td>Position latch signal 1 is inactive.</td></tr><tr><td rowspan="2">7</td><td rowspan="2">LATCH2 STAT</td><td>1</td><td>Position latch signal 2 is active (source selected by parameter <a href="#">62.17 TRIG PROBE2</a>).</td></tr><tr><td>0</td><td>Position latch signal 2 is inactive.</td></tr><tr><td rowspan="2">8</td><td rowspan="2">LATCH1 DONE</td><td>1</td><td>Position has been latched according to parameter <a href="#">62.15 TRIG PROBE1</a> setting.</td></tr><tr><td>0</td><td>No position latch has occurred.</td></tr><tr><td rowspan="2">9</td><td rowspan="2">LATCH2 DONE</td><td>1</td><td>Position has been latched according to parameter <a href="#">62.17 TRIG PROBE2</a> setting.</td></tr><tr><td>0</td><td>No position latch has occurred.</td></tr><tr><td>10</td><td colspan="3">Reserved</td></tr><tr><td rowspan="2">11</td><td rowspan="2">POSIT AFTER HOM</td><td>1</td><td>Drive is executing absolute positioning according to par. <a href="#">62.10 HOME POS OFFSET</a> after home position has been found and set.</td></tr><tr><td>0</td><td>The drive has not reached home position yet.</td></tr><tr><td rowspan="2">12</td><td rowspan="2">CYC CORR ACTIV</td><td>1</td><td>Cyclic correction is active.</td></tr><tr><td>0</td><td>Cyclic correction is inactive.</td></tr><tr><td>13...15</td><td colspan="3">Reserved</td></tr></tbody></table>	Bit	Name	Val.	Information	0	HOMING START	1	Homing start is active. Source for the homing start is selected by parameter <a href="#">62.03 HOMING START</a> .	0	Homing start is inactive.	1	HOMING DONE	1	Homing has been performed.	0	Homing has not been performed (if bit 2 = 0) or homing is being executed.	2	HOM DONE ONCE	1	Homing has been performed at least once.	0	Homing has not been performed after power up or there is an error with the actual position encoder.	3	COR DONE ONCE	1	Cyclic correction has been performed at least once ( <a href="#">62.14 CYCLIC CORR MODE</a> ).	0	Cyclic correction has not been performed after power up or there is an error with the actual position encoder.	4	POS LIM POS	1	Positive limit switch is active (source selected by parameter <a href="#">62.06 POS LIMIT SWITCH</a> ).	0	Positive limit switch is inactive.	5	POS LIM NEG	1	Negative limit switch is active (source selected by parameter <a href="#">62.05 NEG LIMIT SWITCH</a> ).	0	Negative limit switch is inactive.	6	LATCH1 STAT	1	Position latch signal 1 is active (source selected by parameter <a href="#">62.15 TRIG PROBE1</a> ).	0	Position latch signal 1 is inactive.	7	LATCH2 STAT	1	Position latch signal 2 is active (source selected by parameter <a href="#">62.17 TRIG PROBE2</a> ).	0	Position latch signal 2 is inactive.	8	LATCH1 DONE	1	Position has been latched according to parameter <a href="#">62.15 TRIG PROBE1</a> setting.	0	No position latch has occurred.	9	LATCH2 DONE	1	Position has been latched according to parameter <a href="#">62.17 TRIG PROBE2</a> setting.	0	No position latch has occurred.	10	Reserved			11	POSIT AFTER HOM	1	Drive is executing absolute positioning according to par. <a href="#">62.10 HOME POS OFFSET</a> after home position has been found and set.	0	The drive has not reached home position yet.	12	CYC CORR ACTIV	1	Cyclic correction is active.	0	Cyclic correction is inactive.	13...15	Reserved				
Bit	Name	Val.	Information																																																																																				
0	HOMING START	1	Homing start is active. Source for the homing start is selected by parameter <a href="#">62.03 HOMING START</a> .																																																																																				
		0	Homing start is inactive.																																																																																				
1	HOMING DONE	1	Homing has been performed.																																																																																				
		0	Homing has not been performed (if bit 2 = 0) or homing is being executed.																																																																																				
2	HOM DONE ONCE	1	Homing has been performed at least once.																																																																																				
		0	Homing has not been performed after power up or there is an error with the actual position encoder.																																																																																				
3	COR DONE ONCE	1	Cyclic correction has been performed at least once ( <a href="#">62.14 CYCLIC CORR MODE</a> ).																																																																																				
		0	Cyclic correction has not been performed after power up or there is an error with the actual position encoder.																																																																																				
4	POS LIM POS	1	Positive limit switch is active (source selected by parameter <a href="#">62.06 POS LIMIT SWITCH</a> ).																																																																																				
		0	Positive limit switch is inactive.																																																																																				
5	POS LIM NEG	1	Negative limit switch is active (source selected by parameter <a href="#">62.05 NEG LIMIT SWITCH</a> ).																																																																																				
		0	Negative limit switch is inactive.																																																																																				
6	LATCH1 STAT	1	Position latch signal 1 is active (source selected by parameter <a href="#">62.15 TRIG PROBE1</a> ).																																																																																				
		0	Position latch signal 1 is inactive.																																																																																				
7	LATCH2 STAT	1	Position latch signal 2 is active (source selected by parameter <a href="#">62.17 TRIG PROBE2</a> ).																																																																																				
		0	Position latch signal 2 is inactive.																																																																																				
8	LATCH1 DONE	1	Position has been latched according to parameter <a href="#">62.15 TRIG PROBE1</a> setting.																																																																																				
		0	No position latch has occurred.																																																																																				
9	LATCH2 DONE	1	Position has been latched according to parameter <a href="#">62.17 TRIG PROBE2</a> setting.																																																																																				
		0	No position latch has occurred.																																																																																				
10	Reserved																																																																																						
11	POSIT AFTER HOM	1	Drive is executing absolute positioning according to par. <a href="#">62.10 HOME POS OFFSET</a> after home position has been found and set.																																																																																				
		0	The drive has not reached home position yet.																																																																																				
12	CYC CORR ACTIV	1	Cyclic correction is active.																																																																																				
		0	Cyclic correction is inactive.																																																																																				
13...15	Reserved																																																																																						
6.12	OP MODE ACK	FW block: <a href="#">REFERENCE CTRL</a> (page 160)																																																																																					
	Operation mode acknowledge: 0 = STOPPED, 1 = SPEED, 2 = TORQUE, 3 = MIN, 4 = MAX, 5 = ADD, 6 = POSITION, 7 = SYNCHRON, 8 = HOMING, 9 = PROF VEL, 10 = SCALAR, 11 = FORCED MAGN (i.e. DC Hold).																																																																																						

6.14	SUPERV STATUS	FW block: <a href="#">SUPERVISION</a> (page 156)																			
	Supervision status word. See also parameter group <a href="#">33 SUPERVISION</a> (page 156).																				
	<table><tr><th>Bit</th><th>Name</th><th>Val.</th><th>Information</th></tr><tr><td>0</td><td>SUPERV FUNC1 STATUS</td><td>1</td><td>Supervision function 1 is active (below low limit or over high limit)</td></tr><tr><td>1</td><td>SUPERV FUNC2 STATUS</td><td>1</td><td>Supervision function 2 is active (below low limit or over high limit)</td></tr><tr><td>2</td><td>SUPERV FUNC3 STATUS</td><td>1</td><td>Supervision function 3 is active (below low limit or over high limit)</td></tr><tr><td>3...15</td><td colspan="3">Reserved</td></tr></table>	Bit	Name	Val.	Information	0	SUPERV FUNC1 STATUS	1	Supervision function 1 is active (below low limit or over high limit)	1	SUPERV FUNC2 STATUS	1	Supervision function 2 is active (below low limit or over high limit)	2	SUPERV FUNC3 STATUS	1	Supervision function 3 is active (below low limit or over high limit)	3...15	Reserved		
Bit	Name	Val.	Information																		
0	SUPERV FUNC1 STATUS	1	Supervision function 1 is active (below low limit or over high limit)																		
1	SUPERV FUNC2 STATUS	1	Supervision function 2 is active (below low limit or over high limit)																		
2	SUPERV FUNC3 STATUS	1	Supervision function 3 is active (below low limit or over high limit)																		
3...15	Reserved																				

## Group 08 ALARMS & FAULTS

Signals containing alarm and fault information.

08 ALARMS & FAULTS																																				
8.01	ACTIVE FAULT	FW block: <a href="#">FAULT FUNCTIONS</a> (page 173)																																		
	Fault code of the latest (active) fault.																																			
8.02	LAST FAULT	FW block: <a href="#">FAULT FUNCTIONS</a> (page 173)																																		
	Fault code of the 2nd latest fault.																																			
8.03	FAULT TIME HI	FW block: <a href="#">FAULT FUNCTIONS</a> (page 173)																																		
	Time (real time or power-on time) at which the active fault occurred in format dd.mm.yy (=day.month.year).																																			
8.04	FAULT TIME LO	FW block: <a href="#">FAULT FUNCTIONS</a> (page 173)																																		
	Time (real time or power-on time) at which the active fault occurred in format hh.mm.ss (hours.minutes.seconds).																																			
8.05	ALARM WORD 1	FW block: <a href="#">FAULT FUNCTIONS</a> (page 173)																																		
	Alarm word 1. For possible causes and remedies, see chapter <a href="#">Fault tracing</a> .																																			
	<table><tr><th>Bit</th><th>Alarm</th></tr><tr><td>0</td><td>BRAKE START TORQUE</td></tr><tr><td>1</td><td>BRAKE NOT CLOSED</td></tr><tr><td>2</td><td>BRAKE NOT OPEN</td></tr><tr><td>3</td><td>SAFE TORQUE OFF</td></tr><tr><td>4</td><td>STO MODE CHANGE</td></tr><tr><td>5</td><td>MOTOR TEMPERATURE</td></tr><tr><td>6</td><td>EMERGENCY OFF</td></tr><tr><td>7</td><td>RUN ENABLE</td></tr><tr><td>8</td><td>ID-RUN</td></tr><tr><td>9</td><td>EMERGENCY STOP</td></tr><tr><td>10</td><td>POSITION SCALING</td></tr><tr><td>11</td><td>BR OVERHEAT</td></tr><tr><td>12</td><td>BC OVERHEAT</td></tr><tr><td>13</td><td>DEVICE OVERTEMP</td></tr><tr><td>14</td><td>INTBOARD OVERTEMP</td></tr><tr><td>15</td><td>BC MOD OVERTEMP</td></tr></table>		Bit	Alarm	0	BRAKE START TORQUE	1	BRAKE NOT CLOSED	2	BRAKE NOT OPEN	3	SAFE TORQUE OFF	4	STO MODE CHANGE	5	MOTOR TEMPERATURE	6	EMERGENCY OFF	7	RUN ENABLE	8	ID-RUN	9	EMERGENCY STOP	10	POSITION SCALING	11	BR OVERHEAT	12	BC OVERHEAT	13	DEVICE OVERTEMP	14	INTBOARD OVERTEMP	15	BC MOD OVERTEMP
Bit	Alarm																																			
0	BRAKE START TORQUE																																			
1	BRAKE NOT CLOSED																																			
2	BRAKE NOT OPEN																																			
3	SAFE TORQUE OFF																																			
4	STO MODE CHANGE																																			
5	MOTOR TEMPERATURE																																			
6	EMERGENCY OFF																																			
7	RUN ENABLE																																			
8	ID-RUN																																			
9	EMERGENCY STOP																																			
10	POSITION SCALING																																			
11	BR OVERHEAT																																			
12	BC OVERHEAT																																			
13	DEVICE OVERTEMP																																			
14	INTBOARD OVERTEMP																																			
15	BC MOD OVERTEMP																																			

8.06

ALARM WORD 2

FW block: [FAULT FUNCTIONS](#) (page 173)

Alarm word 2. For possible causes and remedies, see chapter [Fault tracing](#).

Bit	Alarm
0	IGBT OVERTEMP
1	FIELD BUS COMM
2	LOCAL CTRL LOSS
3	AI SUPERVISION
4	Reserved
5	NO MOTOR DATA
6	ENCODER 1 FAILURE
7	ENCODER 2 FAILURE
8	LATCH POS 1 FAILURE
9	LATCH POS 2 FAILURE
10	ENC EMULATION FAILURE
11	FEN TEMP MEAS FAILURE
12	ENC EMUL MAX FREQ
13	ENC EMUL REF ERROR
14	RESOLVER AUTOTUNE ERR
15	ENCODER 1 CABLE

8.07

ALARM WORD 3

FW block: [FAULT FUNCTIONS](#) (page 173)

Alarm word 3. For possible causes and remedies, see chapter [Fault tracing](#).

Bit	Alarm
0	ENCODER 2 CABLE
1	D2D COMMUNICATION
2	D2D BUF OVLOAD
3	PS COMM
4	RESTORE
5	CUR MEAS CALIBRATION
6	AUTOPHASING
7	EARTH FAULT
8	Reserved
9	MOTOR NOM VALUE
10	D2D CONFIG
11...14	Reserved
15	SPEED FEEDBACK

8.08

ALARM WORD 4

FW block: [FAULT FUNCTIONS](#) (page 173)

Alarm word 4. For possible causes and remedies, see chapter [Fault tracing](#).

Bit	Alarm
0	OPTION COMM LOSS
1...15	Reserved

## Group 09 SYSTEM INFO

Drive type, firmware version, option slot information.

09 SYSTEM INFO		
9.01	DRIVE TYPE	FW block: None
	Displays the drive application type. <b>(1)</b> ACSM1 SPEED: Speed and torque control application <b>(2)</b> ACSM1 MOTION: Motion control application	
9.02	DRIVE RATING ID	FW block: None
	Displays the inverter type of the drive. <b>(0)</b> UNCONFIGURED, <b>(1)</b> ACSM1-xxAx-02A5-4, <b>(2)</b> ACSM1-xxAx-03A0-4, <b>(3)</b> ACSM1-xxAx-04A0-4, <b>(4)</b> ACSM1-xxAx-05A0-4, <b>(5)</b> ACSM1-xxAx-07A0-4, <b>(6)</b> ACSM1-xxAx-09A5-4, <b>(7)</b> ACSM1-xxAx-012A-4, <b>(8)</b> ACSM1-xxAx-016A-4, <b>(9)</b> ACSM1-xxAx-024A-4, <b>(10)</b> ACSM1-xxAx-031A-4, <b>(11)</b> ACSM1-xxAx-040A-4, <b>(12)</b> ACSM1-xxAx-046A-4, <b>(13)</b> ACSM1-xxAx-060A-4, <b>(14)</b> ACSM1-xxAx-073A-4, <b>(15)</b> ACSM1-xxAx-090A-4, <b>(20)</b> ACSM1-xxAx-110A-4, <b>(21)</b> ACSM1-xxAx-135A-4, <b>(22)</b> ACSM1-xxAx-175A-4, <b>(23)</b> ACSM1-xxAx-210A-4, <b>(24)</b> ACSM1-xxCx-024A-4, <b>(25)</b> ACSM1-xxCx-031A-4, <b>(26)</b> ACSM1-xxCx-040A-4, <b>(27)</b> ACSM1-xxCx-046A-4, <b>(28)</b> ACSM1-xxCx-060A-4, <b>(29)</b> ACSM1-xxCx-073A-4, <b>(30)</b> ACSM1-xxCx-090A-4, <b>(31)</b> ACSM1-xxLx-110A-4, <b>(32)</b> ACSM1-xxLx-135A-4, <b>(33)</b> ACSM1-xxLx-175A-4, <b>(34)</b> ACSM1-xxLx-210A-4, <b>(35)</b> ACSM1-xxLx-260A-4	
9.03	FIRMWARE ID	FW block: None
	Displays the firmware name. E.g. UMFI.	
9.04	FIRMWARE VER	FW block: None
	Displays the version of the firmware package in the drive, e.g. 0x1460 (1460 hex).	
9.05	FIRMWARE PATCH	FW block: None
	Displays the version of the firmware patch in the drive.	
9.10	INT LOGIC VER	FW block: None
	Displays the version of the logic in the power unit interface.	
9.20	OPTION SLOT 1	FW block: None
	Displays the type of the optional module in option Slot 1. <b>(0)</b> NO OPTION, <b>(1)</b> NO COMM, <b>(2)</b> UNKNOWN, <b>(3)</b> FEN-01, <b>(4)</b> FEN-11, <b>(5)</b> FEN-21, <b>(6)</b> FIO-01, <b>(7)</b> FIO-11, <b>(8)</b> FPBA-01, <b>(9)</b> FPBA-02, <b>(10)</b> FCAN-01, <b>(11)</b> FDNA-01, <b>(12)</b> FENA-01, <b>(13)</b> FENA-02, <b>(14)</b> FLON-01, <b>(15)</b> FRSA-00, <b>(16)</b> FMBA-01, <b>(17)</b> FFOA-01, <b>(18)</b> FFOA-02, <b>(19)</b> FSEN-01, <b>(20)</b> FEN-31, <b>(21)</b> FIO-21	
9.21	OPTION SLOT 2	FW block: None
	Displays the type of the optional module in option Slot 2. See signal <a href="#">9.20 OPTION SLOT 1</a> .	


9.22	OPTION SLOT 3	FW block: None
	Displays the type of the optional module in option Slot 3. See signal <a href="#">9.20 OPTION SLOT 1</a> .	

## Group 10 START/STOP

Settings for

- selecting start/stop/direction signal sources for external control locations EXT1 and EXT2
- selecting sources for external fault reset, run enable and start enable signals
- selecting sources for emergency stop (OFF1 and OFF3)
- selecting source for jogging function activation signal
- enabling the start inhibit function.

See also section *Jogging* on page 46.

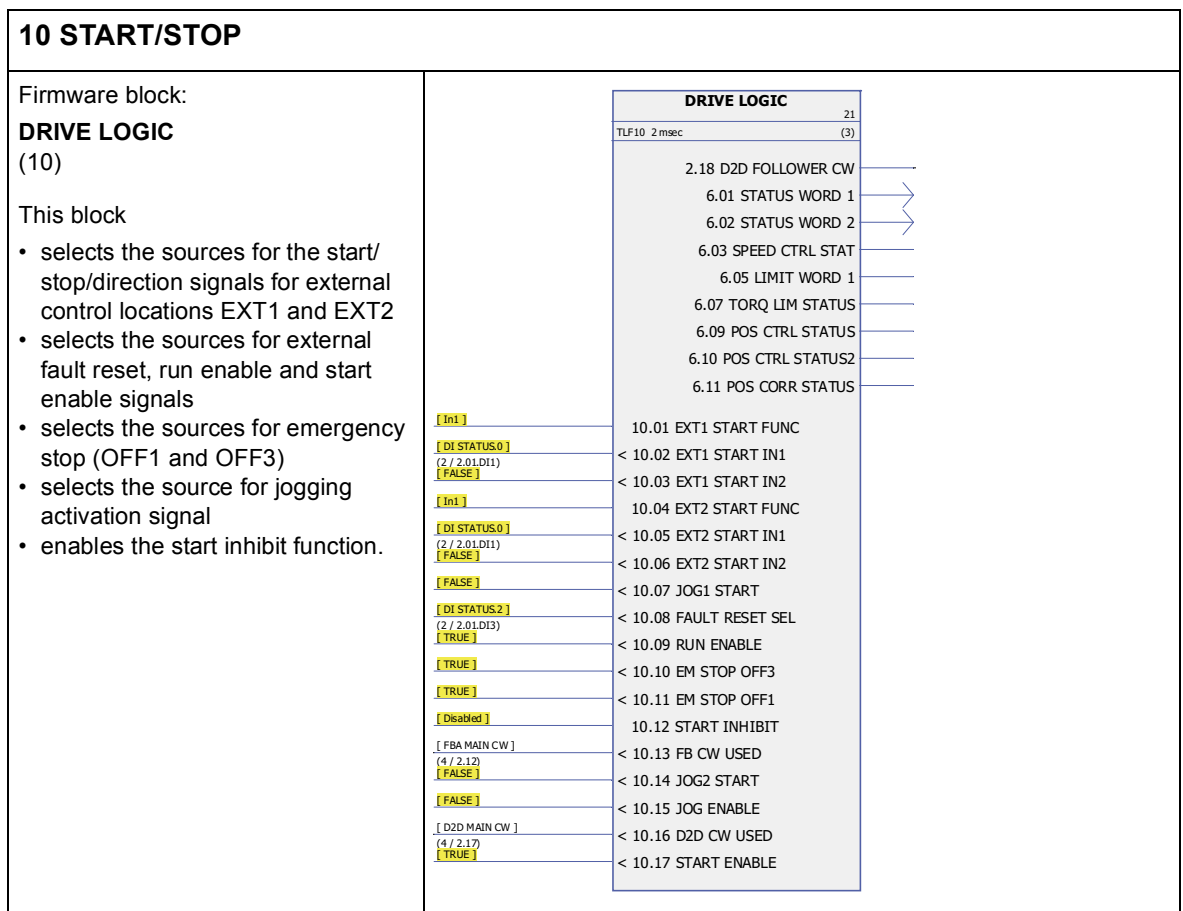

Block outputs located in other parameter groups		2.18 D2D FOLLOWER CW (page 86) 6.01 STATUS WORD 1 (page 91) 6.02 STATUS WORD 2 (page 92) 6.03 SPEED CTRL STAT (page 93) 6.05 LIMIT WORD 1 (page 93) 6.07 TORQ LIM STATUS (page 94) 6.09 POS CTRL STATUS (page 95) 6.10 POS CTRL STATUS2 (page 96) 6.11 POS CORR STATUS (page 97)															
10.01	EXT1 START FUNC	FW block: DRIVE LOGIC (see above)															
Selects the source for the start and stop control in external control location EXT1. <b>Note:</b> This parameter cannot be changed while the drive is running.																	
	(0) NOT SEL	No source selected.															
	(1) IN1	Source of the start and stop commands are selected by parameter 10.02 EXT1 START IN1. The start/stop is controlled as follows: <table><tr><th>Par. 10.02</th><th>Command</th></tr><tr><td>0 -&gt; 1</td><td>Start</td></tr><tr><td>1 -&gt; 0</td><td>Stop</td></tr></table>	Par. 10.02	Command	0 -> 1	Start	1 -> 0	Stop									
Par. 10.02	Command																
0 -> 1	Start																
1 -> 0	Stop																
	(2) 3-WIRE	Source of the start and stop commands are selected by parameters 10.02 EXT1 START IN1 and 10.03 EXT1 START IN2. The start/stop is controlled as follows: <table><tr><th>Par. 10.02</th><th>Par. 10.03</th><th>Command</th></tr><tr><td>0 -&gt; 1</td><td>1</td><td>Start</td></tr><tr><td>Any</td><td>1 -&gt; 0</td><td>Stop</td></tr><tr><td>Any</td><td>0</td><td>Stop</td></tr></table>	Par. 10.02	Par. 10.03	Command	0 -> 1	1	Start	Any	1 -> 0	Stop	Any	0	Stop			
Par. 10.02	Par. 10.03	Command															
0 -> 1	1	Start															
Any	1 -> 0	Stop															
Any	0	Stop															
	(3) FBA	Start and stop control from the source selected by parameter 10.13 FB CW USED.															
	(4) D2D	Start and stop control from another drive via D2D Control Word.															
	(5) IN1F IN2R	The source selected by 10.02 EXT1 START IN1 is the forward start signal, the source selected by 10.03 EXT1 START IN2 is the reverse start signal. <table><tr><th>Par. 10.02</th><th>Par. 10.03</th><th>Command</th></tr><tr><td>0</td><td>0</td><td>Stop</td></tr><tr><td>1</td><td>0</td><td>Start forward</td></tr><tr><td>0</td><td>1</td><td>Start reverse</td></tr><tr><td>1</td><td>1</td><td>Stop</td></tr></table>	Par. 10.02	Par. 10.03	Command	0	0	Stop	1	0	Start forward	0	1	Start reverse	1	1	Stop
Par. 10.02	Par. 10.03	Command															
0	0	Stop															
1	0	Start forward															
0	1	Start reverse															
1	1	Stop															
	(6) IN1S IN2DIR	The source selected by 10.02 EXT1 START IN1 is the start signal (0 = stop, 1 = start), the source selected by 10.03 EXT1 START IN2 is the direction signal (0 = forward, 1 = reverse).															



10.02	EXT1 START IN1	FW block: <a href="#">DRIVE LOGIC</a> (see above)															
	Selects the source 1 for the start and stop commands in external control location EXT1. See parameter <a href="#">10.01 EXT1 START FUNC</a> selections (1) IN1 and (2) 3-WIRE. <b>Note:</b> This parameter cannot be changed while the drive is running.																
	Bit pointer: Group, index and bit																
10.03	EXT1 START IN2	FW block: <a href="#">DRIVE LOGIC</a> (see above)															
	Selects the source 2 for the start and stop commands in external control location EXT1. See parameter <a href="#">10.01 EXT1 START FUNC</a> selection (2) 3-WIRE. <b>Note:</b> This parameter cannot be changed while the drive is running.																
	Bit pointer: Group, index and bit																
10.04	EXT2 START FUNC	FW block: <a href="#">DRIVE LOGIC</a> (see above)															
	Selects the source for the start and stop control in external control location EXT2. <b>Note:</b> This parameter cannot be changed while the drive is running.																
	(0) NOT SEL	No source selected.															
	(1) IN1	Source of the start and stop commands are selected by parameter <a href="#">10.05 EXT2 START IN1</a> . The start/stop is controlled as follows: <table border="1"><thead><tr><th>Par. 10.05</th><th>Command</th></tr></thead><tbody><tr><td>0 -&gt; 1</td><td>Start</td></tr><tr><td>1 -&gt; 0</td><td>Stop</td></tr></tbody></table>	Par. 10.05	Command	0 -> 1	Start	1 -> 0	Stop									
Par. 10.05	Command																
0 -> 1	Start																
1 -> 0	Stop																
	(2) 3-WIRE	Source of the start and stop commands are selected by parameters <a href="#">10.05 EXT2 START IN1</a> and <a href="#">10.06 EXT2 START IN2</a> . The start/stop is controlled as follows: <table border="1"><thead><tr><th>Par. 10.05</th><th>Par. 10.06</th><th>Command</th></tr></thead><tbody><tr><td>0 -&gt; 1</td><td>1</td><td>Start</td></tr><tr><td>Any</td><td>1 -&gt; 0</td><td>Stop</td></tr><tr><td>Any</td><td>0</td><td>Stop</td></tr></tbody></table>	Par. 10.05	Par. 10.06	Command	0 -> 1	1	Start	Any	1 -> 0	Stop	Any	0	Stop			
Par. 10.05	Par. 10.06	Command															
0 -> 1	1	Start															
Any	1 -> 0	Stop															
Any	0	Stop															
	(3) FBA	Start and stop control from the source selected by parameter <a href="#">10.13 FB CW USED</a> .															
	(4) D2D	Start and stop control from another drive via D2D Control Word.															
	(5) IN1F IN2R	The source selected by <a href="#">10.05 EXT2 START IN1</a> is the forward start signal, the source selected by <a href="#">10.06 EXT2 START IN2</a> is the reverse start signal. <table border="1"><thead><tr><th>Par. 10.05</th><th>Par. 10.06</th><th>Command</th></tr></thead><tbody><tr><td>0</td><td>0</td><td>Stop</td></tr><tr><td>1</td><td>0</td><td>Start forward</td></tr><tr><td>0</td><td>1</td><td>Start reverse</td></tr><tr><td>1</td><td>1</td><td>Stop</td></tr></tbody></table>	Par. 10.05	Par. 10.06	Command	0	0	Stop	1	0	Start forward	0	1	Start reverse	1	1	Stop
Par. 10.05	Par. 10.06	Command															
0	0	Stop															
1	0	Start forward															
0	1	Start reverse															
1	1	Stop															


	(6) IN1S IN2DIR	The source selected by <a href="#">10.05 EXT2 START IN1</a> is the start signal (0 = stop, 1 = start), the source selected by <a href="#">10.06 EXT2 START IN2</a> is the direction signal (0 = forward, 1 = reverse).
<b>10.05</b>	EXT2 START IN1	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	Selects the source 1 for the start and stop commands in external control location EXT2. See parameter <a href="#">10.04 EXT2 START FUNC</a> selections (1) IN1 and (2) 3-WIRE. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	Bit pointer: Group, index and bit	
<b>10.06</b>	EXT2 START IN2	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	Selects the source 2 for the start and stop commands in external control location EXT2. See parameter <a href="#">10.04 EXT2 START FUNC</a> selection (2) 3-WIRE. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	Bit pointer: Group, index and bit	
<b>10.07</b>	JOG1 START	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	If enabled by parameter <a href="#">10.15 JOG ENABLE</a> , selects the source for the activation of jogging function 1. 1 = Active. (Jogging function 1 can also be activated through fieldbus regardless of parameter <a href="#">10.15</a> .) See section <a href="#">Jogging</a> on page 46. See also other jogging function parameters: <a href="#">10.14 JOG2 START</a> , <a href="#">10.15 JOG ENABLE</a> , <a href="#">24.03 SPEED REF1 IN</a> / <a href="#">24.04 SPEED REF2 IN</a> , <a href="#">24.10 SPEED REF JOG1</a> , <a href="#">24.11 SPEED REF JOG2</a> , <a href="#">25.09 ACC TIME JOGGING</a> , <a href="#">25.10 DEC TIME JOGGING</a> and <a href="#">22.06 ZERO SPEED DELAY</a> . <b>Note:</b> This parameter cannot be changed while the drive is running.	
	Bit pointer: Group, index and bit	
<b>10.08</b>	FAULT RESET SEL	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	Selects the source for the external fault reset signal. The signal resets the drive after a fault trip if the cause of the fault no longer exists. 1 = Fault reset.	
	Bit pointer: Group, index and bit	
<b>10.09</b>	RUN ENABLE	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	Selects the source for the run enable signal. If the run enable signal is switched off, the drive will not start or stops if the drive is running. 1 = Run enable. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	Bit pointer: Group, index and bit	
<b>10.10</b>	EM STOP OFF3	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	Selects the source for the emergency stop OFF3. 0 = OFF3 active: The drive is stopped along the emergency stop ramp time, <a href="#">25.11 EM STOP TIME</a> . Emergency stop can also be activated through fieldbus ( <a href="#">2.12 FBA MAIN CW</a> ). See section <a href="#">Emergency stop</a> on page 71. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	Bit pointer: Group, index and bit	


<b>10.11</b>	EM STOP OFF1	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	<p>Selects the source for the emergency stop OFF1. 0 = OFF1 active: The drive is stopped with the active deceleration time.</p> <p>Emergency stop can also be activated through fieldbus (<a href="#">2.12 FBA MAIN CW</a>).</p> <p>See section <a href="#">Emergency stop</a> on page 71.</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	Bit pointer: Group, index and bit	
<b>10.12</b>	START INHIBIT	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	<p>Enables the start inhibit function. The start inhibit function prevents drive restart (i.e. protects against unexpected start) if</p> <ul style="list-style-type: none"> <li>• drive trips on a fault and fault is reset.</li> <li>• run enable signal activates while the start command is active. See parameter <a href="#">10.09 RUN ENABLE</a>.</li> <li>• control changes from local to remote.</li> <li>• external control switches from EXT1 to EXT2 or from EXT2 to EXT1.</li> </ul> <p>An active start inhibit can be reset with a stop command.</p> <p>Note that in certain applications it is necessary to allow the drive to restart.</p>	
	(0) DISABLED	Start inhibit function disabled.
	(1) ENABLED	Start inhibit function enabled.
<b>10.13</b>	FB CW USED	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	<p>Selects the source for the control word when fieldbus (FBA) is selected as the external start and stop control location (see parameters <a href="#">10.01 EXT1 START FUNC</a> and <a href="#">10.04 EXT2 START FUNC</a>). By default, the source is parameter <a href="#">2.12 FBA MAIN CW</a>.</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	Value pointer: Group and index	
<b>10.14</b>	JOG2 START	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	<p>If enabled by parameter <a href="#">10.15 JOG ENABLE</a>, selects the source for the activation of jogging function 2. 1 = Active. (Jogging function 2 can also be activated through fieldbus regardless of parameter <a href="#">10.15</a>.)</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	Bit pointer: Group, index and bit	
<b>10.15</b>	JOG ENABLE	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	<p>Selects the source for enabling parameters <a href="#">10.07 JOG1 START</a> and <a href="#">10.14 JOG2 START</a>.</p> <p><b>Note:</b> Jogging can be enabled using this parameter only when no start command from an external control location is active. On the other hand, if jogging is already enabled, the drive cannot be started from an external control location apart from jog commands through fieldbus.</p>	
	Bit pointer: Group, index and bit	
<b>10.16</b>	D2D CW USED	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	<p>Selects the source for the control word for drive-to-drive communication. By default, the source is parameter <a href="#">2.17 D2D MAIN CW</a>.</p>	


	Value pointer: Group and index	
10.17	START ENABLE	FW block: <a href="#">DRIVE LOGIC</a> (see above)
	<p>Selects the source for the start enable signal. If the start enable signal is switched off, the drive will not start or stops if the drive is running. 1 = Start enable.</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	Bit pointer: Group, index and bit	

## Group 11 START/STOP MODE

These parameters select the start and stop functions as well as the autophasing mode, define the DC magnetising time of the motor, and configure the DC hold function.




11 START/STOP MODE		
Firmware block: <b>START/STOP MODE</b> (11)		<div><div>START/STOP MODE</div><div><div>TLF10 2 msec22</div><div>(4)</div></div><div><div>[ Const time ]</div><div>11.01 START MODE</div></div><div><div>[ 500 ms ]</div><div>11.02 DC MAGN TIME</div></div><div><div>[ Ramp ]</div><div>11.03 STOP MODE</div></div><div><div>[ 5.0 rpm ]</div><div>11.04 DC HOLD SPEED</div></div><div><div>[ 30 % ]</div><div>11.05 DC HOLD CUR REF</div></div><div><div>[ Disabled ]</div><div>11.06 DC HOLD</div></div><div><div>[ Turning ]</div><div>11.07 AUTOPHASING MODE</div></div></div>
11.01	START MODE	FW block: START/STOP MODE (see above)
	<p>Selects the motor start function.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"><li>• Selections (0) FAST and (1) CONST TIME are ignored if parameter 99.05 MOTOR CTRL MODE is set to (1) SCALAR.</li><li>• Starting to a rotating machine is not possible when DC magnetising is selected ((0) FAST or (1) CONST TIME).</li><li>• With permanent magnet motors, automatic start must be used.</li><li>• This parameter cannot be changed while the drive is running.</li></ul>	
	(0) FAST	DC magnetising should be selected if a high break-away torque is required. The drive pre-magnetises the motor before the start. The pre-magnetising time is determined automatically, being typically 200 ms to 2 s depending on the motor size.
	(1) CONST TIME	<p>Constant DC magnetising should be selected instead of DC magnetising if constant pre-magnetising time is required (e.g. if the motor start must be simultaneous with a mechanical brake release). This selection also guarantees the highest possible break-away torque when the pre-magnetising time is set long enough. The pre-magnetising time is defined by parameter 11.02 DC MAGN TIME.</p> <div><div></div><div><p><b>WARNING!</b> The drive will start after the set magnetising time has passed even if motor magnetisation is not completed. In applications where a full break-away torque is essential, ensure that the constant magnetising time is long enough to allow generation of full magnetisation and torque.</p></div></div>
	(2) AUTOMATIC	<p>Automatic start guarantees optimal motor start in most cases. It includes the flying start function (starting to a rotating machine) and the automatic restart function (stopped motor can be restarted immediately without waiting the motor flux to die away). The drive motor control program identifies the flux as well as the mechanical state of the motor and starts the motor instantly under all conditions.</p> <p><b>Note:</b> If parameter 99.05 MOTOR CTRL MODE is set to (1) SCALAR, no flying start or automatic restart is possible by default.</p>

11.02	DC MAGN TIME	FW block: <a href="#">START/STOP MODE</a> (see above)										
	<p>Defines the constant DC magnetising time. See parameter <a href="#">11.01 START MODE</a>. After the start command, the drive automatically premagnetises the motor the set time.</p> <p>To ensure full magnetising, set this value to the same value as or higher than the rotor time constant. If not known, use the rule-of-thumb value given in the table below:</p> <table><tr><th>Motor rated power</th><th>Constant magnetising time</th></tr><tr><td>&lt; 1 kW</td><td>≥ 50 to 100 ms</td></tr><tr><td>1 to 10 kW</td><td>≥ 100 to 200 ms</td></tr><tr><td>10 to 200 kW</td><td>≥ 200 to 1000 ms</td></tr><tr><td>200 to 1000 kW</td><td>≥ 1000 to 2000 ms</td></tr></table> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>		Motor rated power	Constant magnetising time	< 1 kW	≥ 50 to 100 ms	1 to 10 kW	≥ 100 to 200 ms	10 to 200 kW	≥ 200 to 1000 ms	200 to 1000 kW	≥ 1000 to 2000 ms
Motor rated power	Constant magnetising time											
< 1 kW	≥ 50 to 100 ms											
1 to 10 kW	≥ 100 to 200 ms											
10 to 200 kW	≥ 200 to 1000 ms											
200 to 1000 kW	≥ 1000 to 2000 ms											
	0...10000 ms	DC magnetising time.										
11.03	STOP MODE	FW block: <a href="#">START/STOP MODE</a> (see above)										
	Selects the motor stop function.											
	(1) COAST	<p>Stop by cutting of the motor power supply. The motor coasts to a stop.</p> <div><b>WARNING!</b> If the mechanical brake is used, ensure it is safe to stop the drive by coasting. For more information on mechanical brake function, see parameter group <a href="#">35 MECH BRAKE CTRL</a>.</div>										
	(2) RAMP	Stop along ramp. See parameter group <a href="#">25 SPEED REF RAMP</a> .										
11.04	DC HOLD SPEED	FW block: <a href="#">START/STOP MODE</a> (see above)										
	Defines the DC hold speed. See parameter <a href="#">11.06 DC HOLD</a> .											
	0...1000 rpm	DC hold speed.										
11.05	DC HOLD CUR REF	FW block: <a href="#">START/STOP MODE</a> (see above)										
	Defines the DC hold current in percent of the motor nominal current. See parameter <a href="#">11.06 DC HOLD</a> .											
	0...100%	DC hold current.										
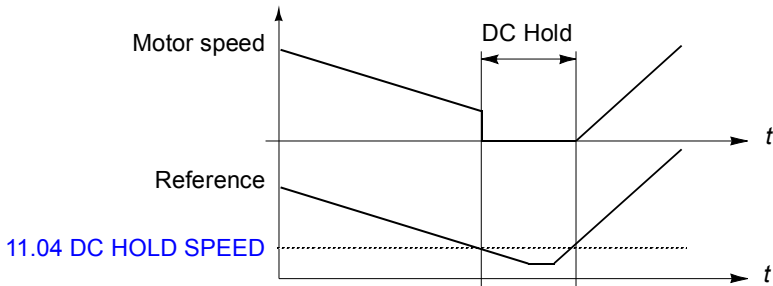
<b>11.06</b>	<b>DC HOLD</b>	FW block: <a href="#">START/STOP MODE</a> (see above)
	<p>Enables the DC hold function. The function makes it possible to lock the rotor at zero speed. When both the reference and the speed drop below the value of parameter <a href="#">11.04 DC HOLD SPEED</a>, the drive will stop generating sinusoidal current and start to inject DC into the motor. The current is set by parameter <a href="#">11.05 DC HOLD CUR REF</a>. When the reference speed exceeds parameter <a href="#">11.04 DC HOLD SPEED</a>, normal drive operation continues.</p>  <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The DC hold function has no effect if the start signal is switched off.</li> <li>• The DC hold function can only be activated in speed control mode.</li> <li>• The DC hold function cannot be activated if par. <a href="#">99.05 MOTOR CTRL MODE</a> is set to <a href="#">(1) SCALAR</a>.</li> <li>• Injecting DC current into the motor causes the motor to heat up. In applications where long DC hold times are required, externally ventilated motors should be used. If the DC hold period is long, the DC hold cannot prevent the motor shaft from rotating if a constant load is applied to the motor.</li> </ul>	
	<b>(0) DISABLED</b>	DC hold function disabled.
	<b>(1) ENABLED</b>	DC hold function enabled.
<b>11.07</b>	<b>AUTOPHASING MODE</b>	FW block: <a href="#">START/STOP MODE</a> (see above)
	Selects the way autophasing is performed during the ID run. See also section <a href="#">Autophasing</a> on page <a href="#">40</a> .	
	<b>(0) TURNING</b>	This mode gives the most accurate autophasing result. This mode can be used, and is recommended, if it is allowed for the motor to rotate during the ID run and the start-up is not time-critical. <b>Note:</b> This mode will cause the motor to rotate during the ID run.
	<b>(1) STANDSTILL 1</b>	Faster than the <a href="#">(0) TURNING</a> mode, but not as accurate. The motor will not rotate.
	<b>(2) STANDSTILL 2</b>	An alternative standstill autophasing mode that can be used if the <a href="#">TURNING</a> mode cannot be used, and the <a href="#">(1) STANDSTILL 1</a> mode gives erratic results. However, this mode is considerably slower than <a href="#">(1) STANDSTILL 1</a> .




## Group 12 DIGITAL IO

Settings for the digital inputs and outputs, and the relay output.

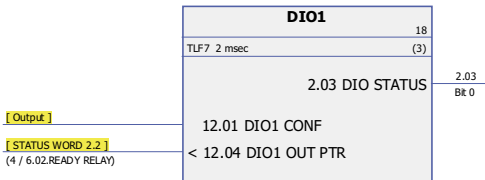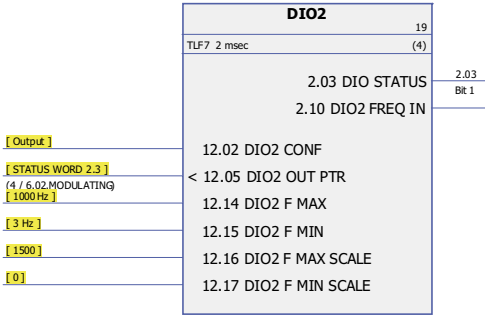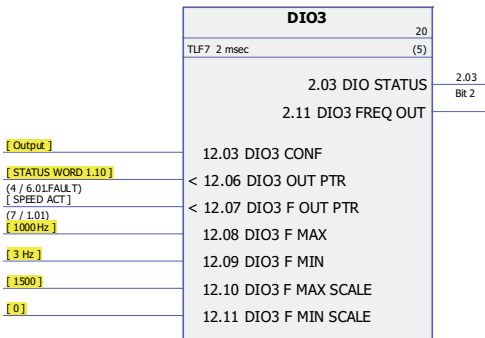12 DIGITAL IO		
Firmware block: <b>DIO1</b> (6)	 <p>Output</p> <p>STATUS WORD 2.2 (4 / 6.02.READY RELAY)</p> <p>2.03 DIO STATUS Bit 0</p> <p>12.01 DIO1 CONF &lt; 12.04 DIO1 OUT PTR</p>	
Block outputs located in other parameter groups	2.03 DIO STATUS (page 80)	
Firmware block: <b>DIO2</b> (7)	 <p>Output</p> <p>STATUS WORD 2.3 (4 / 6.02.MODULATING 1000Hz)</p> <p>3 Hz</p> <p>1500</p> <p>0</p> <p>2.03 DIO STATUS Bit 1</p> <p>2.10 DIO2 FREQ IN</p> <p>12.02 DIO2 CONF &lt; 12.05 DIO2 OUT PTR 12.14 DIO2 F MAX 12.15 DIO2 F MIN 12.16 DIO2 F MAX SCALE 12.17 DIO2 F MIN SCALE</p>	
Block outputs located in other parameter groups	2.03 DIO STATUS (page 80) 2.10 DIO2 FREQ IN (page 80)	
Firmware block: <b>DIO3</b> (8)	 <p>Output</p> <p>STATUS WORD 1.10 (4 / 6.01.FAULT) SPEED ACT (7 / 1.01) 1000Hz</p> <p>3 Hz</p> <p>1500</p> <p>0</p> <p>2.03 DIO STATUS Bit 2</p> <p>2.11 DIO3 FREQ OUT</p> <p>12.03 DIO3 CONF &lt; 12.06 DIO3 OUT PTR &lt; 12.07 DIO3 F OUT PTR 12.08 DIO3 F MAX 12.09 DIO3 F MIN 12.10 DIO3 F MAX SCALE 12.11 DIO3 F MIN SCALE</p>	
Block outputs located in other parameter groups	2.03 DIO STATUS (page 80) 2.11 DIO3 FREQ OUT (page 80)	
12.01	DIO1 CONF	FW block: DIO1 (see above)
	Selects whether DIO1 is used as a digital input or as a digital output.	
	(0) OUTPUT	DIO1 is used as a digital output.



	(1) INPUT	DIO1 is used as a digital input.
12.02	DIO2 CONF	FW block: <a href="#">DIO2</a> (see above)
	Selects whether DIO2 is used as a digital input, as a digital output or as a frequency input.	
	(0) OUTPUT	DIO2 is used as a digital output.
	(1) INPUT	DIO2 is used as a digital input.
	(2) FREQ INPUT	DIO2 is used as a frequency input.
12.03	DIO3 CONF	FW block: <a href="#">DIO3</a> (see above)
	Selects whether DIO3 is used as a digital input, as a digital output or as a frequency output.	
	(0) OUTPUT	DIO2 is used as a digital output.
	(1) INPUT	DIO2 is used as a digital input.
	(2) FREQ OUTPUT	DIO2 is used as a frequency output.
12.04	DIO1 OUT PTR	FW block: <a href="#">DIO1</a> (see above)
	Selects a drive signal to be connected to digital output DIO1 (when <a href="#">12.01 DIO1 CONF</a> is set to (0) <a href="#">OUTPUT</a> ).	
	Bit pointer: Group, index and bit	
12.05	DIO2 OUT PTR	FW block: <a href="#">DIO2</a> (see above)
	Selects a drive signal to be connected to digital output DIO2 (when <a href="#">12.02 DIO2 CONF</a> is set to (0) <a href="#">OUTPUT</a> ).	
	Bit pointer: Group, index and bit	
12.06	DIO3 OUT PTR	FW block: <a href="#">DIO3</a> (see above)
	Selects a drive signal to be connected to digital output DIO3 (when <a href="#">12.03 DIO3 CONF</a> is set to (0) <a href="#">OUTPUT</a> ).	
	Bit pointer: Group, index and bit	
12.07	DIO3 F OUT PTR	FW block: <a href="#">DIO3</a> (see above)
	Selects a drive signal to be connected to frequency output (when <a href="#">12.03 DIO3 CONF</a> is set to (2) <a href="#">FREQ OUTPUT</a> ).	
	Value pointer: Group and index	
12.08	DIO3 F MAX	FW block: <a href="#">DIO3</a> (see above)
	Defines the maximum value for frequency output (when <a href="#">12.03 DIO3 CONF</a> is set to (2) <a href="#">FREQ OUTPUT</a> ).	
	3...32768 Hz	Maximum DIO3 output frequency.

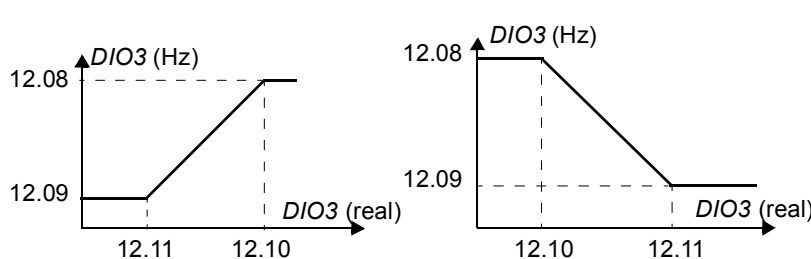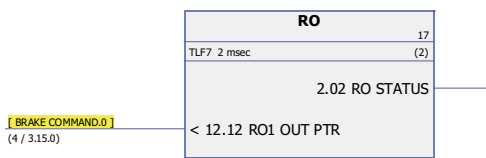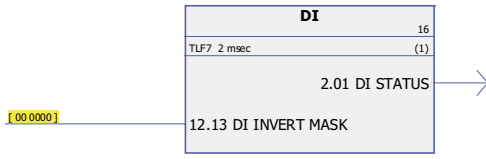12.09	DIO3 F MIN	FW block: <a href="#">DIO3</a> (see above)
	Defines the minimum value for frequency output (when <a href="#">12.03 DIO3 CONF</a> is set to <a href="#">(2) FREQ OUTPUT</a> ).	
	3...32768 Hz	Minimum DIO3 output frequency.
12.10	DIO3 F MAX SCALE	FW block: <a href="#">DIO3</a> (see above)
	Defines the real value that corresponds to the maximum frequency output value defined by parameter <a href="#">12.08 DIO3 F MAX</a> .	
		
	0...32768	Real value corresponding to value of parameter <a href="#">12.08</a> .
12.11	DIO3 F MIN SCALE	FW block: <a href="#">DIO3</a> (see above)
	Defines the real value that corresponds to the minimum frequency output value defined by parameter <a href="#">12.09 DIO3 F MIN</a> . See parameter <a href="#">12.10 DIO3 F MAX SCALE</a> .	
	0...32768	Real value corresponding to value of parameter <a href="#">12.09</a> .
Firmware block: <b>RO</b> (5)  Connects an actual signal to the relay output. The block also shows the relay output status.		
		
Block outputs located in other parameter groups		<a href="#">2.02 RO STATUS</a> (page 80)
12.12	RO1 OUT PTR	FW block: <a href="#">RO</a> (see above)
	Selects a drive signal to be connected to relay output RO1.	
	Bit pointer: Group, index and bit	
Firmware block: <b>DI</b> (4)  Shows the status of the digital inputs. Inverts the status of any DI if desired.		
		
Block outputs located in other parameter groups		<a href="#">2.01 DI STATUS</a> (page 80)

<b>12.13</b>	DI INVERT MASK	FW block: <a href="#">DI</a> (see above)
	Inverts status of digital inputs as reported by <a href="#">2.01 DI STATUS</a> . For example, a value of 0b000100 inverts the status of DI3 in the signal.	
	0b000000...0b111111	DI status inversion mask.
<b>12.14</b>	DIO2 F MAX	FW block: <a href="#">DIO2</a> (see above)
	Defines the maximum value for frequency input (when <a href="#">12.02 DIO2 CONF</a> is set to <a href="#">(2) FREQ INPUT</a> ).	
	3...32768 Hz	Maximum DIO2 input frequency.
<b>12.15</b>	DIO2 F MIN	FW block: <a href="#">DIO2</a> (see above)
	Defines the minimum value for frequency input (when <a href="#">12.02 DIO2 CONF</a> is set to <a href="#">(2) FREQ INPUT</a> ).	
	3...32768 Hz	Minimum DIO2 input frequency.
<b>12.16</b>	DIO2 F MAX SCALE	FW block: <a href="#">DIO2</a> (see above)
	<p>Defines the real value that corresponds to the maximum frequency input value defined by parameter <a href="#">12.14 DIO2 F MAX</a>.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;"> <p><i>DIO2 (Hz)</i></p> <p>The graph shows a horizontal line at 12.15 Hz for real values up to 12.17. Between 12.17 and 12.16, the frequency increases linearly from 12.15 Hz to 12.14 Hz. For real values greater than 12.16, the frequency remains constant at 12.14 Hz.</p> </div> <div style="text-align: center;"> <p><i>DIO2 (Hz)</i></p> <p>The graph shows a horizontal line at 12.14 Hz for real values up to 12.16. Between 12.16 and 12.17, the frequency decreases linearly from 12.14 Hz to 12.15 Hz. For real values greater than 12.17, the frequency remains constant at 12.15 Hz.</p> </div> </div>	
	-32768...32768	Real value corresponding to value of parameter <a href="#">12.14</a> .
<b>12.17</b>	DIO2 F MIN SCALE	FW block: <a href="#">DIO2</a> (see above)
	Defines the real value that corresponds to the minimum frequency input value defined by parameter <a href="#">12.15 DIO2 F MIN</a> . See parameter <a href="#">12.16 DIO2 F MAX SCALE</a> .	
	-32768...32768	Real value corresponding to value of parameter <a href="#">12.15</a> .

## Group 13 ANALOGUE INPUTS

Settings for the analogue inputs.



The drive offers two programmable analogue inputs, AI1 and AI2. Both inputs can be used either as a voltage or a current input (-11...11 V or -22...22 mA). The input type is selected with jumpers J1 and J2 respectively on the JCU Control Unit.


The inaccuracy of the analogue inputs is 1% of the full scale range and the resolution is 11 bits (+ sign). The hardware filter time constant is approximately 0.25 ms.



Analogue inputs can be used as the source for speed and torque reference.

Analogue input supervision can be added with standard function blocks. See chapter Standard function blocks.

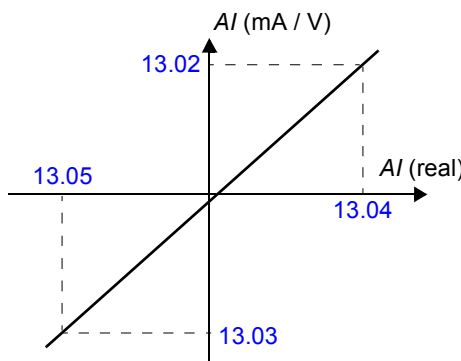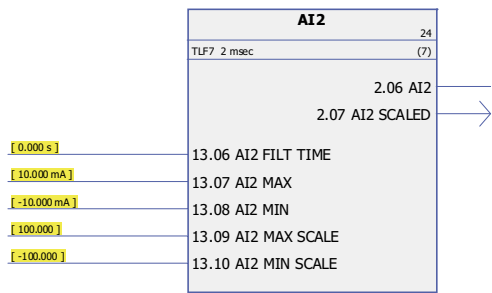13 ANALOGUE INPUTS		
Firmware block: <b>AI1</b> (12) Filters and scales the analogue input AI1 signal and selects the AI1 supervision. Also shows the value of the input.		
Block outputs located in other parameter groups		<a href="#">2.04 AI1</a> (page 80) <a href="#">2.05 AI1 SCALED</a> (page 80)
<b>13.01</b>	AI1 FILT TIME	FW block: <a href="#">AI1</a> (see above)
Defines the filter time constant for analogue input AI1. $O = I \cdot (1 - e^{-t/T})$ <p> <math>I</math> = filter input (step)  <math>O</math> = filter output  <math>t</math> = time  <math>T</math> = filter time constant         </p> <p><b>Note:</b> The signal is also filtered due to the signal interface hardware (approximately 0.25 ms time constant). This cannot be changed by any parameter.</p>		
	0...30 s	Filter time constant for AI1.
<b>13.02</b>	AI1 MAX	FW block: <a href="#">AI1</a> (see above)
Defines the maximum value for analogue input AI1. The type is selected with jumper J1 on the JCU Control Unit.		
	-11...11 V / -22...22 mA	Maximum AI1 input value.
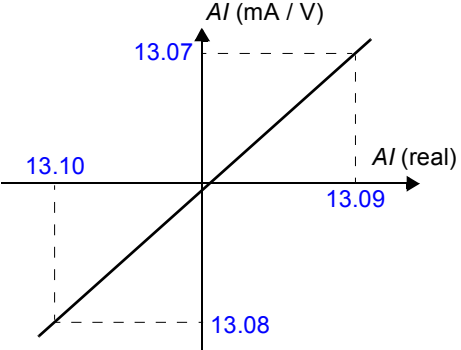
<b>13.03</b>	AI1 MIN	FW block: <a href="#">AI1</a> (see above)
	Defines the minimum value for analogue input AI1. The type is selected with jumper J1 on the JCU Control Unit.	
	-11...11 V / -22...22 mA	Minimum AI1 input value.
<b>13.04</b>	AI1 MAX SCALE	FW block: <a href="#">AI1</a> (see above)
	Defines the real value that corresponds to the maximum analogue input value defined by parameter <a href="#">13.02 AI1 MAX</a> . 	
	-32768...32768	Real value corresponding to value of parameter <a href="#">13.02</a> .
<b>13.05</b>	AI1 MIN SCALE	FW block: <a href="#">AI1</a> (see above)
	Defines the real value that corresponds to the minimum analogue input value defined by parameter <a href="#">13.03 AI1 MIN</a> . See parameter <a href="#">13.04 AI1 MAX SCALE</a> .	
	-32768...32768	Real value corresponding to value of parameter <a href="#">13.03</a> .
Firmware block: <b>AI2</b> (13)  Filters and scales the analogue input AI2 signal and selects the AI2 supervision. Also shows the value of the input.		
Block outputs located in other parameter groups		<a href="#">2.06 AI2</a> (page 80) <a href="#">2.07 AI2 SCALED</a> (page 80)
<b>13.06</b>	AI2 FILT TIME	FW block: <a href="#">AI2</a> (see above)
	Defines the filter time constant for analogue input AI2. See parameter <a href="#">13.01 AI1 FILT TIME</a> .	
	0...30 s	Filter time constant for AI2.
<b>13.07</b>	AI2 MAX	FW block: <a href="#">AI2</a> (see above)
	Defines the maximum value for analogue input AI2. The type is selected with jumper J2 on the JCU Control Unit.	

	-11...11 V / -22...22 mA	Maximum AI2 input value.
<b>13.08</b>	AI2 MIN	FW block: <a href="#">AI2</a> (see above)
	Defines the minimum value for analogue input AI2. The type is selected with jumper J2 on the JCU Control Unit.	
	-11...11 V / -22...22 mA	Minimum AI2 input value.
<b>13.09</b>	AI2 MAX SCALE	FW block: <a href="#">AI2</a> (see above)
	<p>Defines the real value that corresponds to the maximum analogue input value defined by parameter <a href="#">13.07 AI2 MAX</a>.</p> 	
	-32768...32768	Real value corresponding to value of parameter <a href="#">13.07</a> .
<b>13.10</b>	AI2 MIN SCALE	FW block: <a href="#">AI2</a> (see above)
	Defines the real value that corresponds to the minimum analogue input value defined by parameter <a href="#">13.08 AI2 MIN</a> . See parameter <a href="#">13.09 AI2 MAX SCALE</a> .	
	-32768...32768	Real value corresponding to value of parameter <a href="#">13.08</a> .
<b>13.11</b>	AITUNE	FW block: None
	Triggers the AI tuning function. Connect the signal to the input and select the appropriate tuning function.	
	<b>(0)</b> NO ACTION	AI tune is not activated.
	<b>(1)</b> AI1 MIN TUNE	Current analogue input AI1 signal value is set as minimum value for AI1, parameter <a href="#">13.03 AI1 MIN</a> . The value reverts back to <b>(0) NO ACTION</b> automatically.
	<b>(2)</b> AI1 MAX TUNE	Current analogue input AI1 signal value is set as maximum value for AI1, parameter <a href="#">13.02 AI1 MAX</a> . The value reverts back to <b>(0) NO ACTION</b> automatically.
	<b>(3)</b> AI2 MIN TUNE	Current analogue input AI2 signal value is set as minimum value for AI2, parameter <a href="#">13.08 AI2 MIN</a> . The value reverts back to <b>(0) NO ACTION</b> automatically.
	<b>(4)</b> AI2 MAX TUNE	Current analogue input AI2 signal value is set as maximum value for AI2, parameter <a href="#">13.07 AI2 MAX</a> . The value reverts back to <b>(0) NO ACTION</b> automatically.

<b>13.12</b>	<b>AI SUPERVISION</b>	FW block: None															
	Selects how the drive reacts when analogue input signal limit is reached. The limit is selected by parameter <a href="#">13.13 AI SUPERVIS ACT</a> .																
	<b>(0) NO</b>	No action taken.															
	<b>(1) FAULT</b>	The drive trips on fault AI SUPERVISION.															
	<b>(2) SPD REF SAFE</b>	<p>The drive generates alarm AI SUPERVISION and sets the speed to the speed defined by parameter <a href="#">46.02 SPEED REF SAFE</a>.</p> <p> <b>WARNING!</b> Make sure that it is safe to continue operation in case of a communication break.</p>															
	<b>(3) LAST SPEED</b>	<p>The drive generates alarm AI SUPERVISION and freezes the speed to the level the drive was operating at. The speed is determined by the average speed over the previous 10 seconds.</p> <p> <b>WARNING!</b> Make sure that it is safe to continue operation in case of a communication break.</p>															
<b>13.13</b>	<b>AI SUPERVIS ACT</b>	FW block: None															
	Selects the analogue input signal supervision limit.																
	<table border="1"> <thead> <tr> <th>Bit</th><th></th><th>Supervision selected by parameter <a href="#">13.12 AI SUPERVISION</a> is activated if</th></tr> </thead> <tbody> <tr> <td>0</td><td>AI1&lt;min</td><td>AI1 signal value falls below the value defined by equation: par. <a href="#">13.03 AI1 MIN</a> - 0.5 mA or V</td></tr> <tr> <td>1</td><td>AI1&gt;max</td><td>AI1 signal value exceeds the value defined by equation: par. <a href="#">13.02 AI1 MAX</a> + 0.5 mA or V</td></tr> <tr> <td>2</td><td>AI2&lt;min</td><td>AI2 signal value falls below the value defined by equation: par. <a href="#">13.08 AI2 MIN</a> - 0.5 mA or V</td></tr> <tr> <td>3</td><td>AI2&gt;min</td><td>AI2 signal value exceeds the value defined by equation: par. <a href="#">13.07 AI2 MAX</a> + 0.5 mA or V</td></tr> </tbody> </table> <p>Example: If parameter value is set to 0010 (bin), bit 1 AI1&gt;max is selected.</p>		Bit		Supervision selected by parameter <a href="#">13.12 AI SUPERVISION</a> is activated if	0	AI1<min	AI1 signal value falls below the value defined by equation: par. <a href="#">13.03 AI1 MIN</a> - 0.5 mA or V	1	AI1>max	AI1 signal value exceeds the value defined by equation: par. <a href="#">13.02 AI1 MAX</a> + 0.5 mA or V	2	AI2<min	AI2 signal value falls below the value defined by equation: par. <a href="#">13.08 AI2 MIN</a> - 0.5 mA or V	3	AI2>min	AI2 signal value exceeds the value defined by equation: par. <a href="#">13.07 AI2 MAX</a> + 0.5 mA or V
Bit		Supervision selected by parameter <a href="#">13.12 AI SUPERVISION</a> is activated if															
0	AI1<min	AI1 signal value falls below the value defined by equation: par. <a href="#">13.03 AI1 MIN</a> - 0.5 mA or V															
1	AI1>max	AI1 signal value exceeds the value defined by equation: par. <a href="#">13.02 AI1 MAX</a> + 0.5 mA or V															
2	AI2<min	AI2 signal value falls below the value defined by equation: par. <a href="#">13.08 AI2 MIN</a> - 0.5 mA or V															
3	AI2>min	AI2 signal value exceeds the value defined by equation: par. <a href="#">13.07 AI2 MAX</a> + 0.5 mA or V															
	0b0000...0b1111	AI1/AI2 signal supervision selection.															

## Group 15 ANALOGUE OUTPUTS

Settings for the analogue outputs.



The drive offers two programmable analogue outputs: one current output AO1 (0...20 mA) and one voltage output AO2 (-10...10 V).



The resolution of the analogue outputs is 11 bits (+ sign) and the inaccuracy is 2% of the full scale range.

The analogue output signals can be proportional to motor speed, process speed (scaled motor speed), output frequency, output current, motor torque, motor power, etc. It is possible to write a value to an analogue output through a serial communication link (e.g. fieldbus link).

15 ANALOGUE OUTPUTS		
Firmware block: <b>AO1</b> (14)  Connects an actual signal to analogue output AO1, and filters and scales the output signal. Also shows the value of the output.		
Block outputs located in other parameter groups		2.08 AO1 (page 80)
15.01	AO1 PTR	FW block: AO1 (see above)
	Selects a drive signal to be connected to analogue output AO1.	
	Value pointer: Group and index	
15.02	AO1 FILT TIME	FW block: AO1 (see above)
	Defines the filtering time constant for analogue output AO1. <div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> </div> <div style="flex: 1;"> <math display="block">O = I \cdot (1 - e^{-t/T})</math> <p> <math>I</math> = filter input (step)  <math>O</math> = filter output  <math>t</math> = time  <math>T</math> = filter time constant             </p> </div> </div> <p><b>Note:</b> The signal is also filtered due to the signal interface hardware (approximately 0.5 ms time constant). This cannot be changed by any parameter.</p>	
	0...30 s	Filter time constant for AO1.
15.03	AO1 MAX	FW block: AO1 (see above)
	Defines the maximum value for analogue output AO1.	

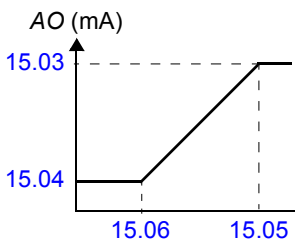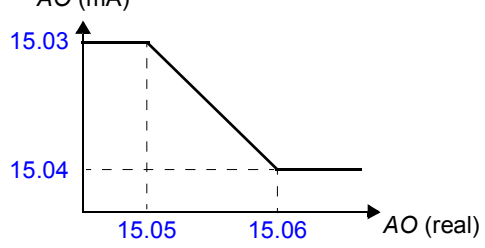


	0...22.7 mA	Maximum AO1 output value.
<b>15.04</b>	AO1 MIN	FW block: <a href="#">AO1</a> (see above)
	Defines the minimum value for analogue output AO1.	
	0...22.7 mA	Minimum AO1 output value.
<b>15.05</b>	AO1 MAX SCALE	FW block: <a href="#">AO1</a> (see above)
	Defines the real value that corresponds to the maximum analogue output value defined by parameter <a href="#">15.03</a> AO1 MAX. <div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div>	
	-32768...32767	Real value corresponding to value of parameter <a href="#">15.03</a> .
<b>15.06</b>	AO1 MIN SCALE	FW block: <a href="#">AO1</a> (see above)
	Defines the real value that corresponds to the minimum analogue output value defined by parameter <a href="#">15.04</a> AO1 MIN. See parameter <a href="#">15.05</a> AO1 MAX SCALE.	
	-32768...32767	Real value corresponding to value of parameter <a href="#">15.04</a> .
Firmware block: <b>AO2</b> (15)  Connects an actual signal to analogue output AO2, and filters and scales the output signal. Also shows the value of the output.		
<div style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> <p>[ SPEED ACT PERC ]</p> <p>(1 / 1.02)</p> <p>[ 0.100 s ]</p> <p>[ 10.000 V ]</p> <p>[ -10.000 V ]</p> <p>[ 100.000 ]</p> <p>[ -100.000 ]</p> </div> <div style="border: 1px solid black; padding: 5px; width: 300px;"> <p style="text-align: center;"><b>AO2</b></p> <p style="text-align: right;">26</p> <p>TLF7 2 msec (9)</p> <p style="text-align: right;">2.09 AO2</p> <hr/> <p>&lt; 15.07 AO2 PTR</p> <p>15.08 AO2 FILT TIME</p> <p>15.09 AO2 MAX</p> <p>15.10 AO2 MIN</p> <p>15.11 AO2 MAX SCALE</p> <p>15.12 AO2 MIN SCALE</p> </div> </div>		
Block outputs located in other parameter groups		<a href="#">2.09 AO2</a> (page 80)
<b>15.07</b>	AO2 PTR	FW block: <a href="#">AO2</a> (see above)
	Selects a drive signal to be connected to analogue output AO2.	
	Value pointer: Group and index	
<b>15.08</b>	AO2 FILT TIME	FW block: <a href="#">AO2</a> (see above)
	Defines the filtering time constant for analogue output AO2. See parameter <a href="#">15.02</a> AO1 FILT TIME.	
	0...30 s	Filter time constant for AO2.
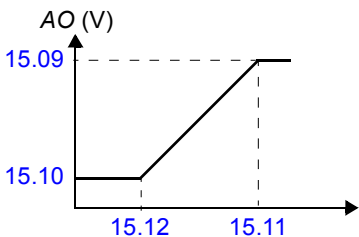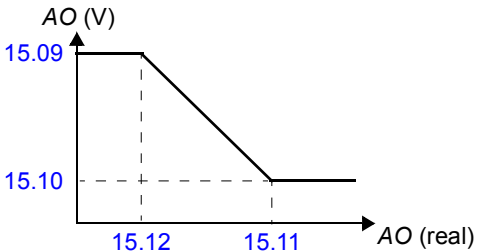
<b>15.09</b>	AO2 MAX	FW block: <a href="#">AO2</a> (see above)
	Defines the maximum value for analogue output AO2.	
	-10...10 V	Maximum AO2 output value.
<b>15.10</b>	AO2 MIN	FW block: <a href="#">AO2</a> (see above)
	Defines the minimum value for analogue output AO2.	
	-10...10 V	Minimum AO2 output value.
<b>15.11</b>	AO2 MAX SCALE	FW block: <a href="#">AO2</a> (see above)
	<p>Defines the real value that corresponds to the maximum analogue output value defined by parameter <a href="#">15.09 AO2 MAX</a>.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;">   </div>	
	-32768...32767	Real value corresponding to value of parameter <a href="#">15.09</a> .
<b>15.12</b>	AO2 MIN SCALE	FW block: <a href="#">AO2</a> (see above)
	<p>Defines the real value that corresponds to the minimum analogue output value defined by parameter <a href="#">15.10 AO2 MIN</a>. See parameter <a href="#">15.11 AO2 MAX SCALE</a>.</p>	
	-32768...32767	Real value corresponding to value of parameter <a href="#">15.10</a> .

## Group 16 SYSTEM

Local control and parameter access settings, restoration of default parameter values, save of parameters into permanent memory.

16 SYSTEM		
16.01	LOCAL LOCK	FW block: None
	Selects the source for disabling local control (Take/Release button on the PC tool, LOC/REM key of the panel). 1 = Local control disabled. 0 = Local control enabled.  <b>WARNING!</b> Before activating, ensure that the control panel is not needed for stopping the drive!	
	Bit pointer: Group, index and bit	
16.02	PARAMETER LOCK	FW block: None
	Selects the state of the parameter lock. The lock prevents parameter changing. <b>Note:</b> This parameter can only be adjusted after the correct pass code has been entered at parameter 16.03 PASS CODE.	
	(0) LOCKED	Locked. Parameter values cannot be changed from the control panel.
	(1) OPEN	The lock is open. Parameter values can be changed.
	(2) NOT SAVED	The lock is open. Parameter values can be changed, but the changes will not be stored at power switch off.
16.03	PASS CODE	FW block: None
	After entering 358 at this parameter, parameter 16.02 PARAMETER LOCK can be adjusted. The value reverts back to 0 automatically.	
16.04	PARAM RESTORE	FW block: None
	Restores the original settings of the application, i.e. parameter factory default values. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	(0) DONE	Restoration is completed.
	(1) RESTORE DEFS	All parameter values are restored to default values, except motor data, ID run results, and fieldbus, drive-to-drive link and encoder configuration data.
	(2) CLEAR ALL	All parameter values are restored to default values, including motor data, ID run results and fieldbus and encoder configuration data. PC tool communication is interrupted during the restoration. Drive CPU is re-booted after the restoration is completed.
16.07	PARAM SAVE	FW block: None
	Saves the valid parameter values to the permanent memory. <b>Note:</b> A new parameter value is saved automatically when changed from the PC tool or panel but not when altered through a fieldbus connection.	

	(0) DONE	Save completed.
	(1) SAVE	Save in progress.
16.09	USER SET SEL	FW block: None
	<p>Enables the save and restoration of up to four custom sets of parameter settings. The set that was in use before powering down the drive is in use after the next power-up.</p> <p><b>Note:</b> Any parameter changes made after loading a set are not automatically stored – they must be saved using this parameter.</p>	
	(1) NO REQUEST	Load or save operation complete; normal operation.
	(2) LOAD SET 1	Load user parameter set 1.
	(3) LOAD SET 2	Load user parameter set 2.
	(4) LOAD SET 3	Load user parameter set 3.
	(5) LOAD SET 4	Load user parameter set 4.
	(6) SAVE SET 1	Save user parameter set 1.
	(7) SAVE SET 2	Save user parameter set 2.
	(8) SAVE SET 3	Save user parameter set 3.
	(9) SAVE SET 4	Save user parameter set 4.
	(10) IO MODE	Load user parameter set using parameters 16.11 and 16.12.
16.10	USER SET LOG	FW block: None
	Shows the status of the user parameter sets (see parameter 16.09 USER SET SEL). Read-only.	
	N/A	No user sets have been saved.
	(1) LOADING	A user set is being loaded.
	(2) SAVING	A user set is being saved.
	(4) FAULTED	Invalid or empty parameter set.
	(8) SET1 IO ACT	User parameter set 1 has been selected by parameters 16.11 and 16.12.
	(16) SET2 IO ACT	User parameter set 2 has been selected by parameters 16.11 and 16.12.
	(32) SET3 IO ACT	User parameter set 3 has been selected by parameters 16.11 and 16.12.
	(64) SET4 IO ACT	User parameter set 4 has been selected by parameters 16.11 and 16.12.
	(128) SET1 PAR ACT	User parameter set 1 has been loaded using parameter 16.09.
	(256) SET2 PAR ACT	User parameter set 2 has been loaded using parameter 16.09.

	<b>(512)</b> SET3 PAR ACT	User parameter set 3 has been loaded using parameter <a href="#">16.09</a> .															
	<b>(1024)</b> SET4 PAR ACT	User parameter set 4 has been loaded using parameter <a href="#">16.09</a> .															
<b>16.11</b>	USER IO SET LO	FW block: None															
	<p>Together with parameter <a href="#">16.12 USER IO SET HI</a>, selects the user parameter set when parameter <a href="#">16.09 USER SET SEL</a> is set to <b>(10) IO MODE</b>. The status of the source defined by this parameter and parameter <a href="#">16.12</a> select the user parameter set as follows:</p> <table border="1"> <thead> <tr> <th>Status of source defined by par. <a href="#">16.11</a></th><th>Status of source defined by par. <a href="#">16.12</a></th><th>User parameter set selected</th></tr> </thead> <tbody> <tr> <td>FALSE</td><td>FALSE</td><td>Set 1</td></tr> <tr> <td>TRUE</td><td>FALSE</td><td>Set 2</td></tr> <tr> <td>FALSE</td><td>TRUE</td><td>Set 3</td></tr> <tr> <td>TRUE</td><td>TRUE</td><td>Set 4</td></tr> </tbody> </table>		Status of source defined by par. <a href="#">16.11</a>	Status of source defined by par. <a href="#">16.12</a>	User parameter set selected	FALSE	FALSE	Set 1	TRUE	FALSE	Set 2	FALSE	TRUE	Set 3	TRUE	TRUE	Set 4
Status of source defined by par. <a href="#">16.11</a>	Status of source defined by par. <a href="#">16.12</a>	User parameter set selected															
FALSE	FALSE	Set 1															
TRUE	FALSE	Set 2															
FALSE	TRUE	Set 3															
TRUE	TRUE	Set 4															
	Bit pointer: Group, index and bit																
<b>16.12</b>	USER IO SET HI	FW block: None															
	See parameter <a href="#">16.11 USER IO SET LO</a> .																
	Bit pointer: Group, index and bit																
<b>16.13</b>	TIME SOURCE PRIO	FW block: None															
	Selects which real-time clock source is adopted by the drive as the master real-time clock. Some selections specify multiple sources that are in order of priority.																
	<b>(0)</b> FB_D2D_MMI	Fieldbus (highest priority); drive-to-drive link; man-machine interface (control panel or PC).															
	<b>(1)</b> D2D_FB_MMI	Drive-to-drive link (highest priority); fieldbus; man-machine interface (control panel or PC).															
	<b>(2)</b> FB_D2D	Fieldbus (highest priority); drive-to-drive link.															
	<b>(3)</b> D2D_FB	Drive-to-drive link (highest priority); fieldbus.															
	<b>(4)</b> FB ONLY	Fieldbus only.															
	<b>(5)</b> D2D ONLY	Drive-to-drive link only.															
	<b>(6)</b> MMI_FB_D2D	Man-machine interface (control panel or PC) (highest priority); fieldbus; drive-to-drive link.															
	<b>(7)</b> MMI ONLY	Man-machine interface (control panel or PC) only.															
	<b>(8)</b> INTERNAL	No external sources are used as master real-time clock.															

## Group 17 PANEL DISPLAY

Selection of signals for panel display.

17 PANEL DISPLAY		
17.01	SIGNAL1 PARAM	FW block: None
	Selects the first signal to be displayed on the control panel. The default signal is 1.03 FREQUENCY.	
	Value pointer: Group and index	
17.02	SIGNAL2 PARAM	FW block: None
	Selects the second signal to be displayed on the control panel. The default signal is 1.04 CURRENT.	
	Value pointer: Group and index	
17.03	SIGNAL3 PARAM	FW block: None
	Selects the third signal to be displayed on the control panel. The default signal is 1.06 TORQUE.	
	Value pointer: Group and index	

## Group 20 LIMITS

Definition of drive operation limits.

20 LIMITS		
Firmware block: <b>LIMITS</b> (20)  Adjusts the drive speed, current and torque limits, selects the source for the positive/negative speed reference enable command and enables the thermal current limitation.		
<b>20.01</b>	MAXIMUM SPEED	FW block: <a href="#">LIMITS</a> (see above).
	Defines the allowed maximum speed. See also parameter <a href="#">22.08 SPEED TRIPMARGIN</a> .	
	0...30000 rpm	Allowed maximum speed.
<b>20.02</b>	MINIMUM SPEED	FW block: <a href="#">LIMITS</a> (see above).
	Defines the allowed minimum speed. See also parameter <a href="#">22.08 SPEED TRIPMARGIN</a> .	
	-30000...0 rpm	Allowed minimum speed.

<b>20.03</b>	POS SPEED ENA	FW block: <a href="#">LIMITS</a> (see above).
	<p>Selects the source of the positive speed reference enable command.</p> <p>1 = Positive speed reference is enabled.</p> <p>0 = Positive speed reference is interpreted as zero speed reference (In the figure below 3.03 SPEEDREF RAMP IN is set to zero after the positive speed enable signal has cleared). Actions in different control modes:</p> <p>Speed control: Speed reference is set to zero and the motor is stopped along the currently active deceleration ramp.</p> <p>Torque control: Torque limit is set to zero and the rush controller stops the motor.</p> <p>Position and synchron control: Dynamic limiter sets the positioning speed reference to zero and the motor is stopped according to <a href="#">70.06 POS DECEL LIM</a>.</p> <p>Homing and profile velocity mode control: Dynamic limiter sets the speed reference to zero and the motor is stopped according to <a href="#">70.06 POS DECEL LIM</a>.</p> <div data-bbox="341 739 1101 1046"> </div> <p><b>Example:</b> The motor is rotating in the forward direction. To stop the motor, the positive speed enable signal is deactivated by a hardware limit switch (e.g. via digital input). If the positive speed enable signal remains deactivated and the negative speed enable signal is active, only reverse rotation of the motor is allowed.</p>	
	Bit pointer: Group, index and bit	
<b>20.04</b>	NEG SPEED ENA	FW block: <a href="#">LIMITS</a> (see above).
	Selects the source of the negative speed reference enable command. See parameter <a href="#">20.03 POS SPEED ENA</a> .	
	Bit pointer: Group, index and bit	
<b>20.05</b>	MAXIMUM CURRENT	FW block: <a href="#">LIMITS</a> (see above).
	Defines the allowed maximum motor current.	
	0...30000 A	Maximum allowed motor current.
<b>20.06</b>	MAXIMUM TORQUE	FW block: <a href="#">LIMITS</a> (see above).
	Defines the maximum torque limit for the drive (in percent of the motor nominal torque).	
	0...1600%	Maximum torque limit.
<b>20.07</b>	MINIMUM TORQUE	FW block: <a href="#">LIMITS</a> (see above).
	Defines the minimum torque limit for the drive (in percent of the motor nominal torque).	
	-1600...0%	Minimum torque limit.




<b>20.08</b>	<b>THERM CURR LIM</b>	FW block: None
	Enables the thermal current limitation. Thermal current limit is calculated by the inverter thermal protection function.	
	<b>(0) ENABLE</b>	The calculated thermal current value limits the inverter output current (i.e. motor current).
	<b>(1) DISABLE</b>	The calculated thermal limit is not used. If the inverter output current is excessive, alarm IGBT OVERTEMP is generated and eventually the drive trips on fault IGBT OVERTEMP.



## Group 22 SPEED FEEDBACK


Settings for

- selection of speed feedback used in drive control
- filtering disturbances in measured speed signal
- motor encoder gear function
- zero speed limit for stop function
- delay for Zero Speed Delay function
- definition of limits for actual speed supervision
- loss of speed feedback signal protection.

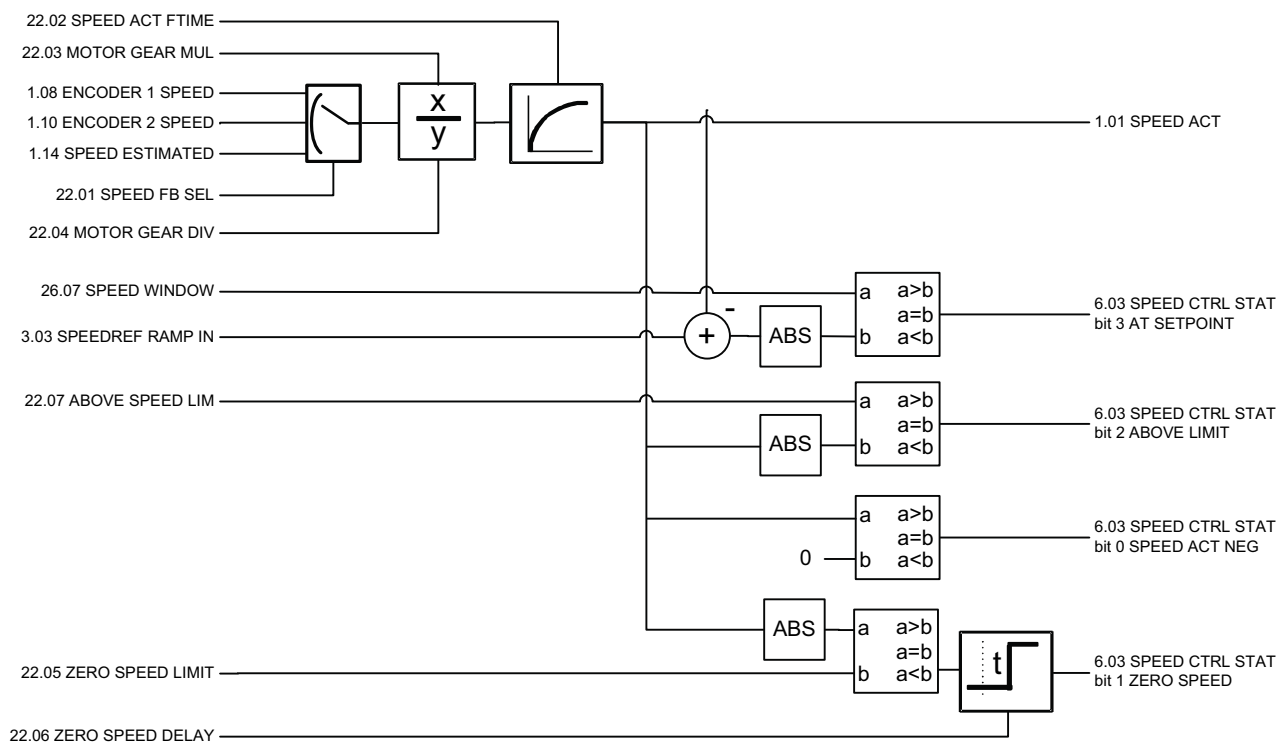

22 SPEED FEEDBACK		
Firmware block: <b>SPEED FEEDBACK</b> (22)		
Block outputs located in other parameter groups		1.01 SPEED ACT (page 77)
<b>22.01</b>	SPEED FB SEL	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	Selects the speed feedback value used in control.	
	(0) ESTIMATED	Calculated speed estimate.
	(1) ENC1 SPEED	Actual speed measured with encoder 1. The encoder is selected by parameter <a href="#">90.01 ENCODER 1 SEL</a> .
	(2) ENC2 SPEED	Actual speed measured with encoder 2. The encoder is selected by parameter <a href="#">90.02 ENCODER 2 SEL</a> .
<b>22.02</b>	SPEED ACT FTIME	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	<p>Defines the time constant of the actual speed filter, i.e. time within the actual speed has reached 63% of the nominal speed (filtered speed = <a href="#">1.01 SPEED ACT</a>).</p> <p>If the used speed reference remains constant, the possible interferences in the speed measurement can be filtered with the actual speed filter. Reducing the ripple with filter may cause speed controller tuning problems. A long filter time constant and fast acceleration time contradict one another. A very long filter time results in unstable control.</p> <p>If there are substantial interferences in the speed measurement, the filter time constant should be proportional to the total inertia of the load and motor, in this case 10...30% of the mechanical time constant</p> $t_{\text{mech}} = (n_{\text{nom}} / T_{\text{nom}}) \times J_{\text{tot}} \times 2\pi / 60$ , where $J_{\text{tot}}$ = total inertia of the load and motor (the gear ratio between the load and motor must be taken into account) $n_{\text{nom}}$ = motor nominal speed $T_{\text{nom}}$ = motor nominal torque See also parameter <a href="#">26.06 SPD ERR FTIME</a> .	
	0...10000 ms	Time constant for actual speed filter.
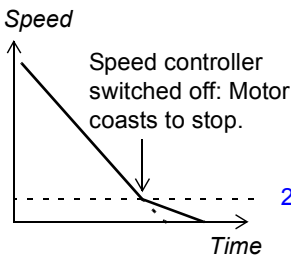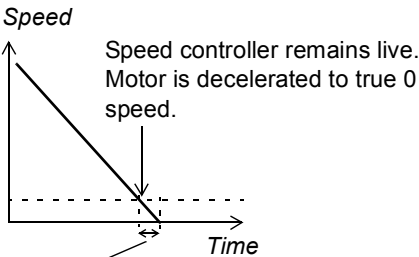
<b>22.03</b>	MOTOR GEAR MUL	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	<p>Defines the motor gear numerator for the motor encoder gear function.</p> $\frac{22.03 \text{ MOTOR GEAR MUL}}{22.04 \text{ MOTOR GEAR DIV}} = \frac{\text{Actual speed}}{\text{Input speed}}$ <p>where input speed is encoder 1/2 speed (<a href="#">1.08 ENCODER 1 SPEED</a> / <a href="#">1.10 ENCODER 2 SPEED</a>) or speed estimate (<a href="#">1.14 SPEED ESTIMATED</a>).</p> <p>See section <a href="#">Motor encoder gear function</a> on page 48.</p>	
	$-2^{31} \dots 2^{31} - 1$	Numerator for motor encoder gear. <b>Note:</b> A setting of 0 is changed internally to 1.
<b>22.04</b>	MOTOR GEAR DIV	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	Defines the motor gear denominator for the motor encoder gear function. See parameter <a href="#">22.03 MOTOR GEAR MUL</a> .	
	$1 \dots 2^{31} - 1$	Denominator for motor encoder gear.
<b>22.05</b>	ZERO SPEED LIMIT	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	<p>Defines the zero speed limit. The motor is stopped along a speed ramp until the defined zero speed limit is reached. After the limit, the motor coasts to stop.</p> <p><b>Note:</b> Too low a setting may result in the drive not stopping at all.</p>	
	0...30000 rpm	Zero speed limit.
<b>22.06</b>	ZERO SPEED DELAY	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	<p>Defines the delay for the zero speed delay function. The function is useful in applications where a smooth and quick restarting is essential. During the delay the drive knows accurately the rotor position.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p><b>No Zero Speed Delay</b></p>  <p>Speed controller switched off: Motor coasts to stop.</p> </div> <div style="text-align: center;"> <p><b>With Zero Speed Delay</b></p>  <p>Speed controller remains live. Motor is decelerated to true 0 speed.</p> </div> </div> <p style="text-align: center; color: blue;">22.05 ZERO SPEED LIMIT      22.06 ZERO SPEED DELAY</p> <p><b>No Zero Speed Delay</b></p> <p>The drive receives a stop command and decelerates along a ramp. When the motor actual speed falls below an internal limit (called Zero Speed), the speed controller is switched off. The inverter modulation is stopped and the motor coasts to standstill.</p> <p><b>With Zero Speed Delay</b></p> <p>The drive receives a stop command and decelerates along a ramp. When the actual motor speed falls below an internal limit (called Zero Speed), the zero speed delay function activates. During the delay the function keeps the speed controller live: the inverter modulates, motor is magnetised and the drive is ready for a quick restart. Zero speed delay can be used e.g. with the jogging function.</p>	
	0...30000 ms	Zero speed delay.
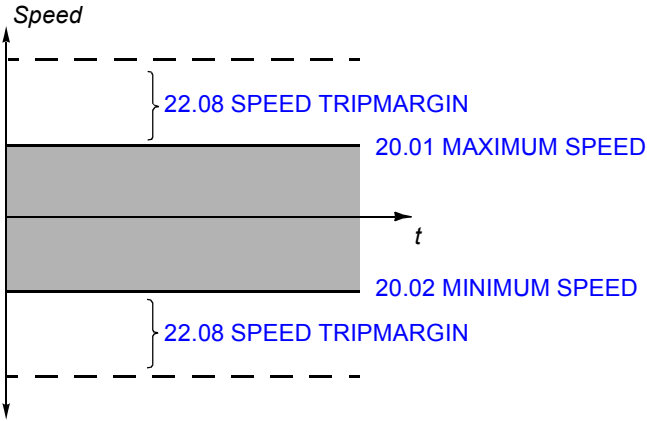
<b>22.07</b>	ABOVE SPEED LIM	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	Defines the supervision limit for the actual speed.	
	0...30000 rpm	Supervision limit for actual speed.
<b>22.08</b>	SPEED TRIPMARGIN	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	<p>Defines, together with <a href="#">20.01 MAXIMUM SPEED</a> and <a href="#">20.02 MINIMUM SPEED</a>, the maximum allowed speed of the motor (overspeed protection). If the actual speed (<a href="#">1.01 SPEED ACT</a>) exceeds the speed limit defined by parameter <a href="#">20.01</a> or <a href="#">20.02</a> by more than <a href="#">22.08 SPEED TRIPMARGIN</a>, the drive trips on fault OVERSPEED.</p> <p>Example: If the maximum speed is 1420 rpm and speed trip margin is 300 rpm, the drive trips at 1720 rpm.</p> 	
	0...10000 rpm	Speed trip margin.
<b>22.09</b>	SPEED FB FAULT	FW block: <a href="#">SPEED FEEDBACK</a> (see above)
	Selects the action in case of speed feedback data loss.	
	<b>(0)</b> FAULT	Drive trips on a fault (OPTION COMM LOSS, ENCODER 1/2 FAILURE or SPEED FEEDBACK depending on the type of problem).
	<b>(1)</b> WARNING	Drive continues operation with open loop control and generates an alarm (OPTION COMM LOSS, ENCODER 1/2 FAILURE or SPEED FEEDBACK depending on the type of problem).
	<b>(2)</b> NO	Drive continues operation with open loop control. No faults or alarms are generated.

Group 24 SPEED REF MOD

Settings for

- speed reference selection
- speed reference modification (scaling and inversion)
- constant speed and jogging references
- definition of absolute minimum speed reference.


Depending on user selection, either speed reference 1 or speed reference 2 is active at a time.


Speed reference can be any of the following (in priority order):

- fault speed reference (in a control panel or PC tool communication break)
- local speed reference (from panel)
- fieldbus local reference
- jogging reference 1/2
- constant speed reference 1/2
- external speed reference.

**Note:** Constant speed overrides external speed reference.

Speed reference is limited according to the set minimum and maximum speed values and ramped and shaped according to the defined acceleration and deceleration values. See parameter group 25 SPEED REF RAMP (page 139).

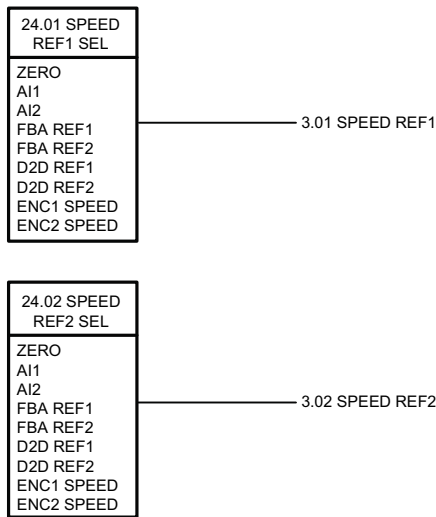


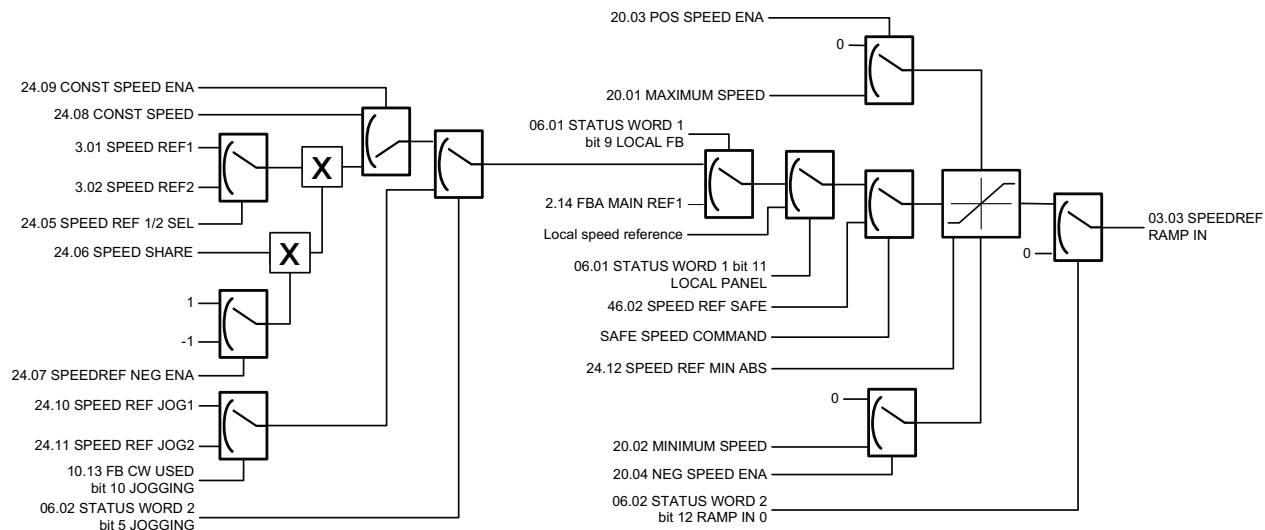

24 SPEED REF MOD		
<p>Firmware block:</p> <p><b>SPEED REF SEL</b> (23)</p> <p>Selects the sources for two speed references, REF1 or REF2, from a selection list. Also shows the values of both speed references.</p> <p>The sources can alternatively be selected with value pointer parameters. See firmware block <a href="#">SPEED REF MOD</a> on page 136.</p>		
Block outputs located in other parameter groups		<a href="#">3.01 SPEED REF1</a> (page 87) <a href="#">3.02 SPEED REF2</a> (page 87)
<b>24.01</b>	SPEED REF1 SEL	FW block: <a href="#">SPEED REF SEL</a> (see above)
	<p>Selects the source for speed reference 1 (<a href="#">3.01 SPEED REF1</a>).</p> <p>Source for speed reference 1/2 can also be selected by value pointer parameter <a href="#">24.03 SPEED REF1 IN</a> / <a href="#">24.04 SPEED REF2 IN</a>.</p>	
	<b>(0)</b> ZERO	Zero reference.
	<b>(1)</b> AI1	Analogue input AI1.
	<b>(2)</b> AI2	Analogue input AI2.
	<b>(3)</b> FBA REF1	Fieldbus reference 1.
	<b>(4)</b> FBA REF2	Fieldbus reference 2.

	(5) D2D REF1	Drive to drive reference 1.
	(6) D2D REF2	Drive to drive reference 2.
	(7) ENC1 SPEED	Encoder 1 (1.08 ENCODER 1 SPEED).
	(8) ENC2 SPEED	Encoder 2 (1.10 ENCODER 2 SPEED).
24.02	SPEED REF2 SEL	FW block: SPEED REF SEL (see above)
	Selects the source for speed reference 2 (3.02 SPEED REF2). See parameter 24.01 SPEED REF1 SEL.	
	Firmware block: <b>SPEED REF MOD</b> (24)  This block <ul style="list-style-type: none"> <li>selects the sources for two speed references, REF1 or REF2</li> <li>scales and inverts the speed reference</li> <li>defines the constant speed reference</li> <li>defines the speed reference for jogging functions 1 and 2</li> <li>defines the speed reference absolute minimum limit.</li> </ul>	
	Block outputs located in other parameter groups	3.03 SPEEDREF RAMP IN (page 87)
24.03	SPEED REF1 IN	FW block: SPEED REF MOD (see above)
	Selects the source for speed reference 1 (overrides the setting of parameter 24.01 SPEED REF1 SEL). The default value is P.3.1, i.e. 3.01 SPEED REF1, which is the output of the SPEED REF RAMP block.	
	Value pointer: Group and index	
24.04	SPEED REF2 IN	FW block: SPEED REF MOD (see above)
	Selects the source for speed reference 2 (overrides the setting of parameter 24.02 SPEED REF2 SEL). The default value is P.3.2, i.e. 3.02 SPEED REF2, which is the output of the SPEED REF RAMP block.	
	Value pointer: Group and index	
24.05	SPEED REF 1/2SEL	FW block: SPEED REF MOD (see above)
	Selects between speed reference 1 or 2. Reference 1/2 source is defined by parameter 24.03 SPEED REF1 IN / 24.04 SPEED REF2 IN. 0 = Speed reference 1.	
	Bit pointer: Group, index and bit	
24.06	SPEED SHARE	FW block: SPEED REF MOD (see above)
	Defines the scaling factor for speed reference 1/2 (speed reference 1 or 2 is multiplied by the defined value). Speed reference 1 or 2 is selected by parameter 24.05 SPEED REF 1/2SEL.	

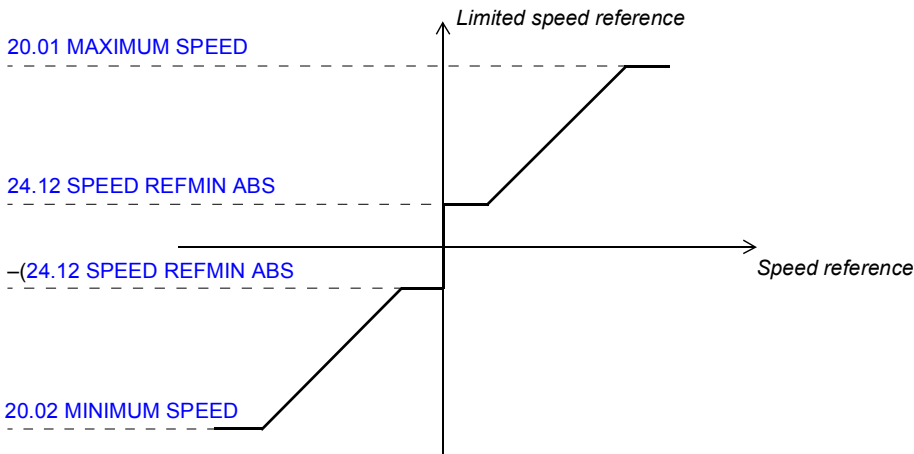


	-8...8	Scaling factor for speed reference 1/2.
<b>24.07</b>	SPEEDREF NEG ENA	FW block: <a href="#">SPEED REF MOD</a> (see above)
	Selects the source for the speed reference inversion. 1 = Sign of the speed reference is changed (inversion active).	
	Bit pointer: Group, index and bit	
<b>24.08</b>	CONST SPEED	FW block: <a href="#">SPEED REF MOD</a> (see above)
	Defines the constant speed.	
	-30000...30000 rpm	Constant speed.
<b>24.09</b>	CONST SPEED ENA	FW block: <a href="#">SPEED REF MOD</a> (see above)
	Selects the source for enabling the use of the constant speed reference define by parameter <a href="#">24.08 CONST SPEED</a> . 1 = Enable.	
	Bit pointer: Group, index and bit	
<b>24.10</b>	SPEED REF JOG1	FW block: <a href="#">SPEED REF MOD</a> (see above)
	Defines the speed reference for jogging function 1. See section <a href="#">Jogging</a> on page 46.	
	-30000...30000 rpm	Speed reference for jogging 1.
<b>24.11</b>	SPEED REF JOG2	FW block: <a href="#">SPEED REF MOD</a> (see above)
	Defines the speed reference for jogging function 2. See section <a href="#">Jogging</a> on page 46.	
	-30000...30000 rpm	Speed reference for jogging 2.
<b>24.12</b>	SPEED REFMIN ABS	FW block: <a href="#">SPEED REF MOD</a> (see above)
	<p>Defines the absolute minimum limit for the speed reference.</p>  <p>20.01 MAXIMUM SPEED</p> <p>24.12 SPEED REFMIN ABS</p> <p>-(24.12 SPEED REFMIN ABS)</p> <p>20.02 MINIMUM SPEED</p>	
	0...30000 rpm	Absolute minimum limit for speed reference.

## Group 25 SPEED REF RAMP

Speed reference ramp settings such as

- selection of source for speed ramp input
- acceleration and deceleration times (also for jogging)
- acceleration and deceleration ramp shapes
- emergency stop OFF3 ramp time
- the speed reference balancing function (forcing the output of the ramp generator to a predefined value).

**Note:** Emergency stop OFF1 uses the currently active ramp time.

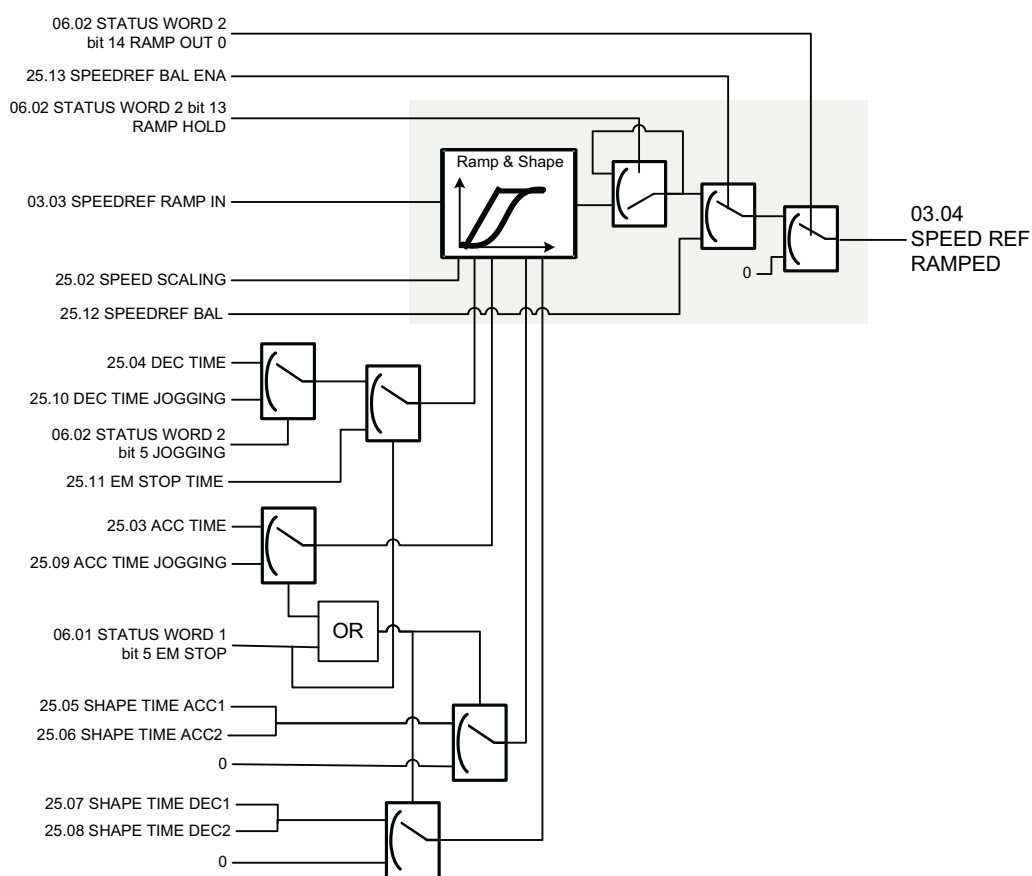


25 SPEED REF RAMP		
<p>Firmware block: <b>SPEED REF RAMP</b> (25)</p> <p>This block</p> <ul style="list-style-type: none"> <li>selects the source for the speed ramp input</li> <li>adjusts acceleration and deceleration times (also for jogging)</li> <li>adjusts acceleration/deceleration ramp shapes</li> <li>adjusts ramp time for emergency stop OFF3</li> <li>forces the output of the ramp generator to a defined value</li> <li>shows the ramped and shaped speed reference value.</li> </ul>		
<p>Block outputs located in other parameter groups</p>		<p>3.04 SPEEDREF RAMPED (page 87)</p>
<b>25.01</b>	<b>SPEED RAMP IN</b>	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	<p>Shows the source of the speed ramp input. The default value is P.3.3 i.e. signal <a href="#">3.03 SPEEDREF RAMP IN</a>, which is the output of the <a href="#">SPEED REF MOD</a> firmware block.</p> <p><b>Note:</b> This parameter cannot be set by the user.</p>	
	Value pointer: Group and index	
<b>25.02</b>	<b>SPEED SCALING</b>	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	<p>Defines the speed value used in acceleration and deceleration (parameters <a href="#">25.03/25.09</a> and <a href="#">25.04/25.10/25.11</a>). Also affects fieldbus reference scaling (see <a href="#">Appendix A – Fieldbus control</a>, section <a href="#">Fieldbus references</a> on page 389).</p>	
	0...30000 rpm	Speed value for acceleration/deceleration.
<b>25.03</b>	<b>ACC TIME</b>	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	<p>Defines the acceleration time i.e. the time required for the speed to change from zero to the speed value defined by parameter <a href="#">25.02 SPEED SCALING</a>.</p> <p>If the speed reference increases faster than the set acceleration rate, the motor speed will follow the acceleration rate.</p> <p>If the speed reference increases slower than the set acceleration rate, the motor speed will follow the reference signal.</p> <p>If the acceleration time is set too short, the drive will automatically prolong the acceleration in order not to exceed the drive torque limits.</p>	
	0...1800 s	Acceleration time.

<b>25.04</b>	DEC TIME	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	<p>Defines the deceleration time i.e. the time required for the speed to change from the speed value defined by parameter <a href="#">25.02 SPEED SCALING</a> to zero.</p> <p>If the speed reference decreases slower than the set deceleration rate, the motor speed will follow the reference signal.</p> <p>If the reference changes faster than the set deceleration rate, the motor speed will follow the deceleration rate.</p> <p>If the deceleration time is set too short, the drive will automatically prolong the deceleration in order not to exceed drive torque limits. If there is any doubt about the deceleration time being too short, ensure that the DC overvoltage control is on (parameter <a href="#">47.01 OVERVOLTAGE CTRL</a>).</p> <p><b>Note:</b> If a short deceleration time is needed for a high inertia application, the drive should be equipped with an electric braking option e.g. with a brake chopper (built-in) and a brake resistor.</p>	
	0...1800 s	Deceleration time.
<b>25.05</b>	SHAPE TIME ACC1	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	<p>Selects the shape of the acceleration ramp at the beginning of the acceleration.</p> <p>0.00 s: Linear ramp. Suitable for steady acceleration or deceleration and for slow ramps.</p> <p>0.01...1000.00 s: S-curve ramp. S-curve ramps are ideal for conveyor and lifting applications. The S-curve consists of symmetrical curves at both ends of the ramp and a linear part in between.</p> <p><b>Note:</b> When jogging or emergency ramp stop is active, acceleration and deceleration shape times are forced to zero.</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>Speed</p> <p>Time</p> </div> <div style="text-align: center;"> <p>Speed</p> <p>Time</p> </div> </div>	
	0...1000 s	Ramp shape at beginning of acceleration.
<b>25.06</b>	SHAPE TIME ACC2	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	<p>Selects the shape of the acceleration ramp at the end of the acceleration. See parameter <a href="#">25.05 SHAPE TIME ACC1</a>.</p>	
	0...1000 s	Ramp shape at end of acceleration.
<b>25.07</b>	SHAPE TIME DEC1	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	<p>Selects the shape of the deceleration ramp at the beginning of the deceleration. See parameter <a href="#">25.05 SHAPE TIME ACC1</a>.</p>	
	0...1000 s	Ramp shape at beginning of deceleration.

<b>25.08</b>	SHAPE TIME DEC2	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	Selects the shape of the deceleration ramp at the end of the deceleration. See parameter <a href="#">25.05 SHAPE TIME ACC1</a> .	
	0...1000 s	Ramp shape at end of deceleration.
<b>25.09</b>	ACC TIME JOGGING	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	Defines the acceleration time for the jogging function i.e. the time required for the speed to change from zero to the speed value defined by parameter <a href="#">25.02 SPEED SCALING</a> .	
	0...1800 s	Acceleration time for jogging.
<b>25.10</b>	DEC TIME JOGGING	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	Defines the deceleration time for the jogging function i.e. the time required for the speed to change from the speed value defined by parameter <a href="#">25.02 SPEED SCALING</a> to zero.	
	0...1800 s	Deceleration time for jogging.
<b>25.11</b>	EM STOP TIME	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	Defines the time inside which the drive is stopped if an emergency stop OFF3 is activated (i.e. the time required for the speed to change from the speed value defined by parameter <a href="#">25.02 SPEED SCALING</a> to zero). Emergency stop activation source is selected by parameter <a href="#">10.10 EM STOP OFF3</a> . Emergency stop can also be activated through fieldbus ( <a href="#">2.12 FBA MAIN CW</a> ). Emergency stop OFF1 uses the active ramp time.	
	0...1800 s	Emergency stop OFF3 deceleration time.
<b>25.12</b>	SPEEDREF BAL	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	Defines the reference for the speed ramp balancing, i.e. the output of the speed reference ramp firmware block is forced to a defined value. The source for the balancing enable signal is selected by parameter <a href="#">25.13 SPEEDREF BAL</a> .	
	-30000...30000 rpm	Speed ramp balancing reference.
<b>25.13</b>	SPEEDREF BAL ENA	FW block: <a href="#">SPEED REF RAMP</a> (see above)
	Selects the source for enabling the speed ramp balancing. See parameter <a href="#">25.12 SPEEDREF BAL</a> . 1 = Speed ramp balancing enabled.	
	Bit pointer: Group, index and bit	

## Group 26 SPEED ERROR



Speed error is determined by comparing the speed reference and speed feedback. The error can be filtered using a first-order low-pass filter if the feedback and reference have disturbances. In addition, a torque boost can be applied to compensate acceleration; the torque is relative to the rate of change (derivative) in the speed reference and inertia of the load.

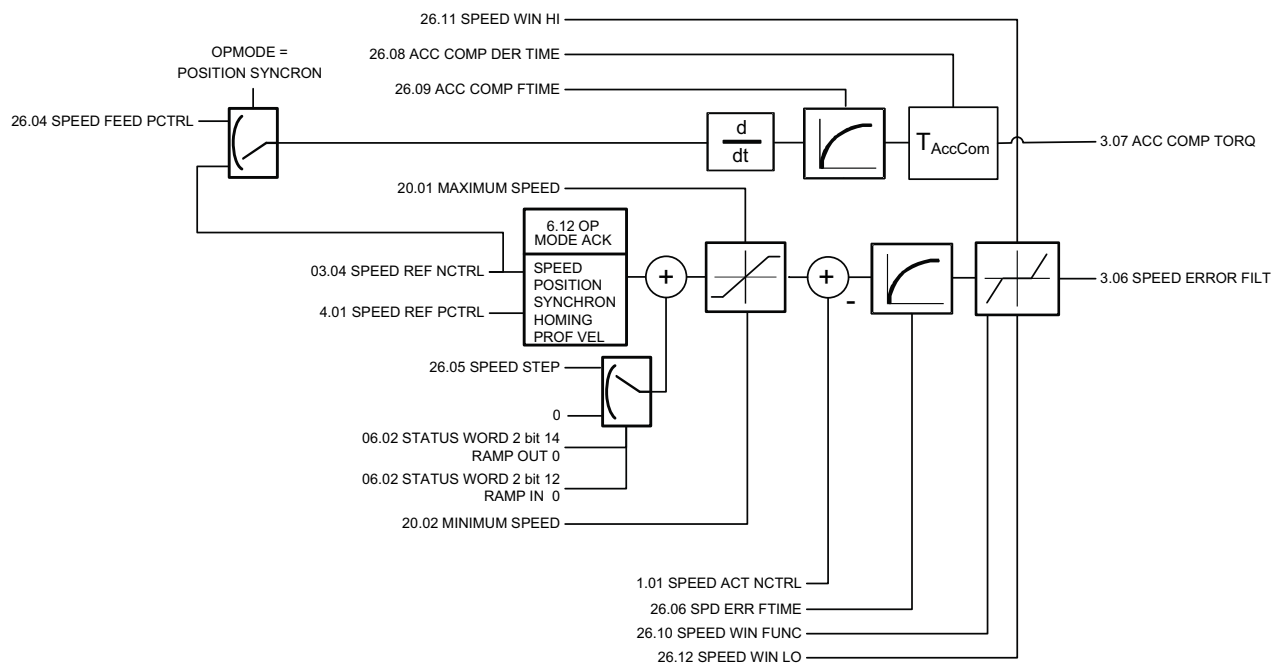

26 SPEED ERROR					
<div><div>Firmware block: <b>SPEED ERROR</b> (26)</div><div>This block<ul style="list-style-type: none"><li>selects the source for speed error calculation (speed reference - actual speed) in different control modes</li><li>selects the sources for speed reference and speed reference feedforward</li><li>defines the speed error filtering time</li><li>defines an additional speed step to the speed error</li><li>defines the supervision of speed error with the speed error window function</li><li>defines inertia compensation during acceleration</li><li>shows the used speed reference, filtered speed error and the output of the acceleration compensation.</li></ul></div></div>			<div><div><div><div><div><div>SPEED ERROR</div><div>6</div><div>TLF3 250 µsec</div><div>(2)</div></div><div><div>3.05 SPEEDREF USED</div><div>3.06 SPEED ERROR FILT</div><div>3.07 ACC COMP TORQ</div></div></div></div><div><div><div>SPEED ACT</div><div>(7 / 1.01)</div><div>SPEEDREF RAMPED</div><div>(6 / 3.04)</div><div>SPEEDREF RAMPED</div><div>(6 / 3.04)</div><div>SPEEDREF RAMPED</div><div>(6 / 3.04)</div><div>[ 0.00 rpm ]</div><div>[ 0.0 ms ]</div><div>[ 100 rpm ]</div><div>[ 0.00 s ]</div><div>[ 8.0 ms ]</div><div>[ Disabled ]</div><div>[ 0 rpm ]</div><div>[ 0 rpm ]</div></div><div><div>&lt; 26.01 SPEED ACT NCTRL</div><div>&lt; 26.02 SPEED REF NCTRL</div><div>&lt; 26.03 SPEED REF PCTRL</div><div>&lt; 26.04 SPEED FEED PCTRL</div><div>26.05 SPEED STEP</div><div>26.06 SPEED ERR FTIME</div><div>26.07 SPEED WINDOW</div><div>26.08 ACC COMP DERTIME</div><div>26.09 ACC COMP FTIME</div><div>26.10 SPEED WIN FUNC</div><div>26.11 SPEED WIN HI</div><div>26.12 SPEED WIN LO</div></div></div></div></div>		
Block outputs located in other parameter groups		<div><div>3.05 SPEEDREF USED (page 87)</div><div>3.06 SPEED ERROR FILT (page 87)</div><div>3.07 ACC COMP TORQ (page 87)</div></div>			
26.01	SPEED ACT NCTRL	FW block: SPEED ERROR (see above)			
	<div><div>Selects the source for the actual speed in the speed control mode.</div><div><b>Note:</b> This parameter has been locked, i.e. no user setting is possible.</div></div>				
	Value pointer: Group and index				
26.02	SPEED REF NCTRL	FW block: SPEED ERROR (see above)			
	<div><div>Selects the source for the speed reference in the speed control mode.</div><div><b>Note:</b> This parameter has been locked, i.e. no user setting is possible.</div></div>				
	Value pointer: Group and index				
26.03	SPEED REF PCTRL	FW block: SPEED ERROR (see above)			
	<div><div>Selects the source for the speed reference in position and synchron control modes.</div><div><b>Note:</b> This parameter is only for positioning applications.</div></div>				
	Value pointer: Group and index				

<b>26.04</b>	<b>SPEED FEED PCTRL</b>	FW block: <a href="#">SPEED ERROR</a> (see above)
	<p>Selects the source for the speed reference feedforward in position and synchron control modes. Selects the source for the speed reference in homing and profile velocity modes.</p> <p><b>Note:</b> This parameter is only for positioning applications.</p>	
	Value pointer: Group and index	
<b>26.05</b>	<b>SPEED STEP</b>	FW block: <a href="#">SPEED ERROR</a> (see above)
	Defines an additional speed step given to the input of the speed controller (added to the speed error value).	
	-30000...30000 rpm	Speed step.
<b>26.06</b>	<b>SPD ERR FTIME</b>	FW block: <a href="#">SPEED ERROR</a> (see above)
	<p>Defines the time constant of the speed error low pass filter.</p> <p>If the used speed reference changes rapidly (servo application), the possible interferences in the speed measurement can be filtered with the speed error filter. Reducing the ripple with filter may cause speed controller tuning problems. A long filter time constant and fast acceleration time contradict one another. A very long filter time results in unstable control.</p> <p>See also parameter <a href="#">22.02 SPEED ACT FTIME</a>.</p>	
	0...1000 ms	Time constant for speed error low pass filter. 0 ms = filtering disabled.
<b>26.07</b>	<b>SPEED WINDOW</b>	FW block: <a href="#">SPEED ERROR</a> (see above)
	<p>Defines the absolute value for the motor speed window supervision, i.e. the absolute value for the difference between the actual speed and the unramped speed reference (<a href="#">1.01 SPEED ACT</a> - <a href="#">3.03 SPEEDREF RAMP IN</a>). When the motor speed is within the limits defined by this parameter, signal <a href="#">2.13</a> bit 8 (AT_SETPOINT) value is 1. If the motor speed is not within the defined limits, bit 8 value is 0.</p>	
	0...30000 rpm	Absolute value for motor speed window supervision.

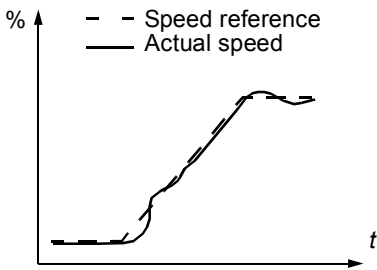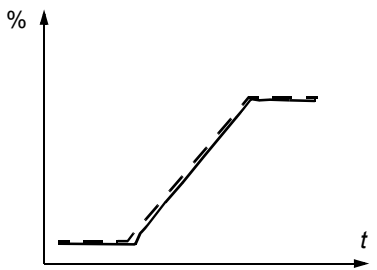

<b>26.08</b>	ACC COMP DERTIME	FW block: <a href="#">SPEED ERROR</a> (see above)
	<p>Defines the derivation time for acceleration (deceleration) compensation. Used to improve the speed control dynamic reference change.</p> <p>In order to compensate inertia during acceleration, a derivative of the speed reference is added to the output of the speed controller. The principle of a derivative action is described for parameter <a href="#">28.04 DERIVATION TIME</a>.</p> <p><b>Note:</b> The parameter value should be proportional to the total inertia of the load and motor, i.e. approximately 50...100% of the mechanical time constant (<math>t_{\text{mech}}</math>). See the mechanical time constant equation in parameter <a href="#">22.02 SPEED ACT FTIME</a>.</p> <p>If parameter value is set to zero, the function is deactivated.</p> <p>The figure below shows the speed responses when a high inertia load is accelerated along a ramp.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p><b>No acceleration compensation</b></p>  </div> <div style="text-align: center;"> <p><b>No acceleration compensation</b></p>  </div> </div> <p>See also parameter <a href="#">26.09 ACC COMP FTIME</a>.</p> <p>The source for the acceleration compensation torque can also be selected by parameter <a href="#">28.06 ACC COMPENSATION</a>. See firmware group <a href="#">28 SPEED CONTROL</a>.</p>	
	0...600 s	Derivation time for acceleration/deceleration compensation.
<b>26.09</b>	ACC COMP FTIME	FW block: <a href="#">SPEED ERROR</a> (see above)
	Defines the filter time for the acceleration compensation.	
	0...1000 ms	Filter time for acceleration compensation. 0 ms = filtering disabled.
<b>26.10</b>	SPEED WIN FUNC	FW block: <a href="#">SPEED ERROR</a> (see above)
	<p>Enables or disables speed error window control.</p> <p>Speed error window control forms a speed supervision function for a torque-controlled drive. It supervises the speed error value (speed reference – actual speed). In the normal operating range, window control keeps the speed controller input at zero. When the speed error moves outside the window, the exceeding part of the error value is connected to the speed controller. The speed controller produces a reference term relative to the input and gain of the speed controller (parameter <a href="#">28.02 PROPORT GAIN</a>) which the torque selector adds to the torque reference. The result is used as the internal torque reference for the drive.</p> <p>Example: In a load loss condition, the internal torque reference of the drive is decreased to prevent an excessive rise of the motor speed. If window control were inactive, the motor speed would rise until a speed limit of the drive were reached.</p>	
	<b>(0)</b> DISABLED	Speed error window control inactive.
	<b>(1)</b> ABSOLUTE	Speed error window control active. The window boundaries set by parameters <a href="#">28.02</a> and <a href="#">28.02</a> are effective in both directions of rotation (the boundaries have a negative value when actual speed is negative).

	<b>(2) RELATIVE</b>	Speed error window control active. The window boundaries set by parameters <a href="#">28.02</a> and <a href="#">28.02</a> are only effective in the forward direction (i.e. when actual speed is positive).
<b>26.11</b>	<b>SPEED WIN HI</b>	FW block: <a href="#">SPEED ERROR</a> (see above)
	High limit for speed window control. See parameter <a href="#">26.10 SPEED WIN FUNC.</a>	
	0...3000 rpm	High limit for speed error window control.
<b>26.12</b>	<b>SPEED WIN LO</b>	FW block: <a href="#">SPEED ERROR</a> (see above)
	Low limit for speed window control. See parameter <a href="#">26.10 SPEED WIN FUNC.</a>	
	0...3000 rpm	Low limit for speed error window control.

## Group 28 SPEED CONTROL


Speed controller settings such as

- selection of source for speed error
- adjustment of PID-type speed controller variables
- limitation of speed controller output torque
- selection of source for acceleration compensation torque
- forcing an external value to the output of the speed controller (with the balancing function).
- adjustment of the load sharing in a Master/Follower application run by several drives (the drooping function).



The speed controller includes an anti-windup function (i.e. I-term is frozen during torque reference limitation).


In torque control mode, the speed controller output is frozen.


For manual speed controller tuning, see section [Manual speed controller tuning](#) on page 25.

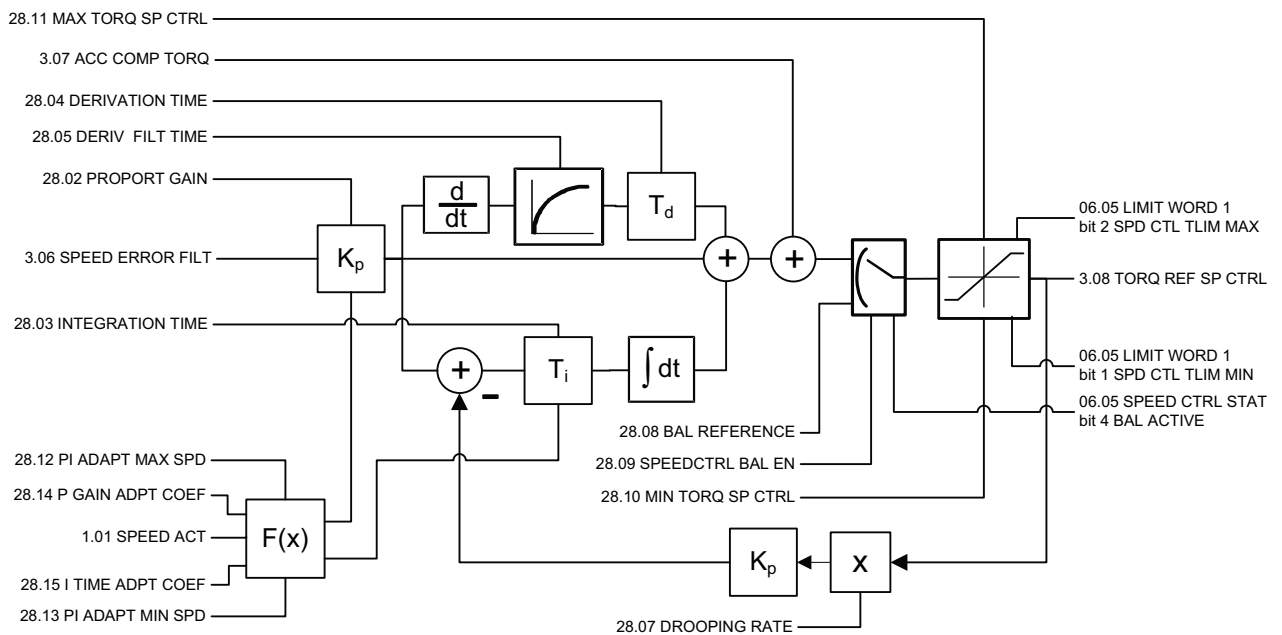

28 SPEED CONTROL		
<div><div>Firmware block: <b>SPEED CONTROL</b> (28)</div><div>This block<ul style="list-style-type: none"><li>• selects the source for speed error</li><li>• adjusts PID-type speed controller variables</li><li>• defines limits for speed controller output torque</li><li>• selects the source for acceleration compensation torque</li><li>• configures the balancing function which forces the output of the speed controller to an external value</li><li>• configures the drooping function (adjustment of load sharing in a Master/Follower application)</li><li>• shows the limited speed controller output torque value.</li></ul></div></div>		
<div><div>Block outputs located in other parameter groups</div><div>3.08 TORQ REF SP CTRL (page 87)</div></div>		<div><div><div><div><div>SPEED CONTROL</div><div>7</div><div>TUF3 250 µsec</div><div>(3)</div><div>3.08 TORQ REF SP CTRL</div></div></div><div><div>SPEED ERROR FILT</div><div>(7 / 3.06)</div><div>[ 10.00 ]</div><div>[ 0.500 s ]</div><div>[ 0.000 s ]</div><div>[ 8.0 ms ]</div><div>ACC COMP TORQ</div><div>(7 / 3.07)</div><div>[ 0.00 % ]</div><div>[ 0.0 % ]</div><div>[ FALSE ]</div><div>[ -300.0 % ]</div><div>[ 300.0 % ]</div><div>[ 0 rpm ]</div><div>[ 0 rpm ]</div><div>[ 1.000 ]</div><div>[ 1.000 ]</div></div><div><div>&lt; 28.01 SPEED ERR NCTRL</div><div>28.02 PROPORT GAIN</div><div>28.03 INTEGRATION TIME</div><div>28.04 DERIVATION TIME</div><div>28.05 DERIV FILT TIME</div><div>&lt; 28.06 ACC COMPENSATION</div><div>28.07 DROOPING RATE</div><div>28.08 BAL REFERENCE</div><div>&lt; 28.09 SPEEDCTRL BAL EN</div><div>28.10 MIN TORQ SP CTRL</div><div>28.11 MAX TORQ SP CTRL</div><div>28.12 PI ADAPT MAX SPD</div><div>28.13 PI ADAPT MIN SPD</div><div>28.14 P GAIN ADPT COEF</div><div>28.15 I TIME ADPT COEF</div></div></div></div>
28.01	SPEED ERR NCTRL	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<div>Selects the source for the speed error (reference - actual). The default value is P.3.6 i.e. signal <a href="#">3.06 SPEED ERROR FILT</a>, which is the output of the <a href="#">SPEED ERROR</a> firmware block.</div> <div><b>Note:</b> This parameter has been locked, i.e. no user setting is possible.</div>	
	Value pointer: Group and index	
28.02	PROPORT GAIN	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<div>Defines the proportional gain (<math>K_p</math>) of the speed controller. Too great a gain may cause speed oscillation. The figure below shows the speed controller output after an error step when the error remains constant.</div> <div><div><div><div>%</div><div>↑</div><div>Gain = <math>K_p = 1</math></div><div><math>T_I</math> = Integration time = 0</div><div><math>T_D</math> = Derivation time = 0</div><div>Error value</div><div>Controller output</div><div><math>e = \text{Error value}</math></div><div>Controller output = <math>K_p \cdot e</math></div><div>t</div></div></div></div> <div>If gain is set to 1, a 10% change in error value (reference - actual value) causes the speed controller output to change by 10%.</div>	
	0...200	Proportional gain for speed controller.
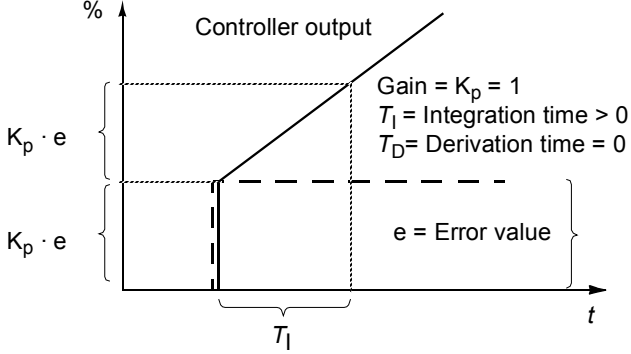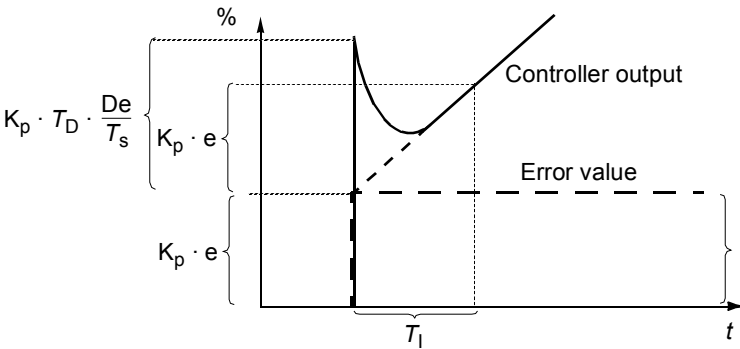
<b>28.03</b>	<b>INTEGRATION TIME</b>	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<p>Defines the integration time of the speed controller. The integration time defines the rate at which the controller output changes when the error value is constant and the proportional gain of the speed controller is 1. The shorter the integration time, the faster the continuous error value is corrected. Too short integration time makes the control unstable.</p> <p>If parameter value is set to zero, the I-part of the controller is disabled.</p> <p>Anti-windup stops the integrator if the controller output is limited. See <a href="#">6.05 LIMIT WORD 1</a>.</p> <p>The figure below shows the speed controller output after an error step when the error remains constant.</p>  <p>Gain = <math>K_p = 1</math>  <math>T_I</math> = Integration time &gt; 0  <math>T_D</math> = Derivation time = 0  <math>e</math> = Error value</p>	
	0...600 s	Integration time for speed controller.
<b>28.04</b>	<b>DERIVATION TIME</b>	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<p>Defines the derivation time of the speed controller. Derivative action boosts the controller output if the error value changes. The longer the derivation time, the more the speed controller output is boosted during the change. If the derivation time is set to zero, the controller works as a PI controller, otherwise as a PID controller. The derivation makes the control more responsive for disturbances.</p> <p>The speed error derivative must be filtered with a low pass filter to eliminate disturbances.</p> <p>The figure below shows the speed controller output after an error step when the error remains constant.</p> <p>Gain = <math>K_p = 1</math>  <math>T_I</math> = Integration time &gt; 0  <math>T_D</math> = Derivation time &gt; 0  <math>T_s</math> = Sample time period = 250 <math>\mu</math>s  <math>e</math> = Error value  <math>\Delta e</math> = Error value change between two samples</p>  <p><math>K_p \cdot T_D \cdot \frac{De}{T_s}</math>  <math>K_p \cdot e</math>  <math>K_p \cdot e</math></p>	
	<p><b>Note:</b> Changing this parameter value is recommended only if a pulse encoder is used.</p>	

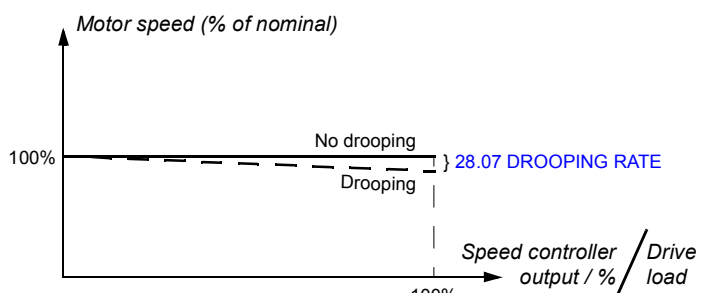	0...10 s	Derivation time for speed controller.
<b>28.05</b>	DERIV FILT TIME	FW block: <a href="#">SPEED CONTROL</a> (see above)
	Defines the derivation filter time constant.	
	0...1000 ms	Derivation filter time constant.
<b>28.06</b>	ACC COMPENSATION	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<p>Selects the source for the acceleration compensation torque.</p> <p>The default value is P.3.7, i.e signal <a href="#">3.07 ACC COMP TORQ</a>, which is the output of the <a href="#">SPEED ERROR</a> firmware block.</p> <p><b>Note:</b> This parameter has been locked, i.e. no user setting is possible.</p>	
	Value pointer: Group and index	
<b>28.07</b>	DROOPING RATE	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<p>Defines the droop rate (in percent of the motor nominal speed). The drooping slightly decreases the drive speed as the drive load increases. The actual speed decrease at a certain operating point depends on the droop rate setting and the drive load (= torque reference / speed controller output). At 100% speed controller output, drooping is at its nominal level, i.e. equal to the value of this parameter. The drooping effect decreases linearly to zero along with the decreasing load.</p> <p>Drooping rate can be used e.g. to adjust the load sharing in a Master/Follower application run by several drives. In a Master/Follower application the motor shafts are coupled to each other.</p> <p>The correct droop rate for a process must be found out case by case in practice.</p> <p><b>Speed decrease</b> = Speed controller output · Drooping · Max. speed  <b>Example:</b> Speed controller output is 50%, drooping rate is 1%, maximum speed of the drive is 1500 rpm.  Speed decrease = 0.50 · 0.01 · 1500 rpm = 7.5 rpm.</p>  <p>The graph illustrates the relationship between motor speed and drive load. The y-axis is labeled 'Motor speed (% of nominal)' and has a mark at 100%. The x-axis is labeled 'Speed controller output / Drive load' and has a mark at 100%. A horizontal dashed line at 100% speed is labeled 'No drooping'. A solid line starting at 100% speed and sloping downwards as the load increases is labeled 'Drooping'. A bracket on the right side of the graph indicates the vertical distance between the two lines at 100% load, labeled '28.07 DROOPING RATE'.</p>	
	0...100%	Droop rate.
<b>28.08</b>	BAL REFERENCE	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<p>Defines the reference used in the speed control output balancing, i.e. an external value to be forced to the output of the speed controller. In order to guarantee smooth operation during output balancing, the speed controller D-part is disabled and the acceleration compensation term is set to zero.</p> <p>The source for the balancing enable signal is selected by parameter <a href="#">28.09 SPEEDCTRL BAL EN</a>.</p>	
	-1600...1600%	Speed control output balancing reference.
<b>28.09</b>	SPEEDCTRL BAL EN	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<p>Selects the source for the speed control output balancing enable signal. See parameter <a href="#">28.08 BAL REFERENCE</a>. 1 = Enabled. 0 = Disabled.</p>	

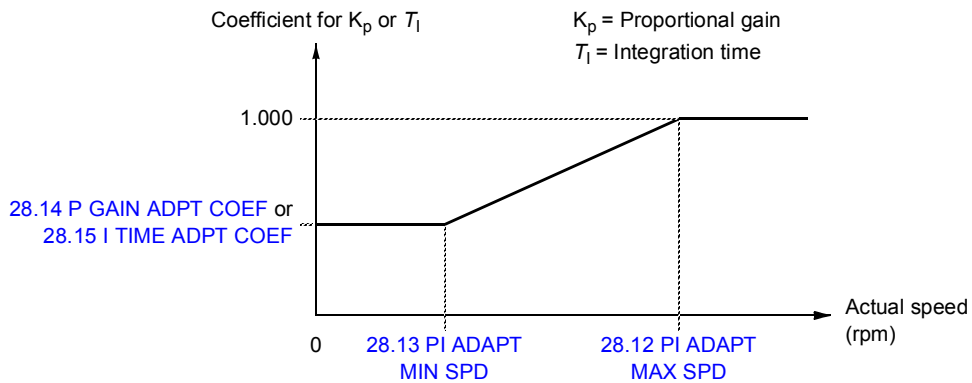	Bit pointer: Group, index and bit	
<b>28.10</b>	MIN TORQ SP CTRL	FW block: <a href="#">SPEED CONTROL</a> (see above)
	Defines the minimum speed controller output torque.	
	-1600...1600%	Minimum speed controller output torque.
<b>28.11</b>	MAX TORQ SP CTRL	FW block: <a href="#">SPEED CONTROL</a> (see above)
	Defines the maximum speed controller output torque.	
	-1600...1600%	Maximum speed controller output torque.
<b>28.12</b>	PI ADAPT MAX SPD	FW block: <a href="#">SPEED CONTROL</a> (see above)
	<p>Maximum actual speed for speed controller adaptation.</p> <p>Speed controller gain and integration time can be adapted according to actual speed. This is done by multiplying the gain (<a href="#">28.02 PROPORT GAIN</a>) and integration time (<a href="#">28.03 INTEGRATION TIME</a>) by coefficients at certain speeds. The coefficients are defined individually for both gain and integration time.</p> <p>When the actual speed is below or equal to <a href="#">28.13 PI ADAPT MIN SPD</a>, <a href="#">28.02 PROPORT GAIN</a> and <a href="#">28.03 INTEGRATION TIME</a> are multiplied by <a href="#">28.14 P GAIN ADPT COEF</a> and <a href="#">28.15 I TIME ADPT COEF</a> respectively.</p> <p>When the actual speed is equal to or exceeds <a href="#">28.12 PI ADAPT MAX SPD</a>, no adaptation takes place; in other words, <a href="#">28.02 PROPORT GAIN</a> and <a href="#">28.03 INTEGRATION TIME</a> are used as such.</p> <p>Between <a href="#">28.13 PI ADAPT MIN SPD</a> and <a href="#">28.12 PI ADAPT MAX SPD</a>, the coefficients are calculated linearly on the basis of the breakpoints.</p>  <p style="text-align: center;">Coefficient for <math>K_p</math> or <math>T_I</math></p> <p style="text-align: right;"><math>K_p</math> = Proportional gain <math>T_I</math> = Integration time</p> <p style="text-align: center;">1.000</p> <p style="text-align: center;">28.14 P GAIN ADPT COEF or 28.15 I TIME ADPT COEF</p> <p style="text-align: center;">0      28.13 PI ADAPT MIN SPD      28.12 PI ADAPT MAX SPD</p> <p style="text-align: right;">Actual speed (rpm)</p>	
	0...30000 rpm	Maximum actual speed for speed controller adaptation.
<b>28.13</b>	PI ADAPT MIN SPD	FW block: <a href="#">SPEED CONTROL</a> (see above)
	Minimum actual speed for speed controller adaptation. See parameter <a href="#">28.12 PI ADAPT MAX SPD</a> .	
	0...30000 rpm	Minimum actual speed for speed controller adaptation.
<b>28.14</b>	P GAIN ADPT COEF	FW block: <a href="#">SPEED CONTROL</a> (see above)
	Proportional gain coefficient. See parameter <a href="#">28.12 PI ADAPT MAX SPD</a> .	
	0.000 ... 10.000	Proportional gain coefficient.


28.15	I TIME ADPT COEF	FW block: <a href="#">SPEED CONTROL</a> (see above)
	Integration time coefficient. See parameter <a href="#">28.12 PI ADAPT MAX SPD</a> .	
	0.000 ... 10.000	Integration time coefficient.




## Group 32 TORQUE REFERENCE

Reference settings for torque control.

In torque control, the drive speed is limited between the defined minimum and maximum limits. Speed-related torque limits are calculated and the input torque reference is limited according to these limits. An OVERSPEED fault is generated if the maximum allowed speed is exceeded.

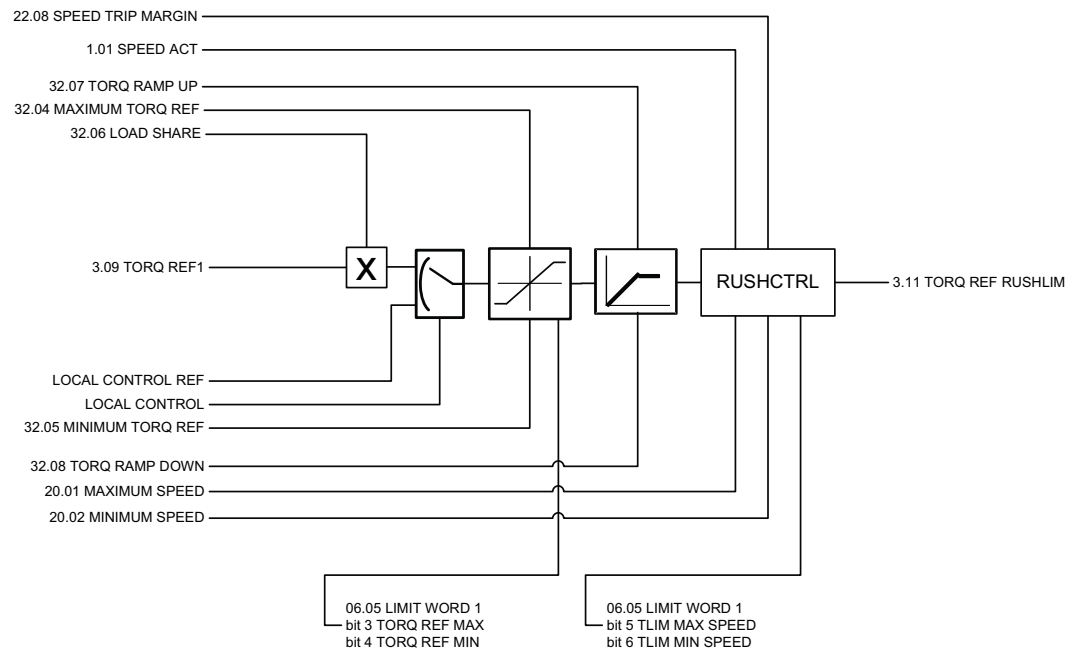

32 TORQUE REFERENCE		
<p>Firmware block:</p> <p><b>TORQ REF SEL</b> (32)</p> <p>Selects the source for torque reference 1 (from a parameter selection list) and the source for torque reference addition (used e.g. for compensating mechanical interferences). Also shows the torque reference and reference addition values.</p>		
<p>Block outputs located in other parameter groups</p>		<p>3.09 TORQ REF1 (page 87)</p> <p>3.12 TORQUE REF ADD (page 87)</p>
32.01	TORQ REF1 SEL	FW block: TORQ REF SEL (see above)
	Selects the source for torque reference 1. See also parameter 32.03 TORQ REF IN.	
	(0) ZERO	Zero reference.

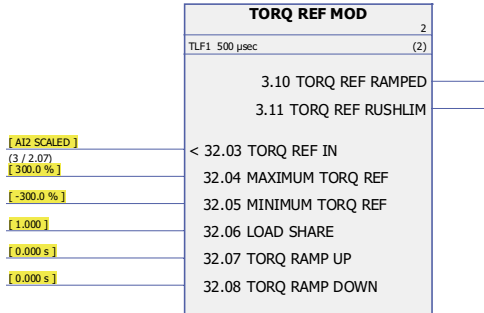	(1) AI1	Analogue input AI1.
	(2) AI2	Analogue input AI2.
	(3) FBA REF1	Fieldbus reference 1.
	(4) FBA REF2	Fieldbus reference 2.
	(5) D2D REF1	Drive to drive reference 1.
	(6) D2D REF2	Drive to drive reference 2.
<b>32.02</b>	<b>TORQ REF ADD SEL</b>	FW block: <b>TORQ REF SEL</b> (see above)
	<p>Selects the source for the torque reference addition, <b>3.12 TORQUE REF ADD</b>. Parameter <b>34.10 TORQ REF ADD SRC</b> is connected to signal <b>3.12 TORQUE REF ADD</b> by default.</p> <p>Because the reference is added after the torque reference selection, this parameter can be used in speed and torque control modes. See block diagram at parameter group <b>34 REFERENCE CTRL</b> (page 160).</p>	
	(0) ZERO	Zero reference addition.
	(1) AI1	Analogue input AI1.
	(2) AI2	Analogue input AI2.
	(3) FBA REF1	Fieldbus reference 1.
	(4) FBA REF2	Fieldbus reference 2.
	(5) D2D REF1	Drive to drive reference 1.
	(6) D2D REF2	Drive to drive reference 2.
	<p>Firmware block: <b>TORQ REF MOD</b> (33)</p> <p>This block</p> <ul style="list-style-type: none"> <li>• selects the source for the torque reference</li> <li>• scales the input torque reference according to the defined load share factor</li> <li>• defines limits for the torque reference</li> <li>• defines ramp-up and ramp-down times for the torque reference</li> <li>• shows the ramped torque reference value and the torque reference value limited by the rush control.</li> </ul>	
		
	Block outputs located in other parameter groups	<b>3.10 TORQ REF RAMPED</b> (page 87) <b>3.11 TORQ REF RUSHLIM</b> (page 87)
<b>32.03</b>	<b>TORQ REF IN</b>	FW block: <b>TORQ REF MOD</b> (see above)
	<p>Selects the source for the torque reference input for the torque ramp function. The default value is P.3.9, i.e. signal <b>3.09 TORQ REF1</b>, which is the output of the <b>TORQ REF SEL</b> firmware block.</p>	

	Value pointer: Group and index	
<b>32.04</b>	MAXIMUM TORQ REF	FW block: <a href="#">TORQ REF MOD</a> (see above)
	Defines the maximum torque reference.	
	0...1000%	Maximum torque reference.
<b>32.05</b>	MINIMUM TORQ REF	FW block: <a href="#">TORQ REF MOD</a> (see above)
	Defines the minimum torque reference.	
	-1000...0%	Minimum torque reference.
<b>32.06</b>	LOAD SHARE	FW block: <a href="#">TORQ REF MOD</a> (see above)
	Scales the external torque reference to a required level (external torque reference is multiplied by the selected value). <b>Note:</b> If local torque reference is used, no load share scaling is applied.	
	-8...8	External torque reference multiplier.
<b>32.07</b>	TORQ RAMP UP	FW block: <a href="#">TORQ REF MOD</a> (see above)
	Defines the torque reference ramp-up time, i.e. the time for the reference to increase from zero to the nominal motor torque.	
	0...60 s	Torque reference ramp-up time.
<b>32.08</b>	TORQ RAMP DOWN	FW block: <a href="#">TORQ REF MOD</a> (see above)
	Defines the torque reference ramp-down time, i.e. the time for the reference to decrease from the nominal motor torque to zero.	
	0...60 s	Torque reference ramp-down time.

## Group 33 SUPERVISION

Configuration of signal supervision.

33 SUPERVISION		
Firmware block: <b>SUPERVISION</b> (17)		
Block outputs located in other parameter groups		6.14 SUPERV STATUS (page 98)
<b>33.01</b>	SUPERV1 FUNC	FW block: <a href="#">SUPERVISION</a> (see above)
	Selects the mode of supervision 1.	
	<b>(0)</b> DISABLED	Supervision 1 not in use.
	<b>(1)</b> LOW	When the signal selected by parameter <a href="#">33.02 SUPERV1 ACT</a> falls below the value of parameter <a href="#">33.04 SUPERV1 LIM LO</a> , bit 0 of <a href="#">6.14 SUPERV STATUS</a> is activated.
	<b>(2)</b> HIGH	When the signal selected by parameter <a href="#">33.02 SUPERV1 ACT</a> exceeds the value of parameter <a href="#">33.03 SUPERV1 LIM HI</a> , bit 0 of <a href="#">6.14 SUPERV STATUS</a> is activated.
	<b>(3)</b> ABS LOW	When the absolute value of the signal selected by parameter <a href="#">33.02 SUPERV1 ACT</a> falls below the value of parameter <a href="#">33.04 SUPERV1 LIM LO</a> , bit 0 of <a href="#">6.14 SUPERV STATUS</a> is activated.
	<b>(4)</b> ABS HIGH	When the absolute value of the signal selected by parameter <a href="#">33.02 SUPERV1 ACT</a> exceeds the value of parameter <a href="#">33.03 SUPERV1 LIM HI</a> , bit 0 of <a href="#">6.14 SUPERV STATUS</a> is activated.
<b>33.02</b>	SUPERV1 ACT	FW block: <a href="#">SUPERVISION</a> (see above)
	Selects the signal to be monitored by supervision 1. See parameter <a href="#">33.01 SUPERV1 FUNC</a> .	
	Value pointer: Group and index	
<b>33.03</b>	SUPERV1 LIM HI	FW block: <a href="#">SUPERVISION</a> (see above)
	Sets the upper limit for supervision 1. See parameter <a href="#">33.01 SUPERV1 FUNC</a> .	

	-32768...32768	Upper limit for supervision 1.
<b>33.04</b>	SUPERV1 LIM LO	FW block: <a href="#">SUPERVISION</a> (see above)
	Sets the lower limit for supervision 1. See parameter <a href="#">33.01 SUPERV1 FUNC</a> .	
	-32768...32768	Lower limit for supervision 1.
<b>33.05</b>	SUPERV2 FUNC	FW block: <a href="#">SUPERVISION</a> (see above)
	Selects the mode of supervision 2.	
	<b>(0)</b> DISABLED	Supervision 2 not in use.
	<b>(1)</b> LOW	When the signal selected by parameter <a href="#">33.06 SUPERV2 ACT</a> falls below the value of parameter <a href="#">33.08 SUPERV2 LIM LO</a> , bit 1 of <a href="#">6.14 SUPERV STATUS</a> is activated.
	<b>(2)</b> HIGH	When the signal selected by parameter <a href="#">33.06 SUPERV2 ACT</a> exceeds the value of parameter <a href="#">33.07 SUPERV2 LIM HI</a> , bit 1 of <a href="#">6.14 SUPERV STATUS</a> is activated.
	<b>(3)</b> ABS LOW	When the absolute value of the signal selected by parameter <a href="#">33.06 SUPERV2 ACT</a> falls below the value of parameter <a href="#">33.08 SUPERV2 LIM LO</a> , bit 1 of <a href="#">6.14 SUPERV STATUS</a> is activated.
	<b>(4)</b> ABS HIGH	When the absolute value of the signal selected by parameter <a href="#">33.06 SUPERV2 ACT</a> exceeds the value of parameter <a href="#">33.07 SUPERV2 LIM HI</a> , bit 1 of <a href="#">6.14 SUPERV STATUS</a> is activated.
<b>33.06</b>	SUPERV2 ACT	FW block: <a href="#">SUPERVISION</a> (see above)
	Selects the signal to be monitored by supervision 2. See parameter <a href="#">33.05 SUPERV2 FUNC</a> .	
	Value pointer: Group and index	
<b>33.07</b>	SUPERV2 LIM HI	FW block: <a href="#">SUPERVISION</a> (see above)
	Sets the upper limit for supervision 2. See parameter <a href="#">33.05 SUPERV2 FUNC</a> .	
	-32768...32768	Upper limit for supervision 2.
<b>33.08</b>	SUPERV2 LIM LO	FW block: <a href="#">SUPERVISION</a> (see above)
	Sets the lower limit for supervision 2. See parameter <a href="#">33.05 SUPERV2 FUNC</a> .	
	-32768...32768	Lower limit for supervision 2.
<b>33.09</b>	SUPERV3 FUNC	FW block: <a href="#">SUPERVISION</a> (see above)
	Selects the mode of supervision 3.	
	<b>(0)</b> DISABLED	Supervision 3 not in use.
	<b>(1)</b> LOW	When the signal selected by parameter <a href="#">33.10 SUPERV3 ACT</a> falls below the value of parameter <a href="#">33.12 SUPERV3 LIM LO</a> , bit 2 of <a href="#">6.14 SUPERV STATUS</a> is activated.

	<b>(2) HIGH</b>	When the signal selected by parameter <b>33.10 SUPERV3 ACT</b> exceeds the value of parameter <b>33.11 SUPERV3 LIM HI</b> , bit 2 of <b>6.14 SUPERV STATUS</b> is activated.
	<b>(3) ABS LOW</b>	When the absolute value of the signal selected by parameter <b>33.10 SUPERV3 ACT</b> falls below the value of parameter <b>33.12 SUPERV3 LIM LO</b> , bit 2 of <b>6.14 SUPERV STATUS</b> is activated.
	<b>(4) ABS HIGH</b>	When the absolute value of the signal selected by parameter <b>33.10 SUPERV3 ACT</b> exceeds the value of parameter <b>33.11 SUPERV3 LIM HI</b> , bit 2 of <b>6.14 SUPERV STATUS</b> is activated.
<b>33.10</b>	<b>SUPERV3 ACT</b>	FW block: <b>SUPERVISION</b> (see above)
	Selects the signal to be monitored by supervision 3. See parameter <b>33.09 SUPERV3 FUNC</b> .	
	Value pointer: Group and index	
<b>33.11</b>	<b>SUPERV3 LIM HI</b>	FW block: <b>SUPERVISION</b> (see above)
	Sets the upper limit for supervision 3. See parameter <b>33.09 SUPERV3 FUNC</b> .	
	-32768...32768	Upper limit for supervision 3.
<b>33.12</b>	<b>SUPERV3 LIM LO</b>	FW block: <b>SUPERVISION</b> (see above)
	Sets the lower limit for supervision 3. See parameter <b>33.09 SUPERV3 FUNC</b> .	
	-32768...32768	Lower limit for supervision 3.


## Group 34 REFERENCE CTRL


Reference source and type selection.

Using the parameters in this group, it is possible to select whether external control location EXT1 or EXT2 is used (either one is active at a time). These parameters also select the control mode (SPEED/TORQUE/MIN/MAX/ADD) and the used torque reference in local and external control.

For more information on control locations and control modes, see chapter [Drive control and features](#).

For start/stop control in different control locations, see parameter group [10 START/STOP](#) (page 103).

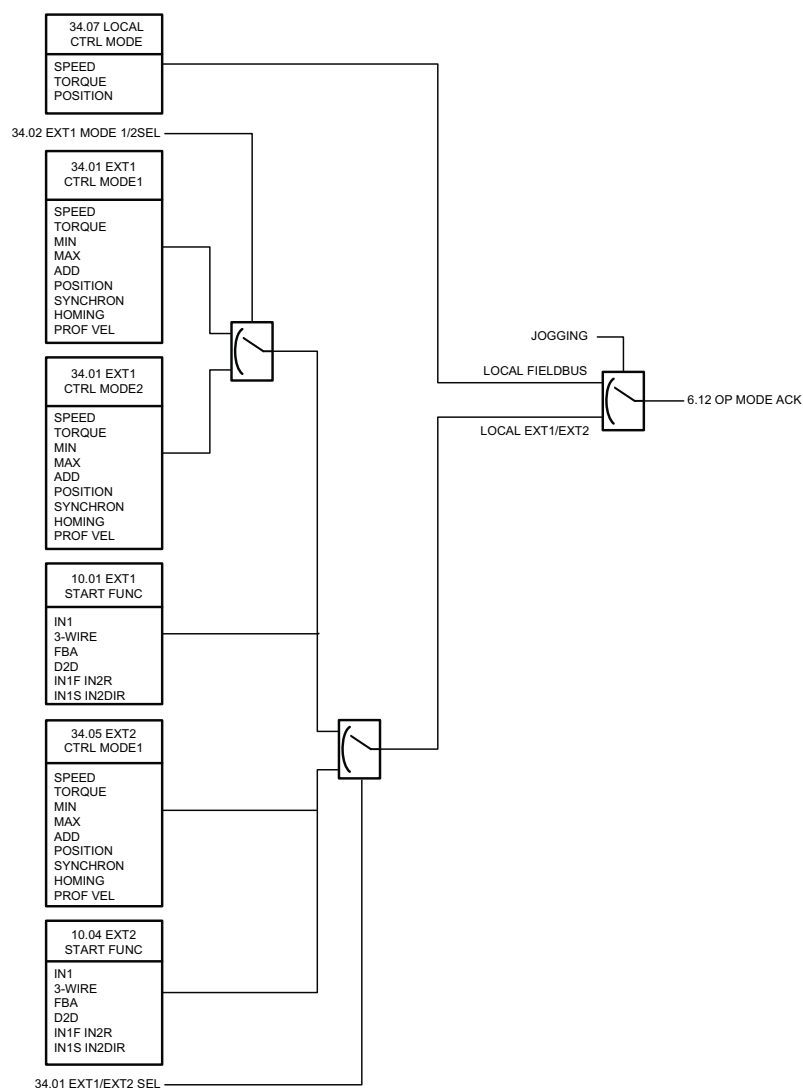

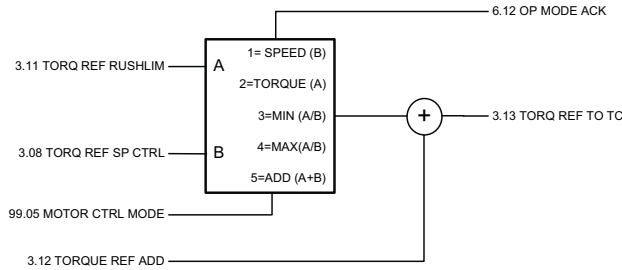

34 REFERENCE CTRL		
<p>Firmware block: <b>REFERENCE CTRL</b> (34)</p> <p>This block</p> <ul style="list-style-type: none"> <li>defines the selection method between external control locations EXT1 and EXT2</li> <li>configures control mode (SPEED/TORQUE/MIN/MAX/ADD) selection</li> <li>selects the torque reference used in local and external control</li> <li>shows the torque reference (for torque control) and operating mode.</li> </ul>		
<p>Block outputs located in other parameter groups</p>		<p>3.13 TORQ REF TO TC (page 88)</p> <p>6.12 OP MODE ACK (page 97)</p>
34.01	EXT1/EXT2 SEL	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects the source for external control location EXT1/EXT2 selection. 0 = EXT1. 1 = EXT2.	
	Bit pointer: Group, index and bit	
34.02	EXT1 MODE 1/2SEL	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects the source for EXT1 control mode 1/2 selection. 1 = mode 2. 0 = mode 1. Control mode 1/2 is selected by parameter <a href="#">34.03 EXT1 CTRL MODE1</a> / <a href="#">34.04 EXT1 CTRL MODE2</a> .	
	Bit pointer: Group, index and bit	
34.03	EXT1 CTRL MODE1	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects control mode 1 for external control location EXT1.	
	(1) SPEED	Speed control. Torque reference is <a href="#">3.08 TORQ REF SP CTRL</a> , which is the output of the <a href="#">SPEED CONTROL</a> firmware block. Torque reference source can be changed by parameter <a href="#">34.08 TREF SPEED SRC</a> .



	(2) TORQUE	Torque control. Torque reference is <a href="#">3.11 TORQ REF RUSHLIM</a> , which is the output of the <a href="#">TORQ REF MOD</a> firmware block. Torque reference source can be changed by parameter <a href="#">34.09 TREF TORQ SRC</a> .
	(3) MIN	Combination of selections (1) SPEED and (2) TORQUE: Torque selector compares the torque reference and the speed controller output and the smaller of them is used.
	(4) MAX	Combination of selections (1) SPEED and (2) TORQUE: Torque selector compares the torque reference and the speed controller output and the greater of them is used.
	(5) ADD	Combination of selections (1) SPEED and (2) TORQUE: Torque selector adds the speed controller output to the torque reference.
	(6) POSITION	Position control. Torque reference is <a href="#">3.08 TORQ REF SP CTRL</a> , which is the output of the <a href="#">SPEED CONTROL</a> firmware block. Speed reference is <a href="#">4.01 SPEED REF POS</a> , which is an output of the <a href="#">POS CONTROL</a> firmware block. Speed reference source can be changed by parameter <a href="#">26.03 SPEED REF PCTRL</a> .
	(7) SYNCHRON	Synchron control. Torque reference is <a href="#">3.08 TORQ REF SP CTRL</a> , which is the output of the <a href="#">SPEED CONTROL</a> firmware block. Speed reference is <a href="#">4.01 SPEED REF POS</a> , which is an output of the <a href="#">POS CONTROL</a> firmware block. Speed reference source can be changed by parameter <a href="#">26.03 SPEED REF PCTRL</a> .
	(8) HOMING	Homing control. Torque reference is <a href="#">3.08 TORQ REF SP CTRL</a> , which is the output of the <a href="#">SPEED CONTROL</a> firmware block. Speed reference is <a href="#">4.20 SPEED FEED FWD</a> , which is an output of the <a href="#">POS CONTROL</a> firmware block. Speed reference source can be changed by parameter <a href="#">26.04 SPEED FEED PCTRL</a> .
	(9) PROF VEL	Profile velocity control. Used e.g. with CANOpen profile. Torque reference is <a href="#">3.08 TORQ REF SP CTRL</a> , which is the output of the <a href="#">SPEED CONTROL</a> firmware block. Speed reference is <a href="#">4.20 SPEED FEED FWD</a> , which is an output of the <a href="#">POS CONTROL</a> firmware block. Speed reference source can be changed by parameter <a href="#">26.04 SPEED FEED PCTRL</a> .
<b>34.04</b>	EXT1 CTRL MODE2	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects control mode 2 for external control location EXT1. For selections, see parameter <a href="#">34.03 EXT1 CTRL MODE1</a> .	
<b>34.05</b>	EXT2 CTRL MODE1	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects control mode for external control location EXT2. For selections, see parameter <a href="#">34.03 EXT1 CTRL MODE1</a> .	
<b>34.07</b>	LOCAL CTRL MODE	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects the control mode for local control. <b>Note:</b> This parameter cannot be changed while the drive is running.	

	(1) SPEED	Speed control. Torque reference is <a href="#">3.08 TORQ REF SP CTRL</a> , which is the output of the <a href="#">SPEED CONTROL</a> firmware block. Torque reference source can be changed by parameter <a href="#">34.08 TREF SPEED SRC</a> .
	(2) TORQUE	Torque control. Torque reference is <a href="#">3.11 TORQ REF RUSHLIM</a> , which is an output of the <a href="#">TORQ REF MOD</a> firmware block. Torque reference source can be changed by parameter <a href="#">34.09 TREF TORQ SRC</a> .
	(6) POSITION	Position control. Torque reference is <a href="#">3.08 TORQ REF SP CTRL</a> , which is the output of the <a href="#">SPEED CONTROL</a> firmware block. Speed reference is <a href="#">4.01 SPEED REF POS</a> , which is an output of the <a href="#">POS CONTROL</a> firmware block. Speed reference source can be changed by parameter <a href="#">26.03 SPEED REF PCTRL</a> .
<b>34.08</b>	TREF SPEED SRC	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects the source for the torque reference (from the speed controller). Default value is P.3.8, i.e. <a href="#">3.08 TORQ REF SP CTRL</a> , which is the output of the <a href="#">SPEED CONTROL</a> firmware block. <b>Note:</b> This parameter has been locked, i.e. no user setting is possible.	
	Value pointer: Group and index	
<b>34.09</b>	TREF TORQ SRC	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects the source for the torque reference (from the torque reference chain). Default value is P.3.11, i.e. <a href="#">3.11 TORQ REF RUSHLIM</a> , which is an output of the <a href="#">TORQ REF MOD</a> firmware block. <b>Note:</b> This parameter has been locked, i.e. no user setting is possible.	
	Value pointer: Group and index	
<b>34.10</b>	TORQ REF ADD SRC	FW block: <a href="#">REFERENCE CTRL</a> (see above)
	Selects the source for the torque reference added to the torque value after the torque selection. Default value is P.3.12, i.e. <a href="#">3.12 TORQUE REF ADD</a> , which is an output of the <a href="#">TORQ REF SEL</a> firmware block. <b>Note:</b> This parameter has been locked, i.e. no user setting is possible.	
	Value pointer: Group and index	

## Group 35 MECH BRAKE CTRL

Settings for the control of a mechanical brake. See also section [Mechanical brake](#) on page 49.

35 MECH BRAKE CTRL		
Firmware block: <b>MECH BRAKE CTRL</b> (35)		
Block outputs located in other parameter groups		<a href="#">3.14 BRAKE TORQ MEM</a> (page 88) <a href="#">3.15 BRAKE COMMAND</a> (page 88)
<b>35.01</b>	BRAKE CONTROL	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	Activates the brake control function with or without supervision. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	(0) NO	Inactive.
	(1) WITH ACK	Brake control with supervision (supervision is activated by parameter <a href="#">35.02 BRAKE ACKNOWL</a> ).
	(2) NO ACK	Brake control without supervision.
<b>35.02</b>	BRAKE ACKNOWL	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	Selects the source for the external brake on/off supervision activation (when par. <a href="#">35.01 BRAKE CONTROL</a> = (1) WITH ACK). The use of the external on/off supervision signal is optional. 1 = The brake is open. 0 = The brake is closed. Brake supervision is usually controlled with a digital input. It can also be controlled with an external control system, e.g. fieldbus. When brake control error is detected the drive reacts as defined by parameter <a href="#">35.09 BRAKE FAULT FUNC</a> . <b>Note:</b> This parameter cannot be changed while the drive is running.	
	Bit pointer: Group, index and bit	

<b>35.03</b>	<b>BRAKE OPEN DELAY</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	<p>Defines the brake open delay (= the delay between the internal open brake command and the release of the motor speed control). The delay counter starts when the drive has magnetised the motor and risen the motor torque to the level required at the brake release (parameter <a href="#">35.06 BRAKE OPEN TORQ</a>). Simultaneously with the counter start, the brake function energises the relay output controlling the brake and the brake starts opening.</p> <p>Set the delay the same as the mechanical opening delay of the brake specified by the brake manufacturer.</p>	
	0...5 s	Brake open delay.
<b>35.04</b>	<b>BRAKE CLOSE DLY</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	<p>Defines the brake close delay. The delay counter starts when the motor actual speed has fallen below the set level (parameter <a href="#">35.05 BRAKE CLOSE SPD</a>) after the drive has received the stop command. Simultaneously with the counter start, the brake control function de-energises the relay output controlling the brake and the brake starts closing. During the delay, the brake function keeps the motor live preventing the motor speed from falling below zero.</p> <p>Set the delay time to the same value as the mechanical make-up time of the brake (= operating delay when closing) specified by the brake manufacturer.</p>	
	0...60 s	Brake close delay.
<b>35.05</b>	<b>BRAKE CLOSE SPD</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	Defines the brake close speed (an absolute value). See parameter <a href="#">35.04 BRAKE CLOSE DLY</a> .	
	0...1000 rpm	Brake close speed.
<b>35.06</b>	<b>BRAKE OPEN TORQ</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	Defines the motor starting torque at brake release (in percent of the motor nominal torque).	
	0...1000%	Motor starting torque at brake release.
<b>35.07</b>	<b>BRAKE CLOSE REQ</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	<p>Selects the source for the brake close (open) request. 1 = Brake close request. 0 = Brake open request.</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	Bit pointer: Group, index and bit	
<b>35.08</b>	<b>BRAKE OPEN HOLD</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	<p>Selects the source for the activation of the brake open command hold. 1 = Hold active. 0 = Normal operation.</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	Bit pointer: Group, index and bit	
<b>35.09</b>	<b>BRAKE FAULT FUNC</b>	FW block: <a href="#">MECH BRAKE CTRL</a> (see above)
	Defines how the drive reacts in case of mechanical brake control error. If brake control supervision has not been activated by parameter <a href="#">35.01 BRAKE CONTROL</a> , this parameter is disabled.	

	<b>(0) FAULT</b>	The drive trips on fault BRAKE NOT CLOSED / BRAKE NOT OPEN if the status of the optional external brake acknowledgement signal does not meet the status presumed by the brake control function. The drive trips on fault BRAKE START TORQUE if the required motor starting torque at brake release is not achieved.
	<b>(1) ALARM</b>	The drive generates alarm BRAKE NOT CLOSED / BRAKE NOT OPEN if the status of the optional external brake acknowledgement signal does not meet the status presumed by the brake control function. The drive generates alarm BRAKE START TORQUE if the required motor starting torque at brake release is not achieved.
	<b>(2) OPEN FLT</b>	The drive trips on fault BRAKE NOT CLOSED / BRAKE NOT OPEN if the status of the optional external brake acknowledgement signal does not meet the status presumed by the brake control function during the opening of the brake. Other brake function errors generate alarm BRAKE NOT CLOSED / BRAKE NOT OPEN.

## Group 40 MOTOR CONTROL

Motor control settings, such as

- flux reference
- drive switching frequency
- motor slip compensation
- voltage reserve
- flux optimisation
- IR compensation for scalar control mode.

### Flux optimisation

Flux optimisation reduces the total energy consumption and motor noise level when the drive operates below the nominal load. The total efficiency (motor and drive) can be improved by 1% to 10%, depending on the load torque and speed.

**Note:** Flux optimisation limits the dynamic control performance of the drive because with a small flux reference the drive torque cannot be increased fast.

40 MOTOR CONTROL		
<p>Firmware block: <b>MOTOR CONTROL</b> (40)</p> <p>This block defines motor control settings such as</p> <ul style="list-style-type: none"> <li>• flux reference</li> <li>• drive switching frequency</li> <li>• motor slip compensation</li> <li>• voltage reserve</li> <li>• flux optimisation</li> <li>• IR compensation for scalar control mode.</li> </ul> <p>The block also shows the flux and torque reference used.</p>		
<div> <div> <div>100 %</div> <div>4 kHz</div> <div>100 %</div> <div>0 %</div> <div>Disable</div> <div>FALSE</div> <div>0.00 %</div> </div> <div> <div>40.01 FLUX REF</div> <div>40.02 SF REF</div> <div>40.03 SLIP GAIN</div> <div>40.04 VOLTAGE RESERVE</div> <div>40.05 FLUX OPT</div> <div>40.06 FORCE OPEN LOOP</div> <div>40.07 IR COMPENSATION</div> </div> </div> <div> <div>MOTOR CONTROL</div> <div>31</div> <div>TLF10 2 msec (9)</div> <div>3.16 FLUX REF USED</div> <div>3.17 TORQUE REF USED</div> </div>		
Block outputs located in other parameter groups		<a href="#">3.16 FLUX REF USED</a> (page 88) <a href="#">3.17 TORQUE REF USED</a> (page 88)
<b>40.01</b>	FLUX REF	FW block: <a href="#">MOTOR CONTROL</a> (see above)
	Defines the flux reference.	
	0...200%	Flux reference.
<b>40.02</b>	SF REF	FW block: <a href="#">MOTOR CONTROL</a> (see above)
	Defines the switching frequency of the drive. When switching frequency exceeds 4 kHz, the allowed drive output current is limited. See switching frequency derating in the appropriate <i>Hardware Manual</i> .	

	1/2/3/4/5/8/16 kHz	Switching frequency.
<b>40.03</b>	SLIP GAIN	FW block: <a href="#">MOTOR CONTROL</a> (see above)
	<p>Defines the slip gain which is used to improve the estimated motor slip. 100% means full slip gain; 0% means no slip gain. The default value is 100%. Other values can be used if a static speed error is detected despite of the full slip gain.</p> <p>Example (with nominal load and nominal slip of 40 rpm): A 1000 rpm constant speed reference is given to the drive. Despite of the full slip gain (= 100%), a manual tachometer measurement from the motor axis gives a speed value of 998 rpm. The static speed error is 1000 rpm - 998 rpm = 2 rpm. To compensate the error, the slip gain should be increased. At the 105% gain value, no static speed error exists (2 rpm / 40 rpm = 5%).</p>	
	0...200%	Slip gain.
<b>40.04</b>	VOLTAGE RESERVE	FW block: <a href="#">MOTOR CONTROL</a> (see above)
	<p>Defines the minimum allowed voltage reserve. When the voltage reserve has decreased to the set value, the drive enters the field weakening area.</p> <p>If the intermediate circuit DC voltage <math>U_{dc} = 550</math> V and the voltage reserve is 5%, the RMS value of the maximum output voltage in steady-state operation is</p> $0.95 \times 550 \text{ V} / \sqrt{2} = 369 \text{ V}$ <p>The dynamic performance of the motor control in the field weakening area can be improved by increasing the voltage reserve value, but the drive enters the field weakening area earlier.</p>	
	-4...50 %	Minimum allowed voltage reserve.
<b>40.05</b>	FLUX OPT	FW block: <a href="#">MOTOR CONTROL</a> (see above)
	<p>Enables the flux optimisation function. Flux optimisation improves motor efficiency and reduces noise. Flux optimisation is used in drives that usually operate below nominal load.</p>	
	(0) DISABLE	Flux optimisation disabled.
	(1) ENABLE	Flux optimisation enabled.
<b>40.06</b>	FORCE OPEN LOOP	FW block: <a href="#">MOTOR CONTROL</a> (see above)
	<p>Defines the speed/position information used by the motor model.</p>	
	(0) FALSE	Motor model uses the speed feedback selected by parameter <a href="#">22.01 SPEED FB SEL</a> .
	(1) TRUE	Motor model uses the internal speed estimate (even when parameter <a href="#">22.01 SPEED FB SEL</a> setting is (1) <a href="#">ENC1 SPEED</a> / (2) <a href="#">ENC2 SPEED</a> ).


40.07	IR COMPENSATION	FW block: <a href="#">MOTOR CONTROL</a> (see above)
	<p>Defines the relative output voltage boost at zero speed (IR compensation). The function is useful in applications with high break-away torque when no DTC motor can be applied.</p> <p>This parameter is only effective when parameter <a href="#">99.05 MOTOR CTRL MODE</a> is set to (1) <a href="#">SCALAR</a>.</p> <p><math>U/U_N</math> (%)</p> <p>100%</p> <p>15%</p> <p>Relative output voltage. IR compensation set to 15%.</p> <p>Relative output voltage. No IR compensation.</p> <p>Field weakening point</p> <p><math>f</math> (Hz)</p>	
	0...50%	IR compensation.






## Group 45 MOT THERM PROT

Settings for thermal protection of the motor. See also section [Thermal motor protection](#) on page 41.

45 MOT THERM PROT		
<p>Firmware block: <b>MOT THERM PROT</b> (45)</p> <p>Configures motor overtemperature protection and temperature measurement. Also shows the estimated and measured motor temperatures.</p>		
Block outputs located in other parameter groups		<a href="#">1.17 MOTOR TEMP</a> (page 78) <a href="#">1.18 MOTOR TEMP EST</a> (page 78)
<b>45.01</b>	MOT TEMP PROT	FW block: <a href="#">MOT THERM PROT</a> (see above)
	Selects how the drive reacts when motor overtemperature is detected.	
	<b>(0)</b> NO	Inactive.
	<b>(1)</b> ALARM	The drive generates alarm MOTOR TEMPERATURE when the temperature exceeds the alarm level defined by parameter <a href="#">45.03 MOT TEMP ALM LIM</a> .
	<b>(2)</b> FAULT	The drive generates alarm MOTOR TEMPERATURE or trips on fault MOTOR OVERTEMP when the temperature exceeds the alarm/fault level defined by parameter <a href="#">45.03 MOT TEMP ALM LIM</a> / <a href="#">45.04 MOT TEMP FLT LIM</a> .
<b>45.02</b>	MOT TEMP SOURCE	FW block: <a href="#">MOT THERM PROT</a> (see above)
	Selects the motor temperature protection. When overtemperature is detected the drive reacts as defined by parameter <a href="#">45.01 MOT TEMP PROT</a> .	

	(0) ESTIMATED	<p>The temperature is supervised based on the motor thermal protection model, which uses the motor thermal time constant (parameter <a href="#">45.10 MOT THERM TIME</a>) and the motor load curve (parameters <a href="#">45.06...45.08</a>). User tuning is typically needed only if the ambient temperature differs from the normal operating temperature specified for the motor.</p> <p>The motor temperature increases if it operates in the region above the motor load curve. The motor temperature decreases if it operates in the region below the motor load curve (if the motor is overheated).</p> <p> <b>WARNING!</b> The model does not protect the motor if it does not cool properly due to dust and dirt.</p>
	(1) KTY JCU	The temperature is supervised using a KTY84 sensor connected to drive thermistor input TH.
	(2) KTY 1st FEN	The temperature is supervised using a KTY84 sensor connected to encoder interface module FEN-xx installed in drive Slot 1/2. If two encoder interface modules are used, encoder module connected to Slot 1 is used for the temperature supervision. <b>Note:</b> This selection does not apply for FEN-01. *
	(3) KTY 2nd FEN	The temperature is supervised using a KTY84 sensor connected to encoder interface module FEN-xx installed in drive Slot 1/2. If two encoder interface modules are used, encoder module connected to Slot 2 is used for the temperature supervision. <b>Note:</b> This selection does not apply for FEN-01. *
	(4) PTC JCU	The temperature is supervised using 1...3 PTC sensors connected to drive thermistor input TH.
	(5) PTC 1st FEN	The temperature is supervised using a PTC sensor connected to encoder interface module FEN-xx installed in drive Slot 1/2. If two encoder interface modules are used, encoder module connected to Slot 1 is used for the temperature supervision. *
	(6) PTC 2nd FEN	The temperature is supervised using a PTC sensor connected to encoder interface module FEN-xx installed in drive Slot 1/2. If two encoder interface modules are used, encoder module connected to Slot 2 is used for the temperature supervision. *
	* <b>Note:</b> If one FEN-xx module is used, parameter setting must be either <a href="#">(2) KTY 1st FEN</a> or <a href="#">(5) PTC 1st FEN</a> . The FEN-xx module can be in either Slot 1 or Slot 2.	
<b>45.03</b>	MOT TEMP ALM LIM	FW block: <a href="#">MOT THERM PROT</a> (see above)
	Defines the alarm limit for the motor overtemperature protection (when par. <a href="#">45.01 MOT TEMP PROT</a> = <a href="#">(1) ALARM</a> / <a href="#">(2) FAULT</a> ).	
	0...200 °C	Motor overtemperature alarm limit.
<b>45.04</b>	MOT TEMP FLT LIM	FW block: <a href="#">MOT THERM PROT</a> (see above)
	Defines the fault limit for the motor overtemperature protection (when par. <a href="#">45.01 MOT TEMP PROT</a> = <a href="#">(2) FAULT</a> ).	
	0...200 °C	Motor overtemperature fault limit.
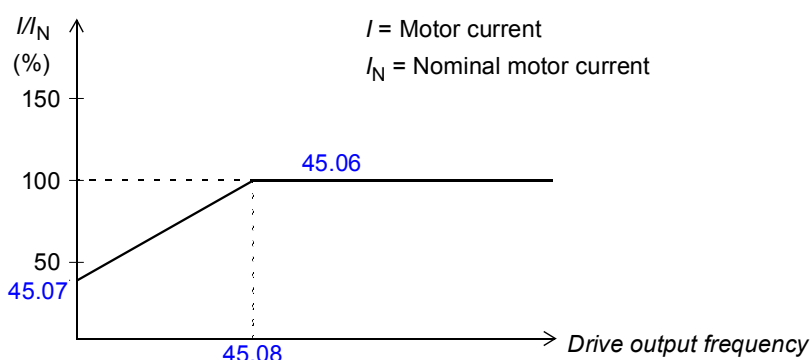
<b>45.05</b>	<b>AMBIENT TEMP</b>	FW block: <a href="#">MOT THERM PROT</a> (see above)
	Defines the ambient temperature for the thermal protection mode.	
	-60...100 °C	Ambient temperature.
<b>45.06</b>	<b>MOT LOAD CURVE</b>	FW block: <a href="#">MOT THERM PROT</a> (see above)
	<p>Defines the load curve together with parameters <a href="#">45.07 ZERO SPEED LOAD</a> and <a href="#">45.08 BREAK POINT</a>.</p> <p>The value is given in percent of nominal motor current. When the parameter is set to 100%, the maximum load is equal to the value of the parameter <a href="#">99.06 MOT NOM CURRENT</a> (higher loads heat up the motor). The load curve level should be adjusted if the ambient temperature differs from the nominal value.</p>  <p>The load curve is used by the motor thermal protection model when parameter <a href="#">45.02 MOT TEMP SOURCE</a> is set to <a href="#">(0) ESTIMATED</a>.</p>	
	50...150%	Motor current above breakpoint.
<b>45.07</b>	<b>ZERO SPEED LOAD</b>	FW block: <a href="#">MOT THERM PROT</a> (see above)
	<p>Defines the load curve together with parameters <a href="#">45.06 MOT LOAD CURVE</a> and <a href="#">45.08 BREAK POINT</a>. Defines the maximum motor load at zero speed of the load curve. A higher value can be used if the motor has an external motor fan to boost the cooling. See the motor manufacturer's recommendations.</p> <p>The value is given in percent of nominal motor current.</p> <p>The load curve is used by the motor thermal protection model when parameter <a href="#">45.02 MOT TEMP SOURCE</a> is set to <a href="#">(0) ESTIMATED</a>.</p>	
	50...150%	Motor current at zero speed.
<b>45.08</b>	<b>BREAK POINT</b>	FW block: <a href="#">MOT THERM PROT</a> (see above)
	<p>Defines the load curve together with parameters <a href="#">45.06 MOT LOAD CURVE</a> and <a href="#">45.07 ZERO SPEED LOAD</a>. Defines the break point frequency of the load curve i.e. the point at which the motor load curve begins to decrease from the value of parameter <a href="#">45.06 MOT LOAD CURVE</a> to the value of parameter <a href="#">45.07 ZERO SPEED LOAD</a>.</p> <p>The load curve is used by the motor thermal protection model when parameter <a href="#">45.02 MOT TEMP SOURCE</a> is set to <a href="#">(0) ESTIMATED</a>.</p>	
	0.01...500 Hz	Load curve breakpoint.

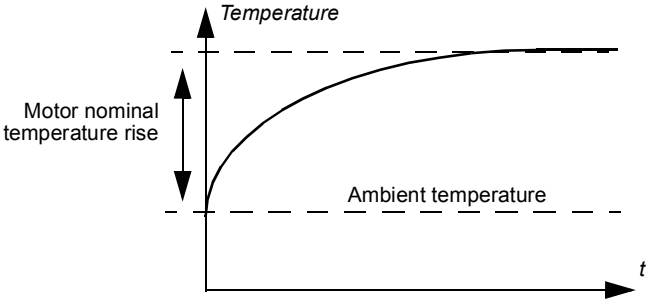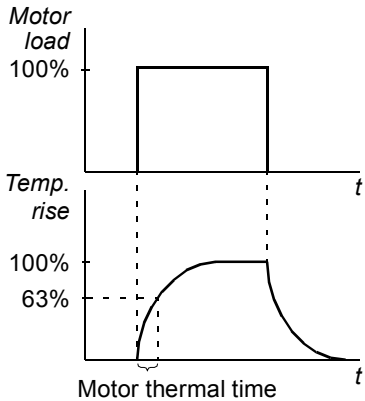

45.09	MOTNOMTEMPRISE	FW block: MOT THERM PROT (see above)
	<p>Defines the temperature rise of the motor when the motor is loaded with nominal current. See the motor manufacturer's recommendations.</p> <p>The temperature rise value is used by the motor thermal protection model when parameter 45.02 MOT TEMP SOURCE is set to (0) ESTIMATED.</p> 	
	0...300 °C	Motor temperature rise.
45.10	MOT THERM TIME	FW block: MOT THERM PROT (see above)
	<p>Defines the thermal time constant for the motor thermal protection model (i.e. time inside which the temperature has reached 63% of the nominal temperature). See the motor manufacturer's recommendations.</p> <p>The motor thermal protection model is used when parameter 45.02 MOT TEMP SOURCE is set to (0) ESTIMATED.</p> 	
	100...10000 s	Motor thermal time.

## Group 46 FAULT FUNCTIONS

Definition of drive behaviour upon a fault situation.

An alarm or a fault message indicates abnormal drive status. For the possible causes and remedies, see chapter [Fault tracing](#).

46 FAULT FUNCTIONS		
<p>Firmware block: <b>FAULT FUNCTIONS</b> (46)</p> <p>This block</p> <ul style="list-style-type: none"> <li>configures supervision of external faults by defining the source (for example, a digital input) for external fault indication signal</li> <li>selects the reaction of the drive (alarm; fault; continuation at safe speed in some cases) upon situations like local control communication break, motor/supply phase loss, earth fault, or Safe Torque Off function activation</li> <li>shows the codes of the latest faults, the time at which the active fault occurred, and the alarm words.</li> </ul>		
Block outputs located in other parameter groups		<a href="#">8.01 ACTIVE FAULT</a> (page 99) <a href="#">8.02 LAST FAULT</a> (page 99) <a href="#">8.03 FAULT TIME HI</a> (page 99) <a href="#">8.04 FAULT TIME LO</a> (page 99) <a href="#">8.05 ALARM WORD 1</a> (page 99) <a href="#">8.06 ALARM WORD 2</a> (page 100) <a href="#">8.07 ALARM WORD 3</a> (page 100) <a href="#">8.08 ALARM WORD 4</a> (page 100)
<b>46.01</b>	EXTERNAL FAULT	FW block: <a href="#">FAULT FUNCTIONS</a> (see above)
	Selects an interface for an external fault signal. 0 = External fault trip. 1 = No external fault.	
	Bit pointer: Group, index and bit	
<b>46.02</b>	SPEED REF SAFE	FW block: <a href="#">FAULT FUNCTIONS</a> (see above)
	Defines the fault speed. Used as a speed reference when an alarm occurs when parameter <a href="#">13.12 AI SUPERVISION</a> / <a href="#">46.03 LOCAL CTRL LOSS</a> / <a href="#">50.02 COMM LOSS FUNC</a> setting is (2) SPD REF SAFE.	
	-30000...30000 rpm	Fault speed.
<b>46.03</b>	LOCAL CTRL LOSS	FW block: <a href="#">FAULT FUNCTIONS</a> (see above)
	Selects how the drive reacts to a control panel or PC tool communication break.	
	(0) NO	No action.

	(1) FAULT	Drive trips on LOCAL CTRL LOSS fault.
	(2) SPD REF SAFE	The drive generates alarm LOCAL CTRL LOSS and sets the speed to the speed defined by parameter <a href="#">46.02 SPEED REF SAFE</a> .  <b>WARNING!</b> Make sure that it is safe to continue operation in case of a communication break.
	(3) LAST SPEED	The drive generates alarm LOCAL CTRL LOSS and freezes the speed to the level the drive was operating at. The speed is determined by the average speed over the previous 10 seconds.  <b>WARNING!</b> Make sure that it is safe to continue operation in case of a communication break.
<b>46.04</b>	MOT PHASE LOSS	FW block: <a href="#">FAULT FUNCTIONS</a> (see above)
	Selects how the drive reacts when a motor phase loss is detected.	
	(0) NO	No action.
	(1) FAULT	Drive trips on MOTOR PHASE fault.
<b>46.05</b>	EARTH FAULT	FW block: <a href="#">FAULT FUNCTIONS</a> (see above)
	Selects how the drive reacts when an earth fault or current unbalance is detected in the motor or the motor cable.	
	(0) NO	No action.
	(1) WARNING	Drive generates alarm EARTH FAULT.
	(2) FAULT	Drive trips on EARTH FAULT.
<b>46.06</b>	SUPPL PHS LOSS	FW block: <a href="#">FAULT FUNCTIONS</a> (see above)
	Selects how the drive reacts when a supply phase loss is detected.	
	(0) NO	No reaction.
	(1) FAULT	Drive trips on SUPPLY PHASE fault.
<b>46.07</b>	STO DIAGNOSTIC	FW block: <a href="#">FAULT FUNCTIONS</a> (see above)
	<p>Selects how the drive reacts when the drive detects that the Safe Torque Off function is active while the drive is stopped. The Safe Torque Off function disables the control voltage of the power semiconductors of the drive output stage, thus preventing the inverter from generating the voltage required to rotate the motor. For Safe Torque Off wiring, see the appropriate hardware manual.</p> <p><b>Note:</b> This parameter is only for supervision. The Safe Torque Off function can activate, even when this parameter selection is NO.</p> <p><b>Note:</b> Fault STO 1 LOST / STO 2 LOST is activated if safety circuit signal 1/2 is lost when the drive is at stopped state and this parameter is set to <a href="#">(2) ALARM</a> or <a href="#">(3) NO</a>.</p>	
	(1) FAULT	Drive trips on SAFE TORQUE OFF fault.
	(2) ALARM	Drive generates SAFE TORQUE OFF alarm.
	(3) NO	No reaction.

<b>46.08</b>	<b>CROSS CONNECTION</b>	FW block: <b>FAULT FUNCTIONS</b> (see above)
	Selects how the drive reacts to incorrect input power and motor cable connection (i.e. input power cable is connected to drive motor connection).	
	<b>(0)</b> NO	No reaction.
	<b>(1)</b> FAULT	Drive trips on CABLE CROSS CON fault.

## Group 47 VOLTAGE CTRL

Settings for overvoltage and undervoltage control, and supply voltage.

47 VOLTAGE CTRL		
<p>Firmware block: <b>VOLTAGE CTRL</b> (47)</p> <p>This block</p> <ul style="list-style-type: none"> <li>enables/disables overvoltage and undervoltage control</li> <li>enables/disables automatic identification of supply voltage</li> <li>provides a parameter for manual definition of supply voltage</li> <li>shows the supply voltage value used by the control program.</li> </ul>		
Block outputs located in other parameter groups		1.19 USED SUPPLY VOLT (page 78)
<b>47.01</b>	OVERVOLTAGE CTRL	FW block: <a href="#">VOLTAGE CTRL</a> (see above)
	<p>Enables the overvoltage control of the intermediate DC link. Fast braking of a high inertia load causes the voltage to rise to the overvoltage control limit. To prevent the DC voltage from exceeding the limit, the overvoltage controller automatically decreases the braking torque.</p> <p><b>Note:</b> If a brake chopper and resistor or a regenerative supply section are included in the drive, the controller must be disabled.</p>	
	(0) DISABLE	Overvoltage control disabled.
	(1) ENABLE	Overvoltage control enabled.
<b>47.02</b>	UNDERVOLT CTRL	FW block: <a href="#">VOLTAGE CTRL</a> (see above)
	<p>Enables the undervoltage control of the intermediate DC link. If the DC voltage drops due to input power cut off, the undervoltage controller will automatically decrease the motor torque in order to keep the voltage above the lower limit. By decreasing the motor torque, the inertia of the load will cause regeneration back to the drive, keeping the DC link charged and preventing an undervoltage trip until the motor coasts to stop. This will act as a power-loss ride-through functionality in systems with high inertia, such as a centrifuge or a fan.</p>	
	(0) DISABLE	Undervoltage control disabled.
	(1) ENABLE	Undervoltage control enabled.
<b>47.03</b>	SUPPLVOLTAUTO-ID	FW block: <a href="#">VOLTAGE CTRL</a> (see above)
	Enables the auto-identification of the supply voltage.	
	(0) DISABLE	Auto-identification of supply voltage disabled.
	(1) ENABLE	Auto-identification of supply voltage enabled.



<b>47.04</b>	SUPPLY VOLTAGE	FW block: <a href="#">VOLTAGE CTRL</a> (see above)
	Defines the nominal supply voltage. Used if auto-identification of the supply voltage is not enabled by parameter <a href="#">47.03 SUPPLVOLTAUTO-ID</a> .	
	0...1000 V	Nominal supply voltage.

## Group 48 BRAKE CHOPPER


Configuration of internal brake chopper.


48 BRAKE CHOPPER		
<p>Firmware block:</p> <p><b>BRAKE CHOPPER</b> (48)</p> <p>This block configures the brake chopper control and supervision.</p>		
<b>48.01</b>	BC ENABLE	FW block: <a href="#">BRAKE CHOPPER</a> (see above)
	<p>Enables the brake chopper control.</p> <p><b>Note:</b> Before enabling brake chopper control, ensure the brake resistor is installed and the overvoltage control is switched off (parameter <a href="#">47.01 OVERVOLTAGE CTRL</a>). The drive has a built-in brake chopper.</p>	
	(0) DISABLE	Brake chopper control disabled.
	(1) ENABLE THERM	Enable brake chopper control with resistor overload protection.
	(2) ENABLE	Enable brake chopper control without resistor overload protection. This setting can be used, for example, if the resistor is equipped with a thermal circuit breaker that is wired to stop the drive if the resistor overheats.
<b>48.02</b>	BC RUN-TIME ENA	FW block: <a href="#">BRAKE CHOPPER</a> (see above)
	<p>Selects the source for quick run-time brake chopper control.</p> <p>0 = Brake chopper IGBT pulses are cut off.</p> <p>1 = Normal brake chopper IGBT modulation. The overvoltage control is automatically switched off.</p> <p>This parameter can be used to program the chopper control to function only when the drive is operating in generating mode.</p>	
	Bit pointer: Group, index and bit	
<b>48.03</b>	BR THERM TIMECONST	FW block: <a href="#">BRAKE CHOPPER</a> (see above)
	Defines the thermal time constant of the brake resistor for overload protection.	
	0...10000 s	Brake resistor thermal time constant.
<b>48.04</b>	BR POWER MAX CNT	FW block: <a href="#">BRAKE CHOPPER</a> (see above)
	Defines the maximum continuous braking power which will raise the resistor temperature to the maximum allowed value. The value is used in the overload protection.	
	0...10000 kW	Maximum continuous braking power.

<b>48.05</b>	R BR	FW block: <a href="#">BRAKE CHOPPER</a> (see above)
	Defines the resistance value of the brake resistor. The value is used for brake chopper protection.	
	0.1...1000 ohm	Resistance.
<b>48.06</b>	BR TEMP FAULTLIM	FW block: <a href="#">BRAKE CHOPPER</a> (see above)
	<p>Selects the fault limit for the brake resistor temperature supervision. The value is given in percent of the temperature the resistor reaches when loaded with the power defined by parameter <a href="#">48.04 BR POWER MAX CNT</a>.</p> <p>When the limit is exceeded the drive trips on fault BR OVERHEAT.</p>	
	0...150%	Resistor temperature fault limit.
<b>48.07</b>	BR TEMP ALARMLIM	FW block: <a href="#">BRAKE CHOPPER</a> (see above)
	<p>Selects the alarm limit for the brake resistor temperature supervision. The value is given in percent of the temperature the resistor reaches when loaded with the power defined by parameter <a href="#">48.04 BR POWER MAX CNT</a>.</p> <p>When limit is exceeded the drive generates alarm BR OVERHEAT.</p>	
	0...150%	Resistor temperature alarm limit.

## Group 50 FIELDBUS

Basic settings for fieldbus communication. See also chapter [Appendix A – Fieldbus control](#) on page 385.

50 FIELDBUS		
<p>Firmware block: <b>FIELDBUS</b> (50)</p> <p>This block</p> <ul style="list-style-type: none"> <li>initialises the fieldbus communication</li> <li>selects communication supervision method</li> <li>defines scaling of the fieldbus references and actual values</li> <li>selects sources for programmable status word bits</li> <li>shows the fieldbus control and status words, and references.</li> </ul>		
Block outputs located in other parameter groups		<a href="#">2.12 FBA MAIN CW</a> (page 81) <a href="#">2.13 FBA MAIN SW</a> (page 84) <a href="#">2.14 FBA MAIN REF1</a> (page 85) <a href="#">2.15 FBA MAIN REF2</a> (page 85)
<b>50.01</b>	FBA ENABLE	FW block: <a href="#">FIELDBUS</a> (see above)
	Enables communication between the drive and fieldbus adapter.	
	(0) DISABLE	No communication.
	(1) ENABLE	Communication between drive and fieldbus adapter enabled.
<b>50.02</b>	COMM LOSS FUNC	FW block: <a href="#">FIELDBUS</a> (see above)
	Selects how the drive reacts in a fieldbus communication break. The time delay is defined by parameter <a href="#">50.03 COMM LOSS T OUT</a> .	
	(0) NO	Protection inactive.
	(1) FAULT	Protection active. The drive generates alarm <a href="#">FIELDBUS COMM</a> and sets the speed to the value defined by parameter <a href="#">46.02 SPEED REF SAFE</a> .  <b>WARNING!</b> Make sure that it is safe to continue operation in case of a communication break.
	(2) SPD REF SAFE	Protection is active.

	<b>(3) LAST SPEED</b>	Protection is active. The drive generates alarm <b>FIELD BUS COMM</b> and freezes the speed to the level the drive was operating at. The speed is determined by the average speed over the previous 10 seconds.   <b>WARNING!</b> Make sure that it is safe to continue operation in case of a communication break.
<b>50.03</b>	<b>COMM LOSS T OUT</b>	FW block: <b>FIELD BUS</b> (see above)
	Defines the time delay before the action defined by parameter <b>50.02 COMM LOSS FUNC</b> is taken. Time count starts when the link fails to update the message.	
	0.3...6553.5 s	Delay for fieldbus communication loss function.
<b>50.04</b>	<b>FBA REF1 MODESEL</b>	FW block: <b>FIELD BUS</b> (see above)
	Selects the fieldbus reference FBA REF1 scaling and the actual value, which is sent to the fieldbus (FBA ACT1).	
	<b>(0) RAW DATA</b>	No scaling (i.e. data is transmitted without scaling). Source for the actual value, which is sent to the fieldbus, is selected by parameter <b>50.06 FBA ACT1 TR SRC</b> .
	<b>(1) TORQUE</b>	Fieldbus adapter module uses torque reference scaling. Torque reference scaling is defined by the used fieldbus profile (e.g. with ABB Drives Profile integer value 10000 corresponds to 100% torque value). Signal <b>1.06 TORQUE</b> is sent to the fieldbus as an actual value. See the <i>User's Manual</i> of the appropriate fieldbus adapter module.
	<b>(2) SPEED</b>	Fieldbus adapter module uses speed reference scaling. Speed reference scaling is defined by the used fieldbus profile (e.g. with ABB Drives Profile integer value 20000 corresponds to the value of parameter <b>25.02 SPEED SCALING</b> ). Signal <b>1.01 SPEED ACT</b> is sent to the fieldbus as an actual value. See the <i>User's Manual</i> of the appropriate fieldbus adapter module.
	<b>(3) POSITION</b>	Fieldbus adapter module uses position reference scaling. Position reference scaling is defined by parameters <b>60.05 POS UNIT</b> and <b>60.08 POS2INT SCALE</b> . Signal <b>1.12 POS ACT</b> is sent to the fieldbus as an actual value.
	<b>(4) VELOCITY</b>	Fieldbus adapter module uses position speed scaling. Position speed scaling is defined by parameters <b>60.10 POS SPEED UNIT</b> and <b>60.11 POS SPEED2INT</b> . Signal <b>4.02 SPEED ACT LOAD</b> is sent to the fieldbus as an actual value.
	<b>(5) AUTO</b>	One of the above selections is chosen automatically according to the currently active control mode. See parameter group <b>34 REFERENCE CTRL</b> .
<b>50.05</b>	<b>FBA REF2 MODESEL</b>	FW block: <b>FIELD BUS</b> (see above)
	Selects the fieldbus reference FBA REF2 scaling. See parameter <b>50.04 FBA REF1 MODESEL</b> .	

<b>50.06</b>	FBA ACT1 TR SRC	FW block: <a href="#">FIELD BUS</a> (see above)
	Selects the source for fieldbus actual value 1 when parameter <a href="#">50.04 FBA REF1 MODESEL</a> / <a href="#">50.05 FBA REF2 MODESEL</a> is set to <a href="#">(0) RAW DATA</a> .	
	Value pointer: Group and index	
<b>50.07</b>	FBA ACT2 TR SRC	FW block: <a href="#">FIELD BUS</a> (see above)
	Selects the source for fieldbus actual value 2 when parameter <a href="#">50.04 FBA REF1 MODESEL</a> / <a href="#">50.05 FBA REF2 MODESEL</a> is set to <a href="#">(0) RAW DATA</a> .	
	Value pointer: Group and index	
<b>50.08</b>	FBA SW B12 SRC	FW block: <a href="#">FIELD BUS</a> (see above)
	Selects the source for freely programmable fieldbus status word bit 28 ( <a href="#">2.13 FBA MAIN SW</a> bit 28 SW B12).	
	Bit pointer: Group, index and bit	
<b>50.09</b>	FBA SW B13 SRC	FW block: <a href="#">FIELD BUS</a> (see above)
	Selects the source for freely programmable fieldbus status word bit 29 ( <a href="#">2.13 FBA MAIN SW</a> bit 29 SW B13).	
	Bit pointer: Group, index and bit	
<b>50.10</b>	FBA SW B14 SRC	FW block: <a href="#">FIELD BUS</a> (see above)
	Selects the source for freely programmable fieldbus status word bit 30 ( <a href="#">2.13 FBA MAIN SW</a> bit 30 SW B14).	
	Bit pointer: Group, index and bit	
<b>50.11</b>	FBA SW B15 SRC	FW block: <a href="#">FIELD BUS</a> (see above)
	Selects the source for freely programmable fieldbus status word bit 31 ( <a href="#">2.13 FBA MAIN SW</a> bit 31 SW B15).	
	Bit pointer: Group, index and bit	

## Group 51 FBA SETTINGS

Further fieldbus communication configuration. These parameters need to be set only if a fieldbus adapter module is installed. See also [Appendix A – Fieldbus control](#) on page 385.

### Notes:

- This parameter group is presented in the *User's Manual* of the fieldbus adapter as parameter group 1 or A.
- The new settings will take effect when the drive is powered up the next time (before powering off the drive, wait at least 1 minute), or when parameter [51.27 FBA PAR REFRESH](#) is activated.

51 FBA SETTINGS		
51.01	FBA TYPE	FW block: None
	Displays the type of the connected fieldbus adapter module.	
	NOT DEFINED	Fieldbus adapter module not found (not properly connected, or disabled by parameter <a href="#">50.01 FBA ENABLE</a> ).
	(1)	FPBA-xx PROFIBUS-DP adapter module.
	(32)	FCAN-xx CANopen adapter module.
	(37)	FDNA-xx DeviceNet adapter module.
51.02	FBA PAR2	FW block: None
...	....	....
51.26	FBA PAR26	FW block: None
	Parameters 51.02...51.26 are adapter module-specific. For more information, see the <i>User's Manual</i> of the fieldbus adapter module. Note that not all of these parameters are necessarily visible.	
51.27	FBA PAR REFRESH	FW block: None
	Validates any changed adapter module configuration parameter settings. After refreshing, the value reverts automatically to <a href="#">(0) DONE</a> . <b>Note:</b> This parameter cannot be changed while the drive is running.	
	(0) DONE	Refreshing done.
	(1) REFRESH	Refreshing.
51.28	PAR TABLE VER	FW block: None
	Displays the parameter table revision of the fieldbus adapter module mapping file stored in the memory of the drive. In format xyz, where x = major revision number; y = minor revision number; z = correction number.	

<b>51.29</b>	<b>DRIVE TYPE CODE</b>	FW block: None
	Displays the drive type code of the fieldbus adapter module mapping file stored in the memory of the drive. Example: 520 = ACSM1 Speed and Torque Control Program.	
<b>51.30</b>	<b>MAPPING FILE VER</b>	FW block: None
	Displays the fieldbus adapter module mapping file revision stored in the memory of the drive. In decimal format. Example: 1 = revision 1.	
<b>51.31</b>	<b>D2FBA COMM STA</b>	FW block: None
	Displays the status of the fieldbus adapter module communication.	
	<b>(0) IDLE</b>	Adapter not configured.
	<b>(1) EXEC. INIT</b>	Adapter initializing.
	<b>(2) TIME OUT</b>	A timeout has occurred in the communication between the adapter and the drive.
	<b>(3) CONFIG ERROR</b>	Adapter configuration error – the major or minor revision code of the common program revision in the fieldbus adapter module is not the revision required by the module (see par. <a href="#">51.32 FBA COMM SW VER</a> ), or mapping file upload has failed more than three times.
	<b>(4) OFF-LINE</b>	Adapter is off-line.
	<b>(5) ON-LINE</b>	Adapter is on-line.
	<b>(6) RESET</b>	Adapter is performing a hardware reset.
<b>51.32</b>	<b>FBA COMM SW VER</b>	FW block: None
	Displays the common program revision of the adapter module. In format axyz, where a = major revision number, xy = minor revision numbers. z = correction letter. Example: 190A = revision 1.90A.	
<b>51.33</b>	<b>FBA APPL SW VER</b>	FW block: None
	Displays the application program revision of the adapter module. In format axyz, where: a = major revision number, xy = minor revision numbers, z = correction letter. Example: 190A = revision 1.90A.	



## Group 52 FBA DATA IN

These parameters select the data to be sent by the drive to the fieldbus controller, and need to be set only if a fieldbus adapter module is installed. See also [Appendix A – Fieldbus control](#) on page 385.

### Notes:

- This parameter group is presented in the *User's Manual* of the fieldbus adapter as parameter group 3 or C.
- The new settings will take effect when the drive is powered up the next time (before powering off the drive, wait at least 1 minute), or when parameter [51.27 FBA PAR REFRESH](#) is activated.
- The maximum number of data words is protocol-dependent.

52 FBA DATA IN		
52.01	FBA DATA IN1	FW block: None
	Selects data to be transferred from the drive to the fieldbus controller.	
	0	Not in use.
	4	Status Word (16 bits).
	5	Actual value 1 (16 bits).
	6	Actual value 2 (16 bits).
	14	Status Word (32 bits).
	15	Actual value 1 (32 bits).
	16	Actual value 2 (32 bits).
	101...9999	Parameter index.
52.02	FBA DATA IN2	FW block: None
...	...	
52.12	FBA DATA IN12	FW block: None
	See <a href="#">52.01 FBA DATA IN1</a> .	

## Group 53 FBA DATA OUT

These parameters select the data to be sent by the fieldbus controller to the drive, and need to be set only if a fieldbus adapter module is installed. See also [Appendix A – Fieldbus control](#) on page 385.

### Notes:

- This parameter group is presented in the *User's Manual* of the fieldbus adapter as parameter group 2 or B.
- The new settings will take effect when the drive is powered up the next time (before powering off the drive, wait at least 1 minute), or when parameter [51.27 FBA PAR REFRESH](#) is activated.
- The maximum number of data words is protocol-dependent.

53 FBA DATA OUT		
<b>53.01</b>	FBA DATA OUT1	FW block: None
	Selects data to be transferred from the fieldbus controller to the drive.	
	0	Not in use.
	1	Control Word (16 bits).
	2	Reference REF1 (16 bits).
	3	Reference REF2 (16 bits).
	11	Control Word (32 bits).
	12	Reference REF1 (32 bits).
	13	Reference REF2 (32 bits).
	1001...9999	Parameter index.
<b>53.02</b>	FBA DATA OUT2	FW block: None
...		
<b>53.12</b>	FBA DATA OUT12	FW block: None
	See <a href="#">53.01 FBA DATA OUT1</a> .	

## Group 57 D2D COMMUNICATION

Drive-to-drive communication settings. See [Appendix B – Drive-to-drive link](#) on page 391.

57 D2D COMMUNICATION		
Firmware block: <b>D2D COMMUNICATION</b> (57)  This block sets up the drive-to-drive communication. It also shows the main drive-to-drive control word and the two references.		
Block outputs located in other parameter groups		<a href="#">2.17 D2D MAIN CW</a> (page 86) <a href="#">2.19 D2D REF1</a> (page 86) <a href="#">2.20 D2D REF2</a> (page 86)
<b>57.01</b>	LINK MODE	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Activates the drive-to-drive connection.	
	<b>(0)</b> DISABLED	Drive-to-drive connection disabled.
	<b>(1)</b> FOLLOWER	The drive is a follower on the drive-to-drive link.
	<b>(2)</b> MASTER	The drive is the master on the drive-to-drive link. Only one drive can be the master at a time.
<b>57.02</b>	COMM LOSS FUNC	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Selects how the drive acts when an erroneous drive-to-drive configuration or a communication break is detected.	
	<b>(0)</b> NO	Protection inactive.
	<b>(1)</b> ALARM	The drive generates an alarm.
	<b>(2)</b> FAULT	The drive trips on a fault.

<b>57.03</b>	<b>NODE ADDRESS</b>	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Sets the node address for a follower drive. Each follower must have a dedicated node address. <b>Note:</b> If the drive is set to be the master on the drive-to-drive link, this parameter has no effect (the master is automatically assigned node address 0).	
	1...62	Node address.
<b>57.04</b>	<b>FOLLOWER MASK 1</b>	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	On the master drive, selects the followers to be polled. If no response is received from a polled follower, the action selected by parameter <a href="#">57.02 COMM LOSS FUNC</a> is taken.  The least significant bit represents follower with node address 1, while the most significant bit represents follower 31. When a bit is set to 1, the corresponding node address is polled. For example, followers 1 and 2 are polled when this parameter is set to the value of 0x3.	
	0x00000000...0x7FFFFFFF	Follower mask 1.
<b>57.05</b>	<b>FOLLOWER MASK 2</b>	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	On the master drive, selects the followers to be polled. If no response is received from a polled follower, the action selected by parameter <a href="#">57.02 COMM LOSS FUNC</a> is taken.  The least significant bit represents follower with node address 32, while the most significant bit represents follower 62. When a bit is set to 1, the corresponding node address is polled. For example, followers 32 and 33 are polled when this parameter is set to the value of 0x3.	
	0x00000000...0x7FFFFFFF	Follower mask 2.
<b>57.06</b>	<b>REF 1 SRC</b>	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Selects the source of D2D reference 1 sent to the followers. The parameter is effective on the master drive, as well as submasters ( <a href="#">57.03 NODE ADDRESS</a> = <a href="#">57.12 REF1 MC GROUP</a> ) in a multicast message chain (see parameter <a href="#">57.11 REF 1 MSG TYPE</a> ). The default value is P.03.04, i.e. <a href="#">3.04 SPEEDREF RAMPED</a> .	
	Value pointer: Group and index.	
<b>57.07</b>	<b>REF 2 SRC</b>	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	On the master drive, selects the source of D2D reference 2 broadcast to all followers. The default value is P.03.13, i.e. <a href="#">3.13 TORQ REF TO TC</a> .	
	Value pointer: Group and index.	
<b>57.08</b>	<b>FOLLOWER CW SRC</b>	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Selects the source of the D2D control word sent to the followers. The parameter is effective on the master drive, as well as submasters in a multicast message chain (see parameter <a href="#">57.11 REF 1 MSG TYPE</a> ). The default value is P.02.18, i.e. <a href="#">2.18 D2D FOLLOWER CW</a> .	
	Value pointer: Group and index.	
<b>57.09</b>	<b>KERNEL SYNC MODE</b>	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Determines which signal the time levels of the drive are synchronised with. An offset can be defined by parameter <a href="#">57.10 KERNEL SYNC OFFS</a> if desired.	


	(0) NO SYNC	No synchronisation.
	(1) D2DSYNC	If the drive is the master on a drive-to-drive link, it broadcasts a synchronisation signal to the follower(s). If the drive is a follower, it synchronises its firmware time levels to the signal received from the master.
	(2) FBSYNC	The drive synchronises its firmware time levels to a synchronisation signal received through a fieldbus adapter.
	(3) FBTOD2DSYNC	If the drive is the master on a drive-to-drive link, it synchronises its firmware time levels to a synchronisation signal received from a fieldbus adapter, and broadcasts the signal on the drive-to-drive link. If the drive is a follower, this setting has no effect.
57.10	KERNEL SYNC OFFS	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Defines an offset between the synchronisation signal received and the time levels of the drive. With a positive value, the drive time levels will lag behind the synchronisation signal; with a negative value, the drive time levels will lead.	
	-4999...5000 ms	Synchronisation offset.
57.11	REF 1 MSG TYPE	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	<p>By default, in drive-to-drive communication, the master broadcasts the drive-to-drive control word and references 1 and 2 to all followers. This parameter enables multicasting, i.e. sending the drive-to-drive control word and reference 1 to a certain drive or group of drives. The message can then be further relayed to another group of drives to form a multicast chain.</p> <p>In the master, as well as any submaster (i.e. follower relaying the message to other followers), the sources for the control word and reference 1 are selected by parameters <a href="#">57.08 FOLLOWER CW SRC</a> and <a href="#">57.06 REF 1 SRC</a> respectively.</p> <p><b>Note:</b> Reference 2 is broadcast to all followers.</p> <p>For more information, see <a href="#">Appendix B – Drive-to-drive link</a> on page 391.</p>	
	(0) BROADCAST	The control word and reference 1 are sent by the master to all followers. If the master has this setting, the parameter has no effect in the followers.
	(1) REF1 MC GRPS	The drive-to-drive control word and reference 1 are only sent to the drives in the multicast group specified by parameter <a href="#">57.13 NEXT REF1 MC GRP</a> . This setting can also be used in intermediate followers to form a multicast chain.
57.12	REF1 MC GROUP	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Selects the multicast group the drive belongs to. See parameter <a href="#">57.11 REF 1 MSG TYPE</a> .	
	0...62	Multicast group (0 = none).
57.13	NEXT REF1 MC GRP	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	Specifies the next multicast group of drives the multicast message is relayed to. See parameter <a href="#">57.11 REF 1 MSG TYPE</a> . This parameter is effective only in the master or intermediate followers (i.e. followers relaying the message to other followers).	
	0...62	Next multicast group in message chain.

<b>57.14</b>	NR REF1 MC GRPS	FW block: <a href="#">D2D COMMUNICATION</a> (see above)
	<p>In the master drive, sets the total number of links (followers or groups of followers) in the multicast message chain. See parameter <a href="#">57.11 REF 1 MSG TYPE</a>.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• This parameter has no effect if the drive is a follower.</li> <li>• The master counts as a member of the chain if acknowledgement from the last drive to the master is desired.</li> </ul>	
	1...62	Total number of links in multicast message chain.
<b>57.15</b>	D2D COMM PORT	FW block: None
	<p>Defines the hardware to which the drive-to-drive link is connected. In special cases (such as harsh operating conditions), the galvanic isolation provided by the RS-485 interface of the FMBA module may make for more robust communication than the standard drive-to-drive connection.</p>	
	<b>(0)</b> ON-BOARD	Connector X5 on the JCU Control Unit is used.
	<b>(1)</b> SLOT 1	An FMBA module installed in JCU option slot 1 is used.
	<b>(2)</b> SLOT 2	An FMBA module installed in JCU option slot 2 is used.
	<b>(3)</b> SLOT 3	An FMBA module installed in JCU option slot 3 is used.

## Group 60 POS FEEDBACK

Configuration of drive position feedback including

- feedback source
- load gear ratio
- axis type
- positioning unit
- scalings for fieldbus
- scaling between rotational and translational systems
- resolution of internal position calculation
- position limit and threshold values.

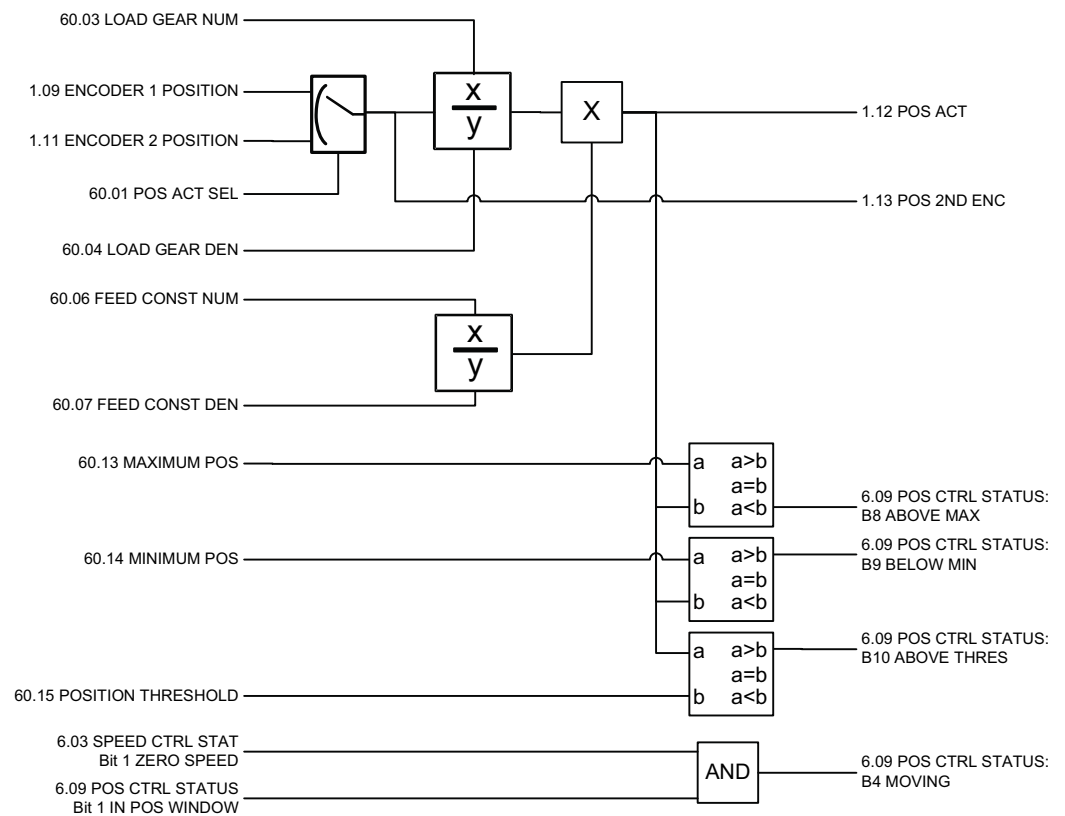

60 POS FEEDBACK		
<p>Firmware block:</p> <p><b>POS FEEDBACK</b> (60)</p> <p>This block</p> <ul style="list-style-type: none"> <li>selects the source for measured actual position value (encoder 1 or 2)</li> <li>selects whether positioning is executed along linear or rollover axis</li> <li>configures the load encoder gear function</li> <li>selects the unit and scaling for the position parameters</li> <li>selects the integer scaling of a position value</li> <li>defines how many bits are used for position count within one revolution</li> <li>defines the minimum and maximum position limits</li> <li>defines the position threshold supervision limit</li> <li>shows actual position of the encoder, scaled actual position of encoder 2 and filtered actual speed of the load.</li> </ul>		
Block outputs located in other parameter groups		<a href="#">1.12 POS ACT</a> (page 78) <a href="#">1.13 POS 2ND ENC</a> (page 78) <a href="#">4.02 SPEED ACT LOAD</a> (page 89)
<b>60.01</b>	POS ACT SEL	FW block: <a href="#">POS FEEDBACK</a> (see above)
	Selects the source for the actual position value.	
	<b>(0)</b> ENC1	Encoder 1. Inverted gear ratio is considered when the position control output (speed reference) is produced.
	<b>(1)</b> ENC2	Encoder 2. Inverted gear ratio is considered when the position control output (speed reference) is produced.
<b>60.02</b>	POS AXIS MODE	FW block: <a href="#">POS FEEDBACK</a> (see above)
	Selects the positioning axis. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	<b>(0)</b> LINEAR	Linear motion. Positioning is between minimum position <a href="#">60.14 MINIMUM POS</a> and maximum position <a href="#">60.13 MAXIMUM POS</a> .
	<b>(1)</b> ROLLOVER	Rotating motion. Positioning is between 0 and 1 revolutions, i.e. after 360°, the position calculation starts from 0° again.



<b>60.03</b>	LOAD GEAR MUL	FW block: <a href="#">POS FEEDBACK</a> (see above)
	<p>Defines the numerator for the load encoder gear function. See also section <a href="#">Load encoder gear function</a> on page 52.</p> $\frac{60.03 \text{ LOAD GEAR MUL}}{60.04 \text{ LOAD GEAR DIV}} = \frac{\text{Load speed}}{\text{Encoder 1/2 speed}}$ <p><b>Note:</b> When load encoder gear function is set, the gear function defined by parameters <a href="#">71.07 GEAR RATIO MUL</a> and <a href="#">71.08 GEAR RATIO DIV</a> must also be set.</p>	
	$-2^{31} \dots 2^{31} - 1$	Numerator for load encoder gear.
<b>60.04</b>	LOAD GEAR DIV	FW block: <a href="#">POS FEEDBACK</a> (see above)
	Defines the denominator for the load encoder gear function. See parameter <a href="#">60.03 LOAD GEAR MUL</a> .	
	$1 \dots 2^{31} - 1$	Denominator for load encoder gear.
<b>60.05</b>	POS UNIT	FW block: <a href="#">POS FEEDBACK</a> (see above)
	<p>Selects the unit and scaling for the position parameters. The scaling factor is equal to one revolution. For positioning speed, acceleration and deceleration units, see parameter <a href="#">60.10 POS SPEED UNIT</a>.</p> <p><b>Note:</b> If translatory (m, inch) unit is selected, the range also depends on parameter <a href="#">60.06 FEED CONST NUM</a> and <a href="#">60.07 FEED CONST DEN</a> settings.</p>	
	(0) REVOLUTION	Unit: revolution. Scaling factor: 1.
	(1) DEGREE	Unit: degree. Scaling factor: 360.
	(2) METER	Unit: meter. Scaling factor: according to parameters <a href="#">60.06 FEED CONST NUM</a> and <a href="#">60.07 FEED CONST DEN</a> .
	(3) INCH	Unit: inch. Scaling factor: according to parameters <a href="#">60.06 FEED CONST NUM</a> and <a href="#">60.07 FEED CONST DEN</a> .
<b>60.06</b>	FEED CONST NUM	FW block: <a href="#">POS FEEDBACK</a> (see above)
	<p>Defines, together with parameter <a href="#">60.07 FEED CONST DEN</a>, the feed constant for the position calculation:</p> $\frac{60.06 \text{ FEED CONST NUM}}{60.07 \text{ FEED CONST DEN}}$ <p>The feed constant converts rotational motion into translatory motion. The feed constant is the distance the load moves during one turn of the motor shaft (<math>2\pi r</math>), when linear positioning has been selected with <a href="#">60.05 POS UNIT</a> (i.e. parameter is set to (2) METER or (3) INCH).</p> <p><b>Note:</b> Parameters <a href="#">60.05 POS UNIT</a>, <a href="#">60.06 FEED CONST NUM</a> and <a href="#">60.07 FEED CONST DEN</a> also affect the positioning parameters. If the feed constant is changed, positioning references are re-calculated and the limits are changed. However, the internal motor shaft references remain unchanged.</p>	
	$1 \dots 2^{31} - 1$	Feed constant numerator.
<b>60.07</b>	FEED CONST DEN	FW block: <a href="#">POS FEEDBACK</a> (see above)
	Defines, together with parameter <a href="#">60.06 FEED CONST NUM</a> , the feed constant for the position calculation.	

	1... $2^{31}-1$	Feed constant denominator.
<b>60.08</b>	POS2INT SCALE	FW block: <a href="#">POS FEEDBACK</a> (see above)
	<p>Scales position values to integer values. Integer values are used in the control program and fieldbus communication. For positioning speed, acceleration and deceleration value scaling, see parameter <a href="#">60.11 POS SPEED2INT</a>.</p> <p>Example: If parameter value is set to 100 and <a href="#">60.05 POS UNIT</a> is set to <b>(2) METER</b>, integer value of 3000 corresponds to position value of 30 m.</p>	
	1/10/100/1000/10000/ 100000/1000000	Scaling factor.
<b>60.09</b>	POS RESOLUTION	FW block: <a href="#">POS FEEDBACK</a> (see above)
	<p>Defines how many bits are used for the position count within one revolution.</p> <p>Example: If parameter is set to a value of 24, 8 bits (32 - 24) are used for the whole revolution count and 24 bits are used for the fractional revolution count.</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	10...24	Number of bits used for position count.
<b>60.10</b>	POS SPEED UNIT	FW block: <a href="#">POS FEEDBACK</a> (see above)
	Selects, together with parameter <a href="#">60.05 POS UNIT</a> (position unit), the unit for positioning speed, acceleration and deceleration values.	
	<b>(0)</b> U/S	Position unit/s (s = second). With acceleration/deceleration values: position unit/s <sup>2</sup> .
	<b>(1)</b> U/MIN	Position unit/min (min = minute). With acceleration/deceleration values: position unit/min <sup>2</sup> .
	<b>(2)</b> U/H	Position unit/h (h = hour). With acceleration/deceleration values: position unit/h <sup>2</sup> .
<b>60.11</b>	POS SPEED2INT	FW block: <a href="#">POS FEEDBACK</a> (see above)
	<p>Scales all positioning speed, acceleration and deceleration values to an integer value. Integer values are used in the control program and fieldbus communication.</p> <p>Example: If parameter value is set to 10, an integer value of 10 corresponds to positioning speed value 1 rev/s.</p>	
	1/10/100/1000/10000/ 100000/1000000	Scaling factor.
<b>60.12</b>	POS SPEED SCALE	FW block: <a href="#">POS FEEDBACK</a> (see above)
	<p>Defines an additional scaling for internal positioning speed, acceleration and deceleration values. Can be used e.g. to improve calculation accuracy at low and high speeds.</p> <p>Example: If parameter value is set to 0.1, internal speed value 1 rev/s is changed to value 10 rev/s.</p>	
	0...32768	Additional scaling factor.

<b>60.13</b>	<b>MAXIMUM POS</b>	FW block: <b>POS FEEDBACK</b> (see above)
	Defines the maximum position value. If the actual position value exceeds the maximum position limit, fault message POSERR MAX is generated. The unit depends on parameter <b>60.05 POS UNIT</b> selection.	
	0...32768	Maximum position value.
<b>60.14</b>	<b>MINIMUM POS</b>	FW block: <b>POS FEEDBACK</b> (see above)
	Defines the minimum position value. If the actual position value falls below the minimum position limit, fault message POSERR MIN is generated. The unit depends on parameter <b>60.05 POS UNIT</b> selection.	
	-32768...0	Minimum position value.
<b>60.15</b>	<b>POS THRESHOLD</b>	FW block: <b>POS FEEDBACK</b> (see above)
	Defines the position threshold supervision limit. If actual position <b>1.12 POS ACT</b> exceeds the defined limit, <b>6.09 POS CTRL STATUS</b> bit 8 ABOVE MAX is activated. The unit depends on parameter <b>60.05 POS UNIT</b> selection.	
	-32768...32768	Position threshold supervision limit.

## Group 62 POS CORRECTION

Settings for position correction functions (homing, presets, and cyclic corrections). With these functions, the user can define the relationship between the actual position of the drive positioning system and the driven machinery.

Some of the correction functions need an external probe or limit switch to be connected to the digital inputs of the drive control board or encoder interface module.


See also section [Position correction](#) on page 56.

**Note:** Only one position correction function can be active at a time. Homing has the highest priority, cyclic correction the lowest.

62 POS CORRECTION		
<p>Firmware block:</p> <p><b>HOMING</b> (62)</p> <p>This block</p> <ul style="list-style-type: none"> <li>• selects homing mode (1...35)</li> <li>• selects the homing start function (NORMAL/PULSE) and the source for the homing start command</li> <li>• selects the source for the home switch signal</li> <li>• selects the sources for the negative and positive limit switch signals</li> <li>• defines two homing speed reference values</li> <li>• defines the home position</li> <li>• shows measured position and calculated cyclic position error for the cyclic correction function (see the block <a href="#">CYCLIC CORRECTION</a> on page 199).</li> </ul>		
<div> <div> <div>No Method</div> <div>Normal</div> <div>DI STATUS5 (2 / 2.01.DI6)</div> <div>ENC1_DI1</div> <div>FALSE</div> <div>FALSE</div> <div>1.000 u/s</div> <div>0.250 u/s</div> <div>0.000 rev</div> <div>0.000 rev</div> <div>Normal</div> </div> <div> <div><b>HOMING</b></div> <div>37</div> <div>TLF10 2 msec</div> <div>(6)</div> <div>4.03 PROBE1 POS MEAS</div> <div>4.04 PROBE2 POS MEAS</div> <div>4.05 CYCLIC POS ERR</div> <div>62.01 HOMING METHOD</div> <div>62.02 HOMING STARTFUNC</div> <div>&lt; 62.03 HOMING START</div> <div>62.04 HOME SWITCH TRIG</div> <div>&lt; 62.05 NEG LIMIT SWITCH</div> <div>&lt; 62.06 POS LIMIT SWITCH</div> <div>62.07 HOMING SPEEDREF1</div> <div>62.08 HOMING SPEEDREF2</div> <div>62.09 HOME POSITION</div> <div>62.10 HOME POS OFFSET</div> <div>62.20 POS ACT OFFSET</div> <div>62.21 POS COR MODE</div> </div> </div>		
Block outputs located in other parameter groups		<a href="#">4.03 PROBE1 POS MEAS</a> (page 89) <a href="#">4.04 PROBE2 POS MEAS</a> (page 89) <a href="#">4.05 CYCLIC POS ERR</a> (page 89)
<b>62.01</b>	HOMING METHOD	FW block: <a href="#">HOMING</a> (see above)
	Selects the homing mode. For more information, see <ul style="list-style-type: none"> <li>• section <a href="#">Homing</a> on page 56</li> <li>• chapter <a href="#">Appendix C – Homing modes</a> on page 403</li> <li>• <i>CiA Draft Standard Proposal 402: CANopen Device Profile Drives and Motion Control</i>.</li> </ul>	
	0	None.
	1...35	Homing mode 1...35.

<b>62.02</b>	<b>HOMING STARTFUNC</b>	FW block: <a href="#">HOMING</a> (see above)
	Selects the homing start function.	
	<b>(0)</b> NORMAL	Rising edge of a signal from the source defined by <a href="#">62.03 HOMING START</a> activates the homing. The input signal has to stay TRUE during the homing task.
	<b>(1)</b> PULSE	Rising edge of a pulse from the source defined by <a href="#">62.03 HOMING START</a> activates the homing.
<b>62.03</b>	<b>HOMING START</b>	FW block: <a href="#">HOMING</a> (see above)
	Selects the source of the start command used in homing. 0 -> 1: Start. The start function is defined by parameter <a href="#">62.02 HOMING STARTFUNC</a> .	
	Bit pointer: Group, index and bit.	
<b>62.04</b>	<b>HOME SWITCH TRIG</b>	FW block: <a href="#">HOMING</a> (see above)
	Selects the source for the home switch signal.	
	<b>(0)</b> ENC1_DI1	Encoder 1 digital input DI1.
	<b>(1)</b> ENC1_DI2	Encoder 1 digital input DI2.
	<b>(2)</b> ENC2_DI1	Encoder 2 digital input DI1.
	<b>(3)</b> ENC2_DI2	Encoder 2 digital input DI2.
<b>62.05</b>	<b>NEG LIMIT SWITCH</b>	FW block: <a href="#">HOMING</a> (see above)
	Selects the source for the negative limit switch signal (i.e. external latch signal source for the minimum position). Used with homing modes 1, 11...14, 17 and 27...30. Homing mode is selected by parameter <a href="#">62.01 HOMING METHOD</a> .	
	Bit pointer: Group, index and bit.	
<b>62.06</b>	<b>POS LIMIT SWITCH</b>	FW block: <a href="#">HOMING</a> (see above)
	Selects the source for the positive limit switch signal (i.e. external latch signal source for the maximum position). Used with homing modes 2, 7...10, 18 and 23...26. Homing mode is selected by parameter <a href="#">62.01 HOMING METHOD</a> .	
	Bit pointer: Group, index and bit.	
<b>62.07</b>	<b>HOMING SPEEDREF1</b>	FW block: <a href="#">HOMING</a> (see above)
	Defines homing speed reference 1, i.e. the speed reference used when the homing is started ( <a href="#">62.03 HOMING START</a> ). The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	0...32768	Homing speed reference 1.
<b>62.08</b>	<b>HOMING SPEEDREF2</b>	FW block: <a href="#">HOMING</a> (see above)
	Defines homing speed reference 2. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	

	0...32768	Homing speed reference 2.
<b>62.09</b>	HOME POSITION	FW block: <a href="#">HOMING</a> (see above)
	<p>Defines the home position, which is set as the drive actual position after the home switch latch conditions have been fulfilled.</p> <p>The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.</p>	
	-32768...32768	Home position.
<b>62.10</b>	HOME POS OFFSET	FW block: <a href="#">HOMING</a> (see above)
	<p>Defines a home position offset value. After reaching the home switch and latching the defined home position as actual position, the drive will rotate the number of runs specified by this parameter. In practice, the offset is required when the home switch cannot be placed at the physical home position. For example, if this parameter is set to a value of 50 and the home position to 0, the motor will run 50 revolutions in the forward direction after receiving a signal from the home switch. Negative values will make the motor run in the reverse direction.</p>	
	-32768...32768	Home position offset.
	<p>Firmware block:</p> <p><b>PRESET</b> (63)</p> <p>This block</p> <ul style="list-style-type: none"> <li>• selects the preset mode and source for the preset mode start signal</li> <li>• defines the preset position.</li> </ul>	
<b>62.11</b>	PRESET MODE	FW block: <a href="#">PRESET</a> (see above)
	<p>Selects the preset mode.</p> <p>Presets are used to set the position system to a parameter value (preset position) or actual position. The physical position of the driven machinery is not changed, but the new position value is used as home position.</p> <p><b>Note:</b> Selections 1...3 can also be activated by the homing start command (source selected by parameter <a href="#">62.03 HOMING START</a>).</p>	
	<b>(0)</b> DISABLED	Preset mode not in use.
	<b>(1)</b> SYNCH REF	Synchron reference chain (parameter group <a href="#">68 SYNC REF MOD</a> ) is set to the value of the preset position ( <a href="#">62.13 PRESET POSITION</a> ).
	<b>(2)</b> ACT TO SYNCH	Synchron reference chain (parameter group <a href="#">68</a> ) is set to the value of the actual position ( <a href="#">1.12 POS ACT</a> ).
	<b>(3)</b> WHOLE SYSTEM	Position system (parameter groups <a href="#">60</a> , <a href="#">66</a> , <a href="#">68</a> , <a href="#">70</a> and <a href="#">71</a> ) is set to the value of the preset position ( <a href="#">62.13 PRESET POSITION</a> ).
<b>62.12</b>	PRESET TRIG	FW block: <a href="#">PRESET</a> (see above)
	Selects the source for the preset mode start signal.	
	<b>(0)</b> HOMING START	The homing start signal (selected by parameter <a href="#">62.03 HOMING START</a> ) also activates the selected preset mode.
	<b>(1)</b> ENC1 DI1 _-	Rising edge of encoder 1 digital input DI1.

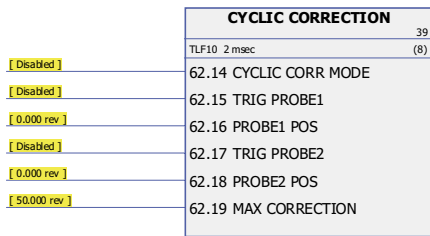	(2) ENC1 DI1 _-	Falling edge of encoder 1 digital input DI1.
	(3) ENC1 DI2 _-	Rising edge of encoder 1 digital input DI2.
	(4) ENC1 DI2 _-	Falling edge of encoder 1 digital input DI2.
	(5)	Reserved.
	(6) ENC1 ZEROP	Rising edge of encoder 1 zero pulse.
	(7) ENC2 DI1 _-	Rising edge of encoder 2 digital input DI1.
	(8) ENC2 DI1 _-	Falling edge of encoder 2 digital input DI1.
	(9) ENC2 DI2 _-	Rising edge of encoder 2 digital input DI2.
	(10) ENC2 DI2 _-	Falling edge of encoder 2 digital input DI2.
	(11)	Reserved.
	(12) ENC2 ZEROP	Rising edge of encoder 2 zero pulse.
<b>62.13</b>	<b>PRESET POSITION</b>	FW block: <b>PRESET</b> (see above)
	Defines the preset position. The unit depends on parameter <b>60.05 POS UNIT</b> selection.	
	-32768...32768	Preset position.
	<p>Firmware block: <b>CYCLIC CORRECTION</b> (64)</p> <p>This block</p> <ul style="list-style-type: none"> <li>• selects the cyclic correction mode</li> <li>• defines the source for the latching command for position probe 1/2</li> <li>• defines the reference position for probe 1/2</li> <li>• defines the maximum absolute value for cyclic correction.</li> </ul> <p>When the probe latching conditions are fulfilled, the encoder module saves the encoder position (to signal 4.03 PROBE1 POS MEAS or 4.04 PROBE2 POS MEAS).</p>	
<b>62.14</b>	<b>CYCLIC CORR MODE</b>	FW block: <b>CYCLIC CORRECTION</b> (see above)
	Selects the cyclic correction mode.	
	(0) DISABLED	No cyclic correction.
	(1) COR ACT POS	Actual position correction.
	(2) COR MAS REF	Master reference correction.
	(3) 1 PROBE DIST	Distance correction with one probe.

	<b>(4) 2 PROBE DIST</b>	Distance correction with two probes.
	<b>(5) COR M/F DIST</b>	Master/Follower distance correction.
<b>62.15</b>	<b>TRIG PROBE1</b>	FW block: <a href="#">CYCLIC CORRECTION</a> (see above)
	Defines the source of the latching command for position probe 1.	
	<b>(0) DISABLED</b>	None.
	<b>(1) ENC1 DI1 _-</b>	Rising edge of encoder 1 digital input DI1.
	<b>(2) ENC1 DI1 - _</b>	Falling edge of encoder 1 digital input DI1.
	<b>(3) ENC1 DI2 _-</b>	Rising edge of encoder 1 digital input DI2.
	<b>(4) ENC1 DI2 - _</b>	Falling edge of encoder 1 digital input DI2.
	<b>(5)</b>	Reserved.
	<b>(6) ENC1 ZEROP</b>	Rising edge of encoder 1 Z-pulse.
	<b>(7) ENC1 DI1_- Z</b>	First rising edge of encoder 1 Z-pulse after the rising edge of encoder 1 digital input DI1.
	<b>(8) ENC1 DI1-_ Z</b>	First rising edge of encoder 1 Z-pulse after the falling edge of encoder 1 digital input DI1.
	<b>(9) ENC1 DI1=1 Z</b>	First rising edge of encoder 1 Z-pulse when encoder 1 digital input DI1 = 1.
	<b>(10) ENC1 DI1=0 Z</b>	First rising edge of encoder 1 Z-pulse when encoder 1 digital input DI1 = 0.
	<b>(11) ENC1 DI2_- Z</b>	First rising edge of encoder 1 Z-pulse after the rising edge of encoder 1 digital input DI2.
	<b>(12) ENC1 DI2-_ Z</b>	First rising edge of encoder 1 Z-pulse after the falling edge of encoder 1 digital input DI2.
	<b>(13) ENC1 DI2=1 Z</b>	First rising edge of encoder 1 Z-pulse when encoder 1 digital input DI2 = 1.
	<b>(14) ENC1 DI2=0 Z</b>	First rising edge of encoder 1 Z-pulse when encoder 1 digital input DI2 = 0.
	<b>(15) ENC2 DI1 _-</b>	Rising edge of encoder 2 digital input DI1.
	<b>(16) ENC2 DI1 - _</b>	Falling edge of encoder 2 digital input DI1.
	<b>(17) ENC2 DI2 _-</b>	Rising edge of encoder 2 digital input DI2.
	<b>(18) ENC2 DI2 - _</b>	Falling edge of encoder 2 digital input DI2.
	<b>(19)</b>	Reserved.
	<b>(20) ENC2 ZEROP</b>	Rising edge of encoder 2 Z-pulse.
	<b>(21) ENC2 DI1_- Z</b>	First rising edge of encoder 2 Z-pulse after the rising edge of encoder 2 digital input DI1.



	<b>(22)</b> ENC2 DI1-_ Z	First rising edge of encoder 2 Z-pulse after the falling edge of encoder 2 digital input DI1.
	<b>(23)</b> ENC2 DI1=1 Z	First rising edge of encoder 2 Z-pulse when encoder 2 digital input DI1 = 1.
	<b>(24)</b> ENC2 DI1=0 Z	First rising edge of encoder 2 Z-pulse when encoder 2 digital input DI1 = 0.
	<b>(25)</b> ENC2 DI2-_ Z	First rising edge of encoder 2 Z-pulse after the rising edge of encoder 2 digital input DI2.
	<b>(26)</b> ENC2 DI2-_ Z	First rising edge of encoder 2 Z-pulse after the falling edge of encoder 2 digital input DI2.
	<b>(27)</b> ENC2 DI2=1 Z	First rising edge of encoder 2 Z-pulse when encoder 2 digital input DI2 = 1.
	<b>(28)</b> ENC2 DI2=0 Z	First rising edge of encoder 2 Z-pulse when encoder 2 digital input DI2 = 0.
<b>62.16</b>	PROBE1 POS	FW block: <a href="#">CYCLIC CORRECTION</a> (see above)
	Defines the reference position for position probe 1. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
	-32768...32768	Reference position for position probe 1.
<b>62.17</b>	TRIG PROBE2	FW block: <a href="#">CYCLIC CORRECTION</a> (see above)
	Defines the source of the latching command for position probe 2. For selection, see parameter <a href="#">62.15 TRIG PROBE1</a> .	
<b>62.18</b>	PROBE2 POS	FW block: <a href="#">CYCLIC CORRECTION</a> (see above)
	Defines the reference position for position reference probe 2. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
	-32768...32768	Reference position for position probe 2.
<b>62.19</b>	MAX CORRECTION	FW block: <a href="#">CYCLIC CORRECTION</a> (see above)
	Defines the maximum absolute value for cyclic correction. Example: If maximum value is set to 50 revolutions and the requested cyclic correction is 60 revolution, no correction is made. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
	0...32768	Maximum absolute value for cyclic correction.


<b>62.20</b>	POS ACT OFFSET	FW block: <a href="#">HOMING</a> (see above)
	<p>Offsets all the position values used by the position system, effectively correcting the position and revolution count signal received from the encoder. For example, this parameter can be used if a non-zero position signal received from the encoder needs to be defined as the zero position for the application.</p> <p>For example, if this parameter is set to a value of -100, the absolute position of 100 revolutions as measured by the encoder is interpreted as the zero position.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The offset takes effect upon the next power-up or when an encoder reconfiguration command is given using parameter <a href="#">90.10 ENC PAR REFRESH</a>.</li> <li>• The offset will not be visible through any actual signal or other parameter.</li> </ul>	
	-32768...32768	Offset for actual position value.
<b>62.21</b>	POS COR MODE	FW block: <a href="#">HOMING</a> (see above)
	Determines if the position change made in homing or in preset mode 2 or 3 is forced permanently into the drive memory by saving it to parameter <a href="#">62.20</a> , or only until the next power-down.	
	<b>(0)</b> NORMAL	The position change made in homing or in preset mode 2 or 3 is effective only until the next power-down.
	<b>(1)</b> PERMANENT	The position change made in homing or in preset mode 2 or 3 remains permanently effective.

## Group 65 PROFILE REFERENCE

Positioning profile and start command settings. The shape of the profile are defined by seven values: position reference, speed, acceleration, deceleration, filtering time, style, and end speed.

The position reference can be taken from an analogue input, fieldbus, drive-to-drive link or the position reference table. The positioning speed is taken from fieldbus or the reference table. The remaining values are taken from the reference table.

See also section [Position reference sets](#) on page 54.

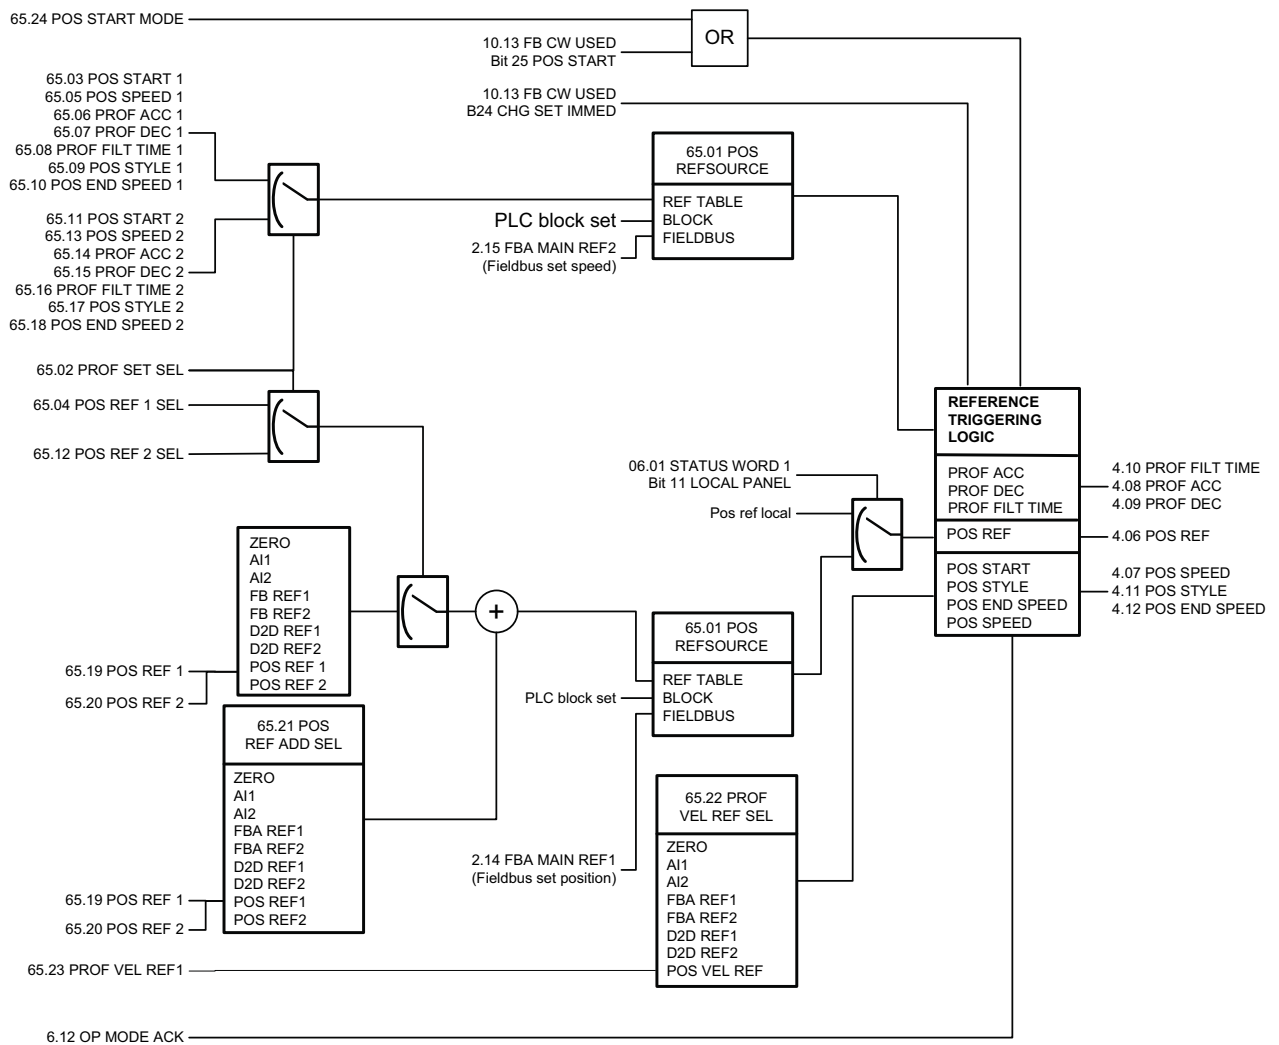

## 65 PROFILE REFERENCE

Firmware block:

### PROFILE REF SEL (65)

This block

- selects whether position reference is defined with reference set 1/2 or received through fieldbus
- selects the source for position reference set 1/2 selection
- defines the position reference sets 1 and 2
- selects the source for an additional position reference
- selects the source for speed reference in profile velocity mode
- selects the positioning start function
- shows the used positioning values: reference, speed, acceleration, deceleration, filter time and positioning behaviour.



PROFILE REF SEL	
	8
TLF6 500 µsec	(1)
4.06 POS REF	—
4.07 PROF SPEED	—
4.08 PROF ACC	—
4.09 PROF DEC	—
4.10 PROF FILT TIME	—
4.11 POS STYLE	—
4.12 POS END SPEED	—
[Ref table]	65.01 POS REFSOURCE
[DI STATUS 4] (2 / 2.01D15)	< 65.02 PROF SET SEL
[DI STATUS 3] (2 / 2.01D14)	< 65.03 POS START 1
[POS REF 1]	65.04 POS REF 1 SEL
[5.000 u/s]	65.05 POS SPEED 1
[10.000 u/s^2]	65.06 PROF ACC 1
[-10.000 u/s^2]	65.07 PROF DEC 1
[0 ms]	65.08 PROF FILT TIME 1
[001 0100]	65.09 POS STYLE 1
[0.000 u/s]	65.10 POS END SPEED 1
[DI STATUS 3] (2 / 2.01D14)	< 65.11 POS START 2
[POS REF 2]	65.12 POS REF 2 SEL
[5.000 u/s]	65.13 POS SPEED 2
[10.000 u/s^2]	65.14 PROF ACC 2
[-10.000 u/s^2]	65.15 PROF DEC 2
[0 ms]	65.16 PROF FILT TIME 2
[001 0100]	65.17 POS STYLE 2
[0.000 u/s]	65.18 POS END SPEED 2
[0.000 rev]	65.19 POS REF 1
[0.000 rev]	65.20 POS REF 2
[ZERO]	65.21 POS REF ADD SEL
[POS VEL REF]	65.22 PROF VEL REF SEL
[0.000 u/s]	65.23 PROF VEL REF1
[NORMAL]	65.24 POS START MODE

Block outputs located in other parameter groups

[4.06 POS REF](#) (page 89)  
[4.07 PROF SPEED](#) (page 89)  
[4.08 PROF ACC](#) (page 89)  
[4.09 PROF DEC](#) (page 89)  
[4.10 PROF FILT TIME](#) (page 89)  
[4.11 POS STYLE](#) (page 89)  
[4.12 POS END SPEED](#) (page 90)

<b>65.01</b>	POS REFSOURCE	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the source for the used positioning values.	
	(0) REF TABLE	Reference and other positioning parameters are read from reference set 1/2 which is defined by parameters <a href="#">65.03...65.10</a> / <a href="#">65.11...65.18</a> .
	(1) BLOCK	Reserved.
	(2) FIELDBUS	Position reference and speed are read from fieldbus. Other positioning values are read from reference set 1 which is defined by parameters <a href="#">65.03...65.10</a> .

<b>65.02</b>	PROF SET SEL	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the source for position reference set 1 or 2 selection. 0 = position reference set 1, 1 = position reference set 2. See parameters <a href="#">65.04 POS REF 1 SEL</a> and <a href="#">65.12 POS REF 2 SEL</a> .	
	Bit pointer: Group, index and bit.	
<b>65.03</b>	POS START 1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the source for the positioning start command when position reference set 1 used.	
	Bit pointer: Group, index and bit.	
<b>65.04</b>	POS REF 1 SEL	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the source for the positioning reference when position reference set 1 is used.	
	<b>(0)</b> ZERO	Zero position reference.
	<b>(1)</b> AI1	Analogue input 1.
	<b>(2)</b> AI2	Analogue input 2.
	<b>(3)</b> FBA REF1	Fieldbus reference 1.
	<b>(4)</b> FBA REF2	Fieldbus reference 2.
	<b>(5)</b> D2D REF1	Drive-to-drive reference 1.
	<b>(6)</b> D2D REF2	Drive-to-drive reference 2.
	<b>(7)</b> POS REF1	Position reference 1 defined by parameter <a href="#">65.19 POS REF 1</a> .
	<b>(8)</b> POS REF2	Position reference 2 defined by parameter <a href="#">65.20 POS REF 2</a> .
<b>65.05</b>	POS SPEED 1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the positioning speed when position reference set 1 is used. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	0...32768	Positioning speed for position reference set 1.
<b>65.06</b>	PROF ACC 1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the positioning acceleration when position reference set 1 is used. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	0...32768	Positioning acceleration for position reference set 1.
<b>65.07</b>	PROF DEC 1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the positioning deceleration when position reference set 1 is used. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	-32768...0	Positioning deceleration for position reference set 1.
<b>65.08</b>	PROF FILT TIME 1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the position reference filter time when position reference set 1 is used.	

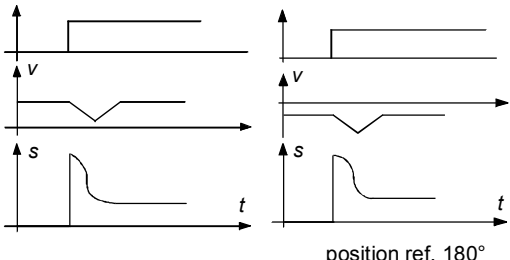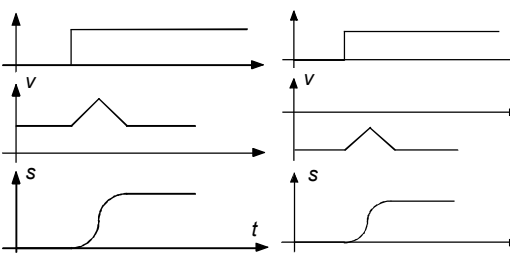	0...1000 ms	Position reference filter time for position reference set 1.
<b>65.09</b>	POS STYLE 1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	<p>Determines the behaviour of the position profile generator when position reference set 1 is used. The figures below display the behaviour of each bit (different bit combinations are also possible).</p> <p>In synchron applications, bits 0...2 determine in which way the drive moves to an additional position reference or corrects the synchronising. Only one of the bits 0...2 can be active at a time.</p> <p>The positioning priority order is:</p> <ol style="list-style-type: none"> <li>1) bit 2 or according to the linear axis positioning selected by par. <a href="#">60.02 POS AXIS MODE</a>.</li> <li>2) bit 0</li> <li>3) bit 1.</li> </ol> <p>Conversion from binary to hexadecimal format examples:</p> <p>bit number        4        0  binary value    0001 0000  decimal value <math>2^4 = 32</math>  hex value        10h</p> <p>bit number        5        2  binary value    0010 0100  decimal value <math>2^5 + 2^2 = 32 + 4 = 36</math>  hex value        20 + 4 = 24h</p> <p>Bits 3...6 determine the path to the target position.</p>	
	0b0000000...0b1111111	Positioning style for position reference set 1.
Bit 0	<p>1 = Positioning direction depends on the direction of the synchronous (master) speed.  0 = Positioning direction is independent of the synchronous (master) speed.</p>	
Bit 1	<p>1 = Counter-clockwise ↺ positioning to the target position (bit 0 = 0).</p> <p><a href="#">65.03 POS START 1</a></p> <p><a href="#">4.01 SPEED REF POS</a></p> <p><a href="#">4.13 POS REF IPO</a></p>  <p>position ref. 180°</p> <p>or positioning in the opposite direction to the synchronous (master) speed when bit 0 = 1.</p> <p>0 = Clockwise positioning ↻ to the target position (bit 0 = 0).</p> <p><a href="#">65.03 POS START 1</a></p> <p><a href="#">4.01 SPEED REF POS</a></p> <p><a href="#">4.13 POS REF IPO</a></p>  <p>Position ref. 180°</p> <p>or positioning in the direction of the synchronous (master) speed when bit 0 = 1.</p>	

Bit 2	<p>1 = Positioning to the target position along the shortest path, regardless of bit 0 and 1 values.</p> <div data-bbox="502 302 1276 672"> <p>Actual pos. 90° Pos. reference 180°</p> <p>Actual pos. 90° Pos. reference 300°</p> </div> <p>A = Shortest path from 90° -&gt; 180°: <math>90^\circ + 90^\circ = 180^\circ</math>  B = Shortest path from 90° -&gt; 300°: <math>90^\circ - 150^\circ = 300^\circ</math></p> <p>0 = Positioning to the target position according to bits 0 and 1.</p>
Bit 3	<p>1 = Before the positioning is started, the position system is reset.</p> <div data-bbox="502 884 1037 1041"> </div> <p>0 = The position system is not reset.</p>
Bit 4	<p>1 = Selected target position is absolute. (Always the same position reference).</p> <div data-bbox="502 1142 1013 1366"> </div> <p>0 = Selected target position is relative as defined by bit 6.</p> <div data-bbox="502 1411 965 1590"> </div>
Bit 5	<p>1 = Before the positioning is started, the position system is returned to the rollover axis range, i.e. between 0...1 revolutions.</p> <div data-bbox="502 1691 997 1892"> </div> <p>0 = The position system is not returned into the rollover axis range.</p>

Bit 6	Effective only when bit 4 = 0. 1 = Selected target position is relative to the actual position. 0 = Selected target position is relative to the previous target position.	
<b>65.10</b>	POS END SPEED 1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the positioning speed when target is reached when position reference set 1 is used. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	-32768...32768	Positioning speed when target is reached for position reference set 1.
<b>65.11</b>	POS START 2	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the source for the positioning start command when position reference set 2 is used.	
	Bit pointer: Group, index and bit.	
<b>65.12</b>	POS REF 2 SEL	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the source for the positioning reference when position reference set 2 is used. See <a href="#">65.04 POS REF 1 SEL</a> .	
<b>65.13</b>	POS SPEED 2	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the positioning speed when position reference set 2 is used. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	0...32768	Positioning speed for position reference set 2.
<b>65.14</b>	PROF ACC 2	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the positioning acceleration when position reference set 2 is used. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	0...32768	Positioning acceleration for position reference set 2.
<b>65.15</b>	PROF DEC 2	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the positioning deceleration when position reference set 2 is used. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	-32768...0	Positioning deceleration for position reference set 2.
<b>65.16</b>	PROF FILT TIME 2	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the position reference filter time when position reference set 2 is used.	
	0...1000 ms	Position reference filter time for position reference set 2.
<b>65.17</b>	POS STYLE 2	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Determines the behaviour of the position profile generator when position reference set 2 is used. See parameter <a href="#">65.09 POS STYLE 1</a> .	
	0b0000000...0b1111111	Positioning style for position reference set 2.




<b>65.18</b>	POS END SPEED 2	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines the positioning speed when target is reached when position reference set 1 is used. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	-32768...32768	Positioning speed when target is reached for position reference set 2.
<b>65.19</b>	POS REF 1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines positioning reference 1. Used when parameter <a href="#">65.04 POS REF 1 SEL</a> / <a href="#">65.12 POS REF 2 SEL</a> / <a href="#">65.21 POS REF ADD SEL</a> is set to (7) POS REF1. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
	-32760...32760	Positioning reference 1.
<b>65.20</b>	POS REF 2	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines positioning reference 2. Used when parameter <a href="#">65.04 POS REF 1 SEL</a> / <a href="#">65.12 POS REF 2 SEL</a> / <a href="#">65.21 POS REF ADD SEL</a> is set to (8) POS REF2. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
	-32760...32760	Positioning reference 2.
<b>65.21</b>	POS REF ADD SEL	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the source for an additional position reference. The value is added to position reference 1 or 2 (source selected by <a href="#">65.04 POS REF 1 SEL</a> or <a href="#">65.12 POS REF 2 SEL</a> ) when the positioning is started.	
	(0) ZERO	Zero additional position reference.
	(1) AI1	Analogue input 1.
	(2) AI2	Analogue input 2.
	(3) FBA REF1	Fieldbus reference 1.
	(4) FBA REF2	Fieldbus reference 2.
	(5) D2D REF1	Drive-to-drive reference 1.
	(6) D2D REF2	Drive-to-drive reference 2.
	(7) POS REF1	Position reference 1 defined by parameter <a href="#">65.19 POS REF 1</a> .
	(8) POS REF2	Position reference 2 defined by parameter <a href="#">65.20 POS REF 2</a> .
<b>65.22</b>	PROF VEL REF SEL	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the source for the speed reference in profile velocity mode.	
	(0) ZERO	Zero reference.
	(1) AI1	Analogue input 1.
	(2) AI2	Analogue input 2.
	(3) FBA REF1	Fieldbus reference 1.
	(4) FBA REF2	Fieldbus reference 2.

	<b>(5)</b> D2D REF1	Drive-to-drive reference 1.
	<b>(6)</b> D2D REF2	Drive-to-drive reference 2.
	<b>(7)</b> POS VEL REF	Profile velocity reference 1 defined by parameter <a href="#">65.23 PROF VEL REF1</a> .
<b>65.23</b>	PROF VEL REF1	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Defines profile velocity reference 1. Used when parameter <a href="#">65.22 PROF VEL REF SEL</a> is set to <b>(7) POS VEL REF</b> . The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	-32768...32768	Profile velocity reference 1.
<b>65.24</b>	POS START MODE	FW block: <a href="#">PROFILE REF SEL</a> (see above)
	Selects the positioning start function.	
	<b>(0)</b> NORMAL	Rising edge of a signal from the source defined by parameter <a href="#">65.03 POS START 1</a> / <a href="#">65.11 POS START 2</a> activates the positioning. The input signal has to stay TRUE during the homing task.
	<b>(1)</b> PULSE	Rising edge of a pulse from the source defined by parameter <a href="#">65.03 POS START 1</a> / <a href="#">65.11 POS START 2</a> activates the positioning.

## Group 66 PROFILE GENERATOR

Position profile generator settings. With these settings, the user can change the positioning speed during positioning, define positioning speed limits (for example, because of limited power), and set the window for target position.

See also section [Position profile generator](#) on page 53.

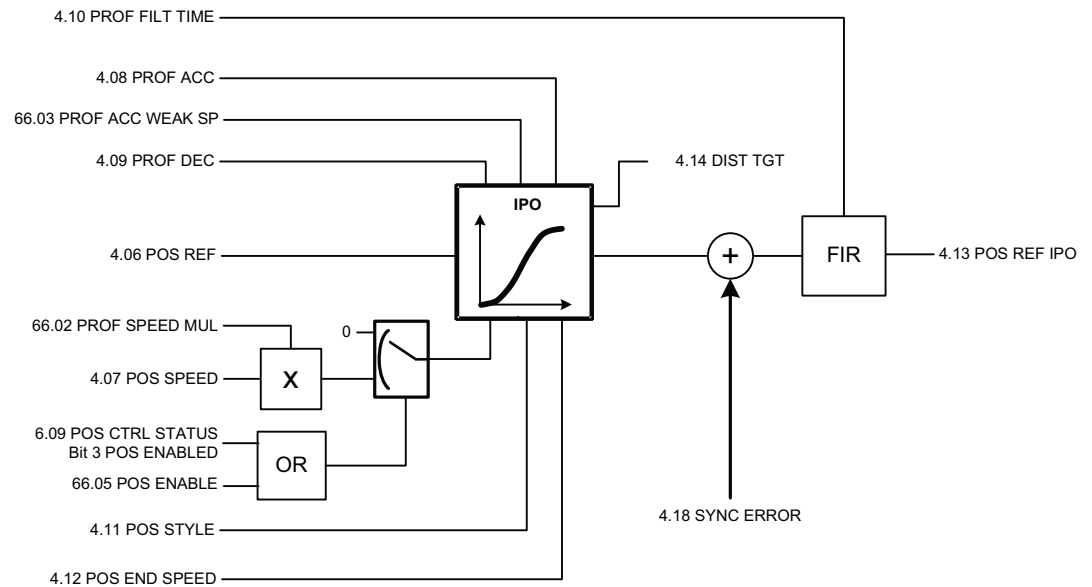


66 PROFILE GENERATOR		
<p>Firmware block: <b>PROFILE GENERATOR</b> (66)</p> <p>This block</p> <ul style="list-style-type: none"> <li>• selects the source for position profile generator input position reference</li> <li>• defines the online positioning speed multiplier</li> <li>• defines a positioning speed value above which the acceleration/ deceleration time is reduced, i.e. defines the power limit used in position reference calculation</li> <li>• configures positioning window supervision</li> <li>• selects the source for enabling the position reference generator and calculation of position reference</li> <li>• shows the position reference from the position profile generator and position profile generator distance to target.</li> </ul>		
<p>Block outputs located in other parameter groups</p>		
<p>Block outputs located in other parameter groups</p>		<p><a href="#">4.13 POS REF IPO</a> (page 90)</p> <p><a href="#">4.14 DIST TGT</a> (page 90)</p>
<b>66.01</b>	PROF GENERAT IN	FW block: <a href="#">PROFILE GENERATOR</a> (see above)
	<p>Selects the source for the position profile generator input position reference. The default value is P.4.6, i.e. signal <a href="#">4.06 POS REF</a> (also an output of the <a href="#">PROFILE REF SEL</a> firmware block; see page 204).</p> <p><b>Note:</b> This parameter has been locked, i.e. no user setting is possible.</p>	
	Value pointer: Group and index	
<b>66.02</b>	PROF SPEED MUL	FW block: <a href="#">PROFILE GENERATOR</a> (see above)
	Defines the online positioning speed multiplier. The speed is multiplied with the selected value.	
	0...1	Online positioning speed multiplier.

<b>66.03</b>	PROF ACC WEAK SP	FW block: <a href="#">PROFILE GENERATOR</a> (see above)
	<p>Defines a positioning speed value (for the profile generator), above which the acceleration/ deceleration time is reduced. Because the drive power depends on the torque and angular velocity, this parameter defines the power limit used in the position reference calculation.</p> <p><math>P = T \times \omega</math> and <math>T = J \times d\omega/dt</math>, where</p> <p>T = torque  <math>\omega</math> = angular speed  J = Inertia  <math>d\omega/dt</math> = angular acceleration</p> <p>I.e. when the angular velocity exceeds the defined speed value, the power is limited by reducing the angular acceleration(/deceleration).</p> <p>The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.</p>	
	0...32768	Acceleration/deceleration time breakpoint.
<b>66.04</b>	POS WIN	FW block: <a href="#">PROFILE GENERATOR</a> (see above)
	<p>Defines the absolute value for the positioning window supervision. When the final position is within the limits defined by this parameter, the positioning is completed.</p> <p>Parameter value must be smaller than the value set by parameter <a href="#">71.06 POS ERR LIM</a>.</p> <p>The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.</p>	
	0...32768	Absolute value for positioning window supervision.
<b>66.05</b>	POS ENABLE	FW block: <a href="#">PROFILE GENERATOR</a> (see above)
	<p>Selects the source for enabling the position reference generator and the calculation of the position reference.</p> <p>1 = Enable / Continue position reference calculation.</p> <p>0 = Disable. Position reference calculation is stopped. Generator output speed is decreased to zero along the position deceleration ramp.</p>	
	Bit pointer: Group, index and bit.	




	<b>(4) FBA REF2</b>	Fieldbus reference 2.
	<b>(5) D2D REF1</b>	Drive-to-drive reference 1.
	<b>(6) D2D REF2</b>	Drive-to-drive reference 2.
	<b>(7)</b>	Reserved.
	<b>(8) POS 2ND ENC</b>	Encoder 2.
	<b>(9) VIRT MAST</b>	Virtual master reference.
<b>67.02</b>	<b>SPEED REF VIRT M</b>	FW block: <a href="#">SYNC REF SEL</a> (see above)
	Selects the source for the virtual master speed reference.	
	<b>(0) ZERO</b>	Zero position reference.
	<b>(1) AI1</b>	Analogue input 1.
	<b>(2) AI2</b>	Analogue input 2.
	<b>(3) FBA REF1</b>	Fieldbus reference 1.
	<b>(4) FBA REF2</b>	Fieldbus reference 2.
	<b>(5) D2D REF1</b>	Drive-to-drive reference 1.
	<b>(6) D2D REF2</b>	Drive-to-drive reference 2.
	<b>(7) ENC1 SPEED</b>	Encoder 1.
	<b>(8) ENC2 SPEED</b>	Encoder 2.
<b>67.03</b>	<b>INTERPOLAT MODE</b>	FW block: <a href="#">SYNC REF SEL</a> (see above)
	Selects whether the synchronisation reference selected by parameter <a href="#">67.01 SYNC REF SEL</a> is interpolated or not. This function can be used to smooth out short breaks in the reference.	
	<b>(0) NONE</b>	Interpolation is not used. The synchronisation reference is reflected directly by actual signal <a href="#">4.15 SYNC REF UNGEAR</a> .

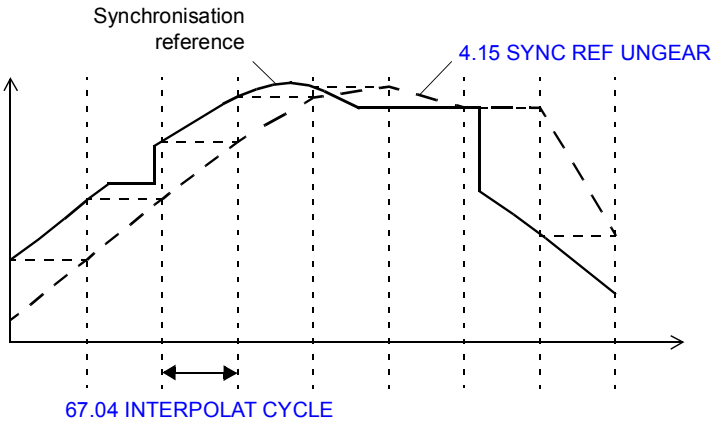	(1) INTERPOLATE	<p>The synchronisation reference is interpolated as shown in the diagram below.</p> <p>The synchronisation reference is sampled at intervals defined by parameter <a href="#">67.04 INTERPOLAT CYCLE</a>. Signal <a href="#">4.15 SYNC REF UNGEAR</a> is updated to the sampled reference value after one cycle.</p> 
67.04	INTERPOLAT CYCLE	FW block: <a href="#">SYNC REF SEL</a> (see above)
	Interpolation cycle. See parameter <a href="#">67.03 INTERPOLAT MODE</a> .	
	1...10000 ms	Interpolation cycle.



## Group 68 SYNC REF MOD

Synchronisation reference modification settings that are used to select between absolute or relative synchronisation, to set an electrical gear ratio between the synchronisation reference and the drive positioning system, and to filter the reference.

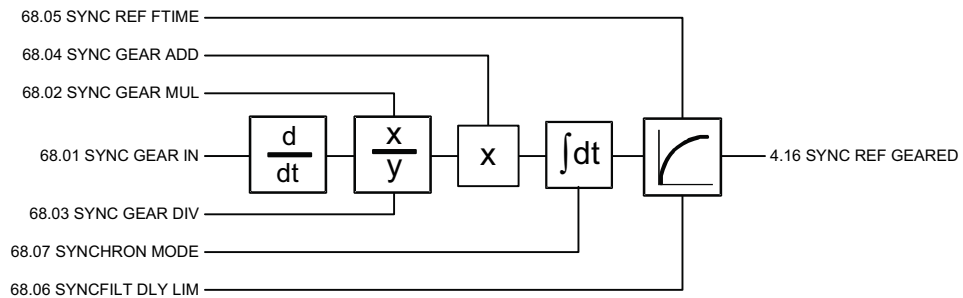

68 SYNC REF MOD		
<p>Firmware block: <b>SYNC REF MOD</b> (68)</p> <p>This block</p> <ul style="list-style-type: none"> <li>• selects the source for the synchron reference chain</li> <li>• defines the gear ratio and selects a scaling factor for the ratio (in synchron control the position reference is first multiplied with the defined gear ratio and then with the defined gear scaling factor)</li> <li>• defines the synchron speed reference filter time</li> <li>• defines the maximum position difference between the unfiltered and filtered synchron speed reference</li> <li>• selects the synchronisation of the follower drive in synchron mode</li> <li>• shows the position reference in synchron control mode.</li> </ul>		
<p>Block outputs located in other parameter groups</p>		4.16 SYNC REF GEARED (page 90)
68.01	SYNC GEAR IN	FW block: SYNC REF MOD (see above)
	<p>Selects the source for the synchron reference chain. The default value is P.4.15, i.e. signal 4.15 SYNC REF UNGEAR, which is the output of the SYNC REF SEL firmware block (on page 214).</p>	
	<p>Value pointer: Group and index</p>	

<b>68.02</b>	SYNC GEAR MUL	FW block: <a href="#">SYNC REF MOD</a> (see above)
	<p>Defines the numerator for the synchron gear function. The gear function modifies the position alterations of the synchron position reference value in order to obtain a certain ratio between the master and follower motion. See also parameter <a href="#">68.03 SYNC GEAR DIV</a>.</p> $\frac{\text{68.02 SYNC GEAR MUL}}{\text{68.03 SYNC GEAR DIV}} = \frac{\text{Follower speed}}{\text{Master speed}}$ <p>Example: Parameter <a href="#">68.02 SYNC GEAR MUL</a> is set to the value of 253 and parameter <a href="#">68.03 SYNC GEAR DIV</a> is set to the value of 100. Gear ratio is 2.53, i.e. follower speed is 2.53 times the master speed.</p>	
	$-2^{31} \dots 2^{31} - 1$	Numerator for synchron gear function.
<b>68.03</b>	SYNC GEAR DIV	FW block: <a href="#">SYNC REF MOD</a> (see above)
	Defines the denominator for the synchron gear function. See parameter <a href="#">68.02 SYNC GEAR MUL</a> .	
	$1 \dots 2^{31} - 1$	Denominator for synchron gear function.
<b>68.04</b>	SYNC GEAR ADD	FW block: <a href="#">SYNC REF MOD</a> (see above)
	Selects the scaling factor for the gear ratio (defined by parameters <a href="#">68.02 SYNC GEAR MUL</a> and <a href="#">68.03 SYNC GEAR DIV</a> ) during operation. The gear ratio is multiplied with the selected value.	
	$-30 \dots 30$	Scaling factor for gear ratio.
<b>68.05</b>	SYNC REF FTIME	FW block: <a href="#">SYNC REF MOD</a> (see above)
	<p>Defines the synchron speed reference filter time. The filter filters synchron reference disturbances caused by encoder pulse changes. This parameter is used together with parameter <a href="#">68.06 SYNCFILT DLY LIM</a> to minimise synchron speed reference disturbances.</p> <p>Adjust parameter <a href="#">68.06 SYNCFILT DLY LIM</a> to maintain dynamic operation during fast reference changes.</p>	
	$0 \dots 1000$ ms	Synchron speed reference filter time.
<b>68.06</b>	SYNCFILT DLY LIM	FW block: <a href="#">SYNC REF MOD</a> (see above)
	<p>Defines the maximum position difference between the unfiltered and filtered synchron speed reference. If the maximum difference is exceeded, the filter output is forced to follow the filter input. This parameter is used together with parameter <a href="#">68.05 SYNC REF FTIME</a> to minimise synchron speed reference disturbances.</p> <p>The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.</p>	
	$0 \dots 0.4$	Maximum difference between unfiltered and filtered synchron speed references.
<b>68.07</b>	SYNCHRON MODE	FW block: <a href="#">SYNC REF MOD</a> (see above)
	Selects the synchronisation of the follower drive in synchron mode.	
	<b>(0)</b> ABSOLUTE	Absolute synchronisation of the follower. The follower follows the master position after the start.
	<b>(1)</b> RELATIVE	Relative synchronisation of the follower. Only master position changes which take place after the follower is started are taken into account.




<b>70.01</b>	POS REF PROFILE	FW block: <a href="#">POS REF LIM</a> (see above)
	Selects the source for the position reference for the dynamic limiter. Default value is P.4.13, i.e. <a href="#">4.13 POS REF IPO</a> , which is an output of the <a href="#">PROFILE GENERATOR</a> firmware block (see page 212).	
	Value pointer: Group and index.	
<b>70.02</b>	POS REF SYNC	FW block: <a href="#">POS REF LIM</a> (see above)
	Selects the source for the position reference for the dynamic limiter (added to <a href="#">70.01 POS REF PROFILE</a> ). Default value is P.4.16, i.e. <a href="#">4.16 SYNC REF GEARED</a> , which is the output of the <a href="#">SYNC REF MOD</a> firmware block (see page 217).	
	Value pointer: Group and index.	
<b>70.03</b>	POS REF ENA	FW block: <a href="#">POS REF LIM</a> (see above)
	Selects the source for the position reference enable command. 1 = Enabled. 0 = Disabled, position reference speed limit is set to zero.	
	Bit pointer: Group, index and bit	
<b>70.04</b>	POS SPEED LIM	FW block: <a href="#">POS REF LIM</a> (see above)
	Limits the positioning reference speed. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	0...32768	Position reference speed limit.
<b>70.05</b>	POS ACCEL LIM	FW block: <a href="#">POS REF LIM</a> (see above)
	Limits the positioning acceleration rate. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	0...32768	Positioning acceleration rate limit.
<b>70.06</b>	POS DECEL LIM	FW block: <a href="#">POS REF LIM</a> (see above)
	Limits the positioning deceleration rate. The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	-32768...0	Positioning deceleration rate limit.
<b>70.07</b>	SYNC ERR LIM	FW block: <a href="#">POS REF LIM</a> (see above)
	Defines the absolute value for the synchron error supervision window. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.	
	0...32768	Absolute value for synchron error supervision window.
<b>70.08</b>	SYNC VEL WINDOW	FW block: <a href="#">POS REF LIM</a> (see above)
	Defines the absolute value for a synchronous velocity supervision window. If the difference between synchronous speed and drive load speed is within the window, the limit bit 2 ( <a href="#">IN SYNC</a> ) is set in actual signal <a href="#">6.10 POS CTRL STATUS2</a> . The unit depends on parameter <a href="#">60.05 POS UNIT</a> and <a href="#">60.10 POS SPEED UNIT</a> selections.	
	0...32768	Absolute value for synchronous velocity supervision window.


## Group 71 POSITION CTRL

Settings for the position controller.

The position controller calculates a speed reference that is used to minimise the difference between position reference and actual values. The user can set the controller gain, the feed forward value and a cyclical delay between the reference and the actual value. The output of the position controller has a gear for transferring position and speed data from the load side to the motor side.

The position controller also supervises the error between the reference position and actual position in position and synchron control modes. The drive trips on a POSITION ERROR fault if the limit (71.06 POS ERR LIM) is exceeded.

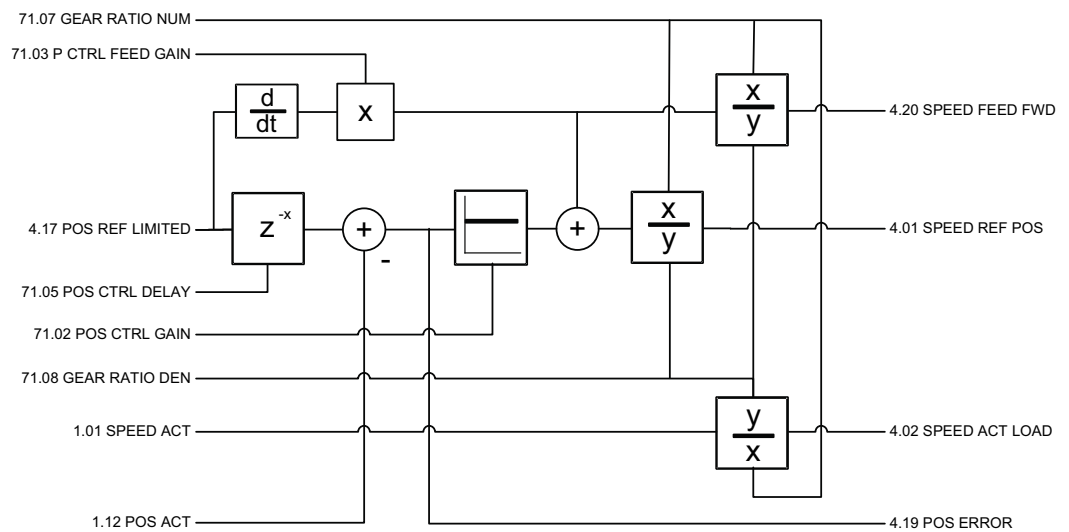

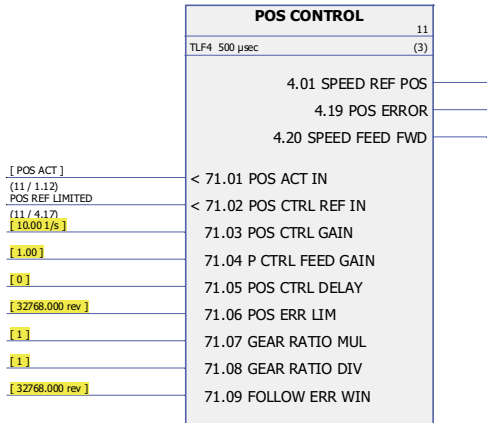71 POSITION CTRL		
<p>Firmware block: <b>POS CONTROL</b> (71)</p> <p>This block</p> <ul style="list-style-type: none"> <li>selects the sources for the actual and reference position inputs of the position controller</li> <li>defines the position control loop gain and the speed feed forward gain</li> <li>defines a delay for the position reference</li> <li>configures position error supervision</li> <li>shows the speed reference, position error and position speed reference multiplied by the speed feed forward gain.</li> </ul>		
 <p>The diagram shows the POS CONTROL block with the following parameters and connections:</p> <ul style="list-style-type: none"> <li><b>TLF4</b>: 500 µsec (3)</li> <li><b>4.01 SPEED REF POS</b>: Connected to the block output.</li> <li><b>4.19 POS ERROR</b>: Connected to the block output.</li> <li><b>4.20 SPEED FEED FWD</b>: Connected to the block output.</li> <li><b>71.01 POS ACT IN</b>: Connected to the block input.</li> <li><b>71.02 POS CTRL REF IN</b>: Connected to the block input.</li> <li><b>71.03 POS CTRL GAIN</b>: Connected to the block input.</li> <li><b>71.04 P CTRL FEED GAIN</b>: Connected to the block input.</li> <li><b>71.05 POS CTRL DELAY</b>: Connected to the block input.</li> <li><b>71.06 POS ERR LIM</b>: Connected to the block input.</li> <li><b>71.07 GEAR RATIO MUL</b>: Connected to the block input.</li> <li><b>71.08 GEAR RATIO DIV</b>: Connected to the block input.</li> <li><b>71.09 FOLLOW ERR WIN</b>: Connected to the block input.</li> </ul>		
Block outputs located in other parameter groups		<p><a href="#">4.01 SPEED REF POS</a> (page 89)</p> <p><a href="#">4.19 POS ERROR</a> (page 90)</p> <p><a href="#">4.20 SPEED FEED FWD</a> (page 90)</p>
<b>71.01</b>	POS ACT IN	FW block: <a href="#">POS CONTROL</a> (see above)
	Selects the source for the actual position input of the position controller. The default value is P.1.12, i.e. signal <a href="#">1.12 POS ACT</a> , which is an output of the <a href="#">POS FEEDBACK</a> firmware block (see page 192).	
	Value pointer: Group and index.	
<b>71.02</b>	POS CTRL REF IN	FW block: <a href="#">POS CONTROL</a> (see above)
	Selects the source for the position reference input of the position controller. The default value is P.4.17, i.e. signal <a href="#">4.17 POS REF LIMITED</a> , which is the output of the <a href="#">POS REF LIM</a> firmware block (see page 219).	
	<b>Note:</b> This parameter has been locked, i.e. no user setting is possible.	
	Value pointer: Group and index.	
<b>71.03</b>	POS CTRL GAIN	FW block: <a href="#">POS CONTROL</a> (see above)
	Defines the gain for the position control loop. A value of 1 produces a 1 rev/s speed reference when the position difference between the reference and actual position is 1 revolution.	
	0...10000 1/s	Gain for position control loop.
<b>71.04</b>	P CTRL FEED GAIN	FW block: <a href="#">POS CONTROL</a> (see above)
	Defines the speed feed forward gain. The default gain value is suitable for most applications. In some cases the gain can be used to compensate the difference between the reference position and actual position caused by external disturbances.	
	0...10	Speed feed forward gain.

<b>71.05</b>	POS CTRL DELAY	FW block: <a href="#">POS CONTROL</a> (see above)
	Defines the delay for the position reference. The selected number corresponds to the number of the position control cycles: If parameter value is set to 1, the position reference used in the position error calculation is the reference value updated during the previous position control cycle.	
	0...15	Delay for position reference.
<b>71.06</b>	POS ERR LIM	FW block: <a href="#">POS CONTROL</a> (see above)
	Defines the absolute value for the position error supervision window. The drive trips on fault POSERR if the position error is exceeded. The supervision is active when position feedback is available. The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection. If parameter value is set to zero, the supervision is disabled.	
	0...32768	Absolute value for position error supervision window.
<b>71.07</b>	GEAR RATIO MUL	FW block: <a href="#">POS CONTROL</a> (see above)
	<p>Defines the numerator for the gear function between the position control (load side) and speed control (motor side).</p> <p>The gear function is formed from the motor gear function and inverted load gear function. The gear function is applied to the position controller output (speed reference).</p> $\frac{\text{71.07 GEAR RATIO MUL}}{\text{71.08 GEAR RATIO DIV}} = \frac{\text{Motor speed}}{\text{Load speed}}$ <p><b>Note:</b> When motor or load gear functions are set, the gear function must also be set.</p>	
	$-2^{31} \dots 2^{31}-1$	Numerator for gear function.
<b>71.08</b>	GEAR RATIO DIV	FW block: <a href="#">POS CONTROL</a> (see above)
	Defines the denominator for the gear function between the position control (load side) and speed control (motor side). See parameter <a href="#">71.07 GEAR RATIO MUL</a> .	
	$1 \dots 2^{31}-1$	Denominator for gear function.
<b>71.09</b>	FOLLOW ERR WIN	FW block: <a href="#">POS CONTROL</a> (see above)
	<p>Defines the position window for the following error supervision. The error is defined as the difference between the reference and actual position. If the error is outside the defined window, <a href="#">6.09 POS CTRL STATUS</a> bit 7 FOLLOW ERR is set to 1 (also <a href="#">2.13 FBA MAIN SW</a> bit 18 FOLLOWING ERROR is set to 1). The supervision is active when position feedback is available.</p> <p>The unit depends on parameter <a href="#">60.05 POS UNIT</a> selection.</p>	
	0...32768	Position window for error supervision.

## Group 90 ENC MODULE SEL

Settings for encoder activation, emulation, TTL echo, and communication fault detection.

The firmware supports two encoders (or resolvers), encoder 1 and 2. Multiturn encoders are supported only as encoder 1. The following optional interface modules are available:

- TTL Encoder Interface Module FEN-01: two TTL inputs, TTL output (for encoder emulation and echo) and two digital inputs for position latching
- Absolute Encoder Interface FEN-11: absolute encoder input, TTL input, TTL output (for encoder emulation and echo) and two digital inputs for position latching
- Resolver Interface Module FEN-21: resolver input, TTL input, TTL output (for encoder emulation echo) and two digital inputs for position latching
- HTL Encoder Interface Module FEN-31: HTL encoder input, TTL output (for encoder emulation and echo) and two digital inputs for position latching.

The interface module is connected to drive option Slot 1 or 2. **Note:** Two encoder interface modules of the same type are not allowed.

For encoder/resolver configuration, see parameter groups [91 ABSOL ENC CONF](#) (page 229), [92 RESOLVER CONF](#) (page 234) and [93 PULSE ENC CONF](#) (page 235).

**Note:** Configuration data is written into the logic registers of the interface module once after the power-up. If parameter values are changed, save values into the permanent memory using parameter [16.07 PARAM SAVE](#). The new settings will take effect when the drive is powered up again, or after re-configuration is forced using parameter [90.10 ENC PAR REFRESH](#).



90 ENC MODULE SEL		
<p>Firmware block:</p> <p><b>ENCODER</b></p> <p>(3)</p> <p>This block</p> <ul style="list-style-type: none"> <li>activates the communication to encoder interface 1/2</li> <li>enables encoder emulation/echo</li> <li>shows encoder 1/2 speed and actual position.</li> </ul>		
Block inputs located in other parameter groups	<a href="#">93.21 EMUL PULSE NR</a> (page 237) <a href="#">93.22 EMUL POS REF</a> (page 237)	
Block outputs located in other parameter groups	<a href="#">1.08 ENCODER 1 SPEED</a> (page 77) <a href="#">1.09 ENCODER 1 POS</a> (page 77) <a href="#">1.10 ENCODER 2 SPEED</a> (page 78) <a href="#">1.11 ENCODER 2 POS</a> (page 78) <a href="#">2.16 FEN DI STATUS</a> (page 85)	
<b>90.01</b>	ENCODER 1 SEL	FW block: <a href="#">ENCODER</a> (see above)
	<p>Activates the communication to optional encoder/resolver interface 1.</p> <p><b>Note:</b> It is recommended that encoder interface 1 is used whenever possible since the data received through that interface is fresher than the data received through interface 2. On the other hand, when position values used in emulation are determined by the drive software, the use of encoder interface 2 is recommended as the values are transmitted earlier through interface 2 than through interface 1.</p>	
	<b>(0)</b> NONE	Inactive.
	<b>(1)</b> FEN-01 TTL+	Communication active. Module type: FEN-01 TTL Encoder interface Module. Input: TTL encoder input with commutation support (X32). See parameter group <a href="#">93 PULSE ENC CONF</a> .
	<b>(2)</b> FEN-01 TTL	Communication active. Module type: FEN-01 TTL Encoder interface Module. Input: TTL encoder input (X31). See parameter group <a href="#">93 PULSE ENC CONF</a> .
	<b>(3)</b> FEN-11 ABS	Communication active. Module type: FEN-11 Absolute Encoder Interface. Input: Absolute encoder input (X42). See parameter group <a href="#">91 ABSOL ENC CONF</a> .
	<b>(4)</b> FEN-11 TTL	Communication active. Module type: FEN-11 Absolute Encoder Interface. Input: TTL encoder input (X41). See parameter group <a href="#">93 PULSE ENC CONF</a> .

	(5) FEN-21 RES	Communication active. Module type: FEN-21 Resolver Interface. Input: Resolver input (X52). See parameter group <a href="#">92 RESOLVER CONF</a> .
	(6) FEN-21 TTL	Communication active. Module type: FEN-21 Resolver Interface. Input: TTL encoder input (X51). See parameter group <a href="#">93 PULSE ENC CONF</a> .
	(7) FEN-31 HTL	Communication active. Module type: FEN-31 HTL Encoder Interface. Input: HTL encoder input (X82). See parameter group <a href="#">93 PULSE ENC CONF</a> .
90.02	ENCODER 2 SEL	FW block: <a href="#">ENCODER</a> (see above)
	<p>Activates the communication to the optional encoder/resolver interface 2.</p> <p>For selections, see parameter <a href="#">90.01 ENCODER 1 SEL</a>.</p> <p><b>Note:</b> The counting of full shaft revolutions is not supported for encoder 2.</p>	
90.03	EMUL MODE SEL	FW block: <a href="#">ENCODER</a> (see above)
	<p>Enables the encoder emulation and selects the position value and the TTL output used in the emulation process.</p> <p>In encoder emulation a calculated position difference is transformed to a corresponding number of TTL pulses to be transmitted via encoder TTL output. The position difference is the difference between the latest and the previous position values.</p> <p>The position value used in emulation can be either a position determined by the drive software or a position measured by an encoder. If drive software position is used, the source for the used position is selected by parameter <a href="#">93.22 EMUL POS REF</a>. Because the software causes a delay, it is recommended that actual position is always taken from an encoder. Drive software is recommended to be used only with position reference emulation.</p> <p>Encoder emulation can be used to increase or decrease the pulse number when TTL encoder data is transmitted via the TTL output e.g. to another drive. If the pulse number requires no alternation, use encoder echo for data transformation. See parameter <a href="#">90.04 TTL ECHO SEL</a>. <b>Note:</b> If encoder emulation and echo are enabled for the same FEN-xx TTL output, the emulation overrides the echo.</p> <p>If an encoder input is selected as emulation source, the corresponding selection must be activated either with parameter <a href="#">90.01 ENCODER 1 SEL</a> or <a href="#">90.02 ENCODER 2 SEL</a>.</p> <p>The TTL encoder pulse number used in emulation must be defined by parameter <a href="#">93.21 EMUL PULSE NR</a>. See parameter group <a href="#">93 PULSE ENC CONF</a>.</p>	
	(0) DISABLED	Emulation disabled.
	(1) FEN-01 SWREF	Module type: FEN-01 TTL Encoder interface Module. Emulation: Drive software position (source selected by par. <a href="#">93.22 EMUL POS REF</a> ) is emulated to FEN-01 TTL output.
	(2) FEN-01 TTL+	Module type: FEN-01 TTL Encoder interface Module. Emulation: FEN-01 TTL encoder input (X32) position is emulated to FEN-01 TTL output.
	(3) FEN-01 TTL	Module type: FEN-01 TTL Encoder interface Module. Emulation: FEN-01 TTL encoder input (X31) position is emulated to FEN-01 TTL output.
	(4) FEN-11 SWREF	Module type: FEN-11 Absolute Encoder Interface. Emulation: Drive software position (source selected by par. <a href="#">93.22 EMUL POS REF</a> ) is emulated to FEN-11 TTL output.

	(5) FEN-11 ABS	Module type: FEN-11 Absolute Encoder Interface. Emulation: FEN-11 absolute encoder input (X42) position is emulated to FEN-11 TTL output.
	(6) FEN-11 TTL	Module type: FEN-11 Absolute Encoder Interface. Emulation: FEN-11 TTL encoder input (X41) position is emulated to FEN-11 TTL output.
	(7) FEN-21 SWREF	Module type: FEN-21 Resolver Interface. Emulation: Drive software position (source selected by par. 93.22 EMUL POS REF) is emulated to FEN-21 TTL output.
	(8) FEN-21 RES	Module type: FEN-21 Resolver Interface. Emulation: FEN-21 resolver input (X52) position is emulated to FEN-11 TTL output.
	(9) FEN-21 TTL	Module type: FEN-21 Resolver Interface. Emulation: FEN-21 TTL encoder input (X51) position is emulated to FEN-21 TTL output.
	(10) FEN-31 SWREF	Module type: FEN-31 HTL Encoder Interface. Emulation: Drive software position (source selected by par. 93.22 EMUL POS REF) is emulated to FEN-31 TTL output.
	(11) FEN-31 HTL	Module type: FEN-31 HTL Encoder Interface. Emulation: FEN-31 HTL encoder input (X82) position is emulated to FEN-31 TTL output.
90.04	TTL ECHO SEL	FW block: ENCODER (see above)
	Enables and selects the interface for the TTL encoder signal echo. <b>Note:</b> If encoder emulation and echo are enabled for the same FEN-xx TTL output, the emulation overrides the echo.	
	(0) DISABLED	No echo interface enabled.
	(1) FEN-01 TTL+	Module type: FEN-01 TTL Encoder Interface. Echo: TTL encoder input (X32) pulses are echoed to the TTL output.
	(2) FEN-01 TTL	Module type: FEN-01 TTL Encoder Interface. Echo: TTL encoder input (X31) pulses are echoed to the TTL output.
	(3) FEN-11 TTL	Module type: FEN-11 Absolute Encoder Interface. Echo: TTL encoder input (X41) pulses are echoed to the TTL output.
	(4) FEN-21 TTL	Module type: FEN-21 Resolver Interface. Echo: TTL encoder input (X51) pulses are echoed to the TTL output.
	(5) FEN-31 HTL	Module type: FEN-31 HTL Encoder Interface. Echo: HTL encoder input (X82) pulses are echoed to the TTL output.
90.05	ENC CABLE FAULT	FW block: ENCODER (see above)
	Selects the action in case an encoder cable fault is detected by the FEN-xx encoder interface. <b>Note:</b> At the time of printing, this functionality is only available with the absolute encoder input of the FEN-11 based on sine/cosine incremental signals, and with the HTL input of the FEN-31.	
	(0) NO	Cable fault detection inactive.
	(1) FAULT	The drive trips on an ENCODER 1/2 CABLE fault.

	<b>(2) WARNING</b>	<p>The drive generates an ENCODER 1/2 CABLE warning. This is the recommended setting if the maximum pulse frequency of sine/cosine incremental signals exceeds 100 kHz; at high frequencies, the signals may attenuate enough to invoke the function. The maximum pulse frequency can be calculated as follows:</p> $\frac{\text{Pulses per revolution (par. 91.01)} \times \text{Maximum speed in rpm}}{60}$
<b>90.10</b>	<b>ENC PAR REFRESH</b>	FW block: <b>ENCODER</b> (see above)
	<p>Setting this parameter to 1 forces a reconfiguration of the FEN-xx interfaces, which is needed for any parameter changes in groups 90...93 to take effect.</p> <p>The parameter is read-only when the drive is running.</p>	
	<b>(0) DONE</b>	Refreshing done.
	<b>(1) CONFIGURE</b>	Reconfigure. The value will automatically revert to DONE.

## Group 91 ABSOL ENC CONF

Absolute encoder configuration; used when parameter [90.01 ENCODER 1 SEL](#) / [90.02 ENCODER 2 SEL](#) is set to [\(3\) FEN-11 ABS](#).

The optional FEN-11 Absolute Encoder Interface module supports the following absolute encoders:

- Incremental sin/cos encoders with or without zero pulse and with or without
- sin/cos commutation signals
- Endat 2.1/2.2 with incremental sin/cos signals (partially without sin/cos incremental signals\*)
- Hipurface encoders with incremental sin/cos signals
- SSI (Synchronous Serial Interface) with incremental sin/cos signals (partially without sin/cos incremental signals\*).

\* EnDat and SSI encoders without incremental sin/cos signals are partially supported only as encoder 1: Speed is not available and the time instant of the position data (delay) depends on the encoder.

See also parameter group [90 ENC MODULE SEL](#) on page [225](#), and *FEN-11 Absolute Encoder Interface User's Manual* (3AFE68784841 [English]).

91 ABSOL ENC CONF		
Firmware block: <b>ABSOL ENC CONF</b> (91)  This block configures the absolute encoder connection.		
<b>91.01</b>	SINE COSINE NR	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	Defines the number of sine/cosine wave cycles within one revolution. <b>Note:</b> This parameter does not need to be set when EnDat or SSI encoders are used in continuous mode. See parameter <a href="#">91.25 SSI MODE</a> / <a href="#">91.30 ENDAT MODE</a> .	
	0...65535	Number of sine/cosine wave cycles within one revolution.

<b>91.02</b>	<b>ABS ENC INTERF</b>	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	Selects the source for the encoder position (absolute position).	
	<b>(0)</b> NONE	Not selected.
	<b>(1)</b> COMMUT SIG	Commutation signals.
	<b>(2)</b> ENDAT	Serial interface: EnDat encoder.
	<b>(3)</b> HIPERFACE	Serial interface: HIPERFACE encoder.
	<b>(4)</b> SSI	Serial interface: SSI encoder.
	<b>(5)</b> TAMAG. 17/33B	Serial interface: Tamagawa 17/33-bit encoder.
<b>91.03</b>	<b>REV COUNT BITS</b>	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	Defines the number of bits used in revolution count (for multi turn encoders). Used with serial interfaces, i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to <b>(2) ENDAT</b> , <b>(3) HIPERFACE</b> , <b>(4) SSI</b> or <b>(5) TAMAG. 17/33B</b> .	
	0...32	Number of bits used in revolution count. E.g. 4096 revolutions => 12 bits.
<b>91.04</b>	<b>POS DATA BITS</b>	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	Defines the number of bits used within one revolution. Used with serial interfaces, i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to <b>(2) ENDAT</b> , <b>(3) HIPERFACE</b> , <b>(4) SSI</b> or <b>(5) TAMAG. 17/33B</b> .	
	0...32	Number of bits used within one revolution. E.g. 32768 positions per revolution => 15 bits.
<b>91.05</b>	<b>REFMARK ENA</b>	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	Enables the encoder zero pulse for FEN-11 encoder input (if exists). Zero pulse can be used for position latching. <b>Note:</b> With serial interfaces (i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to <b>(2) ENDAT</b> , <b>(3) HIPERFACE</b> , <b>(4) SSI</b> or <b>(5) TAMAG. 17/33B</b> ), the zero pulse does not exist.	
	<b>(0)</b> FALSE	Zero pulse disabled.
	<b>(1)</b> TRUE	Zero pulse enabled.
<b>91.10</b>	<b>HIPERFACE PARITY</b>	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	Defines the use of parity and stop bit(s) for HIPERFACE encoder (i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to <b>(3) HIPERFACE</b> ). Typically this parameter does not need to be set.	
	<b>(0)</b> ODD	Odd parity indication bit, one stop bit.
	<b>(1)</b> EVEN	Even parity indication bit, one stop bit.
<b>91.11</b>	<b>HIPERF BAUDRATE</b>	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	Defines the transfer rate of the link for HIPERFACE encoder (i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to <b>(3) HIPERFACE</b> ). Typically this parameter does not need to be set.	

	(0) 4800	4800 bits/s.
	(1) 9600	9600 bits/s.
	(2) 19200	19200 bits/s.
	(3) 38400	38400 bits/s.
<b>91.12</b>	HIPERF NODE ADDR	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Defines the node address for HIPERFACE encoder (i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to (3) HIPERFACE).</p> <p>Typically this parameter does not need to be set.</p>	
	0...255	HIPERFACE encoder node address.
<b>91.20</b>	SSI CLOCK CYCLES	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Defines the length of the SSI message. The length is defined as the number of clock cycles. The number of cycles can be calculated by adding 1 to the number of the bits in a SSI message frame. Used with SSI encoders, i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to (4) SSI.</p>	
	2...127	SSI message length.
<b>91.21</b>	SSI POSITION MSB	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Defines the location of the MSB (main significant bit) of the position data within a SSI message. Used with SSI encoders, i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to (4) SSI.</p>	
	1...126	Position data MSB location (bit number).
<b>91.22</b>	SSI REVOL MSB	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Defines the location of the MSB (main significant bit) of the revolution count within a SSI message. Used with SSI encoders, i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to (4) SSI.</p>	
	1...126	Revolution count MSB location (bit number).
<b>91.23</b>	SSI DATA FORMAT	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Selects the data format for SSI encoder (i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to (4) SSI).</p>	
	(0) BINARY	Binary code.
	(1) GRAY	Gray code.
<b>91.24</b>	SSI BAUD RATE	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Selects the baud rate for SSI encoder (i.e. when parameter <a href="#">91.02 ABS ENC INTERF</a> is set to (4) SSI).</p>	
	(0) 10 kbit/s	10 kbit/s.
	(1) 50 kbit/s	50 kbit/s.
	(2) 100 kbit/s	100 kbit/s.
	(3) 200 kbit/s	200 kbit/s.

	(4) 500 kbit/s	500 kbit/s.
	(5) 1000 kbit/s	1000 kbit/s.
91.25	SSI MODE	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Selects the SSI encoder mode.</p> <p><b>Note:</b> Parameter needs to be set only when an SSI encoder is used in continuous mode, i.e. SSI encoder without incremental sin/cos signals (supported only as encoder 1). SSI encoder is selected by setting parameter <a href="#">91.02 ABS ENC INTERF</a> to (4) SSI.</p>	
	(0) INITIAL POS.	Single position transfer mode (initial position).
	(1) CONTINUOUS	Continuous position transfer mode.
91.26	SSI TRANSMIT CYC	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Selects the transmission cycle for SSI encoder.</p> <p><b>Note:</b> This parameter needs to be set only when an SSI encoder is used in continuous mode, i.e. SSI encoder without incremental sin/cos signals (supported only as encoder 1). SSI encoder is selected by setting parameter <a href="#">91.02 ABS ENC INTERF</a> to (4) SSI.</p>	
	(0) 50 us	50 µs.
	(1) 100 us	100 µs.
	(2) 200 us	200 µs.
	(3) 500 us	500 µs.
	(4) 1 ms	1 ms.
	(5) 2 ms	2 ms.
91.27	SSI ZERO PHASE	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Defines the phase angle within one sine/cosine signal period that corresponds to the value of zero on the SSI serial link data. The parameter is used to adjust the synchronization of the SSI position data and the position based on sine/cosine incremental signals. Incorrect synchronization may cause an error of <math>\pm 1</math> incremental period.</p> <p><b>Note:</b> This parameter needs to be set only when an SSI encoder with sine/cosine incremental signals is used in initial position mode.</p>	
	(0) 315–45 DEG	315–45 degrees.
	(1) 45–135 DEG	45–135 degrees.
	(2) 135–225 DEG	135–225 degrees.
	(3) 225–315 DEG	225–315 degrees.
91.30	ENDAT MODE	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Selects the EnDat encoder mode.</p> <p><b>Note:</b> This parameter needs to be set only when an EnDat encoder is used in continuous mode, i.e. EnDat encoder without incremental sin/cos signals (supported only as encoder 1). EnDat encoder is selected by setting parameter <a href="#">91.02 ABS ENC INTERF</a> to (2) ENDAT.</p>	
	(0) INITIAL POS.	Single position transfer mode (initial position).



	(1) CONTINUOUS	Continuous position data transfer mode.
91.31	ENDAT MAX CALC	FW block: <a href="#">ABSOL ENC CONF</a> (see above)
	<p>Selects the maximum encoder calculation time for EnDat encoder.</p> <p><b>Note:</b> This parameter needs to be set only when an EnDat encoder is used in continuous mode, i.e. EnDat encoder without incremental sin/cos signals (supported only as encoder 1). EnDat encoder is selected by setting parameter <a href="#">91.02 ABS ENC INTERF</a> to <a href="#">(2) ENDAT</a>.</p>	
	(0) 10 us	10 µs.
	(1) 100 us	100 µs.
	(2) 1 ms	1 ms.
	(3) 50 ms	50 ms.

## Group 92 RESOLVER CONF

Resolver configuration; used when parameter [90.01 ENCODER 1 SEL](#) / [90.02 ENCODER 2 SEL](#) is set to [\(5\) FEN-21 RES](#).

The optional FEN-21 Resolver Interface module is compatible with resolvers which are excited by sinusoidal voltage (to the rotor winding) and which generate sine and cosine signals proportional to the rotor angle (to stator windings).

**Note:** Configuration data is written into the logic registers of the adapter once after the power-up. If parameter values are changed, save values into the permanent memory by parameter [16.07 PARAM SAVE](#). The new settings will take effect when the drive is powered up again, or after re-configuration is forced by parameter [90.10 ENC PAR REFRESH](#).

Resolver autotuning is performed automatically whenever the resolver input is activated after changes to parameters [92.02 EXC SIGNAL AMPL](#) or [92.03 EXC SIGNAL FREQ](#). Autotuning must be forced after any changes in the resolver cable connection. This can be done by setting either [92.02 EXC SIGNAL AMPL](#) or [92.03 EXC SIGNAL FREQ](#) to its already existing value, and then setting parameter [90.10 ENC PAR REFRESH](#) to 1.

If the resolver (or absolute encoder) is used for feedback from a permanent magnet motor, an AUTOPHASING ID run should be performed after replacement or any parameter changes. See parameter [99.13 IDRUN MODE](#) and section [Autophasing](#) on page 40.

See also parameter group [90 ENC MODULE SEL](#) on page 225, and *FEN-21 Resolver Interface User's Manual* (3AFE68784859 [English]).

92 RESOLVER CONF		
Firmware block: <b>RESOLVER CONF</b> (92)  This block configures the resolver connection.		
<b>92.01</b>	RESOLV POLEPAIRS	FW block: <a href="#">RESOLVER CONF</a> (see above)
	Selects the number of pole pairs.	
	1...32	Number of pole pairs.
<b>92.02</b>	EXC SIGNAL AMPL	FW block: <a href="#">RESOLVER CONF</a> (see above)
	Defines the amplitude of the excitation signal.	
	4.0...12.0 Vrms	Excitation signal amplitude.
<b>92.03</b>	EXC SIGNAL FREQ	FW block: <a href="#">RESOLVER CONF</a> (see above)
	Defines the frequency of the excitation signal.	
	1...20 kHz	Excitation signal frequency.

## Group 93 PULSE ENC CONF

TTL/HTL input and TTL output configuration. See also parameter group [90 ENC MODULE SEL](#) on page 225, and the appropriate encoder extension module manual.

Parameters [93.01...93.06](#) are used when a TTL/HTL encoder is used as encoder 1 (see parameter [90.01 ENCODER 1 SEL](#)).

Parameters [93.11...93.16](#) are used when a TTL/HTL encoder is used as encoder 2 (see parameter [90.02 ENCODER 2 SEL](#)).

In normal operation, only parameter [93.01/93.11](#) needs to be set for TTL/HTL encoders.

**Note:** Configuration data is written into the logic registers of the adapter once after the power-up. If parameter values are changed, save values into the permanent memory by parameter [16.07 PARAM SAVE](#). The new settings will take effect when the drive is powered up again, or after re-configuration is forced by parameter [90.10 ENC PAR REFRESH](#).

93 PULSE ENC CONF		
Firmware block: <b>PULSE ENC CONF</b> (93)  This block configures the TTL/HTL input and TTL output.		
<b>93.01</b>	ENC1 PULSE NR	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Defines the pulse number per revolution for encoder 1.	
	0...65535	Pulses per revolution for encoder 1.
<b>93.02</b>	ENC1 TYPE	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Selects the type of encoder 1.	
	(0) QUADRATURE	Quadrature encoder (two channels, channels A and B).
	(1) SINGLE TRACK	Single track encoder (one channel, channel A).
<b>93.03</b>	ENC1 SP CALCMODE	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Selects the speed calculation mode for encoder 1.  *When single track mode has been selected by parameter <a href="#">93.02 ENC1 TYPE</a> , the speed is always positive.	

	<b>(0) A&amp;B ALL</b>	Channels A and B: Rising and falling edges are used for speed calculation. Channel B: Defines the direction of rotation. * <b>Note:</b> When single track mode has been selected by parameter <a href="#">93.02 ENC1 TYPE</a> , setting 0 acts like setting 1.												
	<b>(1) A ALL</b>	Channel A: Rising and falling edges are used for speed calculation. Channel B: Defines the direction of rotation. *												
	<b>(2) A RISING</b>	Channel A: Rising edges are used for speed calculation. Channel B: Defines the direction of rotation. *												
	<b>(3) A FALLING</b>	Channel A: Falling edges are used for speed calculation. Channel B: Defines the direction of rotation. *												
	<b>(4) AUTO RISING</b> <b>(5) AUTO FALLING</b>	Used mode (1, 2 or 3) is changed automatically depending on the pulse frequency according to the following table: <table border="1"> <thead> <tr> <th><a href="#">93.03 = 4</a></th><th><a href="#">93.03 = 5</a></th><th>Pulse frequency of the channel(s)</th></tr> </thead> <tbody> <tr> <td>0</td><td>0</td><td>&lt; 2442 Hz</td></tr> <tr> <td>1</td><td>1</td><td>2442...4884 Hz</td></tr> <tr> <td>2</td><td>3</td><td>&gt; 4884 Hz</td></tr> </tbody> </table>	<a href="#">93.03 = 4</a>	<a href="#">93.03 = 5</a>	Pulse frequency of the channel(s)	0	0	< 2442 Hz	1	1	2442...4884 Hz	2	3	> 4884 Hz
<a href="#">93.03 = 4</a>	<a href="#">93.03 = 5</a>	Pulse frequency of the channel(s)												
0	0	< 2442 Hz												
1	1	2442...4884 Hz												
2	3	> 4884 Hz												
<b>93.04</b>	<b>ENC1 POS EST ENA</b>	FW block: <a href="#">PULSE ENC CONF</a> (see above)												
	Selects whether measured and estimated position is used with encoder 1.													
	<b>(0) FALSE</b>	Measured position (Resolution: 4 x pulses per revolution for quadrature encoders, 2 x pulses per revolution for single track encoders.)												
	<b>(1) TRUE</b>	Estimated position. (Uses position extrapolation. Extrapolated at the time of data request.)												
<b>93.05</b>	<b>ENC1 SP EST ENA</b>	FW block: <a href="#">PULSE ENC CONF</a> (see above)												
	Selects whether calculated or estimated speed is used with encoder 1.													
	<b>(0) FALSE</b>	Last calculated speed (calculation interval is 62.5 µs...4 ms).												
	<b>(1) TRUE</b>	Estimated speed (estimated at the time of data request) Estimation increases the speed ripple in steady state operation, but improves the dynamics.												
<b>93.06</b>	<b>ENC1 OSC LIM</b>	FW block: <a href="#">PULSE ENC CONF</a> (see above)												
	Selects the maximum pulse frequency for the changing of the direction of rotation (used with encoder 1).													
	<b>(0) 4880HZ</b>	4880 Hz.												
	<b>(1) 2440HZ</b>	2440 Hz.												
	<b>(2) 1220HZ</b>	1220 Hz.												
	<b>(3) DISABLED</b>	Not selected.												

<b>93.11</b>	ENC2 PULSE NR	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Defines the pulse number per revolution for encoder 2.	
	0...65535	Pulses per revolution for encoder 2.
<b>93.12</b>	ENC2 TYPE	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Selects the type of encoder 2. For selections, see parameter <a href="#">93.02 ENC1 TYPE</a> .	
<b>93.13</b>	ENC2 SP CALCMODE	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Selects the speed calculation mode for encoder 2. For selections, see parameter <a href="#">93.03 ENC1 SP CALCMODE</a> .	
<b>93.14</b>	ENC2 POS EST ENA	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Selects whether measured and estimated position is used with encoder 2. For selections, see parameter <a href="#">93.04 ENC1 POS EST ENA</a> .	
<b>93.15</b>	ENC2 SP EST ENA	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Selects whether calculated or estimated speed is used with encoder 2. For selections, see parameter <a href="#">93.05 ENC1 SP EST ENA</a> .	
<b>93.16</b>	ENC2 OSC LIM	FW block: <a href="#">PULSE ENC CONF</a> (see above)
	Selects the maximum pulse frequency for the changing of the direction of rotation (used with encoder 2). For selections, see parameter <a href="#">93.06 ENC1 OSC LIM</a> .	
<b>93.21</b>	EMUL PULSE NR	FW block: <a href="#">ENCODER</a> (page 225)
	Defines the number of TTL/HTL pulses per revolution used in encoder emulation. Encoder emulation is enabled by parameter <a href="#">90.03 EMUL MODE SEL</a> .	
	0...65535	TTL pulses used in encoder emulation.
<b>93.22</b>	EMUL POS REF	FW block: <a href="#">ENCODER</a> (page 225)
	Selects the source for the position value used in encoder emulation when parameter <a href="#">90.03 EMUL MODE SEL</a> is set to (1) FEN-01 SWREF, (4) FEN-11 SWREF, (7) FEN-21 SWREF or (10) FEN-31 SWREF. See parameter group <a href="#">90 ENC MODULE SEL</a> . The source can be any actual or reference position value (except <a href="#">1.09 ENCODER 1 POS</a> and <a href="#">1.11 ENCODER 2 POS</a> ).	
	Value pointer: Group and index	

## Group 95 HW CONFIGURATION

Miscellaneous hardware-related settings.

95 HW CONFIGURATION		
<b>95.01</b>	CTRL UNIT SUPPLY	FW block: None
	Defines the manner in which the drive control unit is powered.	
	<b>(0)</b> INTERNAL 24V	The drive control unit is powered from the drive power unit it is mounted on.
	<b>(1)</b> EXTERNAL 24V	The drive control unit is powered from an external power supply.
<b>95.02</b>	EXTERNAL CHOKE	FW block: None
	Defines if the drive is equipped with an AC choke or not.	
	<b>(0)</b> NO	The drive is not equipped with an AC choke.
	<b>(1)</b> YES	The drive is equipped with an AC choke.

## Group 97 USER MOTOR PAR

User adjustment of motor model values estimated during ID run. The values can be entered in either “per unit” or SI.

97 USER MOTOR PAR		
97.01	USE GIVEN PARAMS	FW block: None
	Activates the motor model parameters 97.02...97.14. The value is automatically set to zero when ID run is selected by parameter 99.13 IDRUN MODE. The values of parameters 97.02...97.14 are updated according to the motor characteristics identified during the ID run. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	(0) NO	Inactive.
	(1) USE GIVEN	The values of parameters 97.02...97.14 are used in the motor model.
97.02	RS USER	FW block: None
	Defines the stator resistance $R_S$ of the motor model.	
	0...0.5 p.u. (per unit)	Stator resistance.
97.03	RR USER	FW block: None
	Defines the rotor resistance $R_R$ of the motor model. <b>Note:</b> This parameter is valid only for asynchronous motors.	
	0...0.5 p.u. (per unit)	Rotor resistance.
97.04	LM USER	FW block: None
	Defines the main inductance $L_M$ of the motor model. <b>Note:</b> This parameter is valid only for asynchronous motors.	
	0...10 p.u. (per unit)	Main inductance.
97.05	SIGMAL USER	FW block: None
	Defines the leakage inductance $\sigma L_S$ . <b>Note:</b> This parameter is valid only for asynchronous motors.	
	0...1 p.u. (per unit)	Leakage inductance.
97.06	LD USER	FW block: None
	Defines the direct axis (synchronous) inductance. <b>Note:</b> This parameter is valid only for permanent magnet motors.	
	0...10 p.u. (per unit)	Direct axis (synchronous) inductance.

<b>97.07</b>	LQ USER	FW block: None
	Defines the quadrature axis (synchronous) inductance. <b>Note:</b> This parameter is valid only for permanent magnet motors.	
	0...10 p.u. (per unit)	Quadrature axis (synchronous) inductance.
<b>97.08</b>	PM FLUX USER	FW block: None
	Defines the permanent magnet flux. <b>Note:</b> This parameter is valid only for permanent magnet motors.	
	0...2 p.u. (per unit)	Permanent magnet flux.
<b>97.09</b>	RS USER SI	FW block: None
	Defines the stator resistance $R_S$ of the motor model.	
	0.00000...100.00000 ohm	Stator resistance.
<b>97.10</b>	RR USER SI	FW block: None
	Defines the rotor resistance $R_R$ of the motor model. <b>Note:</b> This parameter is valid only for asynchronous motors.	
	0.00000...100.00000 ohm	Rotor resistance.
<b>97.11</b>	LM USER SI	FW block: None
	Defines the main inductance $L_M$ of the motor model. <b>Note:</b> This parameter is valid only for asynchronous motors.	
	0.00...100000.00 mH	Main inductance.
<b>97.12</b>	SIGL USER SI	FW block: None
	Defines the leakage inductance $\sigma L_S$ . <b>Note:</b> This parameter is valid only for asynchronous motors.	
	0.00...100000.00 mH	Leakage inductance.
<b>97.13</b>	LD USER SI	FW block: None
	Defines the direct axis (synchronous) inductance. <b>Note:</b> This parameter is valid only for permanent magnet motors.	
	0.00...100000.00 mH	Direct axis (synchronous) inductance.
<b>97.14</b>	LQ USER SI	FW block: None
	Defines the quadrature axis (synchronous) inductance. <b>Note:</b> This parameter is valid only for permanent magnet motors.	
	0.00...100000.00 mH	Quadrature axis (synchronous) inductance.



## Group 98 MOTOR CALC VALUES

Calculated motor values.

98 MOTOR CALC VALUES		
98.01	TORQ NOM SCALE	FW block: None
	Nominal torque in N•m which corresponds to 100%. <b>Note:</b> This parameter is copied from parameter <a href="#">99.12 MOT NOM TORQUE</a> if given. Otherwise the value is calculated.	
	0...2147483 Nm	Nominal torque.
98.02	POLEPAIRS	FW block: None
	Calculated number of motor pole pairs. <b>Note:</b> This parameter cannot be set by the user.	
	0...1000	Calculated number of motor pole pairs.

## Group 99 START-UP DATA

Start-up settings such as language, motor data and motor control mode.

The nominal motor values must be set before the drive is started; for detailed instructions, see chapter [Start-up](#) on page 15.



With DTC motor control mode, parameters 99.06...99.10 must be set; better control accuracy is achieved by also setting parameters 99.11 and 99.12.

With scalar control, parameters 99.06...99.09 must be set.

99 START-UP DATA		
99.01	LANGUAGE	FW block: None
	Selects the language.	
	(0809h) ENGLISH	English.
	(0407h) DEUTSCH	German.
	(0410h) ITALIANO	Italian.
	(040Ah) ESPAÑOL	Spanish.
	(041Dh) SVENSKA	Swedish.
	(041Fh) TÜRKÇE	Turkish.
99.04	MOTOR TYPE	FW block: None
	Selects the motor type. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	(0) AM	Asynchronous motor. Three phase AC voltage supplied induction motor with squirrel cage rotor.
	(1) PMSM	Permanent magnet motor. Three phase AC voltage supplied synchronous motor with permanent magnet rotor and sinusoidal BackEMF voltage.

<b>99.05</b>	<b>MOTOR CTRL MODE</b>	FW block: None
	<p>Selects the motor control mode.</p> <p>DTC (Direct torque control) mode is suitable for most applications.</p> <p>Scalar control is suitable for special cases where DTC cannot be applied. In Scalar Control, the drive is controlled with a frequency reference. The outstanding motor control accuracy of DTC cannot be achieved in scalar control. There are some standard features that are disabled in the scalar control mode, for example motor identification run (99.13), torque limits in parameter group 20 LIMITS, DC hold and DC magnetising (11.04...11.06, 11.01).</p> <p><b>Note:</b> Correct motor run requires that the magnetising current of the motor does not exceed 90 percent of the nominal current of the inverter.</p> <p><b>Note:</b> Scalar control mode must be used</p> <ul style="list-style-type: none"> <li>• with multimotor applications 1) if the load is not equally shared between the motors, 2) if the motors are of different sizes, or 3) if the motors are going to be changed after the motor identification,</li> <li>• if the nominal current of the motor is less than 1/6 of the nominal output current of the drive, or</li> <li>• if the drive is used with no motor connected (e.g. for test purposes).</li> </ul>	
	<b>(0) DTC</b>	Direct torque control mode.
	<b>(1) SCALAR</b>	Scalar control mode.
<b>99.06</b>	<b>MOT NOM CURRENT</b>	FW block: None
	<p>Defines the nominal motor current. Must be equal to the value on the motor rating plate. If several motors are connected to the inverter, enter the total current of the motors.</p> <p><b>Note:</b> Correct motor run requires that the magnetising current of the motor does not exceed 90 percent of the nominal current of the inverter.</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	0...32767 A	<p>Nominal motor current.</p> <p><b>Note:</b> The allowed range is <math>1/6 \dots 2 \times I_{2N}</math> of drive for direct control mode (parameter 99.05 MOTOR CTRL MODE = (0) DTC). For scalar control mode (parameter 99.05 MOTOR CTRL MODE = (1) SCALAR), the allowed range is <math>0 \dots 2 \times I_{2N}</math> of drive.</p>
<b>99.07</b>	<b>MOT NOM VOLTAGE</b>	FW block: None
	<p>Defines the nominal motor voltage. Nominal voltage is a fundamental phase to phase rms voltage, which is supplied to the motor at the nominal operating point. This parameter value must be equal to the value on the asynchronous motor name plate.</p> <p><b>Note:</b> Make sure the motor is connected correctly (star or delta) in accordance to the rating plate.</p> <p><b>Note:</b> With permanent magnet motors, the nominal voltage is the BackEMF voltage (at motor nominal speed). If the voltage is given as voltage per rpm, e.g. 60 V per 1000 rpm, the voltage for 3000 rpm nominal speed is <math>3 \times 60 \text{ V} = 180 \text{ V}</math>. Note that the nominal voltage is not equal to the equivalent DC motor voltage (E.D.C.M.) value given by some motor manufactures. The nominal voltage can be calculated by dividing the E.D.C.M. voltage by 1.7 (= square root of 3).</p> <p><b>Note:</b> The stress on the motor insulations is always dependent on the drive supply voltage. This also applies to the case where the motor voltage rating is lower than the rating of the drive and the supply of the drive.</p> <p><b>Note:</b> This parameter cannot be changed while the drive is running.</p>	
	0...32767 V	<p>Nominal motor voltage.</p> <p><b>Note:</b> The allowed range is <math>1/6 \dots 2 \times U_N</math> of drive.</p>

<b>99.08</b>	MOT NOM FREQ	FW block: None
	Defines the nominal motor frequency. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	5...500 Hz	Nominal motor frequency.
<b>99.09</b>	MOT NOM SPEED	FW block: None
	Defines the nominal motor speed. Must be equal to the value on the motor rating plate. When parameter value is changed, check the speed limits in parameter group <a href="#">20 LIMITS</a> . <b>Note:</b> This parameter cannot be changed while the drive is running.	
	0...30000 rpm	Nominal motor speed.
<b>99.10</b>	MOT NOM POWER	FW block: None
	Defines the nominal motor power. Must be equal to the value on the motor rating plate. If several motors are connected to the inverter, enter the total power of the motors. Set also parameter <a href="#">99.11 MOT NOM COSFII</a> . <b>Note:</b> This parameter cannot be changed while the drive is running.	
	0...10000 kW	Nominal motor power.
<b>99.11</b>	MOT NOM COSFII	FW block: None
	Defines the cosphi (not applicable to permanent magnet motors) for a more accurate motor model. Not obligatory; if set, should be equal to the value on the motor rating plate. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	0...1	Cosphi (0 = parameter disabled).
<b>99.12</b>	MOT NOM TORQUE	FW block: None
	Defines the nominal motor shaft torque for a more accurate motor model. Not obligatory. <b>Note:</b> This parameter cannot be changed while the drive is running.	
	0...2147483 Nm	Nominal motor shaft torque.

99.13	IDRUN MODE	FW block: None
	<p>Selects the type of the motor identification performed at the next start of the drive in DTC mode. During the identification, the drive will identify the characteristics of the motor for optimum motor control. After the ID run, the drive is stopped. <b>Note:</b> This parameter cannot be changed while the drive is running.</p> <p>Once the ID run is activated, it can be cancelled by stopping the drive: If ID run has already been performed once, parameter is automatically set to (0) NO. If no ID run has been performed yet, parameter is automatically set to (3) STANDSTILL. In this case, the ID run must be performed.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• ID run can only be performed in local control (i.e. when drive is controlled via PC tool or control panel).</li> <li>• ID run cannot be performed if parameter 99.05 MOTOR CTRL MODE is set to (1) SCALAR.</li> <li>• ID run must be performed every time any of the motor parameters (99.04, 99.06...99.12) have been changed. Parameter is automatically set to STANDSTILL after the motor parameters have been set.</li> <li>• With permanent magnet motor, the motor shaft must NOT be locked and the load torque must be &lt; 10% during the ID run (Normal/Reduced/Standstill).</li> <li>• Mechanical brake (if present) is not opened during the ID run.</li> <li>• Ensure that possible Safe Torque Off and emergency stop circuits are closed during ID run.</li> </ul>	
	(0) NO	No motor ID run is requested. This mode can be selected only if the ID run (Normal/Reduced/Standstill) has already been performed once.
	(1) NORMAL	<p>Guarantees the best possible control accuracy. The ID run takes about 90 seconds. This mode should be selected whenever it is possible.</p> <p><b>Note:</b> The driven machinery must be de-coupled from the motor with Normal ID run:</p> <ul style="list-style-type: none"> <li>• if the load torque is higher than 20%.</li> <li>• if the machinery is not able to withstand the nominal torque transient during the ID run.</li> </ul> <p><b>Note:</b> Check the direction of rotation of the motor before starting the ID run. During the run, the motor will rotate in the forward direction.</p> <p> <b>WARNING!</b> The motor will run at up to approximately 50...100% of the nominal speed during the ID run. ENSURE THAT IT IS SAFE TO RUN THE MOTOR BEFORE PERFORMING THE ID RUN!</p>
	(2) REDUCED	<p>Reduced ID Run. This mode should be selected instead of the Normal ID Run</p> <ul style="list-style-type: none"> <li>• if mechanical losses are higher than 20% (i.e. the motor cannot be de-coupled from the driven equipment), or</li> <li>• if flux reduction is not allowed while the motor is running (i.e. in case of a motor with an integrated brake supplied from the motor terminals).</li> </ul> <p>With Reduced ID run, the control in the field weakening area or at high torques is not necessarily as accurate as with the Normal ID run. Reduced ID run is completed faster than the Normal ID Run (&lt; 90 seconds).</p> <p><b>Note:</b> Check the direction of rotation of the motor before starting the ID run. During the run, the motor will rotate in the forward direction.</p> <p> <b>WARNING!</b> The motor will run at up to approximately 50...100% of the nominal speed during the ID run. ENSURE THAT IT IS SAFE TO RUN THE MOTOR BEFORE PERFORMING THE ID RUN!</p>

	<b>(3) STANDSTILL</b>	<p>Standstill ID run. The motor is injected with DC current. With asynchronous motor, the motor shaft is not rotating (with permanent magnet motor the shaft can rotate &lt; 0.5 revolution).</p> <p><b>Note:</b> This mode should be selected only if the Normal or Reduced ID run is not possible due to the restrictions caused by the connected mechanics (e.g. with lift or crane applications).</p>
	<b>(4) AUTOPHASING</b>	<p>During autophasing, the start angle of the motor is determined. Note that other motor model values are not updated. See also parameter <a href="#">11.07 AUTOPHASING MODE</a>, and section <a href="#">Autophasing</a> on page 40.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Autophasing can only be selected after the Normal/Reduced/Standstill ID run has been performed once. Autophasing is used when an absolute encoder has been added/changed to a permanent magnet motor and there is no need to perform the Normal/Reduced/Standstill ID run again.</li> <li>• During Autophasing the motor shaft must NOT be locked and the load torque must be &lt; 5%.</li> </ul>
	<b>(5) CUR MEAS CAL</b>	<p>Current offset and gain measurement calibration. The calibration will be performed at next start.</p>

# Parameter data

---

## What this chapter contains

This chapter lists the parameters of the drive with some additional data. For the parameter descriptions, see chapter [Parameters and firmware blocks](#).

## Terms

Term	Definition
Actual signal	Signal measured or calculated by the drive. Can be monitored by the user. No user setting is possible.
Def	Default value
enum	Enumerated list, i.e. selection list
FbEq	Fieldbus equivalent: The scaling between the value shown on the panel and the integer used in serial communication.
Page no.	Page number for more information
INT32	32-bit integer value (31 bits + sign)
Bit pointer	Bit pointer. A bit pointer points to a single bit in the value of another parameter.
Val pointer	Value pointer. A value pointer points to the value of another parameter.
Parameter	An operation instruction of the drive that is often user-adjustable. Parameters that are signals measured or calculated by the drive are called actual signals.
Pb	Packed boolean
PT	Parameter protection type. See WP and WPD.
REAL	$\underbrace{16\text{-bit value}}_{= \text{integer value}} \underbrace{16\text{-bit value}}_{= \text{fractional value}} \text{ (31 bits + sign)}$
REAL24	$\underbrace{8\text{-bit value}}_{= \text{integer value}} \underbrace{24\text{-bit value}}_{= \text{fractional value}} \text{ (31 bits + sign)}$
Save PF	Parameter is saved to flash memory at 1 minute intervals to prevent data loss if power supply to the drive control unit is lost.
Type	Data type. See enum, INT32, Bit pointer, Val pointer, Pb, REAL, REAL24, UINT32.
UINT32	32-bit unsigned integer value
WP	Write protected parameter (i.e. read only)
WPD	Write protected parameter while drive is running

## Fieldbus equivalent

Serial communication data between fieldbus adapter and drive is transferred in integer format. Thus the drive actual and reference signal values must be scaled to 16/32-bit integer values. Fieldbus equivalent defines the scaling between the signal value and the integer used in serial communication.

All the read and sent values are limited to 16/32 bits.

Example: If 32.04 MAXIMUM TORQ REF is set from external control system, an integer value of 10 corresponds to 1%.

## Fieldbus addresses

For FPBA-01 Profibus Adapter, FDNA-01 DeviceNet Adapter and FCAN-01 CANopen Adapter, see the User's Manual of the fieldbus adapter module.

## Pointer parameter format in fieldbus communication

Value and bit pointer parameters are transferred between the fieldbus adapter and drive as 32-bit integer values.

### 32-bit integer value pointers

When value pointer parameter is connected to the value of another parameter or signal, the format is as follows:

	Bit			
	30...31	16...29	8...15	0...7
<b>Name</b>	Source type		Group	Index
<b>Value</b>	1	-	1...255	1...255
<b>Description</b>	Value pointer is connected to parameter/signal.	-	Group of source parameter	Index of source parameter

When value pointer parameter is connected to an application program, the format is as follows:

	Bit		
	30...31	24...29	0...23
<b>Name</b>	Source type	Not in use	Address
<b>Value</b>	2	-	0...2 <sup>23</sup>
<b>Description</b>	Value pointer is connected to application program.	-	Relative address of application program variable

**Note:** Value pointer parameters which are connected to an application program cannot be set via fieldbus (i.e. read access only).



### 32-bit integer bit pointers

When bit pointer parameter is connected to value 0 or 1, the format is as follows:

	Bit		
	30...31	16...29	0
<b>Name</b>	Source type	Not in use	Value
<b>Value</b>	0	-	0...1
<b>Description</b>	Bit pointer is connected to 0/1.	-	0 = False, 1 = True

When bit pointer is connected to a bit value of another signal, the format is as follows:

	Bit				
	30...31	24...29	16...23	8...15	0...7
<b>Name</b>	Source type	Not in use	Bit sel	Group	Index
<b>Value</b>	1	-	0...31	2...255	1...255
<b>Description</b>	Bit pointer is connected to signal bit value.	-	Bit selection	Group of source parameter	Index of source parameter

When bit pointer parameter is connected to an application program, the format is as follows:

	Bit		
	30...31	24...29	0...23
<b>Name</b>	Source type	Bit sel	Address
<b>Value</b>	2	0...31	0...2 <sup>23</sup>
<b>Description</b>	Bit pointer is connected to application program.	Bit selection	Relative address of application program variable

**Note:** Bit pointer parameters which are connected to an application program cannot be set via fieldbus (i.e. read access only).

## Actual signals (Parameter groups 1...9)

Index	Name	Type	Range	Unit	FbEq	Update time	Data length	PT	Save PF	Page no.
01	ACTUAL VALUES									
1.01	SPEED ACT	REAL	-30000...30000	rpm	1 = 100	250 µs	32	WP		<a href="#">77</a>
1.02	SPEED ACT PERC	REAL	-1000...1000	%	1 = 100	2 ms	32	WP		<a href="#">77</a>
1.03	FREQUENCY	REAL	-30000...30000	Hz	1 = 100	2 ms	32	WP		<a href="#">77</a>
1.04	CURRENT	REAL	0...30000	A	1 = 100	10 ms	32	WP		<a href="#">77</a>
1.05	CURRENT PERC	REAL	0...1000	%	1 = 10	2 ms	16	WP		<a href="#">77</a>
1.06	TORQUE	REAL	-1600...1600	%	1 = 10	2 ms	16	WP		<a href="#">77</a>
1.07	DC-VOLTAGE	REAL	-	V	1 = 100	2 ms	32	WP		<a href="#">77</a>
1.08	ENCODER 1 SPEED	REAL	-	rpm	1 = 100	250 µs	32	WP		<a href="#">77</a>
1.09	ENCODER 1 POS	REAL24	-	rev	1=100000000	250 µs	32	WP		<a href="#">77</a>
1.10	ENCODER 2 SPEED	REAL	-	rpm	1 = 100	250 µs	32	WP		<a href="#">78</a>
1.11	ENCODER 2 POS	REAL24	-	rev	1=100000000	250 µs	32	WP		<a href="#">78</a>
1.12	POS ACT	REAL	-32768...32767	*	See <a href="#">60.09</a>	250 µs	32	WP		<a href="#">78</a>
1.13	POS 2ND ENC	REAL	-32768...32767	revs	1 = 1	250 µs	32	WP		<a href="#">78</a>
1.14	SPEED ESTIMATED	REAL	-30000...30000	rpm	1 = 100	2 ms	32	WP		<a href="#">78</a>
1.15	TEMP INVERTER	REAL24	-40...160	°C	1 = 10	2 ms	16	WP		<a href="#">78</a>
1.16	TEMP BC	REAL24	-40...160	°C	1 = 10	2 ms	16	WP		<a href="#">78</a>
1.17	MOTOR TEMP	REAL	-10...250	°C	1 = 10	10 ms	16	WP		<a href="#">78</a>
1.18	MOTOR TEMP EST	INT32	-60...1000	°C	1 = 1	-	16	WP	x	<a href="#">78</a>
1.19	USED SUPPLY VOLT	REAL	0...1000	V	1 = 10	10 ms	16	WP		<a href="#">78</a>
1.20	BRAKE RES LOAD	REAL24	0...1000	%	1 = 1	50 ms	16	WP		<a href="#">78</a>
1.21	CPU USAGE	UINT32	0...100	%	1 = 1	-	16	WP		<a href="#">78</a>
1.22	INVERTER POWER	REAL	-2 <sup>31</sup> ...2 <sup>31</sup> - 1	kW	1 = 100	10 ms	32	WP		<a href="#">78</a>
1.26	ON TIME COUNTER	INT32	0...35791394.1	h	1 = 100	10 ms	32	WP	x	<a href="#">78</a>
1.27	RUN TIME COUNTER	INT32	0...35791394.1	h	1 = 100	10 ms	32	WP	x	<a href="#">79</a>
1.31	MECH TIME CONST	REAL	0...32767	s	1 = 1000	10 ms	32	WP	x	<a href="#">79</a>
02	I/O VALUES									
2.01	DI STATUS	Pb	0...0x3F	-	1 = 1	2 ms	16	WP		<a href="#">80</a>
2.02	RO STATUS	Pb	-	-	1 = 1	2 ms	16	WP		<a href="#">80</a>
2.03	DIO STATUS	Pb	-	-	1 = 1	2 ms	16	WP		<a href="#">80</a>
2.04	AI1	REAL	-	V or mA	1 = 1000	2 ms	16	WP		<a href="#">80</a>
2.05	AI1 SCALED	REAL	-	-	1 = 1000	250 µs	32	WP		<a href="#">80</a>
2.06	AI2	REAL	-	V or mA	1 = 1000	2 ms	16	WP		<a href="#">80</a>
2.07	AI2 SCALED	REAL	-	-	1 = 1000	250 µs	32	WP		<a href="#">80</a>
2.08	AO1	REAL	-	mA	1 = 1000	2 ms	16	WP		<a href="#">80</a>
2.09	AO2	REAL	-	V	1 = 1000	2 ms	16	WP		<a href="#">80</a>
2.10	DIO2 FREQ IN	REAL	0...32767	Hz	1 = 1000	2 ms	32	WP		<a href="#">80</a>
2.11	DIO3 FREQ OUT	REAL	0...32767	Hz	1 = 1000	2 ms	32	WP		<a href="#">80</a>
2.12	FBA MAIN CW	Pb	0 ... 0xFFFFFFFF	-	1 = 1	500 µs	32	WP		<a href="#">81</a>
2.13	FBA MAIN SW	Pb	0 ... 0xFFFFFFFF	-	1 = 1	-	32	WP		<a href="#">84</a>
2.14	FBA MAIN REF1	INT32	-2 <sup>31</sup> ...2 <sup>31</sup> - 1	-	1 = 1	500 µs	32	WP		<a href="#">85</a>

Index	Name	Type	Range	Unit	FbEq	Update time	Data length	PT	Save PF	Page no.
2.15	FBA MAIN REF2	INT32	$-2^{31} \dots 2^{31} - 1$	-	1 = 1	500 $\mu$ s	32	WP		<a href="#">85</a>
2.16	FEN DI STATUS	Pb	0...0x33	-	1 = 1	500 $\mu$ s	16	WP		<a href="#">85</a>
2.17	D2D MAIN CW	Pb	0...0xFFFF	-	1 = 1	500 $\mu$ s	16	WP		<a href="#">86</a>
2.18	D2D FOLLOWER CW	Pb	0...0xFFFF	-	1 = 1	2 ms	16	WP		<a href="#">86</a>
2.19	D2D REF1	REAL	$-2^{31} \dots 2^{31} - 1$	-	1 = 1	500 $\mu$ s	32	WP		<a href="#">86</a>
2.20	D2D REF2	REAL	$-2^{31} \dots 2^{31} - 1$	-	1 = 1	2 ms	32	WP		<a href="#">86</a>
03	CONTROL VALUES									
3.01	SPEED REF1	REAL	-30000...30000	rpm	1 = 100	500 $\mu$ s	32	WP		<a href="#">87</a>
3.02	SPEED REF2	REAL	-30000...30000	rpm	1 = 100	500 $\mu$ s	32	WP		<a href="#">87</a>
3.03	SPEEDREF RAMP IN	REAL	-30000...30000	rpm	1 = 100	500 $\mu$ s	32	WP		<a href="#">87</a>
3.04	SPEEDREF RAMPED	REAL	-30000...30000	rpm	1 = 100	500 $\mu$ s	32	WP		<a href="#">87</a>
3.05	SPEEDREF USED	REAL	-30000...30000	rpm	1 = 100	250 $\mu$ s	32	WP		<a href="#">87</a>
3.06	SPEED ERROR FILT	REAL	-30000...30000	rpm	1 = 100	250 $\mu$ s	32	WP		<a href="#">87</a>
3.07	ACC COMP TORQ	REAL	-1600...1600	%	1 = 10	250 $\mu$ s	16	WP		<a href="#">87</a>
3.08	TORQ REF SP CTRL	REAL	-1600...1600	%	1 = 10	250 $\mu$ s	16	WP		<a href="#">87</a>
3.09	TORQ REF1	REAL	-1000...1000	%	1 = 10	500 $\mu$ s	16	WP		<a href="#">87</a>
3.10	TORQ REF RAMPED	REAL	-1000...1000	%	1 = 10	500 $\mu$ s	16	WP		<a href="#">87</a>
3.11	TORQ REF RUSHLIM	REAL	-1000...1000	%	1 = 10	250 $\mu$ s	16	WP		<a href="#">87</a>
3.12	TORQUE REF ADD	REAL	-1000...1000	%	1 = 10	250 $\mu$ s	16	WP		<a href="#">87</a>
3.13	TORQ REF TO TC	REAL	-1600...1600	%	1 = 10	250 $\mu$ s	16	WP		<a href="#">88</a>
3.14	BRAKE TORQ MEM	REAL	-1000...1000	%	1 = 10	2 ms	16	WP	x	<a href="#">88</a>
3.15	BRAKE COMMAND	enum	0...1	-	1 = 1	2 ms	16	WP		<a href="#">88</a>
3.16	FLUX REF USED	REAL24	0...200	%	1 = 1	2 ms	16	WP		<a href="#">88</a>
3.17	TORQUE REF USED	REAL	-1600...1600	%	1 = 10	250 $\mu$ s	32	WP		<a href="#">88</a>
4	POS CTRL VALUES									
4.01	SPEED REF POS	REAL	-32768...32768	rpm	1 = 100	250 $\mu$ s	32	WP		<a href="#">89</a>
4.02	SPEED ACT LOAD	REAL	-32768...32768	**	See <a href="#">60.10</a>	500 $\mu$ s	32	WP		<a href="#">89</a>
4.03	PROBE1 POS MEAS	REAL	-32768...32768	*	See <a href="#">60.09</a>	2 ms	32	WP		<a href="#">89</a>
4.04	PROBE2 POS MEAS	REAL	-32768...32768	*	See <a href="#">60.09</a>	2 ms	32	WP		<a href="#">89</a>
4.05	CYCLIC POS ERR	REAL	-32768...32768	*	See <a href="#">60.09</a>	2 ms	32	WP		<a href="#">89</a>
4.06	POS REF	REAL	-32768...32768	*	See <a href="#">60.09</a>	500 $\mu$ s	32	WP		<a href="#">89</a>
4.07	PROF SPEED	REAL	-32768...32768	**	See <a href="#">60.10</a>	500 $\mu$ s	32	WP		<a href="#">89</a>
4.08	PROF ACC	REAL	0...32768	**	See <a href="#">60.10</a>	500 $\mu$ s	32	WP		<a href="#">89</a>
4.09	PROF DEC	REAL	-32768...0	**	See <a href="#">60.10</a>	500 $\mu$ s	32	WP		<a href="#">89</a>
4.10	PROF FILT TIME	REAL	0...1000	ms	1 = 1	500 $\mu$ s	16	WP		<a href="#">89</a>
4.11	POS STYLE	Pb	0...0x1FF	-	1 = 1	500 $\mu$ s	16	WP		<a href="#">89</a>
4.12	POS END SPEED	REAL	0...32768	**	See <a href="#">60.10</a>	500 $\mu$ s	32	WP		<a href="#">90</a>
4.13	POS REF IPO	REAL	-32768...32768	*	See <a href="#">60.09</a>	500 $\mu$ s	32	WP		<a href="#">90</a>
4.14	DIST TGT	REAL	-32768...32768	*	See <a href="#">60.09</a>	500 $\mu$ s	32	WP		<a href="#">90</a>
4.15	SYNC REF UNGEAR	REAL	-32768...32768	*	See <a href="#">60.09</a>	500 $\mu$ s	32	WP		<a href="#">90</a>
4.16	SYNC REF GEARED	REAL	-32768...32768	*	See <a href="#">60.09</a>	500 $\mu$ s	32	WP		<a href="#">90</a>
4.17	POS REF LIMITED	REAL	-32768...32768	*	See <a href="#">60.09</a>	250 $\mu$ s	32	WP		<a href="#">90</a>
4.18	SYNC ERROR	REAL	-32768...32768	*	See <a href="#">60.09</a>	250 $\mu$ s	32	WP		<a href="#">90</a>
4.19	POS ERROR	REAL	-32768...32768	*	See <a href="#">60.09</a>	250 $\mu$ s	32	WP		<a href="#">90</a>

Index	Name	Type	Range	Unit	FbEq	Update time	Data length	PT	Save PF	Page no.
4.20	SPEED FEED FWD	REAL	-32768...32768	rpm	1 = 100	250 µs	32	WP		<a href="#">90</a>
06	DRIVE STATUS									
6.01	STATUS WORD 1	Pb	0...65535	-	1 = 1	2 ms	16	WP		<a href="#">91</a>
6.02	STATUS WORD 2	Pb	0...65535	-	1 = 1	2 ms	16	WP		<a href="#">92</a>
6.03	SPEED CTRL STAT	Pb	0...31	-	1 = 1	250 µs	16	WP		<a href="#">93</a>
6.05	LIMIT WORD 1	Pb	0...255	-	1 = 1	250 µs	16	WP		<a href="#">93</a>
6.07	TORQ LIM STATUS	Pb	0...65535	-	1 = 1	250 µs	16	WP		<a href="#">94</a>
6.09	POS CTRL STATUS	Pb	0...65535	-	1 = 1	2 ms	16	WP		<a href="#">95</a>
6.10	POS CTRL STATUS2	Pb	0...65535	-	1 = 1	2 ms	16	WP		<a href="#">96</a>
6.11	POS CORR STATUS	Pb	0...65535	-	1 = 1	2 ms	16	WP		<a href="#">97</a>
6.12	OP MODE ACK	enum	0...11	-	1 = 1	2 ms	16	WP		<a href="#">97</a>
6.14	SUPERV STATUS	Pb	0...65535	-	1 = 1	2 ms	16	WP		<a href="#">98</a>
08	ALARMS & FAULTS									
8.01	ACTIVE FAULT	enum	0...65535	-	1 = 1	-	16	WP		<a href="#">99</a>
8.02	LAST FAULT	enum	0...65535	-	1 = 1	-	16	WP		<a href="#">99</a>
8.03	FAULT TIME HI	INT32	$-2^{31} \dots 2^{31} - 1$	days	1 = 1	-	32	WP		<a href="#">99</a>
8.04	FAULT TIME LO	INT32	$-2^{31} \dots 2^{31} - 1$	time	1 = 1	-	32	WP		<a href="#">99</a>
8.05	ALARM WORD 1	UINT32	-	-	1 = 1	2 ms	16	WP		<a href="#">99</a>
8.06	ALARM WORD 2	UINT32	-	-	1 = 1	2 ms	16	WP		<a href="#">100</a>
8.07	ALARM WORD 3	UINT32	-	-	1 = 1	2 ms	16	WP		<a href="#">100</a>
8.08	ALARM WORD 4	UINT32	-	-	1 = 1	2 ms	16	WP		<a href="#">100</a>
09	SYSTEM INFO									
9.01	DRIVE TYPE	INT32	0...65535	-	1 = 1	-	16	WP		<a href="#">101</a>
9.02	DRIVE RATING ID	INT32	0...65535	-	1 = 1	-	16	WP		<a href="#">101</a>
9.03	FIRMWARE ID	Pb	-	-	1 = 1	-	16	WP		<a href="#">101</a>
9.04	FIRMWARE VER	Pb	-	-	1 = 1	-	16	WP		<a href="#">101</a>
9.05	FIRMWARE PATCH	Pb	-	-	1 = 1	-	16	WP		<a href="#">101</a>
9.10	INT LOGIC VER	Pb	-	-	1 = 1	-	32	WP		<a href="#">101</a>
9.20	OPTION SLOT 1	INT32	0...18	-	1 = 1	-	16	WP		<a href="#">101</a>
9.21	OPTION SLOT 2	INT32	0...18	-	1 = 1	-	16	WP		<a href="#">101</a>
9.22	OPTION SLOT 3	INT32	0...18	-	1 = 1	-	16	WP		<a href="#">102</a>

## Parameter groups 10...99

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
10	START/STOP										
10.01	EXT1 START FUNC	enum	0...6	-	-	2 ms	16	1	WPD		<a href="#">104</a>
10.02	EXT1 START IN1	Bit pointer		-		2 ms	32	P.02.01.00	WPD		<a href="#">105</a>
10.03	EXT1 START IN2	Bit pointer		-		2 ms	32	C.False	WPD		<a href="#">105</a>
10.04	EXT2 START FUNC	enum	0...6	-	-	2 ms	16	1	WPD		<a href="#">105</a>
10.05	EXT2 START IN1	Bit pointer		-		2 ms	32	P.02.01.00	WPD		<a href="#">106</a>
10.06	EXT2 START IN2	Bit pointer		-		2 ms	32	C.False	WPD		<a href="#">106</a>
10.07	JOG1 START	Bit pointer		-		2 ms	32	C.False	WPD		<a href="#">106</a>
10.08	FAULT RESET SEL	Bit pointer		-		2 ms	32	P.02.01.02			<a href="#">106</a>
10.09	RUN ENABLE	Bit pointer		-		2 ms	32	C.True	WPD		<a href="#">106</a>
10.10	EM STOP OFF3	Bit pointer		-		2 ms	32	C.True	WPD		<a href="#">106</a>
10.11	EM STOP OFF1	Bit pointer		-		2 ms	32	C.True	WPD		<a href="#">107</a>
10.12	START INHIBIT	enum	0...1	-	1 = 1	2 ms	16	0			<a href="#">107</a>
10.13	FB CW USED	Val pointer		-		2 ms	32	P.02.12	WPD		<a href="#">107</a>
10.14	JOG2 START	Bit pointer		-		2 ms	32	C.False	WPD		<a href="#">107</a>
10.15	JOG ENABLE	Bit pointer		-		2 ms	32	C.False	WPD		<a href="#">107</a>
10.16	D2D CW USED	Val pointer		-		2 ms	32	P.02.17	WPD		<a href="#">107</a>
10.17	START ENABLE	Bit pointer		-		2 ms	32	C.True	WPD		<a href="#">108</a>
11	START/STOP MODE										
11.01	START MODE	enum	0...2	-	1 = 1	-	16	1	WPD		<a href="#">109</a>
11.02	DC MAGN TIME	UINT32	0...10000	ms	1 = 1	-	16	500	WPD		<a href="#">110</a>
11.03	STOP MODE	enum	1...2	-	1 = 1	2 ms	16	2			<a href="#">110</a>
11.04	DC HOLD SPEED	REAL	0...1000	rpm	1 = 10	2 ms	16	5			<a href="#">110</a>
11.05	DC HOLD CUR REF	UINT32	0...100	%	1 = 1	2 ms	16	30			<a href="#">110</a>
11.06	DC HOLD	enum	0...1	-	1 = 1	2 ms	16	0			<a href="#">111</a>
11.07	AUTOPHASING MODE	enum	0...2	-	1 = 1	-	16	1			<a href="#">111</a>
12	DIGITAL IO										
12.01	DIO1 CONF	enum	0...1	-	1 = 1	10 ms	16	0			<a href="#">112</a>
12.02	DIO2 CONF	enum	0...2	-	1 = 1	10 ms	16	0			<a href="#">113</a>
12.03	DIO3 CONF	enum	0...3	-	1 = 1	10 ms	16	0			<a href="#">113</a>
12.04	DIO1 OUT PTR	Bit pointer		-		10 ms	32	P.06.02.02			<a href="#">113</a>
12.05	DIO2 OUT PTR	Bit pointer		-		10 ms	32	P.06.02.03			<a href="#">113</a>
12.06	DIO3 OUT PTR	Bit pointer		-		10 ms	32	P.06.01.10			<a href="#">113</a>
12.07	DIO3 F OUT PTR	Val pointer		-		10 ms	32	P.01.01			<a href="#">113</a>
12.08	DIO3 F MAX	REAL	3...32768	Hz	1 = 1	10 ms	16	1000			<a href="#">113</a>
12.09	DIO3 F MIN	REAL	3...32768	Hz	1 = 1	10 ms	16	3			<a href="#">114</a>
12.10	DIO3 F MAX SCALE	REAL	0...32768	-	1 = 1	10 ms	16	1500			<a href="#">114</a>
12.11	DIO3 F MIN SCALE	REAL	0...32768	-	1 = 1	10 ms	16	0			<a href="#">114</a>
12.12	RO1 OUT PTR	Bit pointer		-		10 ms	32	P.03.15.00			<a href="#">114</a>
12.13	DI INVERT MASK	UINT32	0...63	-	1 = 1	10 ms	16	0			<a href="#">115</a>
12.14	DIO2 F MAX	REAL	3...32768	Hz	1 = 1	10 ms	16	1000			<a href="#">115</a>
12.15	DIO2 F MIN	REAL	3...32768	Hz	1 = 1	10 ms	16	3			<a href="#">115</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
12.16	DIO2 F MAX SCALE	REAL	-32768...32768	-	1 = 1	10 ms	16	1500			<a href="#">115</a>
12.17	DIO2 F MIN SCALE	REAL	-32768...32768	-	1 = 1	10 ms	16	0			<a href="#">115</a>
13	ANALOGUE INPUTS										
13.01	AI1 FILT TIME	REAL	0...30	s	1 = 1000	10 ms	16	0			<a href="#">116</a>
13.02	AI1 MAX	REAL	-11...11/ -22...22	V or mA	1 = 1000	10 ms	16	10			<a href="#">116</a>
13.03	AI1 MIN	REAL	-11...11/ -22...22	V or mA	1 = 1000	10 ms	16	-10			<a href="#">117</a>
13.04	AI1 MAX SCALE	REAL	-32768...32767	-	1 = 1000	10 ms	32	1500			<a href="#">117</a>
13.05	AI1 MIN SCALE	REAL	-32768...32767	-	1 = 1000	10 ms	32	-1500			<a href="#">117</a>
13.06	AI2 FILT TIME	REAL	0...30	s	1 = 1000	10 ms	16	0			<a href="#">117</a>
13.07	AI2 MAX	REAL	-11...11/ -22...22	V or mA	1 = 1000	10 ms	16	10			<a href="#">117</a>
13.08	AI2 MIN	REAL	-11...11/ -22...22	V or mA	1 = 1000	10 ms	16	-10			<a href="#">118</a>
13.09	AI2 MAX SCALE	REAL	-32768...32767	-	1 = 1000	10 ms	32	100			<a href="#">118</a>
13.10	AI2 MIN SCALE	REAL	-32768...32767	-	1 = 1000	10 ms	32	-100			<a href="#">118</a>
13.11	AITUNE	enum	0...4	-	1 = 1	10 ms	16	0			<a href="#">118</a>
13.12	AI SUPERVISION	enum	0...3	-	1 = 1	2 ms	16	0			<a href="#">119</a>
13.13	AI SUPERVIS ACT	UINT32	0000...1111	-	1 = 1	2 ms	32	0			<a href="#">119</a>
15	ANALOGUE OUTPUTS										
15.01	AO1 PTR	Val pointer		-		-	32	P.01.05			<a href="#">120</a>
15.02	AO1 FILT TIME	REAL	0...30	s	1 = 1000	10 ms	16	0.1			<a href="#">120</a>
15.03	AO1 MAX	REAL	0...22.7	mA	1 = 1000	10 ms	16	20			<a href="#">120</a>
15.04	AO1 MIN	REAL	0...22.7	mA	1 = 1000	10 ms	16	4			<a href="#">121</a>
15.05	AO1 MAX SCALE	REAL	-32768...32767	-	1 = 1000	10 ms	32	100			<a href="#">121</a>
15.06	AO1 MIN SCALE	REAL	-32768...32767	-	1 = 1000	10 ms	32	0			<a href="#">121</a>
15.07	AO2 PTR	Val pointer		-		-	32	P.01.02			<a href="#">121</a>
15.08	AO2 FILT TIME	REAL	0...30	s	1 = 1000	10 ms	16	0.1			<a href="#">121</a>
15.09	AO2 MAX	REAL	-10...10	V	1 = 1000	10 ms	16	10			<a href="#">122</a>
15.10	AO2 MIN	REAL	-10...10	V	1 = 1000	10 ms	16	-10			<a href="#">122</a>
15.11	AO2 MAX SCALE	REAL	-32768...32767	-	1 = 1000	10 ms	32	100			<a href="#">122</a>
15.12	AO2 MIN SCALE	REAL	-32768...32767	-	1 = 1000	10 ms	32	-100			<a href="#">122</a>
16	SYSTEM										
16.01	LOCAL LOCK	Bit pointer		-		2 ms	32	C.False			<a href="#">123</a>
16.02	PARAMETER LOCK	enum	0...2	-	1 = 1	2 ms	16	1			<a href="#">123</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
16.03	PASS CODE	INT32	0...2 <sup>31</sup> -1	-	1 = 1	-	32	0			<a href="#">123</a>
16.04	PARAM RESTORE	enum	0...2	-	1 = 1	-	16	0	WPD		<a href="#">123</a>
16.07	PARAM SAVE	enum	0...1	-	1 = 1	-	16	0			<a href="#">123</a>
16.09	USER SET SEL	enum	1...10	-	1 = 1	-	32	1	WPD		<a href="#">124</a>
16.10	USER SET LOG	Pb	0...0x7FF	-	1 = 1	-	32	0	WP		<a href="#">124</a>
16.11	USER IO SET LO	Bit pointer		-		-	32	C.False			<a href="#">125</a>
16.12	USER IO SET HI	Bit pointer		-		-	32	C.False			<a href="#">125</a>
16.13	TIME SOURCE PRIO	enum	0...8	-	1 = 1	-	16	0			<a href="#">125</a>
17	PANEL DISPLAY										
17.01	SIGNAL1 PARAM	INT32	00.00... 255.255	-	1 = 1		16	01.03			<a href="#">126</a>
17.02	SIGNAL2 PARAM	INT32	00.00... 255.255	-	1 = 1		16	01.04			<a href="#">126</a>
17.03	SIGNAL3 PARAM	INT32	00.00... 255.255	-	1 = 1		16	01.06			<a href="#">126</a>
20	LIMITS										
20.01	MAXIMUM SPEED	REAL	0...30000	rpm	1 = 1	2 ms	32	1500			<a href="#">127</a>
20.02	MINIMUM SPEED	REAL	-30000...0	rpm	1 = 1	2 ms	32	-1500			<a href="#">127</a>
20.03	POS SPEED ENA	Bit pointer		-		2 ms	32	C.True			<a href="#">128</a>
20.04	NEG SPEED ENA	Bit pointer		-		2 ms	32	C.True			<a href="#">128</a>
20.05	MAXIMUM CURRENT	REAL	0...30000	A	1 = 100	10 ms	32	-			<a href="#">128</a>
20.06	MAXIMUM TORQUE	REAL	0...1600	%	1 = 10	2 ms	16	300			<a href="#">128</a>
20.07	MINIMUM TORQUE	REAL	-1600...0	%	1 = 10	2 ms	16	-300			<a href="#">128</a>
20.08	THERM CURR LIM	enum	0...1	-	1 = 1	-	16	1			<a href="#">129</a>
22	SPEED FEEDBACK										
22.01	SPEED FB SEL	enum	0...2	-	1 = 1	10 ms	16	0			<a href="#">131</a>
22.02	SPEED ACT FTIME	REAL	0...10000	ms	1 = 1000	10 ms	32	3			<a href="#">131</a>
22.03	MOTOR GEAR MUL	INT32	-2 <sup>31</sup> ...2 <sup>31</sup> -1	-	1 = 1	10 ms	32	1			<a href="#">132</a>
22.04	MOTOR GEAR DIV	UINT32	1...2 <sup>31</sup> -1	-	1 = 1	10 ms	32	1			<a href="#">132</a>
22.05	ZERO SPEED LIMIT	REAL	0...30000	rpm	1 = 1000	2 ms	32	30			<a href="#">132</a>
22.06	ZERO SPEED DELAY	UINT32	0...30000	ms	1 = 1	2 ms	16	0			<a href="#">132</a>
22.07	ABOVE SPEED LIM	REAL	0...30000	rpm	1 = 1	2 ms	16	0			<a href="#">133</a>
22.08	SPEED TRIPMARGIN	REAL	0...10000	rpm	1 = 10	2 ms	32	500			<a href="#">133</a>
22.09	SPEED FB FAULT	enum	0...2	-	1 = 1	10 ms	16	0			<a href="#">133</a>
24	SPEED REF MOD										
24.01	SPEED REF1 SEL	enum	0...8	-	1 = 1	10 ms	16	1			<a href="#">135</a>
24.02	SPEED REF2 SEL	enum	0...8	-	1 = 1	10 ms	16	0			<a href="#">136</a>
24.03	SPEED REF1 IN	Val pointer		-		10 ms	32	P.03.01			<a href="#">136</a>
24.04	SPEED REF2 IN	Val pointer		-		10 ms	32	P.03.02			<a href="#">136</a>
24.05	SPEED REF 1/2SEL	Bit pointer		-		2 ms	32	C.False			<a href="#">136</a>
24.06	SPEED SHARE	REAL	-8...8	-	1 = 1000	2 ms	16	1			<a href="#">136</a>
24.07	SPEEDREF NEG ENA	Bit pointer		-		2 ms	32	C.False			<a href="#">137</a>
24.08	CONST SPEED	REAL	-30000.... 30000	rpm	1 = 1	2 ms	16	0			<a href="#">137</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
24.09	CONST SPEED ENA	Bit pointer		-		2 ms	32	C.False			<a href="#">137</a>
24.10	SPEED REF JOG1	REAL	-30000.... 30000	rpm	1 = 1	2 ms	16	0			<a href="#">137</a>
24.11	SPEED REF JOG2	REAL	-30000.... 30000	rpm	1 = 1	2 ms	16	0			<a href="#">137</a>
24.12	SPEED REFMIN ABS	REAL	0...30000	rpm	1 = 1	2 ms	16	0			<a href="#">137</a>
25	SPEED REF RAMP										
25.01	SPEED RAMP IN	Val pointer		-		10 ms	32	P.03.03	WP		<a href="#">139</a>
25.02	SPEED SCALING	REAL	0...30000	rpm	1 = 1	10 ms	16	1500			<a href="#">139</a>
25.03	ACC TIME	REAL	0...1800	s	1 = 1000	10 ms	32	1			<a href="#">139</a>
25.04	DEC TIME	REAL	0...1800	s	1 = 1000	10 ms	32	1			<a href="#">140</a>
25.05	SHAPE TIME ACC1	REAL	0...1000	s	1 = 1000	10 ms	32	0			<a href="#">140</a>
25.06	SHAPE TIME ACC2	REAL	0...1000	s	1 = 1000	10 ms	32	0			<a href="#">140</a>
25.07	SHAPE TIME DEC1	REAL	0...1000	s	1 = 1000	10 ms	32	0			<a href="#">140</a>
25.08	SHAPE TIME DEC2	REAL	0...1000	s	1 = 1000	10 ms	32	0			<a href="#">141</a>
25.09	ACC TIME JOGGING	REAL	0...1800	s	1 = 1000	10 ms	32	0			<a href="#">141</a>
25.10	DEC TIME JOGGING	REAL	0...1800	s	1 = 1000	10 ms	32	0			<a href="#">141</a>
25.11	EM STOP TIME	REAL	0...1800	s	1 = 1000	10 ms	32	1			<a href="#">141</a>
25.12	SPEEDREF BAL	REAL	-30000... 30000	rpm	1 = 1000	2 ms	32	0			<a href="#">141</a>
25.13	SPEEDREF BAL ENA	Bit pointer		-		2 ms	32	C.False			<a href="#">141</a>
26	SPEED ERROR										
26.01	SPEED ACT NCTRL	Val pointer		-		2 ms	32	P.01.01	WP		<a href="#">143</a>
26.02	SPEED REF NCTRL	Val pointer		-		2 ms	32	P.03.04	WP		<a href="#">143</a>
26.03	SPEED REF PCTRL	Val pointer		-		2 ms	32	P.04.01			<a href="#">143</a>
26.04	SPEED FEED PCTRL	Val pointer		-		2 ms	32	P.04.20			<a href="#">144</a>
26.05	SPEED STEP	REAL	-30000... 30000	rpm	1 = 100	2 ms	32	0			<a href="#">144</a>
26.06	SPD ERR FTIME	REAL	0...1000	ms	1 = 10	2 ms	16	0			<a href="#">144</a>
26.07	SPEED WINDOW	REAL	0...30000	rpm	1 = 1	250 µs	16	100			<a href="#">144</a>
26.08	ACC COMP DERTIME	REAL	0...600	s	1 = 100	2 ms	32	0			<a href="#">145</a>
26.09	ACC COMP FTIME	REAL	0...1000	ms	1 = 10	2 ms	16	8			<a href="#">145</a>
26.10	SPEED WIN FUNC	UINT32	0...2	-	1 = 1	250 µs	16	0			<a href="#">145</a>
26.11	SPEED WIN HI	REAL	0...3000	rpm	1 = 1	250 µs	16	0		x	<a href="#">146</a>
26.12	SPEED WIN LO	REAL	0...3000	rpm	1 = 1	250 µs	16	0		x	<a href="#">146</a>
28	SPEED CONTROL										
28.01	SPEED ERR NCTRL	Val pointer		-		2 ms	32	P.03.06	WP		<a href="#">148</a>
28.02	PROPORT GAIN	REAL	0...200	-	1 = 100	2 ms	16	10			<a href="#">148</a>
28.03	INTEGRATION TIME	REAL	0...600	s	1 = 1000	2 ms	32	0.5			<a href="#">149</a>
28.04	DERIVATION TIME	REAL	0...10	s	1 = 1000	2 ms	16	0			<a href="#">149</a>
28.05	DERIV FILT TIME	REAL	0...1000	ms	1 = 10	2 ms	16	8			<a href="#">150</a>
28.06	ACC COMPENSATION	Val pointer		-		2 ms	32	P.03.07	WP		<a href="#">150</a>
28.07	DROOPING RATE	REAL	0...100	%	1 = 100	2 ms	16	0			<a href="#">150</a>



Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
28.08	BAL REFERENCE	REAL	-1600... 1600	%	1 = 10	2 ms	16	0			<a href="#">150</a>
28.09	SPEEDCTRL BAL EN	Bit pointer		-		2 ms	32	C.False			<a href="#">150</a>
28.10	MIN TORQ SP CTRL	REAL	-1600... 1600	%	1 = 10	2 ms	16	-300			<a href="#">151</a>
28.11	MAX TORQ SP CTRL	REAL	-1600... 1600	%	1 = 10	2 ms	16	300			<a href="#">151</a>
28.12	PI ADAPT MAX SPD	REAL	0...30000	rpm	1 = 1	10 ms	16	0			<a href="#">151</a>
28.13	PI ADAPT MIN SPD	REAL	0...30000	rpm	1 = 1	10 ms	16	0			<a href="#">151</a>
28.14	P GAIN ADPT COEF	REAL	0...10	-	1 = 1000	10 ms	16	0			<a href="#">151</a>
28.15	I TIME ADPT COEF	REAL	0...10	-	1 = 1000	10 ms	16	0			<a href="#">152</a>
32	TORQUE REFERENCE										
32.01	TORQ REF1 SEL	enum	0...4	-	1 = 1	10 ms	16	2			<a href="#">153</a>
32.02	TORQ REF ADD SEL	enum	0...4	-	1 = 1	10 ms	16	0			<a href="#">154</a>
32.03	TORQ REF IN	Val pointer		-		250 µs	32	P.03.09			<a href="#">154</a>
32.04	MAXIMUM TORQ REF	REAL	0...1000	%	1 = 10	250 µs	16	300			<a href="#">155</a>
32.05	MINIMUM TORQ REF	REAL	-1000...0	%	1 = 10	250 µs	16	-300			<a href="#">155</a>
32.06	LOAD SHARE	REAL	-8...8	-	1 = 1000	250 µs	16	1			<a href="#">155</a>
32.07	TORQ RAMP UP	UINT32	0...60	s	1 = 1000	10 ms	32	0			<a href="#">155</a>
32.08	TORQ RAMP DOWN	UINT32	0...60	s	1 = 1000	10 ms	32	0			<a href="#">155</a>
33	SUPERVISION										
33.01	SUPERV1 FUNC	UINT32	0...4	-	1 = 1	2 ms	16	0			<a href="#">156</a>
33.02	SUPERV1 ACT	Val pointer		-		2 ms	32	P.01.01			<a href="#">156</a>
33.03	SUPERV1 LIM HI	REAL	-32768... 32768	-	1 = 100	2 ms	32	0			<a href="#">156</a>
33.04	SUPERV1 LIM LO	REAL	-32768... 32768	-	1 = 100	2 ms	32	0			<a href="#">157</a>
33.05	SUPERV2 FUNC	UINT32	0...4	-	1 = 1	2 ms	16	0			<a href="#">157</a>
33.06	SUPERV2 ACT	Val pointer		-		2 ms	32	P.01.04			<a href="#">157</a>
33.07	SUPERV2 LIM HI	REAL	-32768... 32768	-	1 = 100	2 ms	32	0			<a href="#">157</a>
33.08	SUPERV2 LIM LO	REAL	-32768... 32768	-	1 = 100	2 ms	32	0			<a href="#">157</a>
33.09	SUPERV3 FUNC	UINT32	0...4	-	1 = 1	2 ms	16	0			<a href="#">157</a>
33.10	SUPERV3 ACT	Val pointer		-		2 ms	32	P.01.06			<a href="#">158</a>
33.11	SUPERV3 LIM HI	REAL	-32768... 32768	-	1 = 100	2 ms	32	0			<a href="#">158</a>
33.12	SUPERV3 LIM LO	REAL	-32768... 32768	-	1 = 100	2 ms	32	0			<a href="#">158</a>
34	REFERENCE CTRL										
34.01	EXT1/EXT2 SEL	Bit pointer		-		2 ms	32	P.02.01.01			<a href="#">160</a>
34.02	EXT1 MODE 1/2SEL	Bit pointer		-		2 ms	32	C.False (P.02.01.05 for pos. appl.)			<a href="#">160</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
34.03	EXT1 CTRL MODE1	enum	1...5 (1...9 for pos. appl.)	-	1 = 1	2 ms	16	1			<a href="#">160</a>
34.04	EXT1 CTRL MODE2	enum	1...5 (1...9 for pos. appl.)	-	1 = 1	2 ms	16	2 (8 for pos. appl.)			<a href="#">161</a>
34.05	EXT2 CTRL MODE1	enum	1...5 (1...9 for pos. appl.)	-	1 = 1	2 ms	16	2 (6 for pos. appl.)			<a href="#">161</a>
34.07	LOCAL CTRL MODE	enum	1...2 (1...6 for pos. appl.)	-	1 = 1	2 ms	16	1	WPD		<a href="#">161</a>
34.08	TREF SPEED SRC	Val pointer		-		250 µs	32	P.03.08	WP		<a href="#">162</a>
34.09	TREF TORQ SRC	Val pointer		-		250 µs	32	P.03.11	WP		<a href="#">162</a>
34.10	TORQ REF ADD SRC	Val pointer		-		250 µs	32	P.03.12	WP		<a href="#">162</a>
35	MECH BRAKE CTRL										
35.01	BRAKE CONTROL	enum	0...2	-	1 = 1	2 ms	16	0	WPD		<a href="#">163</a>
35.02	BRAKE ACKNOWL	Bit pointer		-		2 ms	32	C.False	WPD		<a href="#">163</a>
35.03	BRAKE OPEN DELAY	UINT32	0...5	s	1 = 100	2 ms	16	0			<a href="#">164</a>
35.04	BRAKE CLOSE DLY	UINT32	0...60	s	1 = 100	2 ms	16	0			<a href="#">164</a>
35.05	BRAKE CLOSE SPD	REAL	0...1000	rpm	1 = 10	2 ms	16	100			<a href="#">164</a>
35.06	BRAKE OPEN TORQ	REAL	0...1000	%	1 = 10	2 ms	16	0			<a href="#">164</a>
35.07	BRAKE CLOSE REQ	Bit pointer		-		2 ms	32	C.False	WPD		<a href="#">164</a>
35.08	BRAKE OPEN HOLD	Bit pointer		-		2 ms	32	C.False	WPD		<a href="#">164</a>
35.09	BRAKE FAULT FUNC	enum	0...2	-	1 = 1	2 ms	16	0			<a href="#">164</a>
40	MOTOR CONTROL										
40.01	FLUX REF	REAL	0...200	%	1 = 1	10 ms	16	100			<a href="#">166</a>
40.02	SF REF	enum	0...16	kHz	1 = 1	-	16	4			<a href="#">166</a>
40.03	SLIP GAIN	REAL	0...200	%	1 = 1	-		100			<a href="#">167</a>
40.04	VOLTAGE RESERVE	REAL		V/%	1 = 1	-		-			<a href="#">167</a>
40.05	FLUX OPT	enum	0...1	-	1 = 1	-		-			<a href="#">167</a>
40.06	FORCE OPEN LOOP	enum	0...1	-	1 = 1	250 µs	16	0			<a href="#">167</a>
40.07	IR COMPENSATION	REAL24	0...50	%	1 = 100	2 ms	32	0			<a href="#">167</a>
45	MOT THERM PROT										
45.01	MOT TEMP PROT	enum	0...2	-	1 = 1	10 ms	16	0			<a href="#">169</a>
45.02	MOT TEMP SOURCE	enum	0...6	-	1 = 1	10 ms	16	0			<a href="#">169</a>
45.03	MOT TEMP ALM LIM	INT32	0...200	°C	1 = 1	-	16	90			<a href="#">170</a>
45.04	MOT TEMP FLT LIM	INT32	0...200	°C	1 = 1	-	16	110			<a href="#">170</a>
45.05	AMBIENT TEMP	INT32	-60...100	°C	1 = 1	-	16	20			<a href="#">171</a>
45.06	MOT LOAD CURVE	INT32	50...150	%	1 = 1	-	16	100			<a href="#">171</a>
45.07	ZERO SPEED LOAD	INT32	50...150	%	1 = 1	-	16	100			<a href="#">171</a>
45.08	BREAK POINT	INT32	0.01...500	Hz	1 = 100	-	16	45			<a href="#">171</a>
45.09	MOTNOMTEMPRISE	INT32	0...300	°C	1 = 1	-	16	80			<a href="#">172</a>
45.10	MOT THERM TIME	INT32	100...10000	s	1 = 1	-	16	256			<a href="#">172</a>
46	FAULT FUNCTIONS										
46.01	EXTERNAL FAULT	Bit pointer		-		2 ms	32	C.True			<a href="#">173</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
46.02	SPEED REF SAFE	REAL	-30000...30000	rpm	1 = 1	2 ms	16	0			<a href="#">173</a>
46.03	LOCAL CTRL LOSS	enum	0...3	-	1 = 1	-	16	1			<a href="#">173</a>
46.04	MOT PHASE LOSS	enum	0...1	-	1 = 1	2 ms	16	1			<a href="#">174</a>
46.05	EARTH FAULT	enum	0...2	-	1 = 1	-	16	2			<a href="#">174</a>
46.06	SUPPL PHS LOSS	enum	0...1	-	1 = 1	2 ms	16	1			<a href="#">174</a>
46.07	STO DIAGNOSTIC	enum	1...3	-	1 = 1	10 ms	16	1			<a href="#">174</a>
46.08	CROSS CONNECTION	enum	0...1	-	1 = 1	-	16	1			<a href="#">175</a>
47	VOLTAGE CTRL										
47.01	OVERVOLTAGE CTRL	enum	0...1	-	1 = 1	10 ms	16	1			<a href="#">176</a>
47.02	UNDERVOLT CTRL	enum	0...1	-	1 = 1	10 ms	16	1			<a href="#">176</a>
47.03	SUPPLVOLT-AUTO-ID	enum	0...1	-	1 = 1	10 ms	16	1			<a href="#">176</a>
47.04	SUPPLY VOLTAGE	REAL	0...1000	V	1 = 10	2 ms	16	400			<a href="#">177</a>
48	BRAKE CHOPPER										
48.01	BC ENABLE	enum	0...2	-	1 = 1	-	16	0			<a href="#">178</a>
48.02	BC RUN-TIME ENA	Bit pointer		-		2 ms	32	C.True			<a href="#">178</a>
48.03	BR THERM TIMECONST	REAL24	0...10000	s	1 = 1	-	32	0			<a href="#">178</a>
48.04	BR POWER MAX CNT	REAL24	0...10000	kW	1 = 10000	-	32	0			<a href="#">178</a>
48.05	R BR	REAL24	0.1...1000	ohm	1 = 10000	-	32	-			<a href="#">179</a>
48.06	BR TEMP FAULT LIM	REAL24	0...150	%	1 = 1	-	16	105			<a href="#">179</a>
48.07	BR TEMP ALARM LIM	REAL24	0...150	%	1 = 1	-	16	95			<a href="#">179</a>
50	FIELD BUS										
50.01	FBA ENABLE	enum	0...1	-	1 = 1	-	16	0			<a href="#">180</a>
50.02	COMM LOSS FUNC	enum	0...3	-	1 = 1	-	16	0			<a href="#">180</a>
50.03	COMM LOSS T OUT	UINT32	0.3...6553.5	s	1 = 10	-	16	0.3			<a href="#">181</a>
50.04	FBA REF1 MODESEL	enum	0...2 (0...4 for pos. appl.)	-	1 = 1	10 ms	16	2			<a href="#">181</a>
50.05	FBA REF2 MODESEL	enum	0...2 (0...4 for pos. appl.)	-	1 = 1	10 ms	16	3			<a href="#">181</a>
50.06	FBA ACT1 TR SRC	Val pointer		-		10 ms	32	P.01.01			<a href="#">182</a>
50.07	FBA ACT2 TR SRC	Val pointer		-		10 ms	32	P.01.06			<a href="#">182</a>
50.08	FBA SW B12 SRC	Bit pointer		-		500 µs	32	C.False			<a href="#">182</a>
50.09	FBA SW B13 SRC	Bit pointer		-		500 µs	32	C.False			<a href="#">182</a>
50.10	FBA SW B14 SRC	Bit pointer		-		500 µs	32	C.False			<a href="#">182</a>
50.11	FBA SW B15 SRC	Bit pointer		-		500 µs	32	C.False			<a href="#">182</a>
51	FBA SETTINGS										
51.01	FBA TYPE	UINT32	0...65536	-	1 = 1		16	0			<a href="#">183</a>
51.02	FBA PAR2	UINT32	0...65536	-	1 = 1		16	0		x	<a href="#">183</a>
...	...	...	...	...	...		...	...			
51.26	FBA PAR26	UINT32	0...65536	-	1 = 1		16	0		x	<a href="#">183</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
51.27	FBA PAR REFRESH	UINT32	0...1	-	1 = 1		16	0	WPD	x	<a href="#">183</a>
51.28	PAR TABLE VER	UINT32	0...65536	-	1 = 1		16	0		x	<a href="#">183</a>
51.29	DRIVE TYPE CODE	UINT32	0...65536	-	1 = 1		16	0		x	<a href="#">184</a>
51.30	MAPPING FILE VER	UINT32	0...65536	-	1 = 1		16	0		x	<a href="#">184</a>
51.31	D2FBA COMM STA	UINT32	0...6	-	1 = 1		16	0		x	<a href="#">184</a>
51.32	FBA COMM SW VER	UINT32	0...65536	-	1 = 1		16	0		x	<a href="#">184</a>
51.33	FBA APPL SW VER	UINT32	0...65536	-	1 = 1		16	0		x	<a href="#">184</a>
52	FBA DATA IN										
52.01	FBA DATA IN1	UINT32	0...9999	-	1 = 1		16	0		x	<a href="#">185</a>
...	...	...	...	...	...		...	...			-
52.12	FBA DATA IN12	UINT32	0...9999	-	1 = 1		16	0		x	<a href="#">185</a>
53	FBA DATA OUT										
53.01	FBA DATA OUT1	UINT32	0...9999	-	1 = 1		16	0		x	<a href="#">186</a>
...	...	...	...	...	...		...	...			
53.12	FBA DATA OUT12	UINT32	0...9999	-	1 = 1		16	0		x	<a href="#">186</a>
57	D2D COMMUNICATION										
57.01	LINK MODE	UINT32	0...2	-	1 = 1	10 ms	16	0	WPD		<a href="#">187</a>
57.02	COMM LOSS FUNC	UINT32	0...2	-	1 = 1	10 ms	16	1			<a href="#">187</a>
57.03	NODE ADDRESS	UINT32	1...62	-	1 = 1	10 ms	16	1	WPD		<a href="#">188</a>
57.04	FOLLOWER MASK 1	UINT32	0...2 <sup>31</sup>	-	1 = 1	10 ms	32	0	WPD		<a href="#">188</a>
57.05	FOLLOWER MASK 2	UINT32	0...2 <sup>31</sup>	-	1 = 1	10 ms	32	0	WPD		<a href="#">188</a>
57.06	REF 1 SRC	Val pointer		-		10 ms	32	P.03.04			<a href="#">188</a>
57.07	REF 2 SRC	Val pointer		-		10 ms	32	P.03.13			<a href="#">188</a>
57.08	FOLLOWER CW SRC	Val pointer		-		10 ms	32	P.02.18			<a href="#">188</a>
57.09	KERNEL SYNC MODE	enum	0...3	-	1 = 1	10 ms	16	0	WPD		<a href="#">188</a>
57.10	KERNEL SYNC OFFS	REAL	-4999...5000	ms	1 = 1	10 ms	16	0	WPD		<a href="#">189</a>
57.11	REF 1 MSG TYPE	UINT32	0...1	-	1 = 1	10 ms	16	0			<a href="#">189</a>
57.12	REF1 MC GROUP	UINT32	0...62	-	1 = 1	10 ms	16	0			<a href="#">189</a>
57.13	NEXT REF1 MC GRP	UINT32	0...62	-	1 = 1	10 ms	16	0			<a href="#">189</a>
57.14	NR REF1 MC GRPS	UINT32	1...62	-	1 = 1	10 ms	16	1			<a href="#">190</a>
57.15	D2D COMM PORT	UINT32	0...3	-	1 = 1		16	0	WPD		<a href="#">190</a>
60	POS FEEDBACK										
60.01	POS ACT SEL	enum	0...1	-	1 = 1	10 ms	16	0			<a href="#">192</a>
60.02	POS AXIS MODE	enum	0...1	-	1 = 1	2 ms	16	0	WPD		<a href="#">192</a>
60.03	LOAD GEAR MUL	INT32	-2 <sup>31</sup> ...2 <sup>31</sup> - 1	-	1 = 1	2 ms	32	1			<a href="#">193</a>
60.04	LOAD GEAR DIV	UINT32	1...2 <sup>31</sup> - 1	-	1 = 1	2 ms	32	1			<a href="#">193</a>
60.05	POS UNIT	enum	0...3	-	1 = 1	10 ms	16	0			<a href="#">193</a>
60.06	FEED CONST MUL	UINT32	1...2 <sup>31</sup> - 1	-	1 = 1	10 ms	32	1			<a href="#">193</a>
60.07	FEED CONST DEN	UINT32	1...2 <sup>31</sup> - 1	-	1 = 1	10 ms	32	1			<a href="#">193</a>
60.08	POS2INT SCALE	enum	1...1000000	-	1 = 1	10 ms	32	1000			<a href="#">194</a>
60.09	POS RESOLUTION	enum	10...24	-	1 = 1	10 ms	16	16	WPD		<a href="#">194</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
60.10	POS SPEED UNIT	enum	0...2	-	1 = 1	10 ms	16	0			<a href="#">194</a>
60.11	POS SPEED2INT	enum	1...1000000	-	1 = 1	10 ms	32	1000			<a href="#">194</a>
60.12	POS SPEED SCALE	REAL	0...32768	-	1 = 10000	10 ms	32	1			<a href="#">194</a>
60.13	MAXIMUM POS	REAL	0...32768	*	See <a href="#">60.09</a>	2 ms	32	32768			<a href="#">195</a>
60.14	MINIMUM POS	REAL	-32768...0	*	See <a href="#">60.09</a>	2 ms	32	-32768			<a href="#">195</a>
60.15	POS THRESHOLD	REAL	-32768...32768	*	See <a href="#">60.09</a>	2 ms	32	0			<a href="#">195</a>
62	POS CORRECTION										
62.01	HOMING METHOD	UINT32	0...35	-	1 = 1	10 ms	16	0			<a href="#">196</a>
62.02	HOMING STARTFUNC	enum	0...1	-	1 = 1	10 ms	16	0			<a href="#">197</a>
62.03	HOMING START	Bit pointer	-	-		10 ms	32	P.02.01.05			<a href="#">197</a>
62.04	HOME SWITCH TRIG	enum	0...3	-	1 = 1	10 ms	16	0			<a href="#">197</a>
62.05	NEG LIMIT SWITCH	Bit pointer	-	-		10 ms	32	C.False			<a href="#">197</a>
62.06	POS LIMIT SWITCH	Bit pointer	-	-		10 ms	32	C.False			<a href="#">197</a>
62.07	HOMING SPEEDREF1	REAL	0...32768	**	See <a href="#">60.10</a>	10 ms	32	1			<a href="#">197</a>
62.08	HOMING SPEEDREF2	REAL	0...32768	**	See <a href="#">60.10</a>	10 ms	32	0.25			<a href="#">197</a>
62.09	HOME POSITION	REAL	-32768...32768	*	See <a href="#">60.09</a>	10 ms	32	0			<a href="#">198</a>
62.10	HOME POS OFFSET	REAL	-32768...32768	*	See <a href="#">60.09</a>	10 ms	32	0			<a href="#">198</a>
62.11	PRESET MODE	enum	0...3	-	1 = 1	10 ms	16	0			<a href="#">198</a>
62.12	PRESET TRIG	enum	0...12	-	1 = 1	10 ms	16	0			<a href="#">198</a>
62.13	PRESET POSITION	REAL	-32768...32768	*	See <a href="#">60.09</a>	10 ms	32	0			<a href="#">199</a>
62.14	CYCLIC CORR MODE	enum	0...5	-	1 = 1	10 ms	16	0			<a href="#">199</a>
62.15	TRIG PROBE1	enum	0...28	-	1 = 1	10 ms	16	0			<a href="#">200</a>
62.16	PROBE1 POS	REAL	-32768...32768	*	See <a href="#">60.09</a>	10 ms	32	0			<a href="#">201</a>
62.17	TRIG PROBE2	enum	0...28	-	1 = 1	10 ms	16	0			<a href="#">201</a>
62.18	PROBE2 POS	REAL	-32768...32768	*	See <a href="#">60.09</a>	10 ms	32	0			<a href="#">201</a>
62.19	MAX CORRECTION	REAL	0...32768	*	See <a href="#">60.09</a>	10 ms	32	50			<a href="#">201</a>
62.20	POS ACT OFFSET	REAL	-32768...32768	*	See <a href="#">60.09</a>		32	0			<a href="#">202</a>
62.21	POS COR MODE	enum	0...1	-	1 = 1	10 ms	16	0			<a href="#">202</a>
65	PROFILE REFERENCE										
65.01	POS REFSOURCE	enum	0...2	-	1 = 1	2 ms	16	0			<a href="#">204</a>
65.02	PROF SET SEL	Bit pointer	-	-	-	2 ms	32	P.02.01.04			<a href="#">205</a>
65.03	POS START 1	Bit pointer	-	-	-	2 ms	32	P.02.01.03			<a href="#">205</a>
65.04	POS REF 1 SEL	enum	0...8	-	1 = 1	2 ms	16	7			<a href="#">205</a>
65.05	POS SPEED 1	REAL	0...32768	**	See <a href="#">60.10</a>	2 ms	32	5			<a href="#">205</a>
65.06	PROF ACC 1	REAL	0...32768	**	See <a href="#">60.10</a>	2 ms	32	10			<a href="#">205</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
65.07	PROF DEC 1	REAL	-32768...0	**	See 60.10	2 ms	32	-10			205
65.08	PROF FILT TIME 1	REAL	0...1000	ms	1 = 1	2 ms	16	0			205
65.09	POS STYLE 1	UINT32	0...0xFFFF	-	1 = 1	2 ms	16	20			206
65.10	POS END SPEED 1	REAL	-32768...32768	**	See 60.10	2 ms	32	0			208
65.11	POS START 2	Bit pointer	-	-	-	2 ms	32	P.02.01.03			208
65.12	POS REF 2 SEL	enum	0...8	-	1 = 1	2 ms	32	8			208
65.13	POS SPEED 2	REAL	0...32768	**	See 60.10	2 ms	32	5			208
65.14	PROF ACC 2	REAL	0...32768	**	See 60.10	2 ms	32	10			208
65.15	PROF DEC 2	REAL	-32768...0	**	See 60.10	2 ms	32	-10			208
65.16	PROF FILT TIME 2	REAL	0...1000	ms	1 = 1	2 ms	16	0			208
65.17	POS STYLE 2	UINT32	0...0xFFFF	-	1 = 1	2 ms	16	20			208
65.18	POS END SPEED 2	REAL	-32768...32768	**	See 60.10	2 ms	32	0			209
65.19	POS REF 1	REAL	-32760...32760	*	See 60.09	2 ms	32	0			209
65.20	POS REF 2	REAL	-32760...32760	*	See 60.09	2 ms	32	0			209
65.21	POS REF ADD SEL	enum	0...8	-	1 = 1	2 ms	16	0			209
65.22	PROF VEL REF SEL	enum	0...7	-	1 = 1	2 ms	16	7			209
65.23	PROF VEL REF1	REAL	-32768...32768	**	See 60.10	500 µs	32	0			210
65.24	POS START MODE	enum	0...1	-	1 = 1	2 ms	16	0			210
66	PROFILE GENERATOR										
66.01	PROF GENERAT IN	Val pointer	-	-	-	10 ms	32	P.04.06	WP		212
66.02	PROF SPEED MUL	REAL	0...1	-	1 = 1000	500 µs	32	1			212
66.03	PROF ACC WEAK SP	REAL	0...32768	**	See 60.10	10 ms	32	32768			213
66.04	POS WIN	REAL	0...32768	*	See 60.09	500 µs	32	0.1			213
66.05	POS ENABLE	Bit pointer	-	-	-	500 µs	32	C.True			213
67	SYNC REF SEL										
67.01	SYNC REF SEL	enum	0...9	-	1 = 1	10 ms	16	8			214
67.02	SPEED REF VIRT M	enum	0...8	-	1 = 1	10 ms	16	0			215
67.03	INTERPOLAT MODE	enum	0...1	-	1 = 1	10 ms	16	0			215
67.04	INTERPOLAT CYCLE	UINT32	1...10000	ms	1 = 1	10 ms	16	1			216
68	SYNC REF MOD										
68.01	SYNC GEAR IN	Val pointer	-	-	-	10 ms	32	P.04.15			217
68.02	SYNC GEAR MUL	INT32	$-2^{31} \dots 2^{31} - 1$	-	1 = 1	10 ms	32	1			218
68.03	SYNC GEAR DIV	UINT32	$1 \dots 2^{31} - 1$	-	1 = 1	10 ms	32	1			218
68.04	SYNC GEAR ADD	REAL	-30...30	-	1 = 1000	500 µs	32	1			218
68.05	SYNC REF FTIME	REAL	0...1000	ms	1 = 1	10 ms	16	0			218
68.06	SYNCFILT DLY LIM	REAL	0...0.4	*	See 60.09	10 ms	32	0			218
68.07	SYNCHRON MODE	enum	0...1	-	1 = 1	2 ms	16	1			218
70	POS REF LIMIT										
70.01	POS REF PROFILE	Val pointer	-	-	-	500 µs	32	P.04.13			220

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
70.02	POS REF SYNC	Val pointer	-	-	-	500 µs	32	P.04.16			<a href="#">220</a>
70.03	POS REF ENA	Bit pointer	-	-	-	500 µs	32	C.True			<a href="#">220</a>
70.04	POS SPEED LIM	REAL	0...32768	**	See <a href="#">60.10</a>	2 ms	32	32768			<a href="#">220</a>
70.05	POS ACCEL LIM	REAL	0...32768	**	See <a href="#">60.10</a>	2 ms	32	32768			<a href="#">220</a>
70.06	POS DECEL LIM	REAL	-32768...0	**	See <a href="#">60.10</a>	2 ms	32	-32768			<a href="#">220</a>
70.07	SYNC ERR LIM	REAL	0...32768	*	See <a href="#">60.09</a>	500 µs	32	32768			<a href="#">220</a>
70.08	SYNC VEL WINDOW	REAL	0...32768	**	See <a href="#">60.10</a>	2 ms	32	2			<a href="#">220</a>
71	POSITION CTRL										
71.01	POS ACT IN	Val pointer	-	-	-	500 µs	32	P.01.12	WP		<a href="#">222</a>
71.02	POS CTRL REF IN	Val pointer	-	-	-	500 µs	32	P.04.17			<a href="#">222</a>
71.03	POS CTRL GAIN	REAL	0...10000	1/s	1 = 100	500 µs	32	10			<a href="#">222</a>
71.04	P CTRL FEED GAIN	REAL	0...10	-	1 = 100	500 µs	16	1			<a href="#">222</a>
71.05	POS CTRL DELAY	UINT32	0...15	-	1 = 1	2 ms	16	0			<a href="#">223</a>
71.06	POS ERR LIM	REAL	0...32768	*	See <a href="#">60.09</a>	500 µs	32	32768			<a href="#">223</a>
71.07	GEAR RATIO MUL	INT32	$-2^{31} \dots 2^{31} - 1$	-	1 = 1	10 ms	32	1			<a href="#">223</a>
71.08	GEAR RATIO DIV	UINT32	$1 \dots 2^{31} - 1$	-	1 = 1	10 ms	32	1			<a href="#">223</a>
71.09	FOLLOW ERR WIN	REAL	0...32768	*	See <a href="#">60.09</a>	500 µs	32	32768			<a href="#">223</a>
90	ENC MODULE SEL										
90.01	ENCODER 1 SEL	enum	0...6	-	1 = 1		16	0			<a href="#">225</a>
90.02	ENCODER 2 SEL	enum	0...6	-	1 = 1		16	0			<a href="#">226</a>
90.03	EMUL MODE SEL	enum	0...9	-	1 = 1		16	0			<a href="#">226</a>
90.04	TTL ECHO SEL	enum	0...4	-	1 = 1		16	0			<a href="#">227</a>
90.05	ENC CABLE FAULT	UINT32	0...2	-	1 = 1		16	1			<a href="#">227</a>
90.10	ENC PAR REFRESH	UINT32	0...1	-	1 = 1		16	0	WPD		<a href="#">228</a>
91	ABSOL ENC CONF										
91.01	SINE COSINE NR	UINT32	0...65535	-	1 = 1		16	0			<a href="#">229</a>
91.02	ABS ENC INTERF	UINT32	0...4	-	1 = 1		16	0			<a href="#">230</a>
91.03	REV COUNT BITS	UINT32	0...32	-	1 = 1		16	0			<a href="#">230</a>
91.04	POS DATA BITS	UINT32	0...32	-	1 = 1		16	0			<a href="#">230</a>
91.05	REFMARK ENA	UINT32	0...1	-	1 = 1		16	0			<a href="#">230</a>
91.10	HIPERFACE PARITY	UINT32	0...1	-	1 = 1		16	0			<a href="#">230</a>
91.11	HIPERF BAUDRATE	UINT32	0...3	-	1 = 1		16	1			<a href="#">230</a>
91.12	HIPERF NODE ADDR	UINT32	0...255	-	1 = 1		16	64			<a href="#">231</a>
91.20	SSI CLOCK CYCLES	UINT32	2...127	-	1 = 1		16	2			<a href="#">231</a>
91.21	SSI POSITION MSB	UINT32	1...126	-	1 = 1		16	1			<a href="#">231</a>
91.22	SSI REVOL MSB	UINT32	1...126	-	1 = 1		16	1			<a href="#">231</a>
91.23	SSI DATA FORMAT	UINT32	0...1	-	1 = 1		16	0			<a href="#">231</a>
91.24	SSI BAUD RATE	UINT32	0...5	-	1 = 1		16	2			<a href="#">231</a>
91.25	SSI MODE	UINT32	0...1	-	1 = 1		16	0			<a href="#">232</a>
91.26	SSI TRANSMIT CYC	UINT32	0...5	-	1 = 1		16	1			<a href="#">232</a>
91.27	SSI ZERO PHASE	UINT32	0...3	-	1 = 1		16	0			<a href="#">232</a>
91.30	ENDAT MODE	UINT32	0...1	-	1 = 1		16	0			<a href="#">232</a>
91.31	ENDAT MAX CALC	UINT32	0...3	-	1 = 1		16	3			<a href="#">233</a>

Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
92	RESOLVER CONF										
92.01	RESOLV POLEPAIRS	UINT32	1...32	-	1 = 1		16	1			<a href="#">234</a>
92.02	EXC SIGNAL AMPL	UINT32	4...12	Vrms	1 = 10		16	4			<a href="#">234</a>
92.03	EXC SIGNAL FREQ	UINT32	1...20	kHz	1 = 1		16	1			<a href="#">234</a>
93	PULSE ENC CONF										
93.01	ENC1 PULSE NR	UINT32	0...65535	-	1 = 1		16	0			<a href="#">235</a>
93.02	ENC1 TYPE	enum	0...1	-	1 = 1		16	0			<a href="#">235</a>
93.03	ENC1 SP CALCMODE	enum	0...5	-	1 = 1		16	4			<a href="#">235</a>
93.04	ENC1 POS EST ENA	enum	0...1	-	1 = 1		16	1			<a href="#">236</a>
93.05	ENC1 SP EST ENA	enum	0...1	-	1 = 1		16	0			<a href="#">236</a>
93.06	ENC1 OSC LIM	enum	0...3	-	1 = 1		16	0			<a href="#">236</a>
93.11	ENC2 PULSE NR	UINT32	0...65535	-	1 = 1		16	0			<a href="#">237</a>
93.12	ENC2 TYPE	enum	0...1	-	1 = 1		16	0			<a href="#">237</a>
93.13	ENC2 SP CALCMODE	enum	0...5	-	1 = 1		16	4			<a href="#">237</a>
93.14	ENC2 POS EST ENA	enum	0...1	-	1 = 1		16	1			<a href="#">237</a>
93.15	ENC2 SP EST ENA	enum	0...1	-	1 = 1		16	0			<a href="#">237</a>
93.16	ENC2 OSC LIM	enum	0...3	-	1 = 1		16	0			<a href="#">237</a>
93.21	EMUL PULSE NR	UINT32	0...65535	-	1 = 1		16	0			<a href="#">237</a>
93.22	EMUL POS REF	Val pointer		-			32	P.01.12 (P.04.17 for pos. appl.)			<a href="#">237</a>
95	HW CONFIGURATION										
95.01	CTRL UNIT SUPPLY	enum	0...1	-	1 = 1		16	0			<a href="#">238</a>
95.02	EXTERNAL CHOKE	enum	0...1	-	1 = 1		16	0			<a href="#">238</a>
97	USER MOTOR PAR										
97.01	USE GIVEN PARAMS	enum	0...1	-	1 = 1		16	0	WPD		<a href="#">239</a>
97.02	RS USER	REAL24	0...0.5	p.u.	1 = 100000		32	0			<a href="#">239</a>
97.03	RR USER	REAL24	0...0.5	p.u.	1 = 100000		32	0			<a href="#">239</a>
97.04	LM USER	REAL24	0...10	p.u.	1 = 100000		32	0			<a href="#">239</a>
97.05	SIGMAL USER	REAL24	0...1	p.u.	1 = 100000		32	0			<a href="#">239</a>
97.06	LD USER	REAL24	0...10	p.u.	1 = 100000		32	0			<a href="#">239</a>
97.07	LQ USER	REAL24	0...10	p.u.	1 = 100000		32	0			<a href="#">240</a>
97.08	PM FLUX USER	REAL24	0...2	p.u.	1 = 100000		32	0			<a href="#">240</a>
97.09	RS USER SI	REAL24	0...100	ohm	1 = 100000		32	0			<a href="#">240</a>
97.10	RR USER SI	REAL24	0...100	ohm	1 = 100000		32	0			<a href="#">240</a>
97.11	LM USER SI	REAL24	0...100000	mH	1 = 100000		32	0			<a href="#">240</a>
97.12	SIGL USER SI	REAL24	0...100000	mH	1 = 100000		32	0			<a href="#">240</a>
97.13	LD USER SI	REAL24	0...100000	mH	1 = 100000		32	0			<a href="#">240</a>
97.14	LQ USER SI	REAL24	0...100000	mH	1 = 100000		32	0			<a href="#">240</a>
98	MOTOR CALC VALUES										
98.01	TORQ NOM SCALE	UINT32	0...2147483	Nm	1 = 1000		32	0	WP		<a href="#">241</a>



Index	Parameter	Type	Range	Unit	FbEq	Update time	Data len.	Def	PT	Save PF	Page no.
98.02	POLEPAIRS	UINT32	0...1000	-	1 = 1		16	0	WP		<a href="#">241</a>
99	START-UP DATA										
99.01	LANGUAGE	enum		-	1 = 1		16				<a href="#">242</a>
99.04	MOTOR TYPE	enum	0...1	-	1 = 1		16	0	WPD		<a href="#">242</a>
99.05	MOTOR CTRL MODE	enum	0...1	-	1 = 1		16	0			<a href="#">243</a>
99.06	MOT NOM CURRENT	REAL	0...6400	A	1 = 10		32	0	WPD		<a href="#">243</a>
99.07	MOT NOM VOLTAGE	REAL	120...960	V	1 = 10		32	0	WPD		<a href="#">243</a>
99.08	MOT NOM FREQ	REAL	0...500	Hz	1 = 10		32	0	WPD		<a href="#">244</a>
99.09	MOT NOM SPEED	REAL	0...30000	rpm	1 = 1		32	0	WPD		<a href="#">244</a>
99.10	MOT NOM POWER	REAL	0...10000	kW	1 = 100		32	0	WPD		<a href="#">244</a>
99.11	MOT NOM COSFII	REAL24	0...1	-	1 = 100		32	0	WPD		<a href="#">244</a>
99.12	MOT NOM TORQUE	INT32	0...2147483	Nm	1 = 1000		32	0	WPD		<a href="#">244</a>
99.13	IDRUN MODE	enum	0...5	-	1 = 1		16	0	WPD		<a href="#">245</a>

\* The unit depends on parameter [60.05](#) POS UNIT selection.

\*\* The unit depends on parameter [60.05](#) POS UNIT and [60.10](#) POS SPEED UNIT selections.



# Fault tracing

---

## What this chapter contains

The chapter lists all alarm and fault messages including the possible cause and corrective actions.

## Safety



**WARNING!** Only qualified electricians are allowed to maintain the drive. The *Safety Instructions* on the first pages of the appropriate hardware manual must be read before you start working with the drive.

---

## Alarm and fault indications


An alarm or a fault message indicates abnormal drive status. Most alarm and fault causes can be identified and corrected using this information. If not, an ABB representative should be contacted.

The four-digit code number in brackets after the message is for the fieldbus communication.

The alarm/fault code is displayed on the 7-segment display of the drive. The following table describes the indications given by the 7-segment display.

Display	Meaning
"E-" followed by error code	System error. See appropriate drive hardware manual.
"A-" followed by error code	Alarm. See section <a href="#">Alarm messages generated by the drive</a> on page 269.
"F-" followed by error code	Fault. See section <a href="#">Fault messages generated by the drive</a> on page 276.

## How to reset

The drive can be reset either by pressing the reset key on the PC tool () or control panel (**RESET**) or switching the supply voltage off for a while. When the fault has been removed, the motor can be restarted.

A fault can also be reset from an external source by parameter [10.08 FAULT RESET SEL](#).

## Fault history

When fault is detected, it is stored in the fault logger with a time stamp. The fault history stores information on the 16 latest faults of the drive. Three of the latest faults are stored at the beginning of a power switch off.

Signals [8.01 ACTIVE FAULT](#) and [8.02 LAST FAULT](#) store the fault codes of the most recent faults.

Alarms can be monitored via alarm words [8.05 ALARM WORD 1](#) ... [8.08 ALARM WORD 4](#). Alarm information is lost at power switch off or fault reset.

## Alarm messages generated by the drive

Code	Alarm (fieldbus code)	Cause	What to do
2000	BRAKE START TORQUE (0x7185) Programmable fault: <a href="#">35.09 BRAKE FAULT FUNC</a>	Mechanical brake alarm. Alarm is activated if required motor starting torque, <a href="#">35.06 BRAKE OPEN TORQ</a> , is not achieved.	Check brake open torque setting, parameter <a href="#">35.06</a> . Check drive torque and current limits. See firmware block <a href="#">LIMITS</a> on page <a href="#">127</a> .
2001	BRAKE NOT CLOSED (0x7186) Programmable fault: <a href="#">35.09 BRAKE FAULT FUNC</a>	Mechanical brake control alarm. Alarm is activated e.g. if brake acknowledgement is not as expected during brake closing.	Check mechanical brake connection. Check mechanical brake settings, parameters <a href="#">35.01...35.09</a> . To determine whether problem is with acknowledgement signal or brake: Check if brake is closed or open.
2002	BRAKE NOT OPEN (0x7187) Programmable fault: <a href="#">35.09 BRAKE FAULT FUNC</a>	Mechanical brake control alarm. Alarm is activated e.g. if brake acknowledgement is not as expected during brake opening.	Check mechanical brake connection. Check mechanical brake settings, parameters <a href="#">35.01...35.08</a> . To determine whether problem is with acknowledgement signal or brake: Check if brake is closed or open.
2003	SAFE TORQUE OFF (0xFF7A) Programmable fault: <a href="#">46.07 STO DIAGNOSTIC</a>	Safe Torque Off function is active, i.e. safety circuit signal(s) connected to connector X6 is lost while drive is stopped and parameter <a href="#">46.07 STO DIAGNOSTIC</a> is set to <a href="#">(2) ALARM</a> .	Check safety circuit connections. For more information, see appropriate drive hardware manual.
2004	STO MODE CHANGE (0xFF7A)	Error in changing Safe Torque Off supervision, i.e. parameter <a href="#">46.07 STO DIAGNOSTIC</a> setting could not be changed to value <a href="#">(2) ALARM</a> .	Contact your local ABB representative.
2005	MOTOR TEMPERATURE (0x4310) Programmable fault: <a href="#">45.01 MOT TEMP PROT</a>	Estimated motor temperature (based on motor thermal model) has exceeded alarm limit defined by parameter <a href="#">45.03 MOT TEMP ALM LIM</a> .	Check motor ratings and load. Let motor cool down. Ensure proper motor cooling: Check cooling fan, clean cooling surfaces, etc. Check value of alarm limit. Check motor thermal model settings, parameters <a href="#">45.06...45.08</a> and <a href="#">45.10 MOT THERM TIME</a> .
		Measured motor temperature has exceeded alarm limit defined by parameter <a href="#">45.03 MOT TEMP ALM LIM</a> .	Check that actual number of sensors corresponds to value set by parameter <a href="#">45.02 MOT TEMP SOURCE</a> . Check motor ratings and load. Let motor cool down. Ensure proper motor cooling: Check cooling fan, clean cooling surfaces, etc. Check value of alarm limit.

Code	Alarm (fieldbus code)	Cause	What to do
2006	EMERGENCY OFF (0xF083)	Drive has received emergency OFF2 command.	To restart drive, activate RUN ENABLE signal (source selected by parameter <a href="#">10.09 RUN ENABLE</a> ) and start drive.
2007	RUN ENABLE (0xFF54)	No Run enable signal is received.	Check setting of parameter <a href="#">10.09 RUN ENABLE</a> . Switch signal on (e.g. in the fieldbus Control Word) or check wiring of selected source.
2008	ID-RUN (0xFF84)	Motor identification run is on.	This alarm belongs to normal start-up procedure. Wait until drive indicates that motor identification is completed.
		Motor identification is required.	This alarm belongs to normal start-up procedure. Select how motor identification should be performed, parameter <a href="#">99.13 IDRUN MODE</a> . Start identification routines by pressing Start key.
2009	EMERGENCY STOP (0xF081)	Drive has received emergency stop command (OFF1/OFF3).	Check that it is safe to continue operation. Return emergency stop push button to normal position (or adjust the fieldbus Control Word accordingly). Restart drive.
2010	POSITION SCALING (0x8584)	Overflow or underflow in position calculation (caused by used position scaling).	Check position scaling parameter settings: <a href="#">60.06 FEED CONST NUM</a> ... <a href="#">60.09 POS RESOLUTION</a> . Check speed scaling parameter settings: <a href="#">60.11 POS SPEED2INT</a> and <a href="#">60.12 POS SPEED SCALE</a> .
2011	BR OVERHEAT (0x7112)	Brake resistor temperature has exceeded alarm limit defined by parameter <a href="#">48.07 BR TEMP ALARMLIM</a> .	Stop drive. Let resistor cool down. Check resistor overload protection function settings, parameters <a href="#">48.01</a> ... <a href="#">48.05</a> . Check alarm limit setting, parameter <a href="#">48.07</a> . Check that braking cycle meets allowed limits.
2012	BC OVERHEAT (0x7181)	Brake chopper IGBT temperature has exceeded internal alarm limit.	Let chopper cool down. Check resistor overload protection function settings, parameters <a href="#">48.01</a> ... <a href="#">48.05</a> . Check that braking cycle meets allowed limits. Check that drive supply AC voltage is not excessive.
2013	DEVICE OVERTEMP (0x4210)	Measured drive temperature has exceeded internal alarm limit.	Check ambient conditions. Check air flow and fan operation. Check heatsink fins for dust pick-up. Check motor power against unit power.

Code	Alarm (fieldbus code)	Cause	What to do
2014	INTBOARD OVERTEMP (0x7182)	Interface board (between power unit and control unit) temperature has exceeded internal alarm limit.	Let drive cool down.
2015	BC MOD OVERTEMP (0x7183)	Input bridge or brake chopper temperature has exceeded internal alarm limit.	Let drive cool down.
2016	IGBT OVERTEMP (0x7184)	Drive temperature based on thermal model has exceeded internal alarm limit.	Check ambient conditions. Check air flow and fan operation. Check heatsink fins for dust pick-up. Check motor power against unit power.
2017	FIELD BUS COMM (0x7510) Programmable fault: <a href="#">50.02 COMM LOSS FUNC</a>	Cyclical communication between drive and fieldbus adapter module or between PLC and fieldbus adapter module is lost.	Check status of fieldbus communication. See appropriate User's Manual of fieldbus adapter module. Check fieldbus parameter settings. See parameter group <a href="#">50 FIELD BUS</a> on page <a href="#">180</a> . Check cable connections. Check if communication master can communicate.
2018	LOCAL CTRL LOSS (0x5300) Programmable fault: <a href="#">46.03 LOCAL CTRL LOSS</a>	Control panel or PC tool selected as active control location for drive has ceased communicating.	Check PC tool or control panel connection. Check control panel connector. Replace control panel in mounting platform.
2019	AI SUPERVISION (0x8110) Programmable fault: <a href="#">13.12 AI SUPERVISION</a>	Analogue input AI1 or AI2 signal has reached limit defined by parameter <a href="#">13.13 AI SUPERVIS ACT</a> .	Check analogue input AI1/2 source and connections. Check analogue input AI1/2 minimum and maximum limit settings, parameters <a href="#">13.02</a> and <a href="#">13.03</a> / <a href="#">13.07</a> and <a href="#">13.08</a> .
2020	FB PAR CONF (0x6320)	The drive does not have a functionality requested by PLC, or requested functionality has not been activated.	Check PLC programming. Check fieldbus parameter settings. See parameter group <a href="#">50 FIELD BUS</a> on page <a href="#">180</a> .
2021	NO MOTOR DATA (0x6381)	Parameters in group 99 have not been set.	Check that all the required parameters in group 99 have been set.
2022	ENCODER 1 FAILURE (0x7301)	Encoder 1 has been activated by parameter but the encoder interface (FEN-xx) cannot be found.	Check parameter <a href="#">90.01 ENCODER 1 SEL</a> setting corresponds to encoder interface 1 (FEN-xx) installed in drive Slot 1/2 (signal <a href="#">9.20 OPTION SLOT 1</a> / <a href="#">9.21 OPTION SLOT 2</a> ). <b>Note:</b> The new setting will only take effect after parameter <a href="#">90.10 ENC PAR REFRESH</a> is used or after the JCU control unit is powered up the next time.

Code	Alarm (fieldbus code)	Cause	What to do
2023	ENCODER 2 FAILURE (0x7381)	Encoder 2 has been activated by parameter but the encoder interface (FEN-xx) cannot be found.	<p>Check parameter <a href="#">90.02 ENCODER 2 SEL</a> setting corresponds to encoder interface 2 (FEN-xx) installed in drive Slot 1/2 (signal <a href="#">9.20 OPTION SLOT 1</a> / <a href="#">9.21 OPTION SLOT 2</a>).</p> <p><b>Note:</b> The new setting will only take effect after parameter <a href="#">90.10 ENC PAR REFRESH</a> is used or after the JCU control unit is powered up the next time.</p>
		<p>EnDat or SSI encoder is used in continuous mode as encoder 2. [i.e. <a href="#">90.02 ENCODER 2 SEL</a> = (3) FEN-11 ABS and <a href="#">91.02 ABS ENC INTERF</a> = (2) ENDAT or (4) SSI) and <a href="#">91.30 ENDAT MODE</a> = (1) CONTINUOUS (or <a href="#">91.25 SSI MODE</a> = (1) CONTINUOUS).]</p>	<p>If possible, use single position transfer instead of continuous position transfer (i.e. if encoder has incremental sin/cos signals):</p> <ul style="list-style-type: none"> <li>- Change parameter <a href="#">91.25 SSI MODE</a> / <a href="#">91.30 ENDAT MODE</a> to value (0) INITIAL POS..</li> </ul> <p>Otherwise use EnDat/SSI encoder as encoder 1:</p> <ul style="list-style-type: none"> <li>- Change parameter <a href="#">90.01 ENCODER 1 SEL</a> to value (3) FEN-11 ABS and parameter <a href="#">90.02 ENCODER 2 SEL</a> to value (0) NONE.</li> </ul> <p><b>Note:</b> The new setting will only take effect after parameter <a href="#">90.10 ENC PAR REFRESH</a> is used or after the JCU control unit is powered up the next time.</p>
2024	LATCH POS 1 FAILURE (0x7382)	Position latch 1 from encoder 1 or 2 has failed.	<p>Check latch source parameter settings: <a href="#">62.04 HOME SWITCH TRIG</a>, <a href="#">62.12 PRESET TRIG</a>, <a href="#">62.15 TRIG PROBE1</a> and <a href="#">62.17 TRIG PROBE2</a>. Note that zero pulse is not always supported. *</p> <p>Check that appropriate encoder interface 1/2 is activated by parameter <a href="#">90.10 ENCODER 1 SEL</a> / <a href="#">90.02 ENCODER 2 SEL</a>.</p> <p><b>Note:</b> The new setting will only take effect after parameter <a href="#">90.10 ENC PAR REFRESH</a> is used or after the JCU control unit is powered up the next time.</p> <p>* - Zero pulse is supported when TTL input of encoder interface module is selected (i.e. par. <a href="#">90.01/90.02</a> = (1) FEN-01 TTL+, (2) FEN-01 TTL, (4) FEN-11 TTL or (6) FEN-21 TTL.</p> <ul style="list-style-type: none"> <li>- Zero pulse is supported when absolute encoder input of encoder interface module is selected and zero pulse is enabled (i.e. <a href="#">90.01/90.02</a> = (3) FEN-11 ABS and <a href="#">91.02</a> = (0) NONE / (1) COMMUT SIG and <a href="#">91.05</a> = (1) TRUE).</li> <li>- Zero pulse is not supported when resolver input is selected (i.e. <a href="#">90.01/90.02</a> = (5) FEN-21 RES).</li> </ul>



Code	Alarm (fieldbus code)	Cause	What to do
2025	LATCH POS 2 FAILURE (0x7383)	Position latch 2 from encoder 1 or 2 has failed.	See alarm LATCH POS 1 FAILURE.
2026	ENC EMULATION FAILURE (0x7384)	Encoder emulation error	<p>If position value used in emulation is measured by encoder:</p> <ul style="list-style-type: none"> <li>- Check that FEN-xx encoder used in emulation (<a href="#">90.03 EMUL MODE SEL</a>) corresponds to FEN-xx encoder interface 1 or (and) 2 activated by parameter <a href="#">90.01 ENCODER 1 SEL</a> / <a href="#">90.02 ENCODER 2 SEL</a>. (Parameter <a href="#">90.01/90.02</a> activates the position calculation of the used FEN-xx input).</li> </ul> <p>If position value used in emulation is determined by drive software:</p> <ul style="list-style-type: none"> <li>- Check that FEN-xx encoder used in emulation (<a href="#">90.03 EMUL MODE SEL</a>) corresponds to FEN-xx encoder interface 1 or (and) 2 activated by parameter <a href="#">90.01 ENCODER 1 SEL</a> / <a href="#">90.02 ENCODER 2 SEL</a> (because position data used in emulation is written to FEN-xx during encoder data request). Encoder interface 2 is recommended.</li> </ul> <p><b>Note:</b> The new setting will only take effect after parameter <a href="#">90.10 ENC PAR REFRESH</a> is used or after the JCU control unit is powered up the next time.</p>
2027	FEN TEMP MEAS FAILURE (0x7385)	Error in temperature measurement when temperature sensor (KTY or PTC) connected to encoder interface FEN-xx is used.	<p>Check that parameter <a href="#">45.02 MOT TEMP SOURCE</a> setting corresponds to encoder interface installation (<a href="#">9.20 OPTION SLOT 1</a> / <a href="#">9.21 OPTION SLOT 2</a>):</p> <p>If one FEN-xx module is used:</p> <ul style="list-style-type: none"> <li>- Parameter <a href="#">45.02 MOT TEMP SOURCE</a> setting must be either (2) <a href="#">KTY 1st FEN</a> or (5) <a href="#">PTC 1st FEN</a>. FEN-xx module can be in either Slot 1 or Slot 2.</li> </ul> <p>If two FEN-xx modules are used:</p> <ul style="list-style-type: none"> <li>- When parameter <a href="#">45.02 MOT TEMP SOURCE</a> setting is (2) <a href="#">KTY 1st FEN</a> or (5) <a href="#">PTC 1st FEN</a>, the encoder installed in drive Slot 1 is used.</li> <li>- When parameter <a href="#">45.02 MOT TEMP SOURCE</a> setting is (3) <a href="#">KTY 2nd FEN</a> or (6) <a href="#">PTC 2nd FEN</a>, the encoder installed in drive Slot 2 is used.</li> </ul>
		Error in temperature measurement when KTY sensor connected to encoder interface FEN-01 is used.	FEN-01 does not support temperature measurement with KTY sensor. Use PTC sensor or other encoder interface module.

Code	Alarm (fieldbus code)	Cause	What to do
2028	ENC EMUL MAX FREQ (0x7386)	TTL pulse frequency used in encoder emulation exceeds maximum allowed limit (500 kHz).	Decrease parameter <a href="#">93.21 EMUL PULSE NR</a> value. <b>Note:</b> The new setting will only take effect after parameter <a href="#">90.10 ENC PAR REFRESH</a> is used or after the JCU control unit is powered up the next time.
2029	ENC EMUL REF ERROR (0x7387)	Encoder emulation has failed due to failure in writing new (position) reference for emulation.	Contact your local ABB representative.
2030	RESOLVER AUTOTUNE ERR (0x7388)	Resolver autotuning routines, which are automatically started when resolver input is activated for the first time, have failed.	Check cable between resolver and resolver interface module (FEN-21) and order of connector signal wires at both ends of cable. Check resolver parameter settings. For resolver parameters and information, see parameter group <a href="#">92 RESOLVER CONF</a> on page <a href="#">234</a> . <b>Note:</b> Resolver autotuning routines should always be performed after resolver cable connection has been modified. Autotuning routines can be activated by setting parameter <a href="#">92.02 EXC SIGNAL AMPL</a> or <a href="#">92.03 EXC SIGNAL FREQ</a> , and then setting parameter <a href="#">90.10 ENC PAR REFRESH</a> to <a href="#">(1) CONFIGURE</a> .
2031	ENCODER 1 CABLE (0x7389)	Encoder 1 cable fault detected.	Check cable between FEN-xx interface and encoder 1. After any modifications in cabling, re-configure interface by switching drive power off and on, or by activating parameter <a href="#">90.10 ENC PAR REFRESH</a> .
2032	ENCODER 2 CABLE (0x738A)	Encoder 2 cable fault detected.	Check cable between FEN-xx interface and encoder 2. After any modifications in cabling, re-configure interface by switching drive power off and on, or by activating parameter <a href="#">90.10 ENC PAR REFRESH</a> .
2033	D2D COMMUNICATION (0x7520) Programmable fault: <a href="#">57.02 COMM LOSS FUNC</a>	On the master drive: The drive has not been replied to by an activated follower for five consecutive polling cycles.	Check that all drives that are polled (parameters <a href="#">57.04</a> and <a href="#">57.05</a> ) on the drive-to-drive link are powered, properly connected to the link, and have the correct node address. Check the drive-to-drive link wiring.
		On a follower drive: The drive has not received new reference 1 and/or 2 for five consecutive reference handling cycles.	Check the settings of parameters <a href="#">57.06</a> and <a href="#">57.07</a> on the master drive. Check the drive-to-drive link wiring.

Code	Alarm (fieldbus code)	Cause	What to do
2034	D2D BUFFER OVERLOAD (0x7520) Programmable fault: <a href="#">57.02 COMM LOSS FUNC</a>	Transmission of drive-to-drive references failed because of message buffer overflow.	Contact your local ABB representative.
2035	PS COMM (0x5480)	Communication errors detected between the JCU Control Unit and the power unit of the drive.	Check the connections between the JCU Control Unit and the power unit.
2036	RESTORE (0x630D)	Restoration of backed-up parameters failed.	Contact your local ABB representative.
2037	CUR MEAS CALIBRATION (0x2280)	Current measurement calibration will occur at next start.	Informative alarm.
2038	AUTOPHASING (0x3187)	Autophasing will occur at next start.	Informative alarm.
2039	EARTH FAULT (0x2330) Programmable fault: <a href="#">46.05 EARTH FAULT</a>	Drive has detected load unbalance typically due to earth fault in motor or motor cable.	Check there are no power factor correction capacitors or surge absorbers in motor cable. Check that there is no earth fault in motor or motor cables: - measure insulation resistances of motor and motor cable. If no earth fault can be detected, contact your local ABB representative.
2041	MOTOR NOM VALUE (0x6383)	The motor configuration parameters are set incorrectly.	Check the settings of the motor configuration parameters in group <a href="#">99 START-UP DATA</a> .
		The drive is not dimensioned correctly.	Check that the drive is sized correctly for the motor.
2042	D2D CONFIG (0x7583)	The settings of drive-to-drive link configuration parameters (group <a href="#">57</a> ) are incompatible.	Check the settings of the parameters in group <a href="#">57 D2D COMMUNICATION</a> .
2047	SPEED FEEDBACK (0x8480)	No speed feedback is received.	Check the settings of the parameters in group <a href="#">22 SPEED FEEDBACK</a> . Check encoder installation. See the description of fault <a href="#">0039 (ENCODER1)</a> for more information.
2048	OPTION COMM LOSS (0x7000)	Communication between drive and option module (FEN-xx and/or FIO-xx) is lost.	Check that option modules are properly connected to Slot 1 and (or) Slot 2. Check that option modules or Slot 1/2 connectors are not damaged. To determine whether module or connector is damaged: Test each module individually in Slot 1 and Slot 2.

## Fault messages generated by the drive

Code	Fault (fieldbus code)	Cause	What to do
0001	OVERCURRENT (0x2310)	Output current has exceeded internal fault limit.	<p>Check motor load.</p> <p>Check acceleration time. See parameter group <a href="#">25 SPEED REF RAMP</a> on page <a href="#">139</a>.</p> <p>Check motor and motor cable (including phasing and delta/star connection).</p> <p>Check that the start-up data in parameter group <a href="#">99</a> corresponds to the motor rating plate.</p> <p>Check that there are no power factor correction capacitors or surge absorbers in motor cable.</p> <p>Check encoder cable (including phasing).</p>
0002	DC OVERVOLTAGE (0x3210)	Excessive intermediate circuit DC voltage.	<p>Check that overvoltage controller is on, parameter <a href="#">47.01 OVERVOLTAGE CTRL</a>.</p> <p>Check mains for static or transient overvoltage.</p> <p>Check brake chopper and resistor (if used).</p> <p>Check deceleration time.</p> <p>Use coast-to-stop function (if applicable).</p> <p>Retrofit frequency converter with brake chopper and brake resistor.</p>
0003	DEVICE OVERTEMP (0x4210)	Measured drive temperature has exceeded internal fault limit.	<p>Check ambient conditions.</p> <p>Check air flow and fan operation.</p> <p>Check heatsink fins for dust pick-up.</p> <p>Check motor power against unit power.</p>
0004	SHORT CIRCUIT (0x2340)	Short-circuit in motor cable(s) or motor.	<p>Check motor and motor cable.</p> <p>Check there are no power factor correction capacitors or surge absorbers in motor cable.</p>
0005	DC UNDERVOLTAGE (0x3220)	Intermediate circuit DC voltage is not sufficient due to missing mains phase, blown fuse or rectifier bridge internal fault.	<p>Check mains supply and fuses.</p>
0006	EARTH FAULT (0x2330) Programmable fault: <a href="#">46.05 EARTH FAULT</a>	Drive has detected load unbalance typically due to earth fault in motor or motor cable.	<p>Check there are no power factor correction capacitors or surge absorbers in motor cable.</p> <p>Check that there is no earth fault in motor or motor cables:</p> <ul style="list-style-type: none"> <li>- measure insulation resistances of motor and motor cable.</li> </ul> <p>If no earth fault can be detected, contact your local ABB representative.</p>
0007	FAN FAULT (0xFF83)	Fan is not able to rotate freely or fan is disconnected. Fan operation is monitored by measuring fan current.	<p>Check fan operation and connection.</p>

Code	Fault (fieldbus code)	Cause	What to do
0008	IGBT OVERTEMP (0x7184)	Drive temperature based on thermal model has exceeded internal fault limit.	Check ambient conditions. Check air flow and fan operation. Check heatsink fins for dust pick-up. Check motor power against unit power.
0009	BC WIRING (0x7111)	Brake resistor short circuit or brake chopper control fault.	Check brake chopper and brake resistor connection. Ensure brake resistor is not damaged.
0010	BC SHORT CIRCUIT (0x7113)	Short circuit in brake chopper IGBT.	Ensure brake resistor is connected and not damaged.
0011	BC OVERHEAT (0x7181)	Brake chopper IGBT temperature has exceeded internal fault limit.	Let chopper cool down. Check resistor overload protection function settings, parameters <a href="#">48.03...48.05</a> . Check that braking cycle meets allowed limits. Check that drive supply AC voltage is not excessive.
0012	BR OVERHEAT (0x7112)	Brake resistor temperature has exceeded fault limit defined by parameter <a href="#">48.06 BR TEMP FAULTLIM</a> .	Stop drive. Let resistor cool down. Check resistor overload protection function settings, parameters <a href="#">48.01...48.05</a> . Check fault limit setting, parameter <a href="#">48.06</a> . Check that braking cycle meets allowed limits.
0013	CURR MEAS GAIN (0x3183)	Difference between output phase U2 and W2 current measurement gain is too great.	Contact your local ABB representative.
0014	CABLE CROSS CON (0x3181) Programmable fault: <a href="#">46.08 CROSS CONNECTION</a>	Incorrect input power and motor cable connection (i.e. input power cable is connected to drive motor connection).	Check input power connections.
0015	SUPPLY PHASE (0x3130) Programmable fault: <a href="#">46.06 SUPPL PHS LOSS</a>	Intermediate circuit DC voltage is oscillating due to missing input power line phase or blown fuse.	Check input power line fuses. Check for input power supply imbalance.
0016	MOTOR PHASE (0x3182) Programmable fault: <a href="#">46.04 MOT PHASE LOSS</a>	Motor circuit fault due to missing motor connection (all three phases are not connected).	Connect motor cable.

Code	Fault (fieldbus code)	Cause	What to do
0017	ID-RUN FAULT (0xFF84)	Motor ID Run is not completed successfully.	Check the fault logger for a fault code extension. See appropriate actions for each extension below.
	Fault code extension: 1	The ID run cannot be completed because the maximum current setting and/or the internal current limit of the drive is too low.	Check setting of parameters <a href="#">99.06 MOT NOM CURRENT</a> and <a href="#">20.05 MAXIMUM CURRENT</a> . Make sure that <a href="#">20.05 MAXIMUM CURRENT</a> $\geq$ <a href="#">99.06 MOT NOM CURRENT</a> . Check that the drive is dimensioned correctly according to the motor.
	Fault code extension: 2	The ID run cannot be completed because the maximum speed setting and/or calculated field weakening point is too low.	Check setting of parameters <a href="#">99.07 MOT NOM VOLTAGE</a> , <a href="#">99.08 MOT NOM FREQ</a> , <a href="#">99.09 MOT NOM SPEED</a> , <a href="#">20.01 MAXIMUM SPEED</a> and <a href="#">20.02 MINIMUM SPEED</a> . Make sure that <ul style="list-style-type: none"> <li>• <a href="#">20.01 MAXIMUM SPEED</a> <math>&gt;</math> (<math>0.55 \times</math> <a href="#">99.09 MOT NOM SPEED</a>),</li> <li>• <a href="#">20.02 MINIMUM SPEED</a> <math>\leq 0</math>, and</li> <li>• supply voltage <math>\geq</math> (<math>0.65 \times</math> <a href="#">99.07 MOT NOM VOLTAGE</a>).</li> </ul>
	Fault code extension: 3	The ID run cannot be completed because the maximum torque setting is too low.	Check setting of parameters <a href="#">99.12 MOT NOM TORQUE</a> and <a href="#">20.06 MAXIMUM TORQUE</a> . Make sure that <a href="#">20.06 MAXIMUM TORQUE</a> $\geq 100\%$ .
	Fault code extension: 4...16	Internal error.	Contact your local ABB representative.
0018	CURR U2 MEAS (0x3184)	Measured offset error of U2 output phase current measurement is too great. (Offset value is updated during current calibration.)	Contact your local ABB representative.
0019	CURR V2 MEAS (0x3185)	Measured offset error of V2 output phase current measurement is too great. (Offset value is updated during current calibration.)	Contact your local ABB representative.
0020	CURR W2 MEAS (0x3186)	Measured offset error of W2 output phase current measurement is too great. (Offset value is updated during current calibration.)	Contact your local ABB representative.
0021	STO1 LOST (0x8182)	Safe Torque Off function is active, i.e. safety circuit signal 1 connected between X6:1 and X6:3 is lost while drive is at stopped state and parameter <a href="#">46.07 STO DIAGNOSTIC</a> setting is <a href="#">(2) ALARM</a> or <a href="#">(3) NO</a> .	Check safety circuit connections. For more information, see appropriate drive hardware manual.

Code	Fault (fieldbus code)	Cause	What to do
0022	STO2 LOST (0x8183)	Safe Torque Off function is active, i.e. safety circuit signal 2 connected between X6:2 and X6:4 is lost while drive is at stopped state and parameter <a href="#">46.07 STO DIAGNOSTIC</a> setting is (2) <b>ALARM</b> or (3) <b>NO</b> .	Check safety circuit connections. For more information, see appropriate drive hardware manual.
0023	STO MODE CHANGE (0xFF7A)	Error in changing Safe Torque Off supervision, i.e. parameter <a href="#">46.07 STO DIAGNOSTIC</a> setting could not be changed to value (1) <b>FAULT</b> .	Contact your local ABB representative.
0024	INTBOARD OVERTEMP (0x7182)	Interface board (between power unit and control unit) temperature has exceeded internal fault limit.	Let drive cool down.
0025	BC MOD OVERTEMP (0x7183)	Input bridge or brake chopper temperature has exceeded internal fault limit.	Let drive cool down.
0026	AUTOPHASING (0x3187)	Autophasing routine (see section <a href="#">Autophasing</a> on page 40) failed.	Try other autophasing modes (see parameter <a href="#">11.07 AUTOPHASING MODE</a> ) if possible.
0027	PU LOST (0x5400)	Connection between the JCU Control Unit and the power unit of the drive is lost.	Check the connections between the JCU Control Unit and the power unit.
0028	PS COMM (0x5480)	Communication errors detected between the JCU Control Unit and the power unit of the drive.	Check the connections between the JCU Control Unit and the power unit.
0029	IN CHOKE TEMP (0xFF81)	Temperature of internal AC choke excessive.	Check cooling fan.
0030	EXTERNAL (0x9000)	Fault in external device. (This information is configured through one of programmable digital inputs.)	Check external devices for faults. Check setting of parameter <a href="#">46.01 EXTERNAL FAULT</a> .
0031	SAFE TORQUE OFF (0xFF7A) Programmable fault: <a href="#">46.07 STO DIAGNOSTIC</a>	Safe Torque Off function is active, i.e. safety circuit signal(s) connected to connector X6 is lost - during drive start or drive run or - while drive is stopped and parameter <a href="#">46.07 STO DIAGNOSTIC</a> setting is (1) <b>FAULT</b> .	Check safety circuit connections. For more information, see appropriate drive hardware manual.

Code	Fault (fieldbus code)	Cause	What to do
0032	OVERSPEED (0x7310)	Motor is turning faster than highest allowed speed due to incorrectly set minimum/maximum speed, insufficient braking torque or changes in load when using torque reference.	Check minimum/maximum speed settings, parameters <a href="#">20.01 MAXIMUM SPEED</a> and <a href="#">20.02 MINIMUM SPEED</a> . Check adequacy of motor braking torque. Check applicability of torque control. Check need for brake chopper and resistor(s).
0033	BRAKE START TORQUE (0x7185) Programmable fault: <a href="#">35.09 BRAKE FAULT FUNC</a>	Mechanical brake fault. Fault is activated if required motor starting torque, <a href="#">35.06 BRAKE OPEN TORQ</a> , is not achieved.	Check brake open torque setting, parameter <a href="#">35.06</a> . Check drive torque and current limits. See parameter group <a href="#">20 LIMITS</a> on page <a href="#">127</a> .
0034	BRAKE NOT CLOSED (0x7186) Programmable fault: <a href="#">35.09 BRAKE FAULT FUNC</a>	Mechanical brake control fault. Fault is activated if brake acknowledgement is not as expected during brake closing.	Check mechanical brake connection. Check mechanical brake settings, parameters <a href="#">35.01...35.09</a> . To determine whether problem is with acknowledgement signal or brake: Check if brake is closed or open.
0035	BRAKE NOT OPEN (0x7187) Programmable fault: <a href="#">35.09 BRAKE FAULT FUNC</a>	Mechanical brake control fault. Fault is activated if brake acknowledgement is not as expected during brake opening.	Check mechanical brake connection. Check mechanical brake settings, parameters <a href="#">35.01...35.08</a> . To determine whether problem is with acknowledgement signal or brake: Check if brake is closed or open.
0036	LOCAL CTRL LOSS (0x5300) Programmable fault: <a href="#">46.03 LOCAL CTRL LOSS</a>	Control panel or PC tool selected as active control location for drive has ceased communicating.	Check PC tool or control panel connection. Check control panel connector. Replace control panel in mounting platform.
0037	NVMEMCORRUPTED (0x6320)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0038	OPTION COMM LOSS (0x7000)	Communication between drive and option module (FEN-xx and/or FIO-xx) is lost.	Check that option modules are properly connected to Slot 1 and (or) Slot 2. Check that option modules or Slot 1/2 connectors are not damaged. To determine whether module or connector is damaged: Test each module individually in Slot 1 and Slot 2.



Code	Fault (fieldbus code)	Cause	What to do
0039	ENCODER1 (0x7301)	Encoder 1 feedback fault	<p>If fault appears during first start-up before encoder feedback is used:</p> <ul style="list-style-type: none"> <li>- Check cable between encoder and encoder interface module (FEN-xx) and order of connector signal wires at both ends of cable.</li> </ul> <p>If absolute encoder, EnDat/Hiperface/SSI, with incremental sin/cos pulses is used, incorrect wiring can be located as follows: Disable serial link (zero position) by setting parameter <a href="#">91.02 ABS ENC INTERF</a> to <a href="#">(0) NONE</a> and test encoder operation:</p> <ul style="list-style-type: none"> <li>- If encoder fault is not activated, check serial link data wiring. Note that zero position is not taken into account when serial link is disabled.</li> <li>- If encoder fault is activated, check serial link and sin/cos signal wiring.</li> </ul> <p><b>Note:</b> Because only zero position is requested through serial link and during run, position is updated according to sin/cos pulses.</p> <ul style="list-style-type: none"> <li>- Check encoder parameter settings.</li> </ul> <p>If fault appears after encoder feedback has already been used or during drive run:</p> <ul style="list-style-type: none"> <li>- Check that encoder connection wiring or encoder is not damaged.</li> <li>- Check that encoder interface module (FEN-xx) connection or module is not damaged.</li> <li>- Check earthings (when disturbances are detected in communication between encoder interface module and encoder).</li> </ul> <p>For more information on encoders, see parameter groups <a href="#">90 ENC MODULE SEL</a> (page <a href="#">225</a>), <a href="#">91 ABSOL ENC CONF</a> (page <a href="#">229</a>), <a href="#">92 RESOLVER CONF</a> (page <a href="#">234</a>) and <a href="#">93 PULSE ENC CONF</a> (page <a href="#">235</a>).</p>

Code	Fault (fieldbus code)	Cause	What to do
0040	ENCODER2 (0x7381)	Encoder 2 feedback fault	See fault ENCODER1.
		EnDat or SSI encoder is used in continuous mode as encoder 2. [I.e. 90.02 ENCODER 2 SEL = (3) FEN-11 ABS and 91.02 ABS ENC INTERF = (2) ENDAT or (4) SSI and 91.30 ENDAT MODE = (1) CONTINUOUS (or 91.25 SSI MODE = (1) CONTINUOUS).]	<p>If possible, use single position transfer instead of continuous position transfer (i.e. if encoder has incremental sin/cos signals):</p> <ul style="list-style-type: none"> <li>- Change parameter 91.25 SSI MODE / 91.30 ENDAT MODE to value (0) INITIAL POS..</li> </ul> <p>Otherwise use Endat/SSI encoder as encoder 1:</p> <ul style="list-style-type: none"> <li>- Change parameter 90.01 ENCODER 1 SEL to value (3) FEN-11 ABS and parameter 90.02 ENCODER 2 SEL to value (0) NONE.</li> </ul> <p><b>Note:</b> The new setting will only take effect after parameter 90.10 ENC PAR REFRESH is used or after the JCU control unit is powered up the next time.</p>
0041	POSITION ERROR (0x8500)	Calculated position error, 4.19 POS ERROR, exceeds defined position error supervision window. Motor is stalled.	<p>Check supervision window setting, parameter 71.06 POS ERR LIM.</p> <p>Check that no torque limit is exceeded during positioning.</p>
0043	POSITION ERROR MIN (0x8582)	<p>Actual position value exceeds defined minimum position value.</p> <p>Limit can be exceeded because no homing (or preset function) has been performed.</p>	<p>Check minimum position setting, parameter 60.14 MINIMUM POS.</p> <p>Perform homing (or preset function).</p>
0044	POSITION ERROR MAX (0x8583)	<p>Actual position value exceeds defined maximum position value.</p> <p>Limit can be exceeded because no homing (or preset function) has been performed.</p>	<p>Check maximum position setting, parameter 60.13 MAXIMUM POS.</p> <p>Perform homing (or preset function).</p>
0045	FIELDBUS COMM (0x7510) Programmable fault: 50.02 COMM LOSS FUNC	Cyclical communication between drive and fieldbus adapter module or between PLC and fieldbus adapter module is lost.	<p>Check status of fieldbus communication. See appropriate User's Manual of fieldbus adapter module.</p> <p>Check fieldbus parameter settings. See parameter group 50 FIELDBUS on page 180.</p> <p>Check cable connections.</p> <p>Check if communication master can communicate.</p>
0046	FB MAPPING FILE (0x6306)	Drive internal fault	Contact your local ABB representative.

Code	Fault (fieldbus code)	Cause	What to do
0047	MOTOR OVERTEMP (0x4310) Programmable fault: <a href="#">45.01 MOT TEMP PROT</a>	Estimated motor temperature (based on motor thermal model) has exceeded fault limit defined by parameter <a href="#">45.04 MOT TEMP FLT LIM</a> .	Check motor ratings and load. Let motor cool down. Ensure proper motor cooling: Check cooling fan, clean cooling surfaces, etc. Check value of fault limit. Check motor thermal model settings, parameters <a href="#">45.06...45.08</a> and <a href="#">45.10 MOT THERM TIME</a> .
		Measured motor temperature has exceeded fault limit defined by parameter <a href="#">45.04 MOT TEMP FLT LIM</a> .	Check that actual number of sensors corresponds to value set by parameter <a href="#">45.02 MOT TEMP SOURCE</a> . Check motor ratings and load. Let motor cool down. Ensure proper motor cooling: Check cooling fan, clean cooling surfaces, etc. Check value of fault limit.
0048	POS ACT MEAS (0x8584)	Selected operation mode requires position feedback data (actual position), but no feedback data is available.	Check actual position source setting, <a href="#">60.01 POS ACT SEL</a> . Check encoder installation. See ENCODER1 fault description for more information. (The used operation mode is indicated by signal <a href="#">6.12 OP MODE ACK</a> .)
0049	AI SUPERVISION (0x8110) Programmable fault: <a href="#">13.12 AI SUPERVISION</a>	Analogue input AI1 or AI2 signal has reached limit defined by parameter <a href="#">13.13 AI SUPERVIS ACT</a> .	Check analogue input AI1/2 source and connections. Check analogue input AI1/2 minimum and maximum limit settings, parameters <a href="#">13.02</a> and <a href="#">13.03</a> / <a href="#">13.07</a> and <a href="#">13.08</a> .
0050	ENCODER 1 CABLE (0x7389) Programmable fault: <a href="#">90.05 ENC CABLE FAULT</a>	Encoder 1 cable fault detected.	Check cable between FEN-xx interface and encoder 1. After any modifications in cabling, re-configure interface by switching drive power off and on, or by activating parameter <a href="#">90.10 ENC PAR REFRESH</a> .
0051	ENCODER 2 CABLE (0x738A) Programmable fault: <a href="#">90.05 ENC CABLE FAULT</a>	Encoder 2 cable fault detected.	Check cable between FEN-xx interface and encoder 2. After any modifications in cabling, re-configure interface by switching drive power off and on, or by activating parameter <a href="#">90.10 ENC PAR REFRESH</a> .
0052	D2D CONFIG (0x7583)	Configuration of the drive-to-drive link has failed for a reason other than those indicated by alarm <a href="#">2042</a> , for example start inhibition is requested but not granted.	Contact your local ABB representative.

Code	Fault (fieldbus code)	Cause	What to do
0053	D2D COMM (0x7520) Programmable fault: <a href="#">57.02 COMM LOSS FUNC</a>	On the master drive: The drive has not been replied to by an activated follower for five consecutive polling cycles.	Check that all drives that are polled (parameters <a href="#">57.04 FOLLOWER MASK 1</a> and <a href="#">57.05 FOLLOWER MASK 2</a> ) on the drive-to-drive link are powered, properly connected to the link, and have the correct node address. Check the drive-to-drive link wiring.
		On a follower drive: The drive has not received new reference 1 and/or 2 for five consecutive reference handling cycles.	Check the settings of parameters <a href="#">57.06 REF 1 SRC</a> and <a href="#">57.07 REF 2 SRC</a> on the master drive. Check the drive-to-drive link wiring.
0054	D2D BUF OVLOAD (0x7520) Programmable fault: <a href="#">57.02 COMM LOSS FUNC</a>	Transmission of drive-to-drive references failed because of message buffer overflow.	Contact your local ABB representative.
0055	TECH LIB (0x6382)	Resettable fault generated by a technology library.	Refer to the documentation of the technology library.
0056	TECH LIB CRITICAL (0x6382)	Permanent fault generated by a technology library.	Refer to the documentation of the technology library.
0057	FORCED TRIP (0xFF90)	Generic Drive Communication Profile trip command.	Check PLC status.
0058	FIELD BUS PAR ERROR (0x6320)	The drive does not have a functionality requested by PLC, or requested functionality has not been activated.	Check PLC programming. Check fieldbus parameter settings. See parameter group <a href="#">50 FIELD BUS</a> on page <a href="#">180</a> .
0061	SPEED FEEDBACK (0x8480)	No speed feedback is received.	Check the settings of the parameters in group <a href="#">22 SPEED FEEDBACK</a> . Check encoder installation. See the description of fault <a href="#">0039 (ENCODER1)</a> for more information.
0062	D2D SLOT COMM (0x7584)	Drive-to-drive link is set to use an FMBA module for communication, but no module is detected in specified slot.	Check the settings of parameters <a href="#">57.01 LINK MODE</a> and <a href="#">57.15 D2D COMM PORT</a> . Ensure that the FMBA module has been detected by checking parameters <a href="#">9.20...9.22</a> . Check that the FMBA module is correctly wired. Try installing the FMBA module into another slot. If the problem persists, contact your local ABB representative.
0201	T2 OVERLOAD (0x0201)	Firmware time level 2 overload <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0202	T3 OVERLOAD (0x6100)	Firmware time level 3 overload <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.

Code	Fault (fieldbus code)	Cause	What to do
0203	T4 OVERLOAD (0x6100)	Firmware time level 4 overload <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0204	T5 OVERLOAD (0x6100)	Firmware time level 5 overload <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0205	A1 OVERLOAD (0x6100)	Application time level 1 fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0206	A2 OVERLOAD (0x6100)	Application time level 2 fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0207	A1 INIT FAULT (0x6100)	Application task creation fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0208	A2 INIT FAULT (0x6100)	Application task creation fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0209	STACK ERROR (0x6100)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0210	FPGA ERROR (0xFF61)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0301	UFF FILE READ (0x6300)	File read error <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0302	APPL DIR CREATION (0x6100)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0303	FPGA CONFIG DIR (0x6100)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0304	PU RATING ID (0x5483)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0305	RATING DATABASE (0x6100)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0306	LICENSING (0x6100)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.

Code	Fault (fieldbus code)	Cause	What to do
0307	DEFAULT FILE (0x6100)	Drive internal fault <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0308	APPL FILE PAR CONF (0x6300)	Corrupted application file <b>Note:</b> This fault cannot be reset.	Reload application. If fault is still active, contact your local ABB representative.
0309	APPL LOADING (0x6300)	Corrupted application file <b>Note:</b> This fault cannot be reset.	Reload application. If fault is still active, contact your local ABB representative.
0310	USERSET LOAD (0xFF69)	Loading of user set is not successfully completed because: - requested user set does not exist - user set is not compatible with drive program - drive has been switched off during loading.	Reload.
0311	USERSET SAVE (0xFF69)	User set is not saved because of memory corruption.	Check the setting of parameter <a href="#">95.01 CTRL UNIT SUPPLY</a> . If the fault still occurs, contact your local ABB representative.
0312	UFF OVERSIZE (0x6300)	UFF file is too big.	Contact your local ABB representative.
0313	UFF EOF (0x6300)	UFF file structure failure	Delete faulty file or contact your local ABB representative.
0314	TECH LIB INTERFACE (0x6100)	Incompatible firmware interface <b>Note:</b> This fault cannot be reset.	Contact your local ABB representative.
0315	RESTORE FILE (0x630D)	Restoration of backed-up parameters failed.	Contact your local ABB representative.
0316	DAPS MISMATCH (0x5484)	Mismatch between JCU Control Unit firmware and power unit logic versions.	Contact your local ABB representative.
0317	SOLUTION FAULT (0x6200)	Fault generated by function block SOLUTION_FAULT in the application program.	Check the usage of the SOLUTION_FAULT block in the application program.

# Standard function blocks

---

## What this chapter contains

This chapter describes the standard function blocks. The blocks are grouped according to the grouping in the DriveSPC tool.

The number in brackets in the standard block heading is the block number.

**Note:** The given execution times can vary depending on the used drive application.

## Terms


Data type	Description	Range
Boolean	Boolean	0 or 1
DINT	32-bit integer value (31 bits + sign)	-2147483648...2147483647
INT	16-bit integer value (15 bits + sign)	-32768...32767
PB	Packed Boolean	0 or 1 for each individual bit
REAL	16-bit value 16-bit value (31 bits + sign) = integer value = fractional value	-32768,99998...32767,9998
REAL24	8-bit value 24-bit value (31 bits + sign) = integer value = fractional value	-128,0...127,999

Arithmetic

ABS

(10001)

Illustration




- Execution time** 0.53  $\mu$ s
- Operation** The output (OUT) is the absolute value of the input (IN).  
 $OUT = | IN |$
- Inputs** The input data type is selected by the user.  
Input (IN): DINT, INT, REAL or REAL24
- Outputs** Output (OUT): DINT, INT, REAL or REAL24

ADD

(10000)

Illustration

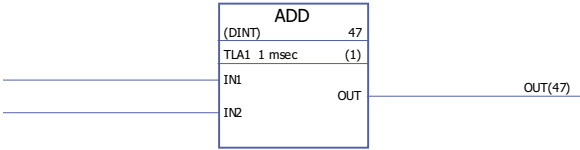


- Execution time** 3.36  $\mu$ s (when two inputs are used) + 0.52  $\mu$ s (for every additional input). When all inputs are used, the execution time is 18.87  $\mu$ s.
- Operation** The output (OUT) is the sum of the inputs (IN1...IN32).  
 $OUT = IN1 + IN2 + \dots + IN32$   
The output value is limited to the maximum and minimum values defined by the selected data type range.
- Inputs** The input data type and the number of the inputs (2...23) are selected by the user.  
Input (IN1...IN32): DINT, INT, REAL or REAL24
- Outputs** Output (OUT): DINT, INT, REAL or REAL24

DIV

(10002)

Illustration

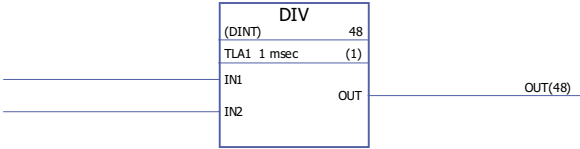


- Execution time** 2.55  $\mu$ s



Operation	<p>The output (OUT) is input IN1 divided by input IN2.</p> $\text{OUT} = \text{IN1} / \text{IN2}$ <p>The output value is limited to the maximum and minimum values defined by the selected data type range.</p> <p>If the divider (IN2) is 0, the output is 0.</p>
Inputs	<p>The input data type is selected by the user.</p> <p>Input (IN1, IN2): INT, DINT, REAL, REAL24</p>
Outputs	<p>Output (OUT): INT, DINT, REAL, REAL24</p>

EXPT  
(10003)


Illustration

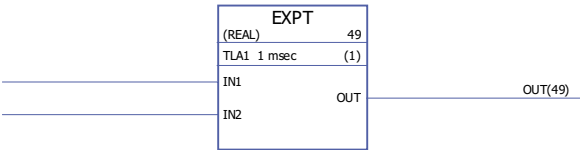

Execution time	81.90 $\mu$ s
Operation	<p>The output (OUT) is input IN1 raised to the power of the input IN2:</p> $\text{OUT} = \text{IN1}^{\text{IN2}}$ <p>If input IN1 is 0, the output is 0.</p> <p>The output value is limited to the maximum value defined by the selected data type range.</p> <p><b>Note:</b> The execution of the EXPT function is slow.</p>
Inputs	<p>The input data type is selected by the user.</p> <p>Input (IN1): REAL, REAL24</p> <p>Input (IN2): REAL</p>
Outputs	<p>Output (OUT): REAL, REAL24</p>

MOD  
(10004)


Illustration

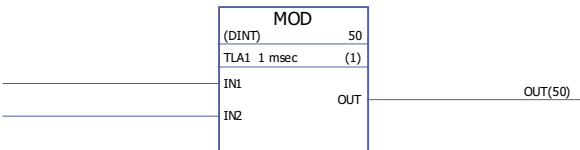

Execution time	1.67 $\mu$ s
Operation	<p>The output (OUT) is the remainder of the division of the inputs IN1 and IN2.</p> $\text{OUT} = \text{remainder of } \text{IN1} / \text{IN2}$ <p>If input IN2 is zero, the output is zero.</p>
Inputs	<p>The input data type is selected by the user.</p> <p>Input (IN1, IN2): INT, DINT</p>
Outputs	<p>Output (OUT): INT, DINT</p>

MOVE  
(10005)

Illustration

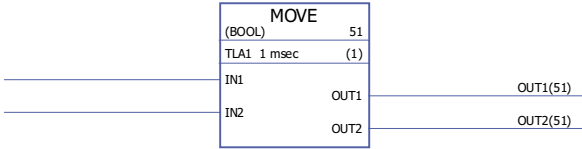

**Execution time** 2.10 µs (when two inputs are used) + 0.42 µs (for every additional input). When all inputs are used, the execution time is 14.55 µs.


**Operation** Copies the input values (IN1...32) to the corresponding outputs (OUT1...32).

**Inputs** The input data type and number of inputs (2...32) are selected by the user.  
Input (IN1...IN32): INT, DINT, REAL, REAL24, Boolean

**Outputs** Output (OUT1...OUT32): INT, DINT, REAL, REAL24, Boolean

MUL  
(10006)

Illustration

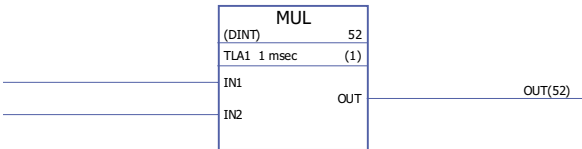

**Execution time** 3.47 µs (when two inputs are used) + 2.28 µs (for every additional input). When all inputs are used, the execution time is 71.73 µs.


**Operation** The output (OUT) is the product of the inputs (IN).  
 $O = IN1 \times IN2 \times \dots \times IN32$   
The output value is limited to the maximum and minimum values defined by the selected data type range.

**Inputs** The input data type and the number of inputs (2...32) are selected by the user.  
Input (IN1...IN32): INT, DINT, REAL, REAL24

**Outputs** Output (OUT): INT, DINT, REAL, REAL24

MULDIV  
(10007)


Illustration

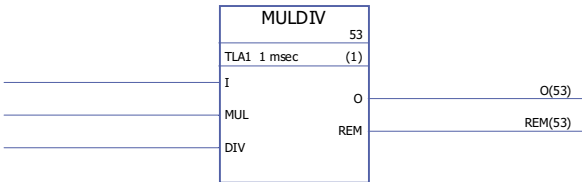


**Execution time** 7.10 µs

Operation	<p>The output (O) is the product of input IN and input MUL divided by input DIV.</p> <p>Output = (I × MUL) / DIV</p> <p>O = whole value. REM = remainder value.</p> <p>Example: I = 2, MUL = 16 and DIV = 10:</p> <p>(2 × 16) / 10 = 3.2, i.e. O = 3 and REM = 2</p> <p>The output value is limited to the maximum and minimum values defined by the data type range.</p>
Inputs	<p>Input (I): DINT</p> <p>Multiplier input (MUL): DINT</p> <p>Divider input (DIV): DINT</p>
Outputs	<p>Output (O): DINT</p> <p>Remainder output (REM): DINT</p>

SQRT  
(10008)

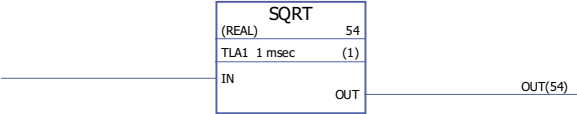Illustration	
Execution time	2.09 μs
Operation	<p>Output (OUT) is the square root of the input (IN).</p> <p>OUT = sqrt(IN)</p> <p>Output is 0 if the input value is negative.</p>
Inputs	<p>The input data type is selected by the user.</p> <p>Input (IN): REAL, REAL24</p>
Outputs	<p>Output (OUT): REAL, REAL24</p>

SUB -  
(10009)

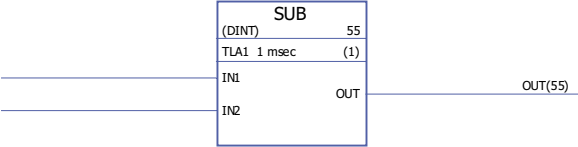
Illustration	
Execution time	2.33 μs
Operation	<p>Output (OUT) is the difference between the input signals (IN):</p> <p>OUT = IN1 - IN2</p> <p>The output value is limited to the maximum and minimum values defined by the selected data type range.</p>
Inputs	<p>The input data type is selected by the user.</p> <p>Input (IN1, IN2): INT, DINT, REAL, REAL24</p>
Outputs	<p>Output (OUT): INT, DINT, REAL, REAL24</p>

Bitstring

AND

(10010)

Illustration

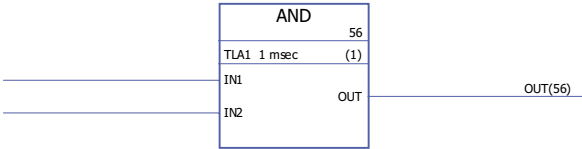

**Execution time** 1.55  $\mu$ s (when two inputs are used) + 0.60  $\mu$ s (for every additional input). When all inputs are used, the execution time is 19.55  $\mu$ s.

**Operation** The output (OUT) is 1 if all the connected inputs (IN1...IN32) are 1. Otherwise the output is 0.

Truth table:

IN1	IN2	OUT
0	0	0
0	1	0
1	0	0
1	1	1

The inputs can be inverted.


**Inputs** The number of inputs is selected by the user.  
Input (IN1...IN32): Boolean

**Outputs** Output (OUT): Boolean

NOT

(10011)

Illustration



**Execution time** 0.32  $\mu$ s

**Operation** The output (O) is 1 if the input (I) is 0. The output is 0 if the input is 1.


**Inputs** Input (I): Boolean

**Outputs** Output (O): Boolean

## OR

(10012)

### Illustration

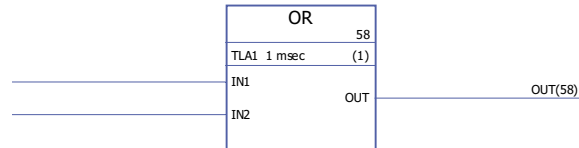

**Execution time** 1.55  $\mu$ s (when two inputs are used) + 0.60  $\mu$ s (for every additional input). When all inputs are used, the execution time is 19.55  $\mu$ s.

**Operation** The output (OUT) is 0, if all connected inputs (IN) are 0. Otherwise the output is 1.  
Truth table:

IN1	IN2	OUT
0	0	0
0	1	1
1	0	1
1	1	1

The inputs can be inverted.

**Inputs** The number of inputs (2...32) is selected by the user.


Input (IN1...IN32): Boolean

**Outputs** Output (OUT): Boolean

## ROL

(10013)

### Illustration

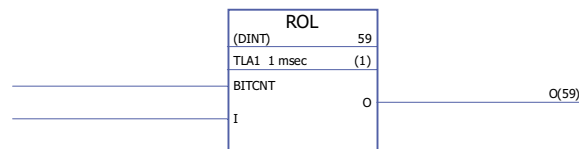

**Execution time** 1.28  $\mu$ s

**Operation** Input bits (I) are rotated to the left by the number (N) of bits defined by BITCNT. The N most significant bits (MSB) of the input are stored as the N least significant bits (LSB) of the output.

Example: If BITCNT = 3

3 MSB		
I	1 1 1 0 0 0 0 1 1 1 0 0 1 0 1 1 1 0 1 0 0 1 1 0 0 1 1 0 1 0 1	
O	0 0 0 0 0 1 1 1 0 0 1 0 1 1 1 0 1 0 0 1 1 0 0 1 1 0 1 0 1 1 1	3 LSB

**Inputs** The input data type is selected by the user.

Input (I): INT, DINT

Number of bits input (BITCNT): INT, DINT

### Illustration



Example: If BITCNT = 3

<b>Inputs</b>	<p>The input data type is selected by the user.</p> <p>Input (I): INT, DINT</p> <p>Number of bits input (BITCNT): INT, DINT</p>
---------------	---

**Outputs**                      Output (O): INT, DINT

### Illustration



Example: If BITCNT = 3


## Standard function blocks

**Inputs** The input data type is selected by the user.  
Input (I): INT, DINT  
Number of bits (BITCNT): INT; DINT

**Outputs** Output (O): INT; DINT

**SHR**  
**(10016)**

**Illustration**

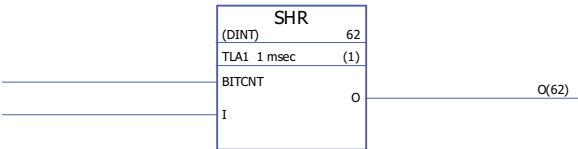

**Execution time** 0.80  $\mu$ s

**Operation** Input bits (I) are rotated to the right by the number (N) of bits defined by BITCNT. The N least significant bits (LSB) of the input are lost and the N most significant bits (MSB) of the output are set to 0.  
Example: If BITCNT = 3


		3 LSB																									
I	1	1	1	0	0	0	0	1	1	1	0	0	1	0	1	1	1	0	1	0	0	1	1	0	0	1	1
O	0	0	0	1	1	1	0	0	0	0	1	1	1	0	0	1	0	1	1	1	0	1	0	0	1	1	0
	3 MSB																										

**Inputs** The input data type is selected by the user.  
Input (I): INT, DINT  
Number of bits (BITCNT): INT; DINT

**Outputs** Output (O): INT; DINT

**XOR**  
**(10017)**

**Illustration**

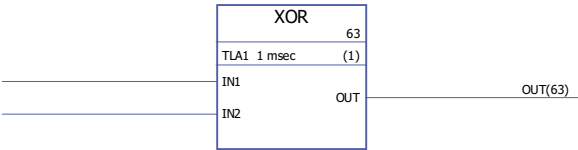

**Execution time** 1.24  $\mu$ s (when two inputs are used) + 0.72  $\mu$ s (for every additional input). When all inputs are used, the execution time is 22.85  $\mu$ s.

**Operation**

The output (OUT) is 1 if one of the connected inputs (IN1...IN32) is 1. Output is zero if all the inputs have the same value.

Example:

IN1	IN2	OUT
0	0	0
0	1	1
1	0	1
1	1	0

The inputs can be inverted.

**Inputs**

The number of inputs (2...32) is selected by the user.

Input (IN1...IN32): Boolean

**Outputs**

Output (OUT): Boolean




Bitwise

BGET

(10034)

Illustration

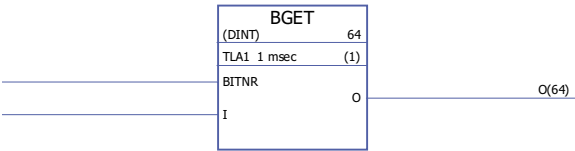

Execution time 0.88 μs

**Operation** The output (O) is the value of the selected bit (BITNR) of the input (I).  
BITNR: Bit number (0 = bit number 0, 31 = bit number 31)  
If bit number is not in the range of 0...31 (for DINT) or 0...15 (for INT), the output is 0.


**Inputs** The input data type is selected by the user.  
Number of the bit (BITNR): DINT  
Input (I): DINT, INT

**Outputs** Output (O): Boolean

BITAND

(10035)

Illustration

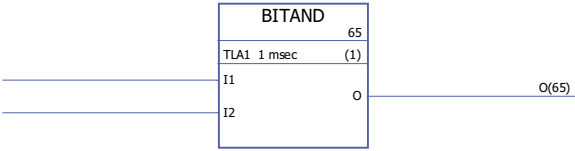

Execution time 0.32 μs

**Operation** The output (O) bit value is 1 if the corresponding bit values of the inputs (I1 and I2) are 1. Otherwise the output bit value is 0.  
Example:


I1	1	1	1	0	0	0	0	1	1	1	0	0	1	0	1	1	1	0	1	0	0	1	1	0	0	1	1	0	1	0	1
I2	0	0	0	0	0	1	1	1	0	0	1	0	1	1	1	0	1	0	0	1	1	0	0	1	0	1	0	1	1	1	1
O	0	0	0	0	0	0	0	0	0	1	0	0	1	0	0	1	0	0	0	1	0	0	1	0	0	1	0	0	1	0	1

**Inputs** Input (I1, I2): DINT

**Outputs** Output (O): DINT

BITOR  
(10036)

Illustration

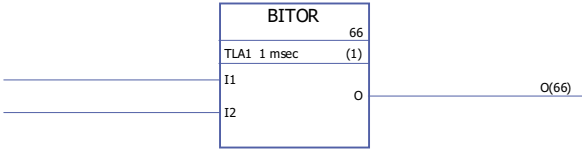

Execution time 0.32  $\mu$ s

Operation The output (O) bit value is 1 if the corresponding bit value of any of the inputs (I1 or I2) is 1. Otherwise the output bit value is 0.  
Example:


I1	1	1	1	0	0	0	0	1	1	1	0	0	1	0	1	1	0	1	0	0	1	1	0	0	1	1	0	1
I2	0	0	0	0	0	1	1	1	0	0	1	0	1	1	1	0	1	0	0	1	1	0	0	1	1	0	1	1
O	1	1	1	0	0	1	1	1	1	1	1	0	1	1	1	1	0	1	1	0	1	1	1	0	1	1	1	1

Input Input (I1, I2): DINT

Output Output (O): DINT

BSET  
(10037)

Illustration

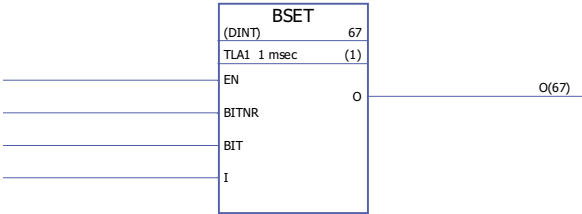

Execution time 1.36  $\mu$ s

Operation The value of a selected bit (BITNR) of the input (I) is set as defined by the bit value input (BIT). The function must be enabled by the enable input (EN).  
BITNR: Bit number (0 = bit number 0, 31 = bit number 31)  
If BITNR is not in the range of 0...31 (for DINT) or 0...15 (for INT) or if EN is reset to zero, the input value is stored to the output as it is (i.e. no bit setting occurs).  
Example:  
EN = 1, BITNR = 3, BIT = 0  
IN = 0000 0000 1111 1111  
O = 0000 0000 1111 0111

Inputs The input data type is selected by the user.  
Enable input (EN): Boolean  
Number of the bit (BITNR): DINT  
Bit value input (BIT): Boolean  
Input (I): INT, DINT


# REG

(10038)

## Outputs

Output (O): INT, DINT

## Illustration

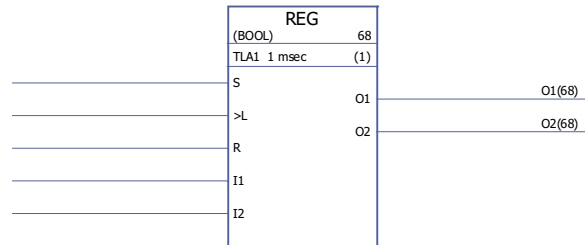

## Execution time

2.27  $\mu$ s (when two inputs are used) + 1.02  $\mu$ s (for every additional input). When all inputs are used, the execution time is 32.87  $\mu$ s.

## Operation

The input (I1...I32) value is stored to the corresponding output (O1...O32) if the load input (L) is set to 1 or the set input (S) is 1. When the load input is set to 1, the input value is stored to the output only once. When the set input is 1, the input value is stored to the output every time the block is executed. The set input overrides the load input. If the reset input (R) is 1, all connected outputs are 0.

Example:

S	R	L	I	O1 <sub>previous</sub>	O1
0	0	0	10	15	15
0	0	0->1	20	15	20
0	1	0	30	20	0
0	1	0->1	40	0	0
1	0	0	50	0	50
1	0	0->1	60	50	60
1	1	0	70	60	0
1	1	0->1	80	0	0

O1<sub>previous</sub> is the previous cycle output value.

## Inputs

The input data type and number of inputs (2...32) are selected by the user.

Set input (S): Boolean

Load input (L): Boolean

Reset input (R): Boolean

Input (I1...I32): Boolean, INT, DINT, REAL, REAL24

## Outputs

Output (O1...O32): Boolean, INT, DINT, REAL, REAL24




## Communication

### D2D\_Conf

(10092)

#### Illustration

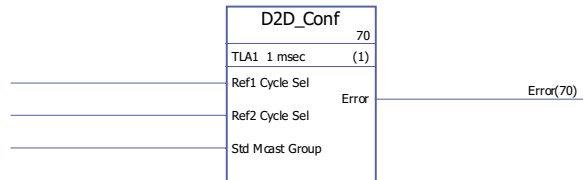

#### Execution time

-

#### Operation

Defines handling interval for drive-to-drive references 1 and 2, and the address (group number) for outgoing standard (non-chained) multicast messages.

The values of the Ref1/2 Cycle Sel inputs correspond to the following intervals:

Value	Handling interval
0	Default (500 $\mu$ s for reference 1; 2 ms for reference 2)
1	250 $\mu$ s
2	500 $\mu$ s
3	2 ms

**Note:** Negative value of Ref2 Cycle Sel disables the handling of Ref2 (if used, it must be disabled in all follower drives).

Allowable values for the Std Mcast Group input are 0 (= multicasting not used) and 1...62 (multicast group).

An unconnected input, or an input in an error state, is interpreted as having the value 0.

The error codes indicated by the Error output are as follows:

Bit	Description
0	REF1_CYCLE_ERR: Value of input Ref1 Cycle Sel out of range
1	REF2_CYCLE_ERR: Value of input Ref2 Cycle Sel out of range
2	STD_MCAST_ERR: Value of input Std Mcast Group out of range

#### Inputs

Drive-to-drive reference 1 handling interval (Ref1 Cycle Sel): INT

Drive-to-drive reference 2 handling interval (Ref2 Cycle Sel): INT

Standard multicast address (Std Mcast Group): INT


#### Outputs

Error output (Error): PB

### D2D\_McastToken

(10096)

#### Illustration

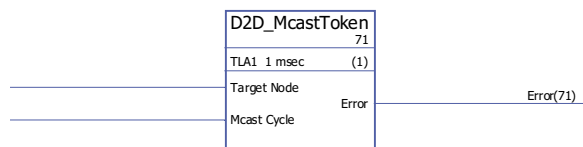

Execution time -

**Operation** Configures the transmission of token messages sent to a follower. Each token authorizes the follower to send one message to another follower or group of followers. For the message types, see the block [D2D\\_SendMessage](#).

**Note:** This block is only supported in the master.

The Target Node input defines the node address the master sends the tokens to; the range is 1...62.

The Mcast Cycle specifies the interval between token messages in the range of 2...1000 milliseconds. Setting this input to 0 disables the sending of tokens.

The error codes indicated by the Error output are as follows:


Bit	Description
0	D2D_MODE_ERR: Drive is not master
5	TOO_SHORT_CYCLE: Token interval is too short, causing overloading
6	INVALID_INPUT_VAL: An input value is out of range
7	GENERAL_D2D_ERR: Drive-to-drive communication driver failed to initialize message

**Inputs** Token recipient (Target Node): INT  
Token interval (Mcast Cycle): INT

**Outputs** Error output (Error): DINT

D2D\_SendMessage  
(10095)

Illustration

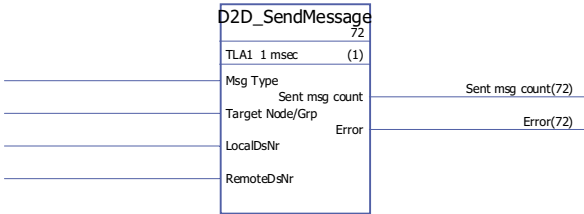

Execution time -

**Operation**

Configures the transmission between the dataset tables of drives.

The Msg Type input defines the message type as follows:

Value	Message type
0	Disabled
1	<p>Master P2P:</p> <p>The master sends the contents of a local dataset (specified by LocalDsNr input) to the dataset table (dataset number specified by RemoteDsNr input) of a follower (specified by Target Node/Grp input).</p> <p>The follower replies by sending the next dataset (RemoteDsNr + 1) to the master (LocalDsNr + 1).</p> <p>The node number of a drive is defined by parameter <a href="#">57.03</a>.</p> <p><b>Note:</b> Only supported in the master drive.</p>
2	<p>Read Remote:</p> <p>The master reads a dataset (specified by RemoteDsNr input) from a follower (specified by Target Node/Grp input) and stores it into local dataset table (dataset number specified by LocalDsNr input).</p> <p>The node number of a drive is defined by parameter <a href="#">57.03</a>.</p> <p><b>Note:</b> Only supported in the master drive.</p>
3	<p>Follower P2P:</p> <p>The follower sends the contents of a local dataset (specified by LocalDsNr input) to the dataset table (dataset number specified by RemoteDsNr input) of another follower (specified by Target Node/Grp input).</p> <p>The node number of a drive is defined by parameter <a href="#">57.03</a>.</p> <p><b>Note:</b> Only supported in a follower drive. A token from the master drive is required for the follower to be able to send the message. See the block <a href="#">D2D_McastToken</a>.</p>
4	<p>Standard Multicast:</p> <p>The drive sends the contents of a local dataset (specified by LocalDsNr input) to the dataset table (dataset number specified by RemoteDsNr input) of a group of followers (specified by Target Node/Grp input).</p> <p>Which multicast group a drive belongs to is defined by the Std Mcast Group input of the D2D_Conf block.</p> <p>A token from the master drive is required for a follower to be able to send the message. See the block <a href="#">D2D_McastToken</a>.</p>
5	<p>Broadcast:</p> <p>The drive sends the contents of a local dataset (specified by LocalDsNr input) to the dataset table (dataset number specified by RemoteDsNr input) of all followers.</p> <p>A token from the master drive is required for a follower to be able to send the message. See the block <a href="#">D2D_McastToken</a>.</p>

The Target Node/Grp input specifies the target drive or multicast group of drives depending on message type. See the message type explanations above.

**Note:** The input must be connected in DriveSPC even if not used.

The LocalDsNr input specifies the number of the local dataset used as the source or the target of the message.

The RemoteDsNr input specifies the number of the remote dataset used as the target or the source of the message.

The Sent msg count output is a wrap-around counter of successfully sent messages.

The error codes indicated by the Error output are as follows:

Bit	Description
0	D2D_MODE_ERR: Drive-to-drive communication not activated, or message type not supported in current drive-to-drive mode (master/follower)
1	LOCAL_DS_ERR: LocalDsNr input out of range (16...199)
2	TARGET_NODE_ERR: Target Node/Grp input out of range (1...62)
3	REMOTE_DS_ERR: Remote dataset number out of range (16...199)
4	MSG_TYPE_ERR: Msg Type input out of range (0...5)
5...6	Reserved
7	GENERAL_D2D_ERR: Unspecified error in D2D driver
8	RESPONSE_ERR: Syntax error in received response
9	TRA_PENDING: Message has not yet been sent
10	REC_PENDING: Response has not yet been received
11	REC_TIMEOUT: No response received
12	REC_ERROR: Frame error in received message
13	REJECTED: Message has been removed from transmit buffer
14	BUFFER_FULL: Transmit buffer full

#### Inputs


Message type (Msg Type): INT  
 Target node or multicast group (Target Node/Grp): INT  
 Local dataset number (LocalDsNr): INT  
 Remote dataset number (RemoteDsNr): INT

#### Outputs

Successfully sent messages counter (Sent msg count): DINT  
 Error output (Error): PB

## DS\_ReadLocal (10094)

#### Illustration

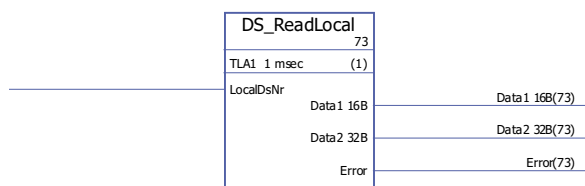

**Execution time** -

#### Operation

Reads the dataset defined by the LocalDsNr input from the local dataset table. One dataset contains one 16-bit and one 32-bit word which are directed to the Data1 16B and Data2 32B outputs respectively.

The LocalDsNr input defines the number of the dataset to be read.

The error codes indicated by the Error output are as follows:

Bit	Description
1	LOCAL_DS_ERR: LocalDsNr out of range (16...199)

#### Inputs

Local dataset number (LocalDsNr): INT




**Outputs**

Contents of dataset (Data1 16B): INT  
Contents of dataset (Data2 32B): DINT  
Error output (Error): DINT

**DS\_WriteLocal**  
**(10093)**

**Illustration**

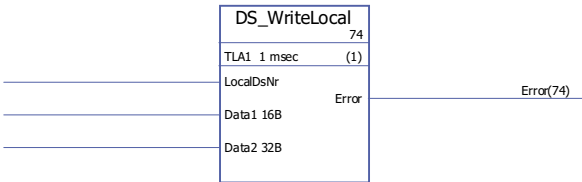

**Execution time** -

**Operation**

Writes data into the local dataset table. Each dataset contains 48 bits; the data is input through the Data1 16B (16 bits) and Data2 32B (32 bits) inputs. The dataset number is defined by the LocalDsNr input.

The error codes indicated by the Error output are as follows:

Bit	Description
1	LOCAL_DS_ERR: LocalDsNr out of range (16...199)

**Inputs**

Local dataset number (LocalDsNr): INT  
Contents of dataset (Data1 16B): INT  
Contents of dataset (Data2 32B): DINT

**Outputs**


Error output (Error): DINT

Comparison

EQ

(10040)

Illustration

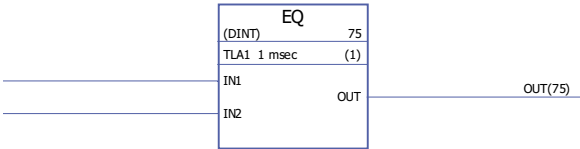

**Execution time** 0.89  $\mu$ s (when two inputs are used) + 0.43  $\mu$ s (for every additional input). When all inputs are used, the execution time is 13.87  $\mu$ s.

**Operation** The output (OUT) is 1 if all the connected input values are equal (IN1 = IN2 = ... = IN32). Otherwise the output is 0.

**Inputs** The input data type and the number of inputs (2...32) are selected by the user.  
Input (IN1...IN32): INT, DINT, REAL, REAL24


**Outputs** Output (OUT): Boolean

GE

>=

(10041)

Illustration

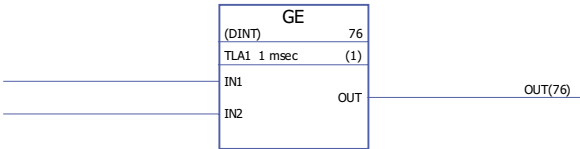

**Execution time** 0.89  $\mu$ s (when two inputs are used) + 0.43  $\mu$ s (for every additional input). When all inputs are used, the execution time is 13.87  $\mu$ s.

**Operation** The output (OUT) is 1 if (IN1  $\geq$  IN2) & (IN2  $\geq$  IN3) & ... & (IN31  $\geq$  IN32). Otherwise the output is 0.

**Inputs** The input data type and the number of inputs (2...32) are selected by the user.  
Input (IN1...IN32): INT, DINT, REAL, REAL24


**Outputs** Output (OUT): Boolean

GT

>

(10042)

Illustration

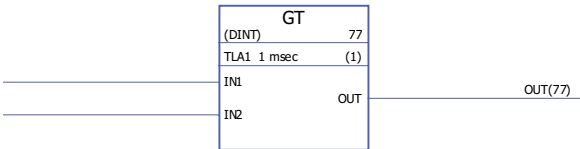


**Execution time** 0.89  $\mu$ s (when two inputs are used) + 0.43  $\mu$ s (for every additional input). When all inputs are used, the execution time is 13.87  $\mu$ s.

LE  
<=  
(10043)

- Operation** The output (OUT) is 1 if (IN1 > IN2) & (IN2 > IN3) & ... & (IN31 > IN32). Otherwise the output is 0.
- Inputs** The input data type and the number of inputs (2...32) are selected by the user.  
Input (IN1...IN32): INT, DINT, REAL, REAL24
- Outputs** Output (OUT): Boolean


Illustration

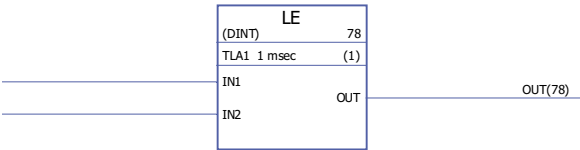

- Execution time** 0.89  $\mu$ s (when two inputs are used) + 0.43  $\mu$ s (for every additional input). When all inputs are used, the execution time is 13.87  $\mu$ s.
- Operation** Output (OUT) is 1 if (IN1  $\leq$  IN2) & (IN2  $\leq$  IN3) & ... & (IN31  $\leq$  IN32). Otherwise the output is 0.
- Inputs** The input data type and the number of inputs (2...32) are selected by the user.  
Input (IN1...IN32): INT, DINT, REAL, REAL24
- Outputs** Output (OUT): Boolean

LT  
<  
(10044)


Illustration

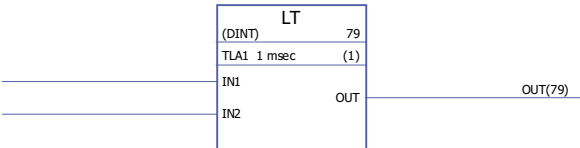

- Execution time** 0.89  $\mu$ s (when two inputs are used) + 0.43  $\mu$ s (for every additional input). When all inputs are used, the execution time is 13.87  $\mu$ s.
- Operation** Output (OUT) is 1 if (IN1 < IN2) & (IN2 < IN3) & ... & (IN31 < IN32). Otherwise the output is 0.
- Inputs** The input data type and the number of inputs (2...32) are selected by the user.  
Input (IN1...IN32): INT, DINT, REAL, REAL24
- Outputs** Output (OUT): Boolean

NE <>  
(10045)

Illustration

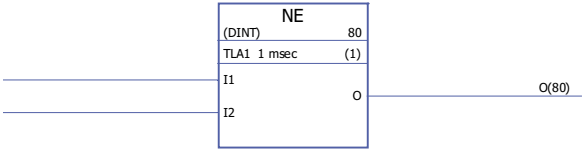


- Execution time** 0.44 µs
- Operation** The output (O) is 1 if I1 <> I2. Otherwise the output is 0.
- Inputs** The input data type is selected by the user.  
Input (I1, I2): INT, DINT, REAL, REAL24
- Outputs** Output (O): Boolean

Conversion

BOOL\_TO\_DINT  
(10018)

Illustration

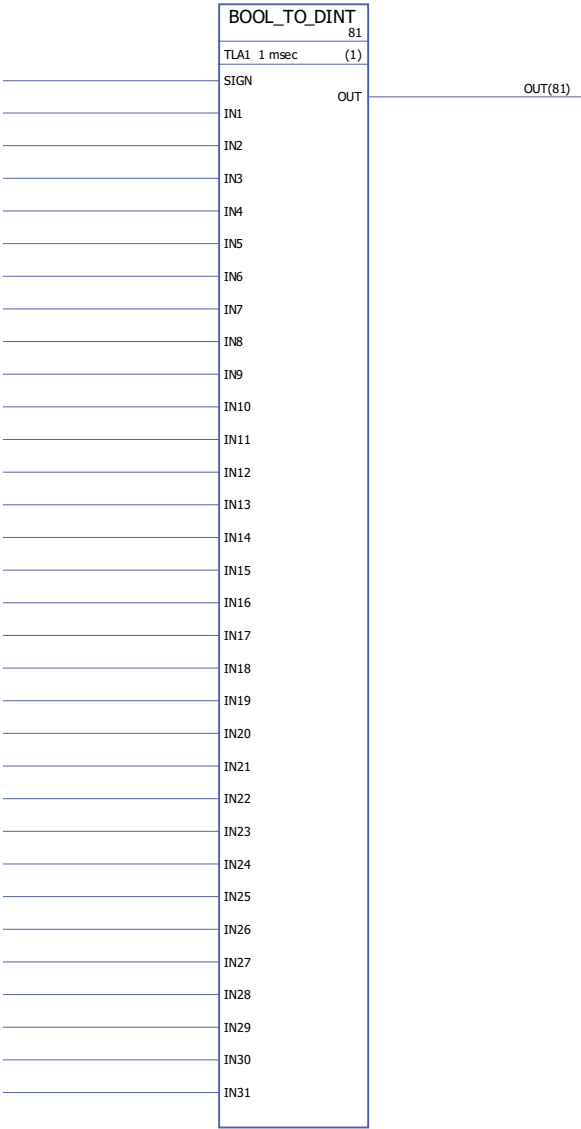

Execution time 13.47 µs

Operation The output (OUT) value is a 32-bit integer value formed from the boolean integer input (IN1...IN31 and SIGN) values. IN1 = bit 0 and IN31 = bit 30.

Example:  
IN1 = 1, IN2 = 0, IN3...IN31 = 1, SIGN = 1  
OUT = 1111 1111 1111 1111 1111 1111 1101  
          SIGN                  IN31...IN1

Input

Output

Sign input (SIGN): Boolean


Input (IN1...IN31): Boolean

Output (OUT): DINT (31 bits + sign)

BOOL\_TO\_INT

(10019)

Illustration

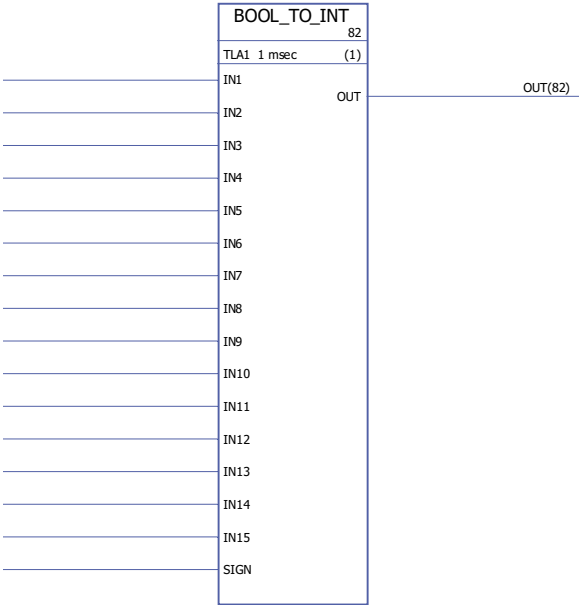

Execution time

Operation

5.00 µs

The output (OUT) value is a 16-bit integer value formed from the boolean integer input (IN1...IN1 and SIGN) values. IN1 = bit 0 and IN15 = bit 14.  
Example:  
IN1...IN15 = 1, SIGN = 0  
OUT = 0111 1111 1111 1111  
          SIGN    IN15...IN1

Inputs

Outputs


Input (IN1...IN15): Boolean

Sign input (SIGN): Boolean

Output (OUT): DINT (15 bits + sign)

DINT\_TO\_BOOL  
(10020)

Illustration

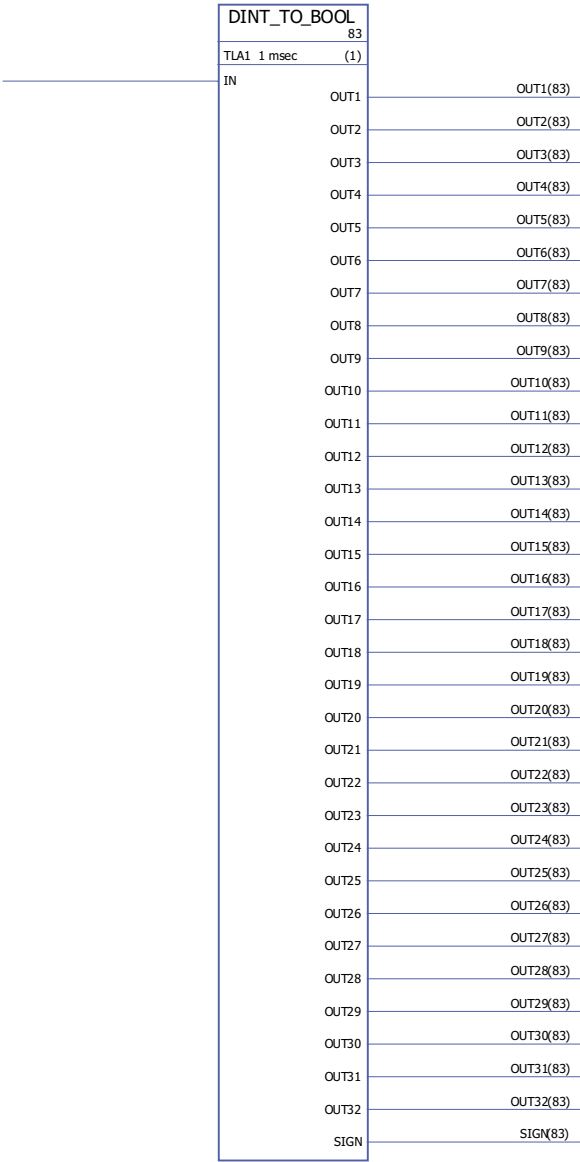

**Execution time**    11.98 µs


**Operation**        The boolean output (OUT1...32) values are formed from the 32-bit integer input (IN) value.  
Example:  
IN = 0 111 1111 1111 1111 1111 1111 1111 1100  
          └──┬──────────┘  
          SIGN        OUT32...OUT1

**Inputs**            Input (IN): DINT

**Outputs**           Output (OUT1...OUT32): Boolean  
Sign output (SIGN): Boolean

DINT\_TO\_INT  
(10021)

Illustration



Execution time 0.53 µs

Operation The output (O) value is a 16-bit integer value of the 32-bit integer input (I) value.  
Examples:


I (31 bits + sign)	O (15 bits + sign)
2147483647	32767
-2147483648	-32767
0	0

Inputs Input (I): DINT

Outputs Output (O): INT

DINT\_TO\_REALn  
(10023)

Illustration

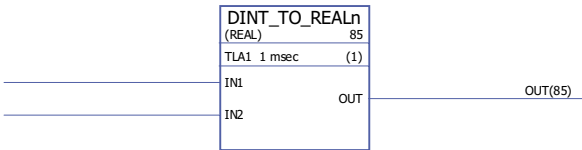

Execution time 7.25 µs

Operation The output (OUT) is the REAL/REAL24 equivalent of the input (IN). Input IN1 is the integer value and input IN2 is the fractional value.  
If one (or both) of the input values is negative, the output value is negative.  
Example (from DINT to REAL):  
When IN1 = 2 and IN2 = 3276, OUT = 2.04999.  
The output value is limited to the maximum value of the selected data type range.

Inputs Input (IN1, IN2): DINT


Outputs The output data type is selected by the user.  
Output (OUT): REAL, REAL24



## DINT\_TO\_REALn\_SIMP

(10022)

### Illustration

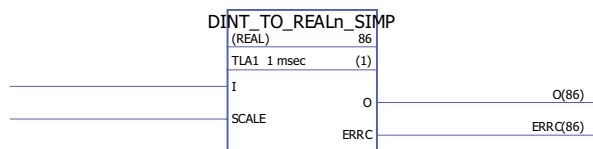

**Execution time** 6.53  $\mu$ s

**Operation** The output (O) is the REAL/REAL24 equivalent of the input (I) divided by the scale input (SCALE).

Error codes indicated at the error output (ERRC) are as follows:

Error code	Description
0	No error
1001	The calculated REAL/REAL24 value exceeds the minimum value of the selected data type range. The output is set to the minimum value.
1002	The calculated REAL/REAL24 value exceeds the maximum value of the selected data type range. The output is set to the maximum value.
1003	The SCALE input is 0. The output is set to 0.
1004	Incorrect SCALE input, i.e. the scale input is < 0 or is not a factor of 10.

Example (from DINT to REAL24):

When I = 205 and SCALE = 100,  $I/SCALE = 205 / 100 = 2.05$  and  $O = 2.04999$ .

### Inputs

Input (I): DINT

Scale input (SCALE): DINT

### Outputs


The output data type is selected by the user.

Output (O): REAL, REAL24

Error output (ERRC): DINT

INT\_TO\_BOOL  
(10024)

Illustration

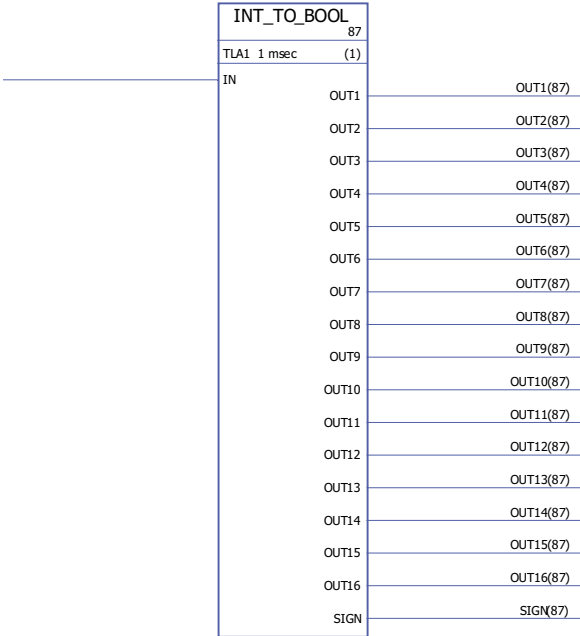

**Execution time** 4.31  $\mu$ s


**Operation** The boolean output (OUT1...16) values are formed from the 16-bit integer input (IN) value.  
Example:  
IN = 0111 1111 1111 1111  
          └──┬──┘  
          SIGN OUT16...OUT1

**Inputs** Input (IN): INT

**Outputs** Output (OUT1...OUT16): Boolean  
Sign output (SIGN): Boolean

INT\_TO\_DINT  
(10025)

Illustration



**Execution time** 0.33  $\mu$ s

**Operation** The output (O) value is a 32-bit integer value of the 16-bit integer input (I) value.


I	O
32767	32767
-32767	-32767
0	0

**Inputs** Input (I): INT

**Outputs** Output (O): DINT

## REAL\_TO\_REAL24 (10026)

**Illustration**



**Execution time** 1.35 µs

**Operation** Output (O) is the REAL24 equivalent of the REAL input (I).  
The output value is limited to the maximum value of the data type.  
Example:

I = 0000 0000 0010 0110 1111 1111 1111 1111  
                     Integer value                      Fractional value


O = 0010 0110 1111 1111 1111 1111 0000 0000  
                     Integer value                      Fractional value

**Inputs** Input (I): REAL

**Outputs** Output (O): REAL24

## REAL24\_TO\_REAL (10027)

**Illustration**



**Execution time** 1.20 µs

**Operation** Output (O) is the REAL equivalent of the REAL24 input (I).  
The output value is limited to the maximum value of the data type range.  
Example:

I = 0010 0110 1111 1111 1111 1111 0000 0000  
                     Integer value                      Fractional value


O = 0000 0000 0010 0110 1111 1111 1111 1111  
                     Integer value                      Fractional value

**Inputs**                    Input (I): REAL24

**Outputs**                Output (O): REAL

**REALn\_TO\_DINT**  
**(10029)**

**Illustration**

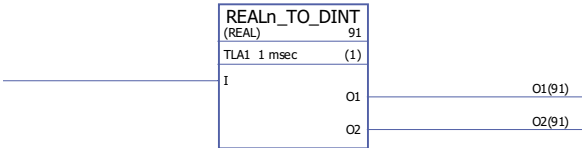

**Execution time**    6.45 µs


**Operation**            Output (O) is the 32-bit integer equivalent of the REAL/REAL24 input (I). Output O1 is the integer value and output O2 is the fractional value.  
The output value is limited to the maximum value of the data type range.  
Example (from REAL to DINT):  
When I = 2.04998779297, O1 = 2 and O2 = 3276.

**Inputs**                The input data type is selected by the user.  
Input (I): REAL, REAL24

**Outputs**              Output (O1, O2): DINT

**REALn\_TO\_DINT\_SIMP**  
**(10028)**

**Illustration**

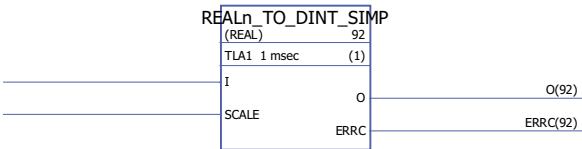

**Execution time**    5.54 µs

**Operation**            Output (O) is the 32-bit integer equivalent of the REAL/REAL24 input (I) multiplied by the scale input (SCALE).  
Error codes are indicated by the error output (ERRC) as follows:

Error code	Description
0	No error
1001	The calculated integer value exceeds the minimum value. The output is set to the minimum value.
1002	The calculated integer value exceeds the maximum value. The output is set to the maximum value.
1003	Scale input is 0. The output is set to 0.
1004	Incorrect scale input, i.e. scale input is < 0 or is not a factor of 10.

Example (from REAL to DINT):  
When I = 2.04998779297and SCALE = 100, O = 204.


<b>Inputs</b>	The input data type is selected by the user. Input (I): REAL, REAL24 Scale input (SCALE): DINT
<b>Outputs</b>	Output (O): DINT Error output (ERRC): DINT

Counters

CTD

(10047)

Illustration

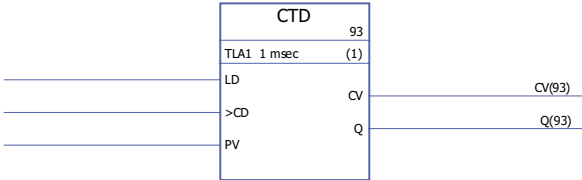

Execution time 0.92 µs

**Operation** The counter output (CV) value is decreased by 1 if the counter input (CD) value changes from 0 -> 1 and the load input (LD) value is 0. If the load input value is 1, the preset input (PV) value is stored as the counter output (CV) value. If the counter output has reached its minimum value -32768, the counter output remains unchanged. The status output (Q) is 1 if the counter output (CV) value ≤ 0.

Example:

LD	CD	PV	Q	CV <sub>prev</sub>	CV
0	1 -> 0	10	0	5	5
0	0 -> 1	10	0	5	5 - 1 = 4
1	1 -> 0	-2	1	4	-2
1	0 -> 1	1	0	-2	1
0	0 -> 1	5	1	1	1 - 1 = 0
1	1 -> 0	-32768	1	0	-32768
0	0 -> 1	10	1	-32768	-32768

CV<sub>prev</sub> is the previous cycle counter output value.


**Inputs** Counter input (CD): Boolean  
Load input (LD): Boolean  
Preset input (PV): INT

**Outputs** Status output (Q): Boolean  
Counter output (CV): INT

CTD\_DINT

(10046)

Illustration

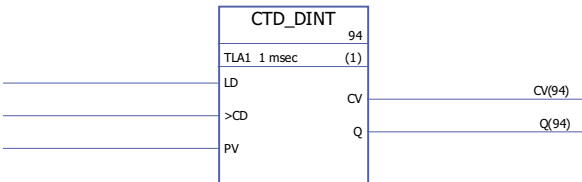

Execution time 0.92 µs

**Operation**      The counter output (CV) value is decreased by 1 if the counter input (CD) value changes from 0 -> 1 and the load input (LD) value is 0. If the load input (LD) value is 1, the preset input (PV) value is stored as the counter output (CV) value. If the counter output has reached its minimum value -2147483648, the counter output remains unchanged.

The status output (Q) is 1 if the counter output (CV) value  $\leq$  0.

Example:


LD	CD	PV	Q	CV <sub>prev</sub>	CV
0	1 -> 0	10	0	5	5
0	0 -> 1	10	0	5	5 - 1 = 4
1	1 -> 0	-2	1	4	-2
1	0 -> 1	1	0	-2	1
0	0 -> 1	5	1	1	1 - 1 = 0
1	1 -> 0	-2147483648	1	0	-2147483648
0	0 -> 1	10	1	-2147483648	-2147483648
CV <sub>prev</sub> is the previous cycle counter output value.					

**Inputs**      Counter input (CD): Boolean  
Load input (LD): Boolean  
Preset input (PV): DINT

**Outputs**      Status output (Q): Boolean  
Counter output (CV): DINT

**CTU**  
**(10049)**

**Illustration**

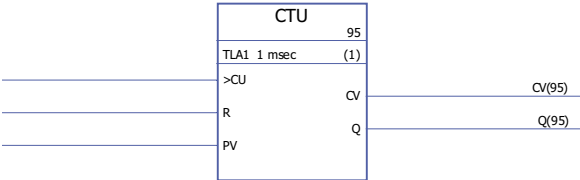

**Execution time**      0.92  $\mu$ s

**Operation** The counter output (CV) value is increased by 1 if the counter input (CU) value changes from 0 -> 1 and the reset input (R) value is 0. If the counter output has reached its maximum value 32767, the counter output remains unchanged.

The counter output (CV) is reset to 0 if the reset input (R) is 1.

The status output (Q) is 1 if the counter output (CV) value  $\geq$  preset input (PV) value.

Example:

R	CU	PV	Q	CV <sub>prev</sub>	CV
0	1 -> 0	20	0	10	10
0	0 -> 1	11	1	10	10 + 1 = 11
1	1 -> 0	20	0	11	0
1	0 -> 1	5	0	0	0
0	0 -> 1	20	0	0	0 + 1 = 1
0	0 -> 1	30	1	32767	32767


CV<sub>prev</sub> is the previous cycle counter output value.

**Inputs** Counter input (CU): Boolean  
Reset input (R): Boolean  
Preset input (PV): INT

**Outputs** Status output (Q): Boolean  
Counter output (CV): INT

CTU\_DINT  
(10048)

Illustration

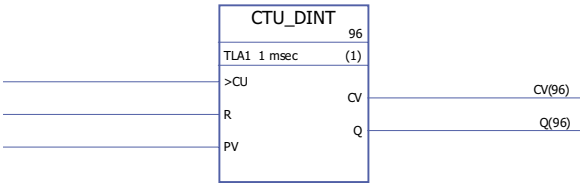

**Execution time** 0.92  $\mu$ s

**Operation** The counter output (CV) value is increased by 1 if the counter input (CU) value changes from 0 -> 1 and the reset input (R) value is 0. If the counter output has reached its maximum value 2147483647, the counter output remains unchanged.

The counter output (CV) is reset to 0 if the reset input (R) is 1.

The status output (Q) is 1 if the counter output (CV) value  $\geq$  preset input (PV) value.

Example:

R	CU	PV	Q	CV <sub>prev</sub>	CV
0	1 -> 0	20	0	10	10
0	0 -> 1	11	1	10	10 + 1 = 11
1	1 -> 0	20	0	11	0
1	0 -> 1	5	0	0	0
0	0 -> 1	20	0	0	0 + 1 = 1
0	0 -> 1	30	1	2147483647	2147483647

CV<sub>prev</sub> is the previous cycle counter output value.



- Inputs


Counter input (CU): Boolean  
Reset input (R): Boolean  
Preset input (PV): DINT
- Outputs

Status output (Q): Boolean  
Counter output (CV): DINT

CTUD

(10051)

Illustration

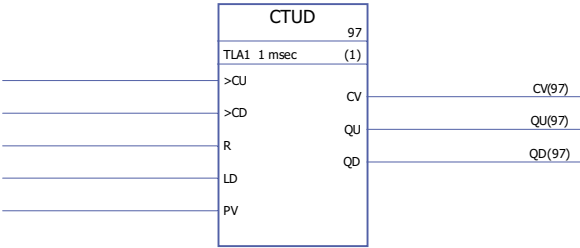

Execution time 1.40 μs

**Operation**

The counter output (CV) value is increased by 1 if the counter input (CU) value changes from 0 → 1 and the reset input (R) value is 0.

The counter output (CV) value is decreased by 1 if the counter input (CD) value changes from 0 → 1 and the load input (LD) value is 0.

If the load input (LD) value is 1, the preset input (PV) value is stored as the counter output (CV) value.

The counter output (CV) is reset to 0 if the reset input (R) is 1.

If the counter output has reached its minimum or maximum value, -32768 or +32767, the counter output remains unchanged until it is reset (R) or until the load input (LD) is set to 1.

The up counter status output (QU) is 1 if the counter output (CV) value  $\geq$  preset input (PV) value.

The down counter status output (QD) is 1 if the counter output (CV) value  $\leq$  0.

Example:

CU	CD	R	LD	PV	QU	QD	CV <sub>prev</sub>	CV
0 → 0	0 → 0	0	0	2	0	1	0	0
0 → 0	0 → 0	0	1	2	1	0	0	2
0 → 0	0 → 0	1	0	2	0	1	2	0
0 → 0	0 → 0	1	1	2	0	1	0	0
0 → 0	0 → 1	0	0	2	0	1	0	0 - 1 = -1
0 → 0	1 → 1	0	1	2	1	0	-1	2
0 → 0	1 → 1	1	0	2	0	1	2	0
0 → 0	1 → 1	1	1	2	0	1	0	0
0 → 1	1 → 0	0	0	2	0	0	0	0 + 1 = 1
1 → 1	0 → 0	0	1	2	1	0	1	2
1 → 1	0 → 0	1	0	2	0	1	2	0
1 → 1	0 → 0	1	1	2	0	1	0	0
1 → 1	0 → 1	0	0	2	0	1	0	0 - 1 = -1
1 → 1	1 → 1	0	1	2	1	0	-1	2
1 → 1	1 → 1	1	0	2	0	1	2	0
1 → 1	1 → 1	1	1	2	0	1	0	0

CV<sub>prev</sub> is the previous cycle counter output value.

**Inputs**

Down counter input (CD): Boolean

Up counter input (CU): Boolean

Load input (LD): Boolean

Reset input (R): Boolean

Preset input (PV): INT

**Outputs**

Down counter status output (QD): Boolean


Up counter status output (QU): Boolean

Counter output (CV): INT

## CTUD\_DINT

### (10050)

#### Illustration

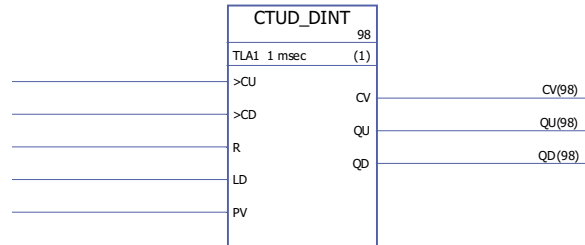

**Execution time** 1.40  $\mu$ s

#### Operation

The counter output (CV) value is increased by 1 if the counter input (CU) value changes from 0 -> 1 and the reset input (R) value is 0.

The counter output (CV) value is decreased by 1 if the counter input (CD) value changes from 0 -> 1 and the load input (LD) value is 0.

If the counter output has reached its minimum or maximum value, -2147483648 or +2147483647, the counter output remains unchanged until it is reset (R) or until the load input (LD) is set.

If the load input (LD) value is 1, the preset input (PV) value is stored as the counter output (CV) value.

The counter output (CV) is reset to 0 if the reset input (R) is 1.

The up counter status output (QU) is 1 if the counter output (CV) value  $\geq$  preset input (PV) value.

The down counter status output (QD) is 1 if the counter output (CV) value  $\leq$  0.

Example:

CU	CD	R	LD	PV	QU	QD	CV <sub>prev</sub>	CV
0 -> 0	0 -> 0	0	0	2	0	1	0	0
0 -> 0	0 -> 0	0	1	2	1	0	0	2
0 -> 0	0 -> 0	1	0	2	0	1	2	0
0 -> 0	0 -> 0	1	1	2	0	1	0	0
0 -> 0	0 -> 1	0	0	2	0	1	0	0 - 1 = -1
0 -> 0	1 -> 1	0	1	2	1	0	-1	2
0 -> 0	1 -> 1	1	0	2	0	1	2	0
0 -> 0	1 -> 1	1	1	2	0	1	0	0
0 -> 1	1 -> 0	0	0	2	0	0	0	0 + 1 = 1
1 -> 1	0 -> 0	0	1	2	1	0	1	2
1 -> 1	0 -> 0	1	0	2	0	1	2	0
1 -> 1	0 -> 0	1	1	2	0	1	0	0
1 -> 1	0 -> 1	0	0	2	0	1	0	0 - 1 = -1
1 -> 1	1 -> 1	0	1	2	1	0	-1	2
1 -> 1	1 -> 1	1	0	2	0	1	2	0
1 -> 1	1 -> 1	1	1	2	0	1	0	0


CV<sub>prev</sub> is the previous cycle counter output value.

<b>Inputs</b>	Down counter input (CD): Boolean
	Up counter input (CU): Boolean
	Load input (LD): Boolean
	Reset input (R): Boolean
	Preset input (PV): DINT
<b>Outputs</b>	Down counter status output (QD): Boolean
	Up counter status output (QU): Boolean
	Counter output (CV): DINT

Edge & bistable

FTRIG  
(10030)

Illustration



Execution time 0.38  $\mu$ s

Operation The output (Q) is set to 1 when the clock input (CLK) changes from 1 to 0. The output is set back to 0 with the next execution of the block. Otherwise the output is 0.

CLK <sub>previous</sub>	CLK	Q
0	0	0
0	1	0
1	0	1 (for one execution cycle time, returns to 0 at the next execution)
1	1	0
CLK <sub>previous</sub> is the previous cycle output value.		


**Note:** The output (Q) is 0 after cold restart and after the first execution of the block. Otherwise the output is 1, when the clock input (CLK) is 1.

Inputs Clock input (CLK): Boolean

Outputs Output (Q): Boolean

RS  
(10032)

Illustration

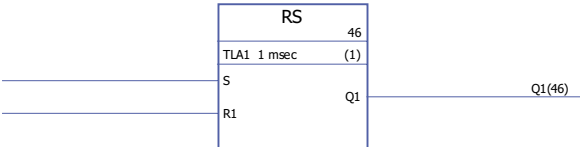

Execution time 0.38  $\mu$ s

**Operation** The output (Q1) is 0 if the set input (S) is 1 and the reset input (R) value is 0. The output will retain the previous output state if the set input (S) and the reset input (R) are 0. The output is 0 if the set input is 0 and the reset input is 1.

Truth table:


S	R	Q1 <sub>previous</sub>	Q1
0	0	0	0
0	0	1	1
0	1	0	0
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	0
1	1	1	0
Q <sub>previous</sub> is the previous cycle output value.			

**Inputs** Set input (S): Boolean  
Reset input (R): Boolean

**Outputs** Output (Q1): Boolean

RTRIG  
(10031)

**Illustration**



**Execution time** 0.38 μs

**Operation** The output (Q) is set to 1 when the clock input (CLK) changes from 0 to 1. The output is set back to 0 with the next execution of the block. Otherwise the output is 0.

CLK <sub>previous</sub>	CLK	Q
0	0	0
0	1	1
1	0	0
1	1	0
CLK <sub>previous</sub> is the previous cycle output value.		


**Note:** The output is 0 after cold restart and after the first execution of the RTRIG block. Otherwise the output is 1, when the clock input is 1.

**Inputs** Clock input (CLK): Boolean

**Outputs** Output (Q): Boolean

SR  
(10033)

Illustration

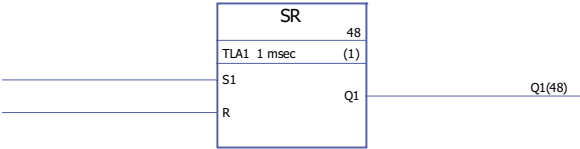

Execution time 0.38 µs

**Operation** The output (Q1) is 1 if the set input (S1) is 1. The output will retain the previous output state if the set input (S1) and the reset input (R) are 0. The output is 0 if the set input is 0 and the reset input is 1.

Truth table:

S1	R	Q1 <sub>previous</sub>	Q1
0	0	0	0
0	0	1	1
0	1	0	0
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	1
Q1 <sub>previous</sub> is the previous cycle output value.			


**Inputs** Set input (S1): Boolean  
Reset input (R): Boolean

**Outputs** Output (Q1): Boolean

Extensions

FIO\_01\_slot1  
(10084)

Illustration

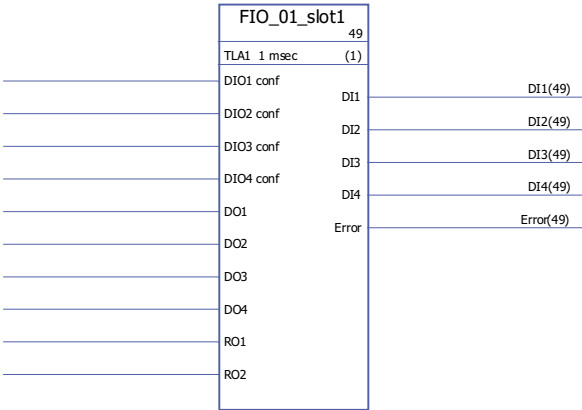

Execution time 8.6 µs

**Operation** The block controls the four digital inputs/outputs (DIO1...DIO4) and two relay outputs (RO1, RO2) of a FIO-01 Digital I/O Extension mounted on slot 1 of the drive control unit. The state of a DIOx conf input of the block determines whether the corresponding DIO on the FIO-01 is an input or an output (0 = input, 1 = output). If the DIO is an output, the DOx input of the block defines its state. The RO1 and RO2 inputs define the state of the relay outputs of the FIO-01 (0 = not energised, 1 = energised). The DIx outputs show the state of the DIOs.


**Inputs** Digital input/output mode selection (DIO1 conf ... DIO4 conf): Boolean  
Digital output state selection (DO1...DO4): Boolean  
Relay output state selection (RO1, RO2): Boolean

**Outputs** Digital input/output state (DI1...DI4): Boolean  
Error output (Error): DINT (0 = No error; 1 = Application program memory full)



FIO\_01\_slot2  
(10085)

Illustration

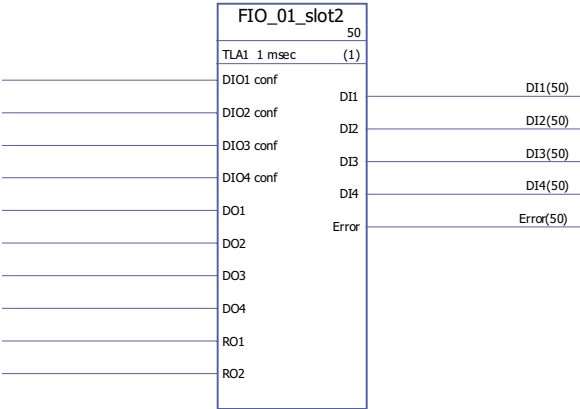

Execution time 8.6 µs

**Operation** The block controls the four digital inputs/outputs (DIO1...DIO4) and two relay outputs (RO1, RO2) of a FIO-01 Digital I/O Extension mounted on slot 2 of the drive control unit.

The state of a DIOx conf input of the block determines whether the corresponding DIO on the FIO-01 is an input or an output (0 = input, 1 = output). If the DIO is an output, the DOx input of the block defines its state.

The RO1 and RO2 inputs define the state of the relay outputs of the FIO-01 (0 = not energised, 1 = energised).


The DIx outputs show the state of the DIOs.

**Inputs** Digital input/output mode selection (DIO1 conf ... DIO4 conf): Boolean  
Digital output state selection (DO1...DO4): Boolean  
Relay output state selection (RO1, RO2): Boolean

**Outputs** Digital input/output state (DI1...DI4): Boolean  
Error output (Error): DINT (0 = No error; 1 = Application program memory full)

FIO\_11\_AI\_slot1  
(10088)

Illustration

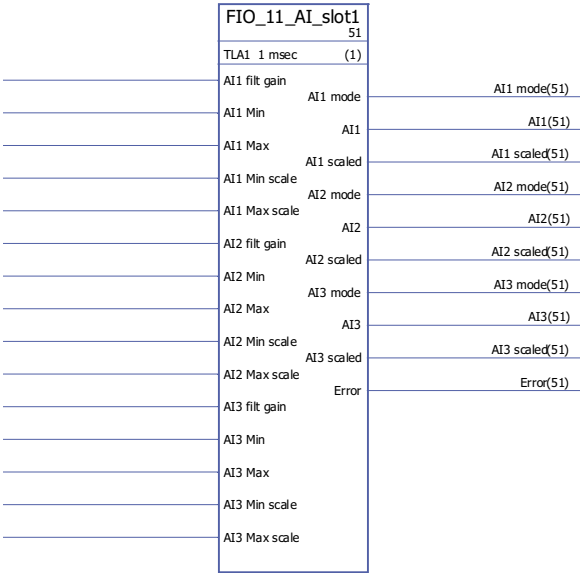


Execution time 11.1 µs


**Operation** The block controls the three analogue inputs (AI1...AI3) of a FIO-11 Analog I/O Extension mounted on slot 1 of the drive control unit.

The block outputs both the unscaled (AIx) and scaled (AIx scaled) actual values of each analogue input. The scaling is based on the relationship between the ranges AIx min ... AIx max and AIx min scale ... AIx max scale.

AIx Min must be smaller than AIx Max; AIx Max Scale can be greater or smaller than AIx Min Scale.

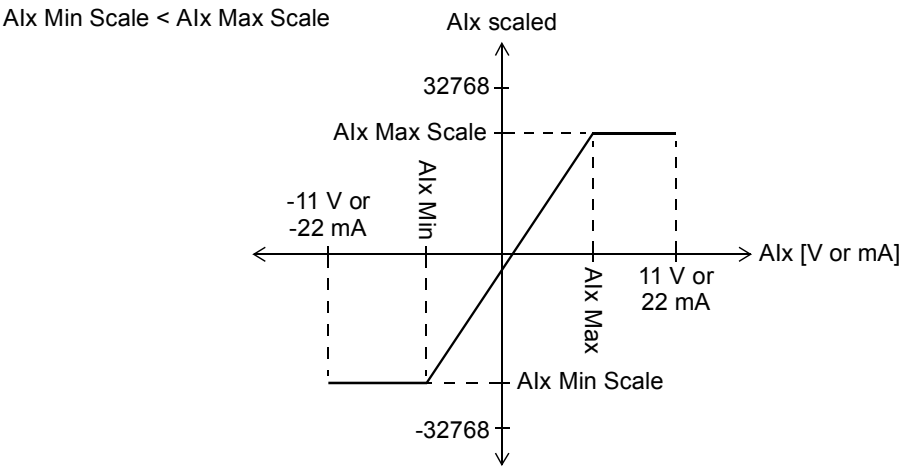

Alx Min Scale > Alx Max Scale

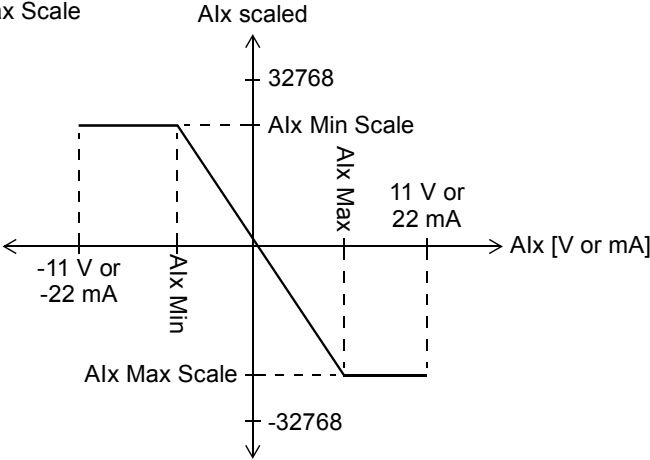

The Alx filt gain inputs determine a filtering time for each input as follows:

Alx filt gain	Filtering time	Notes
0	No filtering	
1	125 $\mu$ s	Recommended setting
2	250 $\mu$ s	
3	500 $\mu$ s	
4	1 ms	
5	2 ms	
6	4 ms	
7	7.9375 ms	

The Alx mode outputs show whether the corresponding input is voltage (0) or current (1). The voltage/current selection is made using the hardware switches on the FIO-11.

**Inputs**


Analogue input filter gain selection (AI1 filt gain ... AI3 filt gain): INT  
Minimum value of input signal (AI1 Min ... AI3 Min): REAL ( $\geq$  -11 V or -22 mA)  
Maximum value of input signal (AI1 Max ... AI3 Max): REAL ( $\leq$  11 V or 22 mA)  
Minimum value of scaled output signal (AI1 Min scale ... AI3 Min scale): REAL  
Maximum value of scaled output signal (AI1 Max scale ... AI3 Max scale): REAL

**Outputs**

Analogue input mode (voltage or current) (AI1 mode ... AI3 mode): Boolean  
Value of analogue input (AI1 ... AI3): REAL  
Scaled value of analogue input (AI1 scaled ... AI3 scaled): REAL  
Error output (Error): DINT (0 = No error; 1 = Application program memory full)

FIO\_11\_AI\_slot2  
(10089)

Illustration

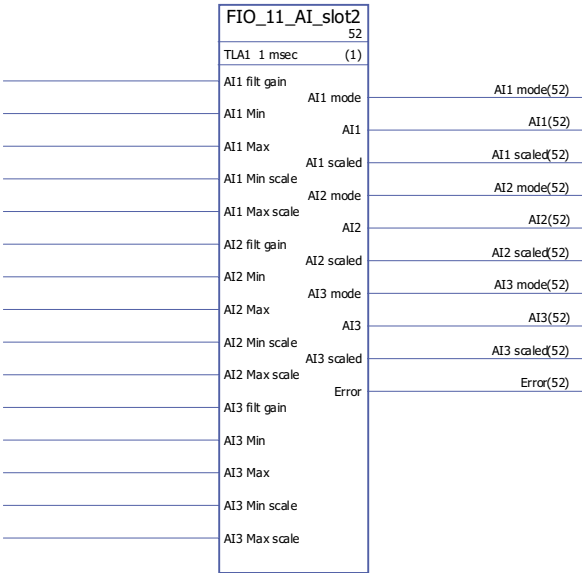


Execution time 11.1 µs


**Operation** The block controls the three analogue inputs (AI1...AI3) of a FIO-11 Analog I/O Extension mounted on slot 2 of the drive control unit.

The block outputs both the unscaled (AIx) and scaled (AIx scaled) actual values of each analogue input. The scaling is based on the relationship between the ranges AIx min ... AIx max and AIx min scale ... AIx max scale.

AIx Min must be smaller than AIx Max; AIx Max Scale can be greater or smaller than AIx Min Scale.

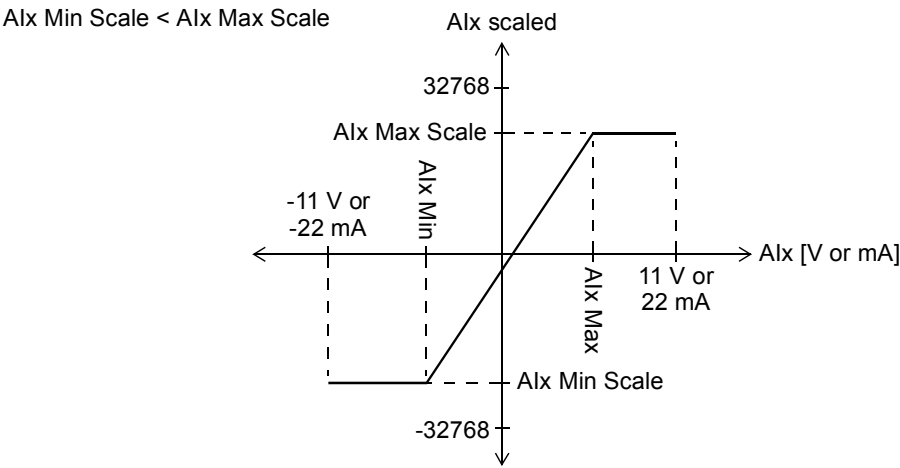

Alx Min Scale > Alx Max Scale

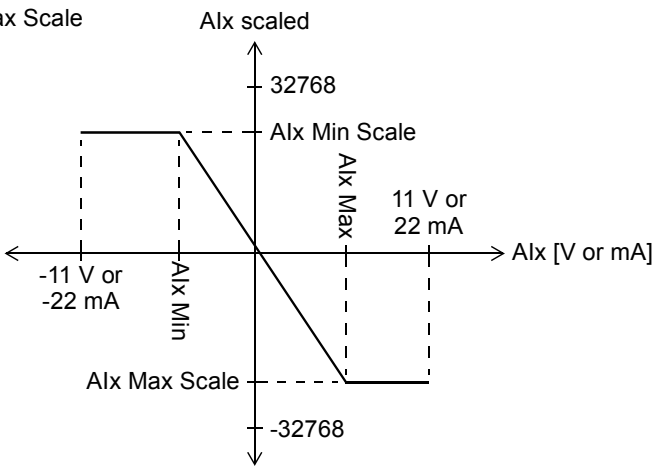

The Alx filt gain inputs determine a filtering time for each input as follows:

Alx filt gain	Filtering time	Notes
0	No filtering	
1	125 $\mu$ s	Recommended setting
2	250 $\mu$ s	
3	500 $\mu$ s	
4	1 ms	
5	2 ms	
6	4 ms	
7	7.9375 ms	

The Alx mode outputs show whether the corresponding input is voltage (0) or current (1). The voltage/current selection is made using the hardware switches on the FIO-11.

**Inputs**


Analogue input filter gain selection (AI1 filt gain ... AI3 filt gain): INT  
 Minimum value of input signal (AI1 Min ... AI3 Min): REAL ( $\geq$  -11 V or -22 mA)  
 Maximum value of input signal (AI1 Max ... AI3 Max): REAL ( $\leq$  11 V or 22 mA)  
 Minimum value of scaled output signal (AI1 Min scale ... AI3 Min scale): REAL  
 Maximum value of scaled output signal (AI1 Max scale ... AI3 Max scale): REAL

**Outputs**

Analogue input mode (voltage or current) (AI1 mode ... AI3 mode): Boolean  
 Value of analogue input (AI1 ... AI3): REAL  
 Scaled value of analogue input (AI1 scaled ... AI3 scaled): REAL  
 Error output (Error): DINT (0 = No error; 1 = Application program memory full)

FIO\_11\_AO\_slot1  
(10090)

Illustration

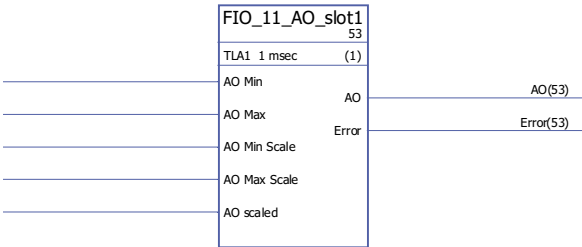


Execution time 4.9 µs


**Operation** The block controls the analogue output (AO1) of a FIO-11 Analog I/O Extension mounted on slot 1 of the drive control unit.

The block converts the input signal (AO scaled) to a 0...20 mA signal (AO) that drives the analogue output; the input range AO Min Scale ... AO Max Scale corresponds to the current signal range of AO Min ... AO Max.

AO Min Scale must be smaller than AO Max Scale; AO Max can be greater or smaller than AO Min.

AO Min < AO Max

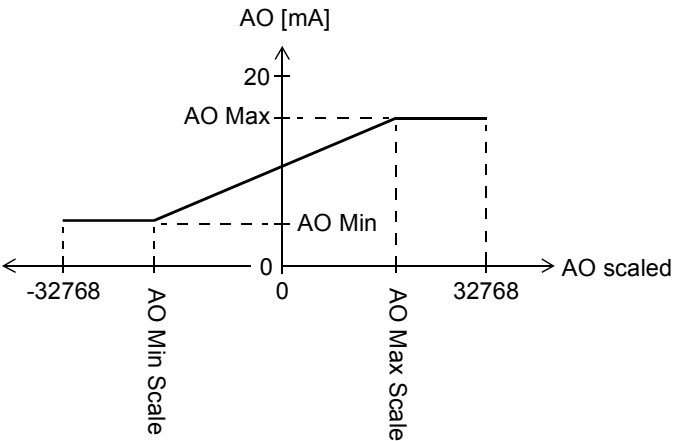

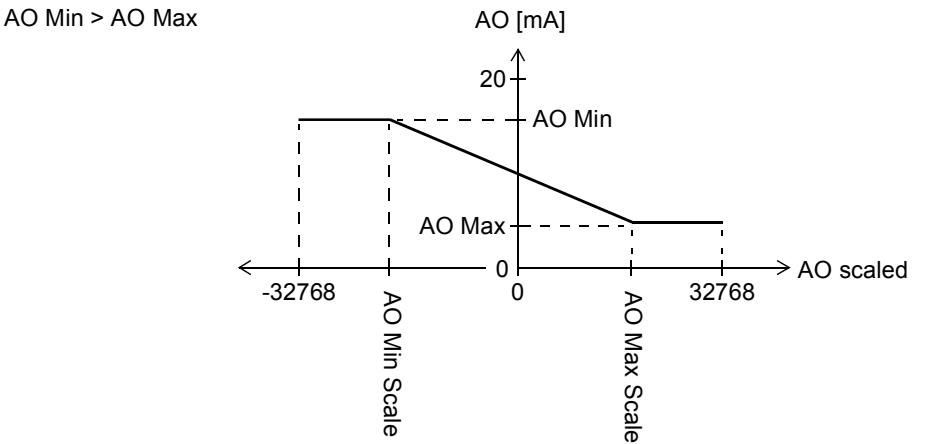


- Inputs

Minimum current signal (AO Min): REAL (0...20 mA)  
Maximum current signal (AO Max): REAL (0...20 mA)  
Minimum input signal (AO Min Scale): REAL  
Maximum input signal (AO Max Scale): REAL  
Input signal (AO scaled): REAL
- Outputs

Analogue output current value (AO): REAL  
Error output (Error): DINT (0 = No error; 1 = Application program memory full)

FIO\_11\_AO\_slot2  
(10091)

Illustration

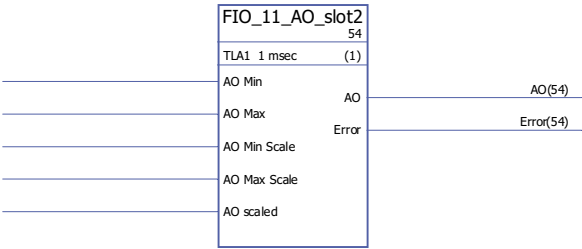

Execution time 4.9 µs


**Operation**

The block controls the analogue output (AO1) of a FIO-11 Analog I/O Extension mounted on slot 2 of the drive control unit.


The block converts the input signal (AO scaled) to a 0...20 mA signal (AO) that drives the analogue output; the input range AO Min Scale ... AO Max Scale corresponds to the current signal range of AO Min ... AO Max.

AO Min Scale must be smaller than AO Max Scale; AO Max can be greater or smaller than AO Min.

AO Min < AO Max

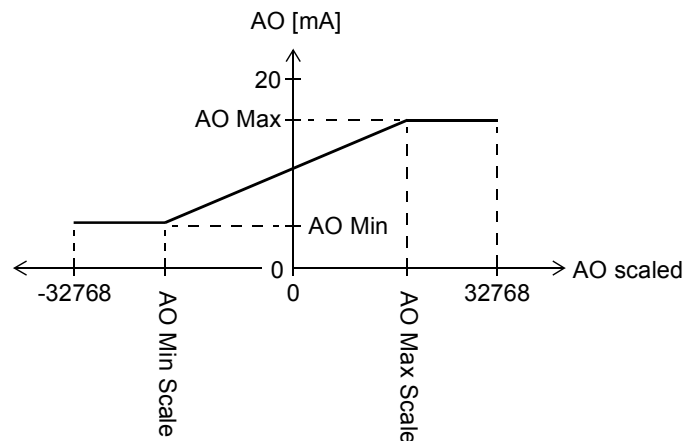

AO Min > AO Max

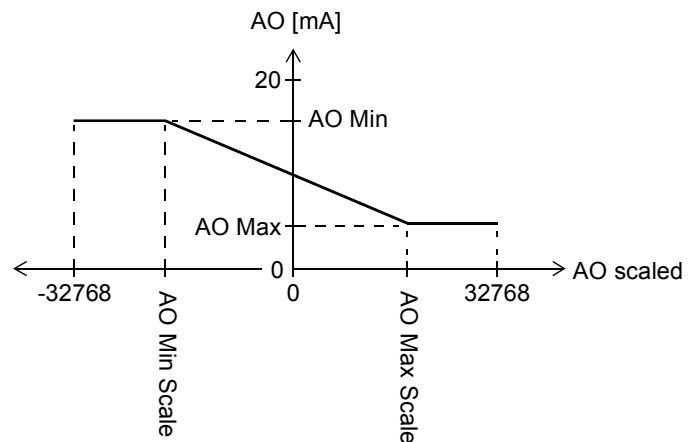**Inputs**

Minimum current signal (AO Min): REAL (0...20 mA)  
 Maximum current signal (AO Max): REAL (0...20 mA)  
 Minimum input signal (AO Min Scale): REAL  
 Maximum input signal (AO Max Scale): REAL  
 Input signal (AO scaled): REAL


**Outputs**

Analogue output current value (AO): REAL  
 Error output (Error): DINT (0 = No error; 1 = Application program memory full)



# FIO\_11\_DIO\_slot1 (10086)

## Illustration

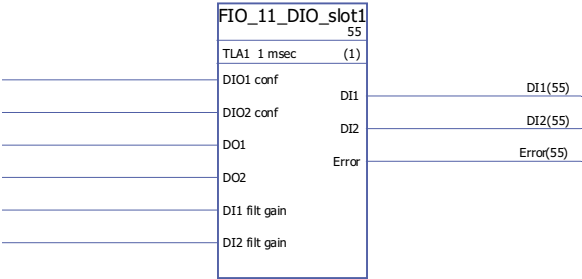

**Execution time** 6.0  $\mu$ s

**Operation** The block controls the two digital inputs/outputs (DIO1, DIO2) of a FIO-11 Digital I/O Extension mounted on slot 1 of the drive control unit.

The state of a DIOx conf input of the block determines whether the corresponding DIO on the FIO-11 is an input or an output (0 = input, 1 = output). If the DIO is an output, the DOx input of the block defines its state.

The DIx outputs show the state of the DIOs.

The DIx filt gain inputs determine a filtering time for each input as follows:


DIx filt gain	Filtering time
0	7.5 $\mu$ s
1	195 $\mu$ s
2	780 $\mu$ s
3	4.680 ms

**Inputs** Digital input/output mode selection (DIO1 conf, DIO2 conf): Boolean  
Digital output state selection (DO1, DO2): Boolean  
Digital input filter gain selection (DI1 filt gain, DI2 filt gain): INT

**Outputs** Digital input/output state (DI1, DI2): Boolean  
Error output (Error): DINT (0 = No error; 1 = Application program memory full)

# FIO\_11\_DIO\_slot2 (10087)

## Illustration

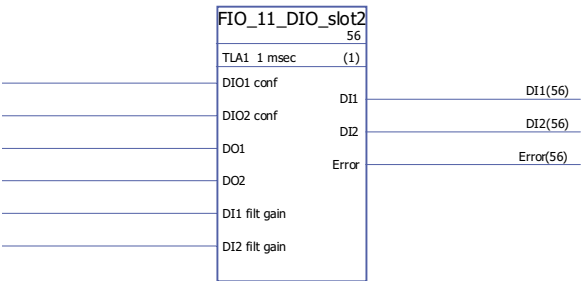

**Execution time** 6.0  $\mu$ s

**Operation**

The block controls the two digital inputs/outputs (DIO1, DIO2) of a FIO-11 Digital I/O Extension mounted on slot 2 of the drive control unit.

The state of a DIOx conf input of the block determines whether the corresponding DIO on the FIO-11 is an input or an output (0 = input, 1 = output). If the DIO is an output, the DOx input of the block defines its state.

The DIx outputs show the state of the DIOs.

The DIx filt gain inputs determine a filtering time for each input as follows:

DIx filt gain	Filtering time
0	7.5 $\mu$ s
1	195 $\mu$ s
2	780 $\mu$ s
3	4.680 ms

**Inputs**

Digital input/output mode selection (DIO1 conf, DIO2 conf): Boolean

Digital output state selection (DO1, DO2): Boolean

Digital input filter gain selection (DI1 filt gain, DI2 filt gain): INT

**Outputs**

Digital input/output state (DI1, DI2): Boolean


Error output (Error): DINT (0 = No error; 1 = Application program memory full)

Feedback & algorithms

CRITSPEED

(10068)

Illustration

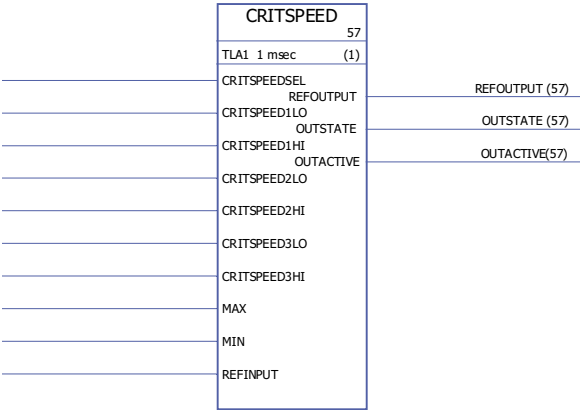


Execution time 4.50 µs

Operation

A critical speeds function block is available for applications where it is necessary to avoid certain motor speeds or speed bands because of e.g. mechanical resonance problems. The user can define three critical speeds or speed bands.

Example: An application has vibrations in the range of 540 to 690 rpm and 1380 to 1560 rpm. To make the drive made to jump over the vibration speed ranges:

- activate the critical speeds function (CRITSPEEDSEL = 1),
- set the critical speed ranges as in the figure below.

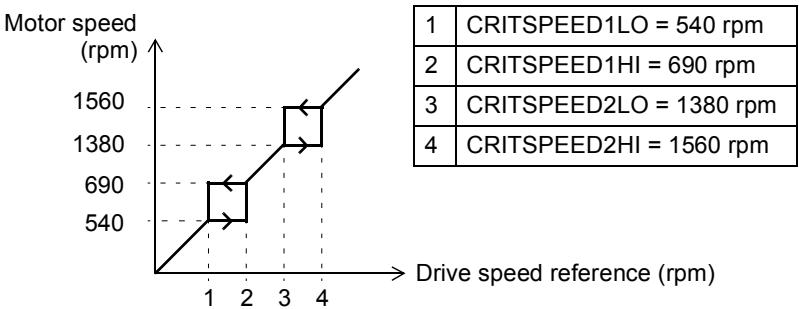

Output OUTACTIVE is set to 1 when the output reference (REFOUTPUT) is different from the input reference (REFINPUT).

The output is limited by the defined minimum and maximum limits (MIN and MAX).


Output OUTSTATE indicates in which critical speed range the operation point is.

Inputs

- Critical speed activation input (CRITSPEEDSEL): Boolean
- Reference input (REFINPUT): REAL
- Minimum/maximum critical speed range input (CRITSPEEDNLO / CRITSPEEDNHI): REAL
- Minimum/maximum input (MIN/MAX): REAL

**Outputs**                      Reference output (REFOUTPUT): REAL  
Output state (OUTSTATE): REAL  
Output active (OUTACTIVE): Boolean

**CYCLET**  
**(10074)**

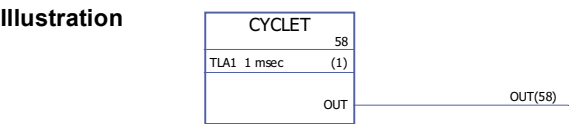


**Execution time**    0.00 µs

**Operation**            Output (OUT) is the execution time of the selected function block.

**Inputs**                -

**Outputs**              Output (OUT): DINT. 1 = 1 µs

**DATA CONTAINER**  
**(10073)**

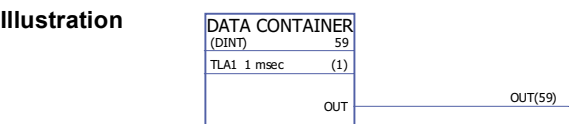


**Execution time**    0.00 µs

**Operation**            Output (OUT) is the array data used by the XTAB and YTAB tables in block [FUNG-1V](#) (page [340](#)). Note that the array is defined with the output pin.

**Inputs**                -

**Outputs**              The output data type and the number of coordinate pairs are selected by the user.  
Output (OUT): DINT, INT, REAL or REAL24

**FUNG-1V**  
**(10072)**

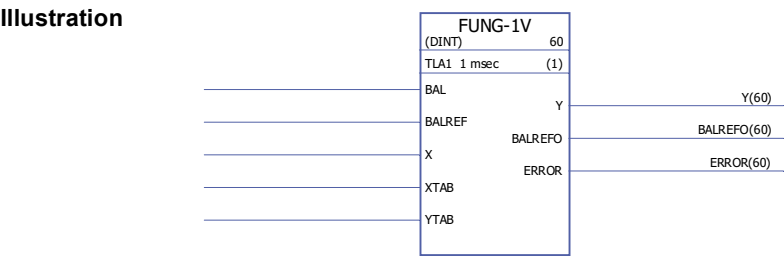

**Execution time**    9.29 µs


**Operation**

The output (Y) at the value of the input (X) is calculated with linear interpolation from a piecewise linear function.

$$Y = Y_k + (X - X_k)(Y_{k+1} - Y_k) / (X_{k+1} - X_k)$$

The piecewise linear function is defined by the X and Y vector tables (XTAB and YTAB). For each X-value in the XTAB table, there is a corresponding Y-value in the YTAB table. The values in XTAB and YTAB must be in ascending order (i.e. from low to high).

XTAB and YTAB values are defined with the DriveSPC tool.

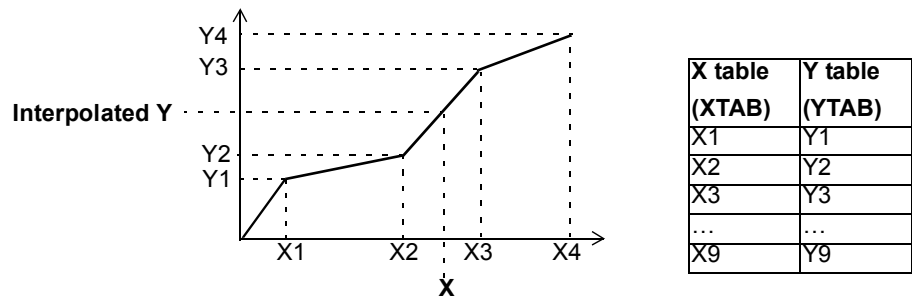

The balancing function (BAL) permits the output signal to track an external reference and gives a smooth return to the normal operation. If BAL is set to 1, output Y is set to the value of the balance reference input (BALREF). The X value which corresponds to this Y value is calculated with linear interpolation and it is indicated by the balance reference output (BALREFO).

If the X input is outside the range defined by the XTAB table, the output Y is set to the highest or lowest value in the YTAB table and the ERROR output is set to 1.

If BALREF is outside the range defined by the YTAB table when balancing is activated (BAL: 0 -> 1), the output Y is set to the value of the BALREF input and BALREFO output is set to the highest or lowest value in the XTAB table. (ERROR output is 0).

ERROR output is set to 1 when the number of the XTAB and YTAB inputs are different. When ERROR is 1, the FUNG-1V block will not function. XTAB and YTAB tables are defined in the [DATA CONTAINER](#) block (on page [340](#)).

**Inputs**

The input data type is selected by the user.

X value input (X): DINT, INT, REAL, REAL24

Balance input (BAL): Boolean

Balance reference input (BALREF): DINT, INT, REAL, REAL24.

X table input (XTAB): DINT, INT, REAL, REAL24

Y table input (YTAB): DINT, INT, REAL, REAL24

**Outputs**


Y value output (Y): DINT, INT, REAL, REAL24

Balance reference output (BALREFO): DINT, INT, REAL, REAL24

Error output (ERROR): Boolean

INT  
(10065)

Illustration

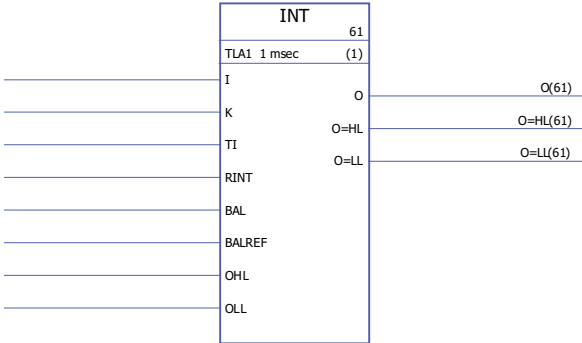

Execution time 4.73 μs

**Operation** The output (O) is the integrated value of the input (I):  
$$O(t) = K/TI \left( \int I(t) dt \right)$$
  
Where TI is the integration time constant and K is the integration gain.  
The step response for the integration is:  
$$O(t) = K \times I(t) \times t/TI$$
  
The transfer function for the integration is:  
$$G(s) = K \ 1/sTI$$
  
The output value is limited according to the defined minimum and maximum limits (OLL and OHL). If the value is below the minimum value, output O = LL is set to 1. If the value exceeds the maximum value, output O = HL is set to 1. The output (O) retains its value when the input signal I(t) = 0.  
The integration time constant is limited to value 2147483 ms. If the time constant is negative, zero time constant is used.  
If the ratio between the cycle time and the integration time constant  $Ts/TI < 1$ ,  $Ts/TI$  is set to 1.  
The integrator is cleared when the reset input (RINT) is set to 1.  
If BAL is set to 1, output O is set to the value of the input BALREF. When BAL is set back to 0, normal integration operation continues.


**Inputs** Input (I): REAL  
Gain input (K): REAL  
Integration time constant input (TI): DINT, 0...2147483 ms  
Integrator reset input (RINT): Boolean  
Balance input (BAL): Boolean  
Balance reference input (BALREF): REAL  
Output high limit input (OHL): REAL  
Output low limit input (OLL): REAL

**Outputs** Output (O): REAL  
High limit output (O=HL): Boolean  
Low limit output (O=LL): Boolean

# MOTPOT

(10067)

Illustration

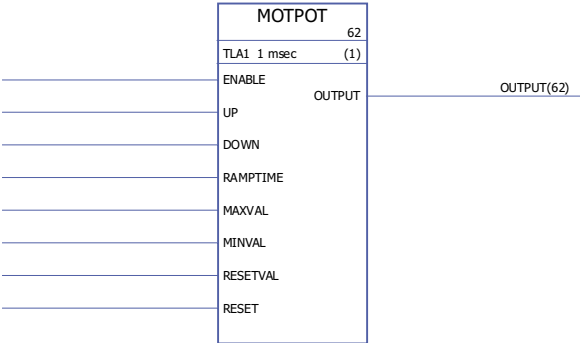

Execution time 2.92 μs

**Operation** The motor potentiometer function controls the rate of change of the output from the minimum to the maximum value and vice versa.

The function is enabled by setting the ENABLE input to 1. If the up input (UP) is 1, the output reference (OUTPUT) is increased to the maximum value (MAXVAL) with the defined ramp time (RAMPTIME). If the down input (DOWN) is 1, the output value is decreased to the minimum value (MINVAL) with the defined ramp time. If the up and down inputs are activated/deactivated simultaneously, the output value is not increased/decreased.

If the RESET input is 1, the output will be reset to the value defined by the reset value input (RESETVAL) or to the value defined by the minimum input (MINVAL), whichever is higher.

If the ENABLE input is 0, the output is zero.

During power recycle the previous values can be stored to the memory (storing must be activated by the user). **Note:** Memory storing is not supported yet.

Digital inputs are normally used as up and down inputs.

**Inputs** Function enable input (ENABLE): Boolean

Up input (UP): Boolean

Down input (DOWN): Boolean

Ramp time input (RAMPTIME): REAL (seconds) (i.e. the time required for the output to change from the minimum to the maximum value or from the maximum to the minimum value)

Maximum reference input (MAXVAL): REAL

Minimum reference input (MINVAL): REAL


Reset value input (RESETVAL): REAL

Reset input (RESET): Boolean

**Outputs** Output (OUTPUT) REAL

PID  
(10075)

Illustration

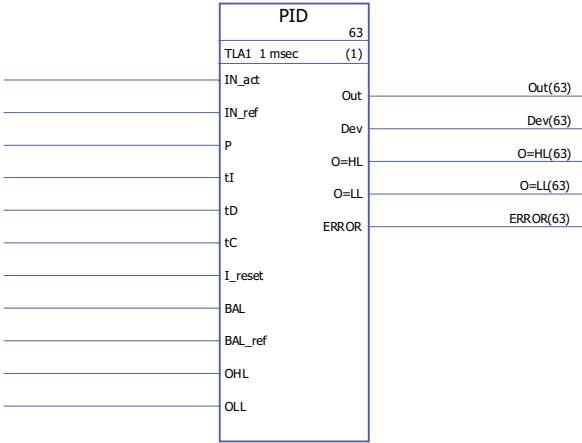

Execution time 15.75 µs



**Operation**

The PID controller can be used for closed-loop control systems. The controller includes anti-windup correction and output limitation.

The PID controller output (Out) before limitation is the sum of the proportional ( $U_P$ ), integral ( $U_I$ ) and derivative ( $U_D$ ) terms:

$$\text{Out}_{\text{unlimited}}(t) = U_P(t) + U_I(t) + U_D(t)$$

$$U_P(t) = P \times \text{Dev}(t)$$

$$U_I(t) = P/tI \times \left[ \int \text{Dev}(\tau) d\tau + tC \times (\text{Out}(t) - \text{Out}_{\text{unlimited}}(t)) \right]$$

$$U_D(t) = P \times tD \times d(\text{Dev}(t))/dt$$

Integrator:

The integral term can be cleared by setting  $I\_reset$  to 1. Note that the anti-windup correction is simultaneously disabled. When  $I\_reset$  is 1, the controller acts as a PD controller.

If integration time constant  $tI$  is 0, the integral term will not be updated.

Smooth return to normal operation is guaranteed after errors or abrupt input value changes. This is achieved by adjusting the integral term so that the output will retain its previous value during these situations.

Limitation:

The output is limited by the defined minimum and maximum values, OLL and OHL:

If the actual value of the output reaches the specified minimum limit, output  $O=LL$  is set to 1.

If the actual value of the output reaches the specified maximum limit, output  $O=HL$  is set to 1.

Smooth return to normal operation after limitation is requested if and only if the anti-windup correction is not used, i.e. when  $tI = 0$  or  $tC = 0$ .

Error codes:

Error codes are indicated by the error output (ERROR) as follows

Error code	Description
1	The minimum limit (OLL) exceeds the maximum limit (OHL).
2	Overflow with $U_P$ , $U_I$ , or $U_D$ calculation

Balancing:

The balancing function (BAL) permits the output signal to track an external reference and gives a smooth return to the normal operation. If BAL is set to 1, the output (Out) is set to the value of the balance reference input (BAL\_ref). Balance reference is limited by the defined minimum and maximum limits (OLL and OHL).


Anti-windup:

Anti-windup correction time constant is defined by input  $tC$ . If  $tC = 0$  or  $tI = 0$ , anti-windup correction is disabled.

Inputs	Proportional gain input (P): REAL
	Integration time constant input (tI): REAL. 1 = 1 ms
	Derivation time constant input (tD): REAL. 1 = 1 ms
	Antiwind-up correction time constant input (tC): IQ6. 1 = 1 ms
	Output high limit input (OHL): REAL
	Output low limit input (OLL): REAL
	Actual input (IN_act): REAL
	Reference input (IN_ref): REAL
	Integrator reset input (I_reset): Boolean
	Balance input (BAL): Boolean
Outputs	Balance reference input (BAL_ref): REAL
	Output (Out): REAL
	Error code output (ERROR): INT32
	Deviation output (Dev): REAL (= actual -reference = IN_act - IN_ref)
	High limit output (O=HL): Boolean
	Low limit output (O=LL): Boolean

RAMP  
(10066)

Illustration

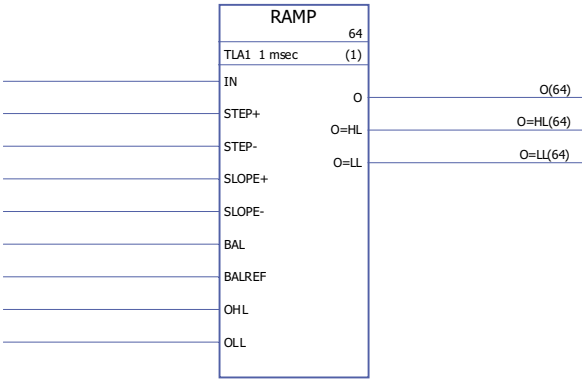

Execution time	4.23 µs
Operation	Limits the rate of the change of the signal.
	The input signal (IN) is connected directly to the output (O) if the input signal does not exceed the defined step change limits (STEP+ and STEP-). If the input signal change exceeds these limits, the output signal change is limited by the maximum step change (STEP+/STEP- depending on the direction of rotation). After this the output signal is accelerated/decelerated according to the defined ramp times (SLOPE+/SLOPE-) until the input and output signal values are equal.
	The output is limited by the defined minimum and maximum values (OLL and OHL):
	If the actual value of the output exceeds the specified minimum limit (OLL), output O=LL is set to 1.
	If the actual value of the output exceeds the specified maximum limit (OHL), output O=HL is set to 1.
	If balancing input (BAL) is set to 1, the output (O) is set to the value of the balance reference input (BAL_ref). Balancing reference is also limited by the defined minimum and maximum values (OLL and OHL).

- Inputs


Input (IN): REAL  
Maximum positive step change input (STEP+): REAL  
Maximum negative step change input (STEP-): REAL  
Positive ramp input (SLOPE+): REAL  
Negative ramp input (SLOPE-): REAL  
Balance input (BAL): Boolean  
Balance reference input (BALREF): REAL  
Output high limit input (OHL): REAL  
Output low limit input (OLL): REAL
- Outputs

Output (O): REAL  
High limit output (O=HL): Boolean  
Low limit output (O=LL): Boolean

REG-G

(10102)

Illustration

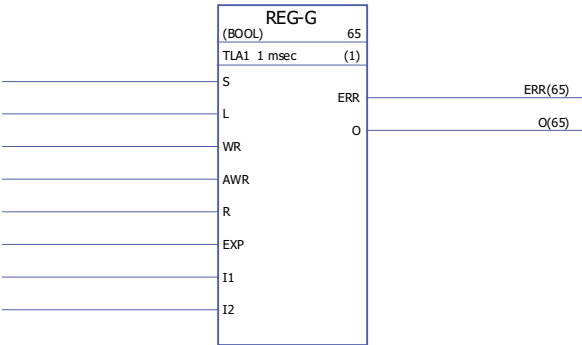

Execution time

-

Operation

Assembles individual variables to a single variable of array data type. The data type can be INT, DINT, REAL16, REAL24 or Boolean.

When input S is set, data is continuously assembled at the group variable of the output. The group variable of the output consists of group data from the EXP input and the values of the inputs I1...1n (in this order). The element acts as a latch when input S is reset; the latest data assembled then remains at the output.

If S is reset and L changes state from 0 to 1, an assembly is performed to output O during this program cycle. If S or R is set, L has no effect.

Data can be changed at an optional place by specifying the address (integer 1...C2) through the AWR input. The new data value is entered through the input to the specified address when WR goes from 0 to 1. If AWR is 0 and WR goes to 1, array data is read from the input EXP to their respective places. Places corresponding to the ordinary inputs are not affected.

When input R is set, data at all places in the array register is cleared and all further entry is prevented. R overrides both S and L.


If WR is set, the address at AWR is checked and if its value is greater than the number of inputs, or if it is negative, the error output ERR is set to 1. If the resulting output array (EXP and the inputs combined) is longer than supported, ERR is set to 2. Otherwise ERR is 0.

Whenever an error is detected, ERR is set within one cycle. No place in the register is affected when an error occurs.

Inputs	Set (S): Boolean, INT, DINT, REAL, REAL24
	Load (L): Boolean, INT, DINT, REAL, REAL24
	Write (WR): Boolean, INT, DINT, REAL, REAL24
	Write address (AWR): INT
	Reset (R): Boolean
	Expander (EXP): IArray
	Data input (I1...In): Boolean, INT, DINT, REAL, REAL24
Outputs	Error (ERR): INT
	Array data output (O): OC1

**SOLUTION\_FAULT**  
**(10097)**

**Illustration**

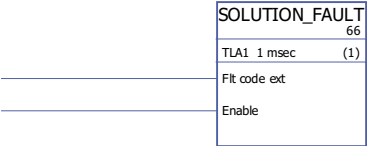


Execution time	-
Operation	When the block is enabled (by setting the Enable input to 1), a fault (F-0317 SOLUTION_FAULT) is generated by the drive. The value of the Flt code ext input is recorded by the fault logger.
Inputs	Fault code extension (Flt code ext): DINT Generate fault (Enable): Boolean
Outputs	-

Filters

FILT1

(10069)

Illustration

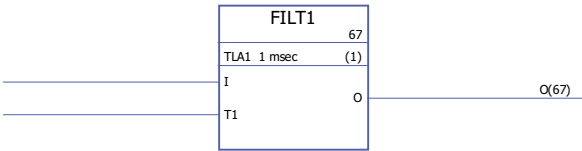

Execution time 7.59  $\mu$ s

**Operation** The output (O) is the filtered value of the input (I) value and the previous output value ( $O_{prev}$ ). The FILT1 block acts as 1st order low pass filter.

**Note:** Filter time constant (T1) must be selected so that  $T1/Ts < 32767$ . If the ratio exceeds 32767, it is considered as 32767. Ts is the cycle time of the program in ms.

If  $T1 < Ts$ , the output value is the input value.

The step response for a single pole low pass filter is:

$$O(t) = I(t) \times (1 - e^{-t/T1})$$

The transfer function for a single pole low pass filter is:

$$G(s) = 1 / (1 + sT1)$$

**Inputs** Input (I): REAL


Filter time constant input (T1): DINT, 1 = 1 ms

**Outputs** Output (O): REAL

FILT2

(10070)

Illustration

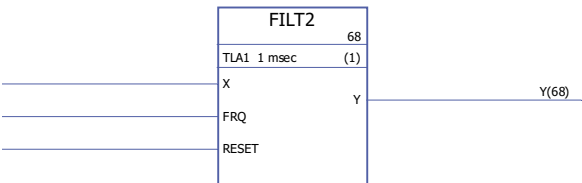

Execution time 6.30  $\mu$ s




**Operation** The output (Y) is the filtered value of the input (X). The FILT2 block acts as a 2nd order low pass filter.


When the RESET input value is set to 1, the input is connected to the output without filtering.

**Notes:**

- The -3 dB cutoff frequency (FRQ) is limited to its maximum value (16383 Hz).
- The frequency of the input signal must be less than half of sampling frequency ( $f_s$ ) – any higher frequencies are aliased to the allowable range. The sampling frequency is defined by the time level of the block; for example, 1 ms corresponds to a sampling frequency of 1000 Hz.

The following diagrams show the frequency responses for 1, 2, 5 and 10 ms time levels. The -3 dB cutoff level is represented as the horizontal line at 0.7 gain.

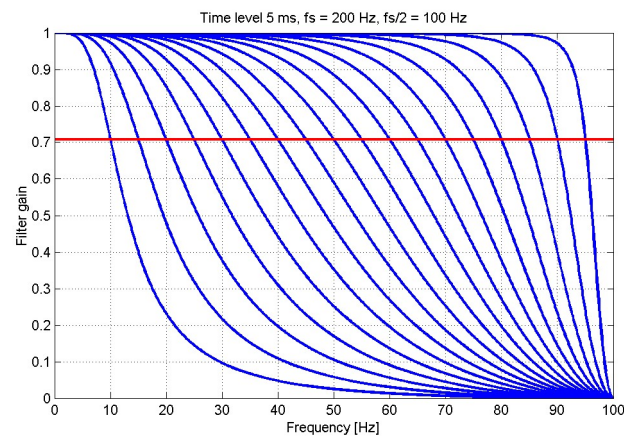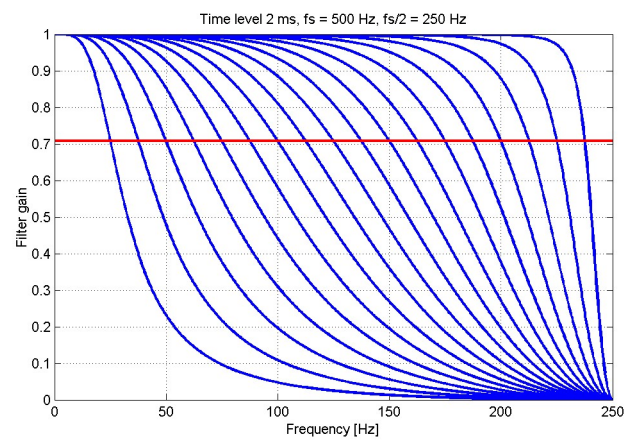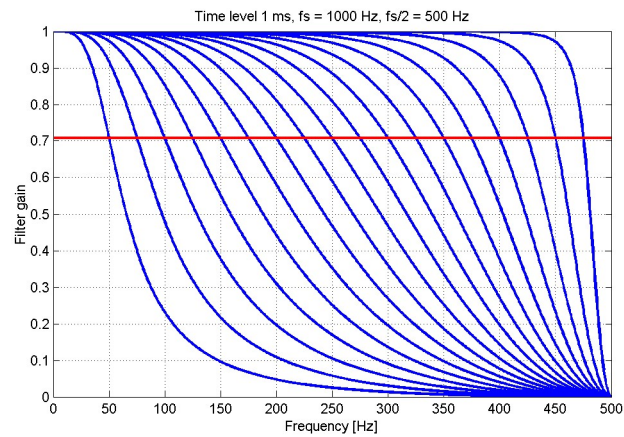



Input (X): REAL  
-3 dB cutoff frequency input (FRQ): DINT (0...16383 Hz)  
Reset input (RESET): Boolean

Output (Y): REAL

**(10071)**

LEAD/LAG		69
TLA1 1 msec	(1)	
X		Y(69)
ALPHA		
Tc		
RESET		

5.55  $\mu$ s

The output (Y) is the filtered value of the input (X). When  $\text{ALPHA} > 1$ , the function block acts as a lead filter. When  $\text{ALPHA} < 1$ , the function block acts as a lag filter. When  $\text{ALPHA} = 1$ , no filtering occurs.

$$(1 + \text{ALPHAT}_{\text{cs}}) / (1 + T_{\text{cs}})$$

If ALPHA or  $T_c < 0$ , the negative input value is set to zero before filtering.

Input (X): REAL  
Lead/Lag filter type input (ALPHA): REAL  
Time constant input (Tc): REAL  
Reset input (RESET): Boolean


Output (Y): REAL

Parameters

GetBitPtr

(10099)

Illustration



Execution time

-

Operation

Reads the status of one bit within a parameter value cyclically.  
The Bit ptr input specifies the parameter group, index and bit to be read.  
The output (Out) provides the value of the bit.

Inputs

Parameter group, index and bit (Bit ptr): DINT


Outputs

Bit status (Out): DINT

GetValPtr

(10098)

Illustration



Execution time

-

Operation

Reads the value of a parameter cyclically.  
The Par ptr input specifies the parameter group and index to be read.  
The output (Out) provides the value of the parameter.

Inputs

Parameter group and index (Par ptr): DINT


Outputs

Parameter value (Out): DINT

PARRD

(10082)

Illustration

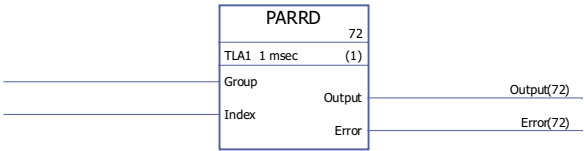

Execution time

6.00 µs



Operation

Reads the value of a parameter (specified by the Group and Index inputs). If the parameter is a pointer parameter, the Output pin provides the number of the source parameter instead of its value.

Error codes are indicated by the error output (Error) as follows:

Error code	Description
0	No error
≠ 0	Error

See also blocks [PARRDINTR](#) and [PARRDPTR](#).

Inputs

Parameter group input (Group): DINT

Parameter index input (Index): DINT


Outputs

Output (Output): DINT

Error output (Error): DINT

PARRDINTR

(10101)

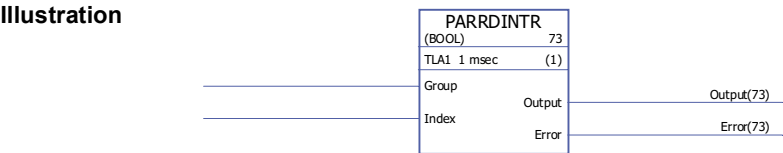

Execution time

-

Operation

Reads the internal (non-scaled) value of a parameter (specified by the Group and Index inputs). The value is provided by the Output pin.

Error codes are indicated by the error output (Error) as follows:

Error code	Description
0	No error or busy
≠ 0	Error

Inputs

Parameter group (Group): DINT

Parameter index (Index): DINT


Outputs

Output (Output): Boolean, INT, DINT, REAL, REAL24

Error output (Error): DINT

PARRDPTR

(10100)

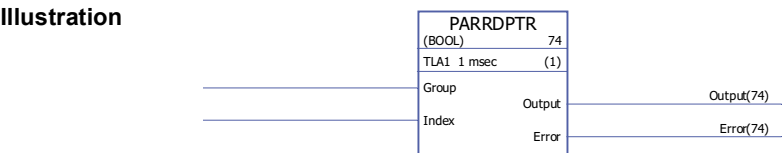

Execution time

-

**Operation** Reads the internal (non-scaled) value of the source of a pointer parameter. The pointer parameter is specified using the Group and Index inputs.

The value of the source selected by the pointer parameter is provided by the Output pin.

Error codes are indicated by the error output (Error) as follows:


Error code	Description
0	No error or busy
≠ 0	Error

**Inputs** Parameter group (Group): DINT  
Parameter index (Index): DINT

**Outputs** Output (Output): Boolean, INT, DINT, REAL, REAL24  
Error output (Error): DINT

**PARWR**  
**(10080)**

**Illustration**

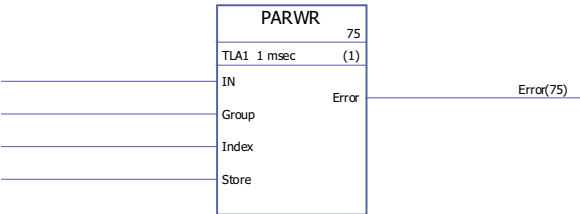

**Execution time** 14.50 µs

**Operation** The input value (IN) is written to the defined parameter (Group and Index).

The new parameter value is stored to the flash memory if the store input (Store) is 1.

**Note:** Cyclic parameter value storing can damage the memory unit. Parameter values should be stored only when necessary.

Error codes are indicated by the error output (Error) as follows:

Error code	Description
0	No error
< > 0	Error

**Inputs** Input (IN): DINT  
Parameter group input (Group): DINT  
Parameter index input (Index): DINT  
Store input (Store): Boolean


**Outputs** Error output (Error): DINT

Selection

LIMIT

(10052)

Illustration

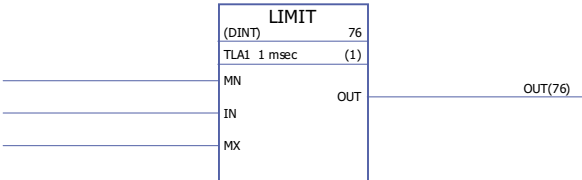


- Execution time** 0.53  $\mu$ s
- Operation** The output (OUT) is the limited input (IN) value. Input is limited according to the minimum (MN) and maximum (MX) values.
- Inputs** The input data type is selected by the user.  
Maximum input limit (MX): INT, DINT, REAL, REAL24  
Minimum input limit (MN): INT, DINT, REAL, REAL24  
Input (IN): INT, DINT, REAL, REAL24
- Outputs** Output (OUT): INT, DINT, REAL, REAL24

MAX

(10053)

Illustration

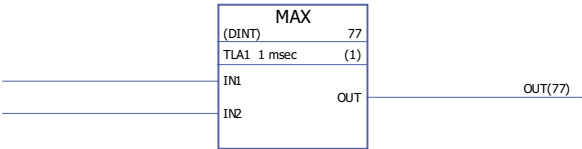


- Execution time** 0.81  $\mu$ s (when two inputs are used) + 0.53  $\mu$ s (for every additional input). When all inputs are used, the execution time is 16.73  $\mu$ s.
- Operation** The output (OUT) is the highest input value (IN).
- Inputs** The input data type and the number of inputs (2...32) are selected by the user.  
Input (IN1...IN32): INT, DINT, REAL, REAL24
- Outputs** Output (OUT): INT, DINT, REAL, REAL24

MIN

(10054)

Illustration

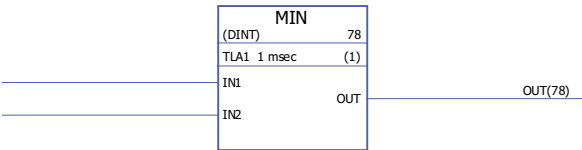


- Execution time** 0.81  $\mu$ s (when two inputs are used) + 0.52  $\mu$ s (for every additional input). When all inputs are used, the execution time is 16.50  $\mu$ s.

Operation	The output (OUT) is the lowest input value (IN).
Inputs	The input data type and the number of inputs (2...32) are selected by the user. Input (IN1...IN32): INT, DINT, REAL, REAL24
Outputs	Output (OUT): INT, DINT, REAL, REAL24

**MUX**  
**(10055)**


Illustration

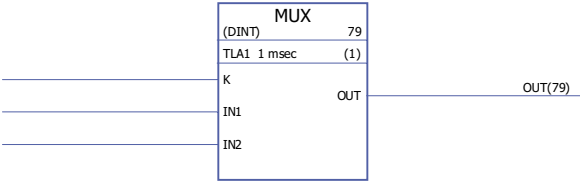

Execution time	0.70 $\mu$ s
Operation	The value of an input (IN) selected by the address input (K) is stored to the output (OUT). If the address input is 0, negative or exceeds the number of the outputs, the output is 0.
Inputs	The input data type and number of inputs (2...32) are selected by the user. Address input (K): DINT Input (IN1...IN32): INT, DINT, REAL, REAL24
Outputs	Output (OUT): INT, DINT, REAL, REAL24

**SEL**  
**(10056)**

Illustration

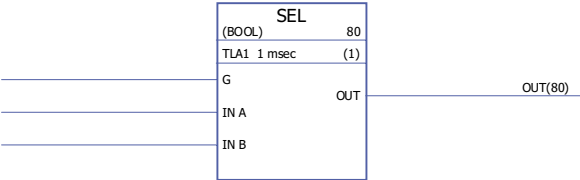


Execution time	1.53 $\mu$ s
Operation	The output (OUT) is the value of the input (IN) selected by the selection input (G). If G = 0: OUT = IN A. If G = 1: OUT = IN B.
Inputs	The input data type is selected by the user. Selection input (G): Boolean Input (IN A, IN B): Boolean, INT, DINT, REAL, REAL24
Outputs	Output (OUT): Boolean, INT, DINT, REAL, REAL24

Switch & Demux

DEMUX-I

(10061)

Illustration

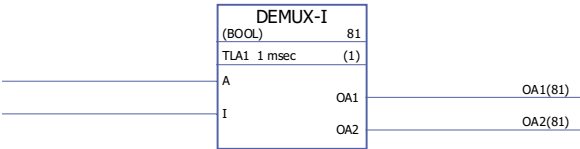


- Execution time** 1.38  $\mu$ s (when two inputs are used) + 0.30  $\mu$ s (for every additional input). When all inputs are used, the execution time is 10.38  $\mu$ s.
- Operation** Input (I) value is stored to the output (OA1...OA32) selected by the address input (A). All other outputs are 0.  
If the address input is 0, negative or exceeds the number of the outputs, all outputs are 0.
- Inputs** The input data type is selected by the user.  
Address input (A): DINT  
Input (I): INT, DINT, Boolean, REAL, REAL24
- Outputs** The number of the output channels (2...32) is selected by the user.  
Output (OA1...OA32): INT, DINT, REAL, REAL24, Boolean

DEMUX-MI

(10062)

Illustration

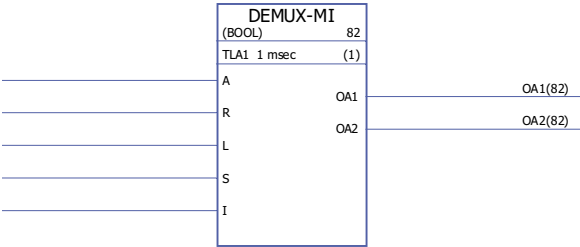

- Execution time** 0.99  $\mu$ s (when two inputs are used) + 0.25  $\mu$ s (for every additional input). When all inputs are used, the execution time is 8.4  $\mu$ s.

**Operation**      The input (I) value is stored to the output (OA1...OA32) selected by the address input (A) if the load input (L) or the set input (S) is 1. When the load input is set to 1, the input (I) value is stored to the output only once. When the set input is set to 1, the input (I) value is stored to the output every time the block is executed. The set input overrides the load input.

                         If the reset input (R) is 1, all connected outputs are 0.

                         If the address input is 0, negative or exceeds the number of the outputs, all outputs are 0.

                         Example:

S	L	R	A	I	OA1	OA2	OA3	OA4
1	0	0	2	150	0	150	0	0
0	0	0	2	120	0	150	0	0
0	1	0	3	100	0	150	100	0
1	0	0	1	200	200	150	100	0
1	1	0	4	250	200	150	100	250
1	1	1	2	300	0	0	0	0

**Inputs**              The input data type is selected by the user.

                         Set input (S): Boolean

                         Load input (L): Boolean

                         Reset input (R): Boolean

                         Address input (A): DINT


                         Input (I): DINT, INT, REAL, REAL24, Boolean

**Outputs**            The number of the output channels (2...32) is selected by the user.

                         Output (OA1...OA32): DINT, INT, REAL, REAL24, Boolean

**SWITCH**  
**(10063)**

**Illustration**

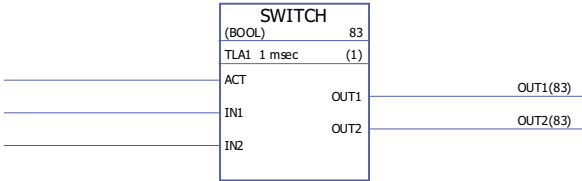

**Execution time**    0.68 µs (when two inputs are used) + 0.50 µs (for every additional input). When all inputs are used, the execution time is 15.80 µs.

**Operation**            The output (OUT) is equal to the corresponding input (IN) if the activate input (ACT) is 1. Otherwise the output is 0.

**Inputs**                The input data type and the number of inputs (2...32) are selected by the user.

                         Activate input (ACT): Boolean


                         Input (IN1...IN32): INT, DINT, REAL, REAL24, Boolean

**Outputs**              Output (OUT1...OUT32): INT, DINT, REAL, REAL24, Boolean

# SWITCHC

(10064)

Illustration

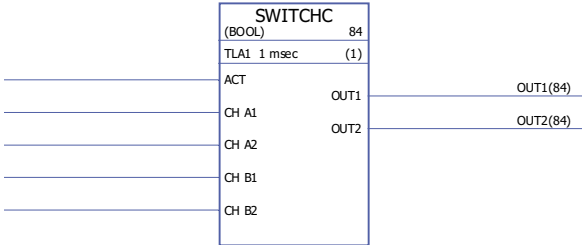


- Execution time** 1.53  $\mu$ s (when two inputs are used) + 0.73  $\mu$ s (for every additional input). When all inputs are used, the execution time is 23.31  $\mu$ s.
- Operation** The output (OUT) is equal to the corresponding channel A input (CH A1...32) if the activate input (ACT) is 0. The output is equal to the corresponding channel B input (CH B1...32) if the activate input (ACT) is 1.
- Inputs** The input data type and the number of inputs (2...32) are selected by the user.  
Activate input (ACT): Boolean  
Input (CH A1...CH A32, CH B1...CH B32): INT, DINT, REAL, REAL24, Boolean
- Outputs** Output (OUT1...OUT32): INT, DINT, REAL, REAL24, Boolean

Timers

MONO

(10057)

Illustration

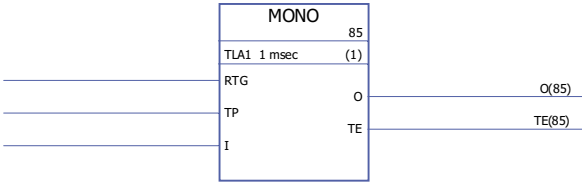


Execution time 1.46 μs

**Operation** The output (O) is set to 1 and the timer is started, if the input (I) is set to 1. The output is reset to 0 when the time defined by the time pulse input (TP) has elapsed. Elapsed time (TE) count starts when the output is set to 1 and stops when the output is set to 0.


If RTG is 0, a new input pulse during the time defined by TP has no effect on the function. The function can be restarted only after the time defined by TP has elapsed.

If RTG is 1, a new input pulse during the time defined by TP restarts the timer and sets the elapsed time (TE) to 0.

Example 1: MONO is not re-triggable, i.e. RTG = 0.

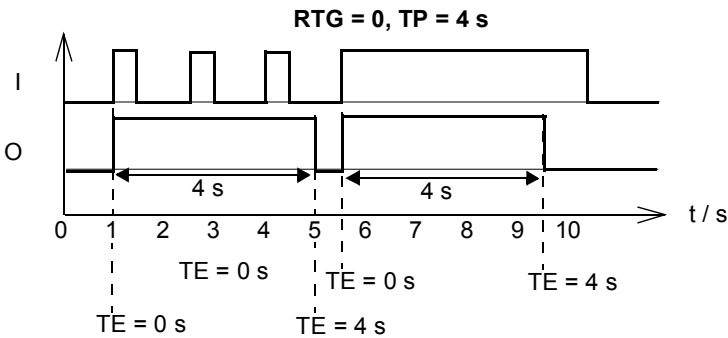

Example 2: MONO is re-triggable, i.e. RTG = 1.

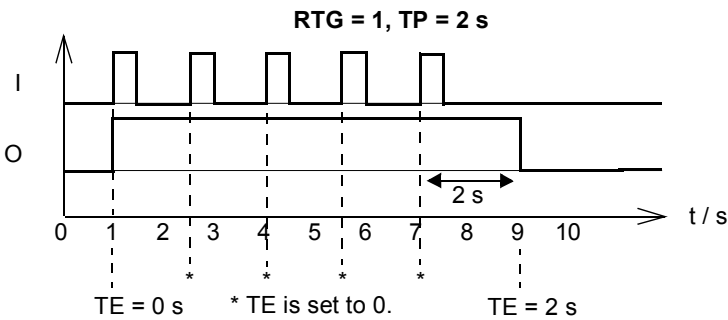


**Inputs** Re-trigger input (RTG): Boolean  
Input (I): Boolean  
Time pulse input (TP): DINT (1 = μs)

**Outputs** Output (O): Boolean  
Time elapsed output (TE): DINT (1 = 1 μs)



TOF  
(10058)


Illustration

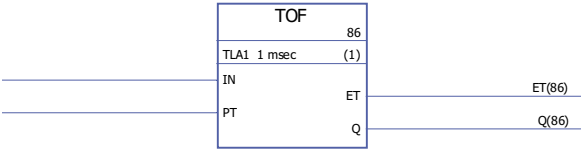

Execution time 1.10  $\mu$ s

**Operation** The output (Q) is set to 1, when the input (IN) is set to 1. The output is reset to zero when the input has been 0 for a time defined by the pulse time input (PT). Elapsed time count (TE) starts when the input is set to 0 and stops when the input is set to 1.

Example:

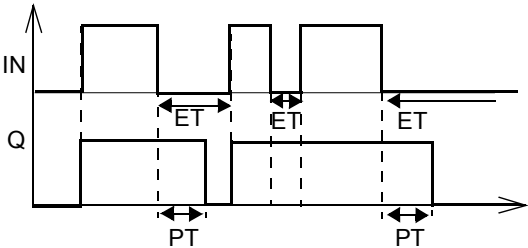


**Inputs** Input (IN): Boolean  
Pulse time input (PT): DINT (1 = 1  $\mu$ s)

**Outputs** Output (Q): Boolean  
Elapsed time output (ET): DINT (1 = 1  $\mu$ s)

TON  
(10059)


Illustration

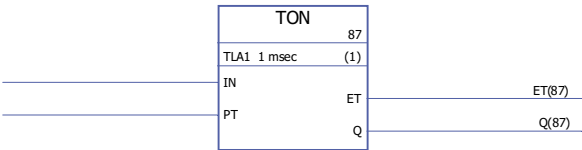

Execution time 1.22  $\mu$ s

**Operation** The output (Q) is set to 1 when the input (IN) has been 1 for a time defined by the pulse time input (PT). The output is set to 0, when the input is set to 0. Elapsed time count (TE) starts when the input is set to 1 and stops when the input is set to 0.

Example:

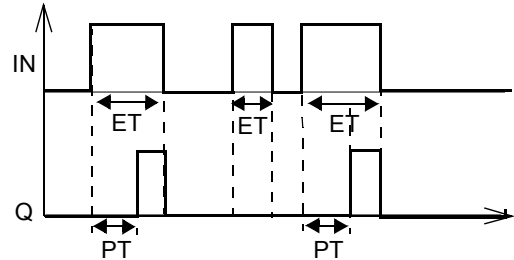


**Inputs** Input (IN): Boolean  
Pulse time input (PT): DINT (1 = 1  $\mu$ s)

**Outputs** Output (Q): Boolean  
Elapsed time output (ET): DINT (1 = 1  $\mu$ s)


**TP**  
**(10060)**

Illustration

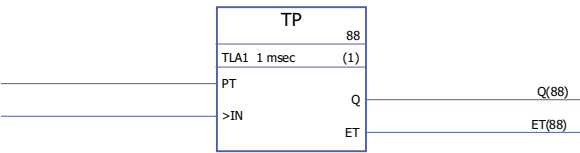

**Execution time** 1.46  $\mu$ s

**Operation** The output (Q) is set to 1 when the input (IN) is set to 1. The output is set to 0, when it has been 1 for a time defined by the pulse time input (PT). Elapsed time count (TE) starts when the input is set to 1 and stops when the input is set to 0.

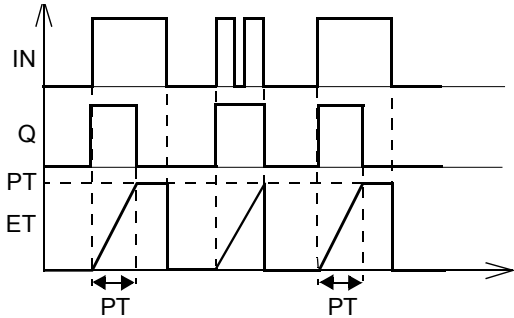

**Inputs** Input (IN): Boolean  
Pulse time input (PT): DINT (1 = 1  $\mu$ s)

**Outputs** Output (Q): Boolean  
Elapsed time output (ET): DINT (1 = 1  $\mu$ s)

# Application program template


---


## What this chapter contains

This chapter presents the application program template as displayed by the DriveSPC tool.


ACTUAL VALUES		14
PLF10 2-sec	(1)	
1.02 SPEED ACT PERC		↑
1.03 FREQUENCY		↑
1.04 CURRENT		↑
1.05 CURRENT PERC		↑
1.06 TORQUE		↑
1.07 DC-VOLTAGE		
1.14 SPEED ESTIMATED		
1.15 TEMP INVERTER		
1.16 TEMP BC		
1.20 BRAKE RES LOAD		
1.22 INVERTER POWER		
1.26 ON TIME COUNTER		
1.27 RUN TIME COUNTER		

Page: 1	Signa	Based on	Prepared	Type	Doc. dis.
Author	Course	Course			
Work completed	Work: 1.46				
Library id = 1.46	Library id = 1.46				Sign. dept.
Standard Library id = 10000, ver = 1.1		Curr. Doc. No.	Project name		Doc. No.

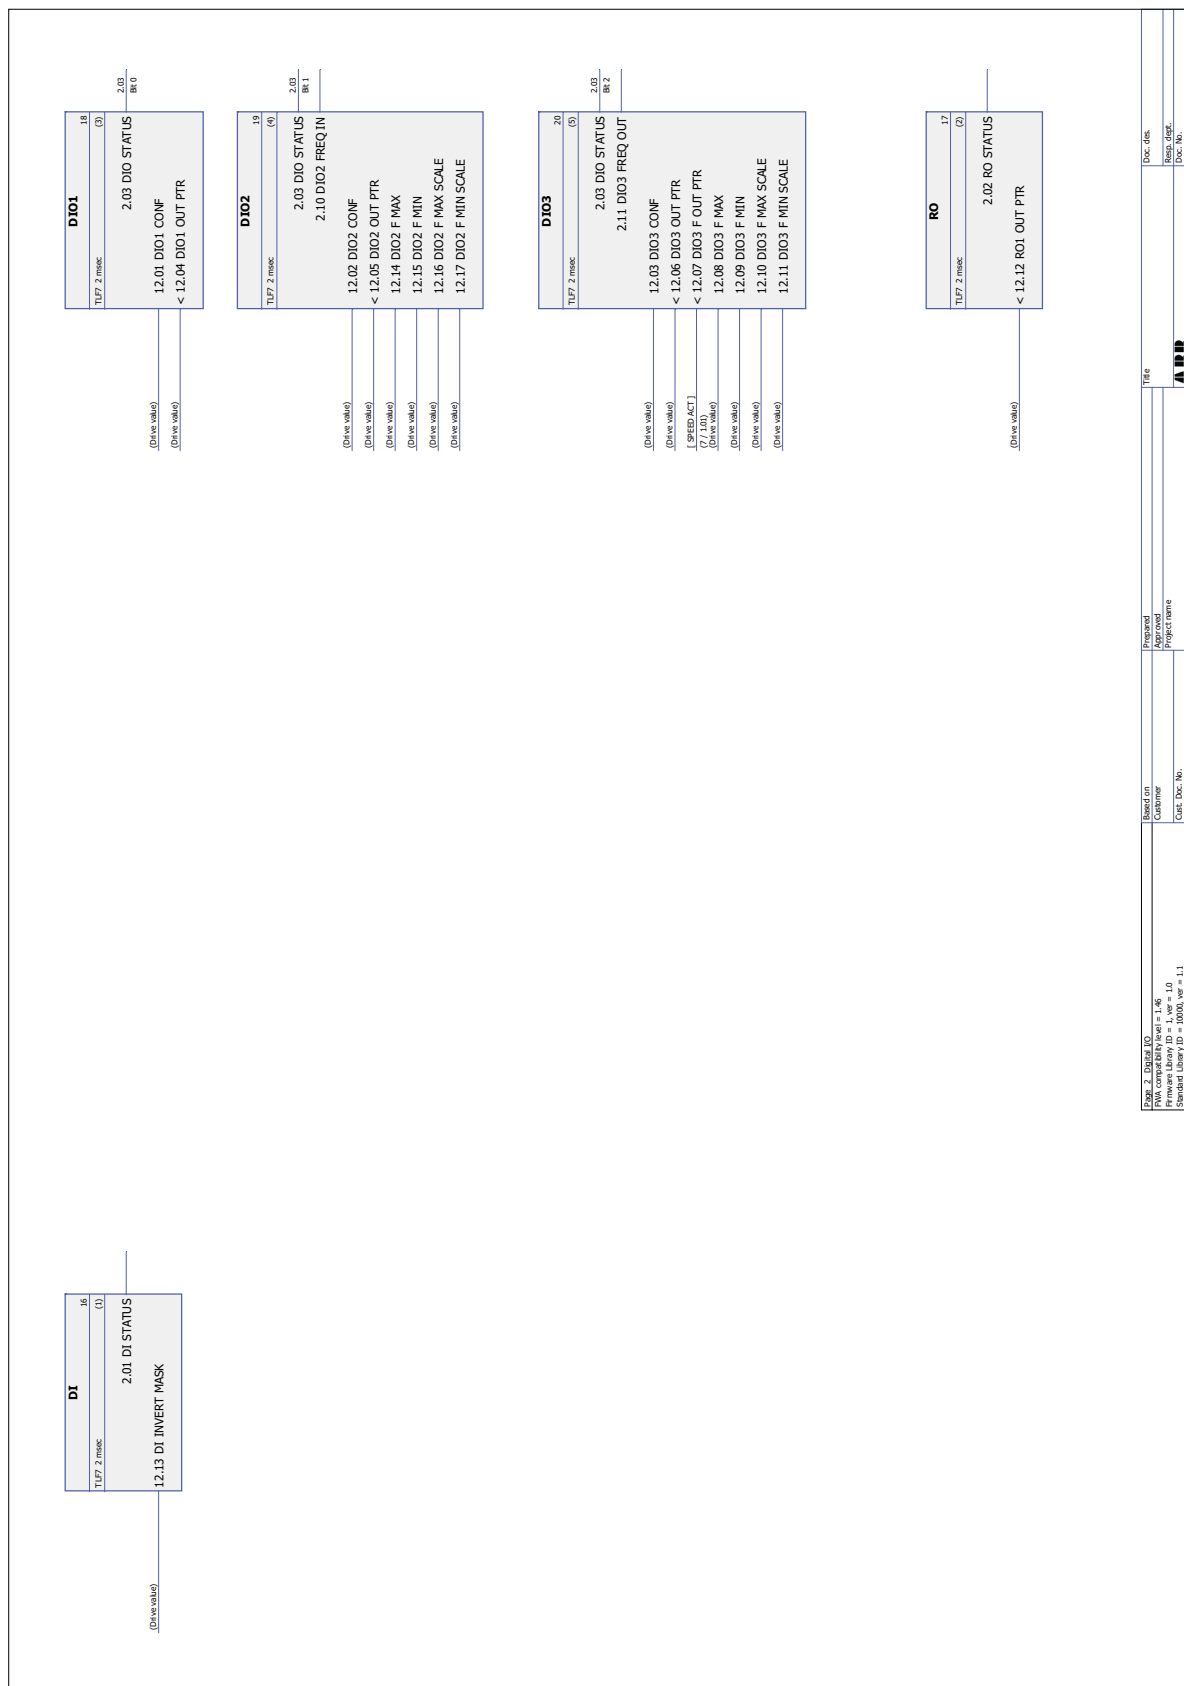

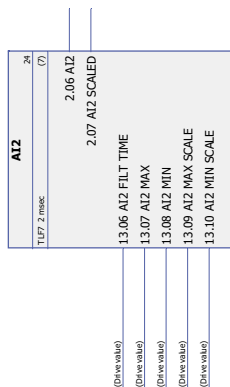

Page 2 - Action Log	Proposed Customer	Approved	Title	Doc. desc.
PWE compatibility level = 1.46		Approved		
Firewall Library ID = 1, ver = 1.0		Project name		Revis. date.
Standard Library ID = 10000, ver = 1.1				Doc. No.
		Cost. Doc. No.		
		10000		

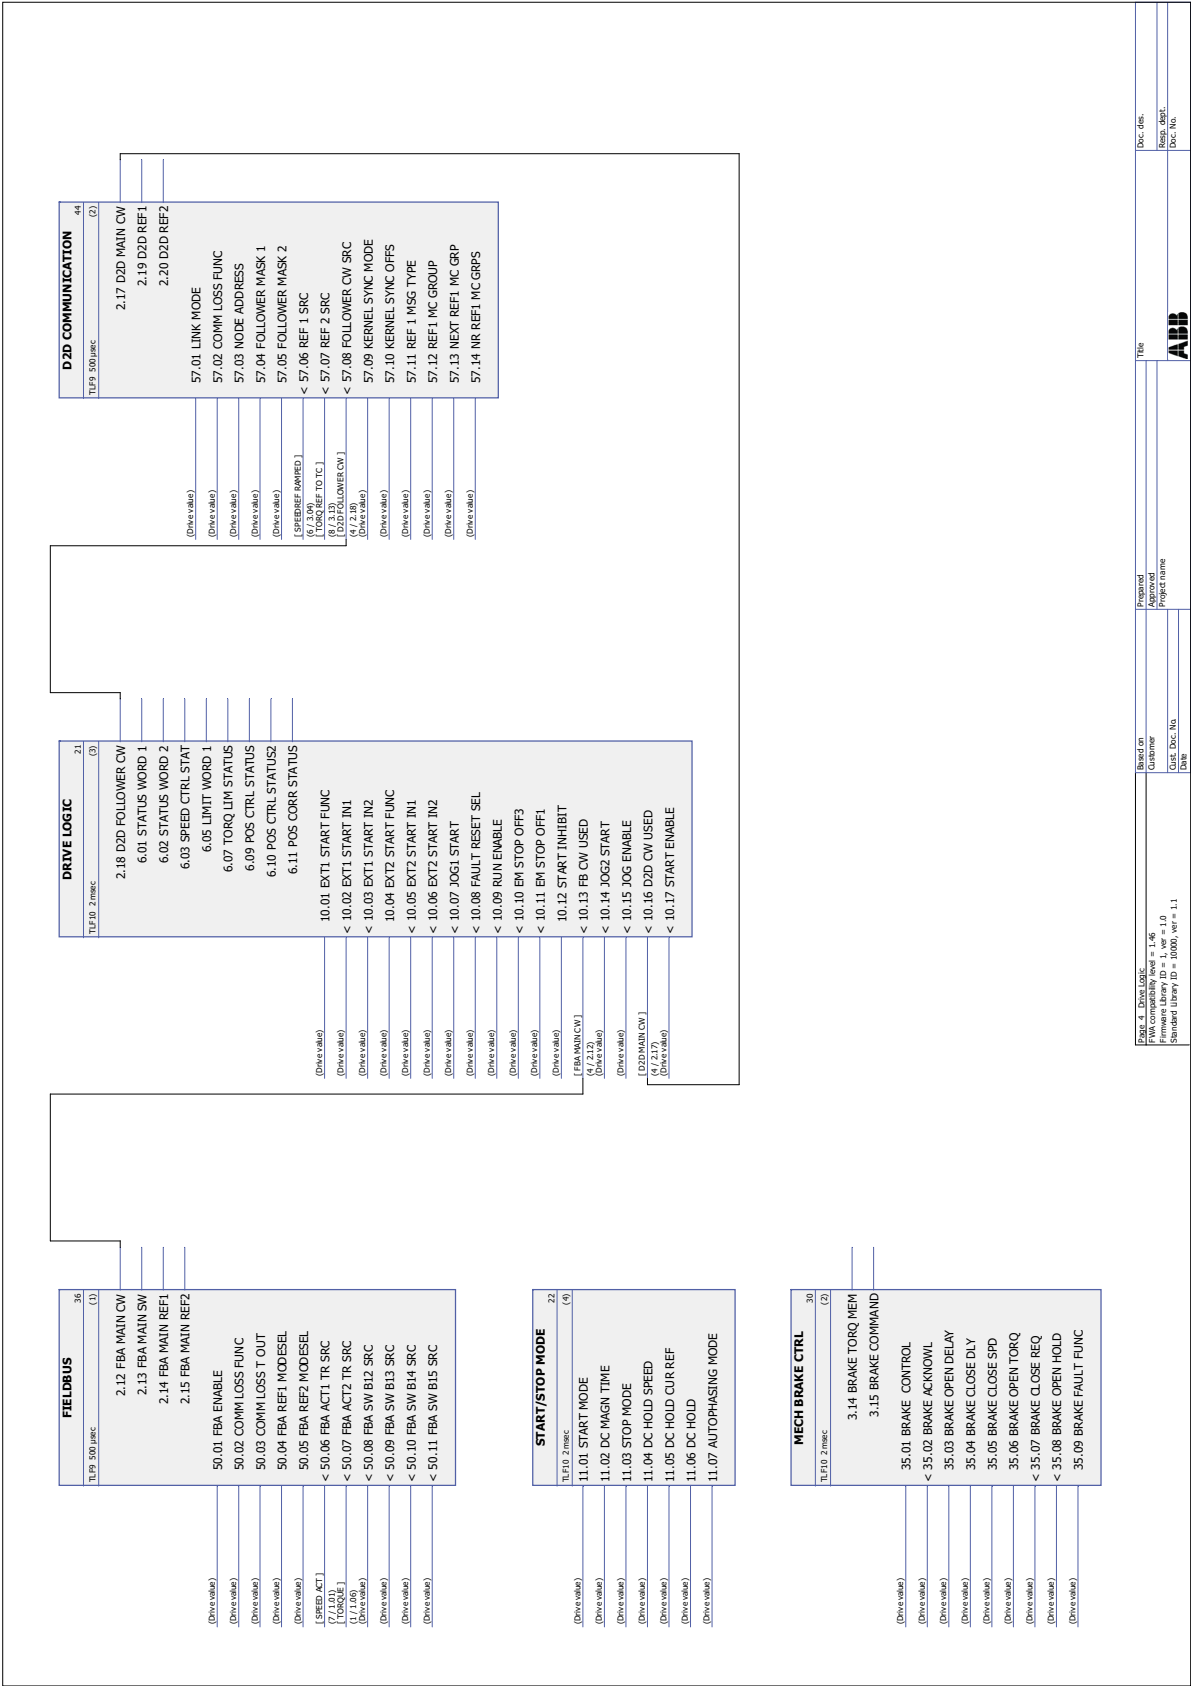

FIELDBUS

TLF9 500 junc

36

(1)

2.12 FBA MAIN CW

2.13 FBA MAIN SW

2.14 FBA MAIN REF1

2.15 FBA MAIN REF2

50.01 FBA ENABLE

50.02 COMM LOSS FUNC

50.03 COMM LOSS T OUT

50.04 FBA REF1 MODESEL

50.05 FBA REF2 MODESEL

[SPEED ACT]

[TORQUE]

[1/1.06]

[1/1.08]

[1/1.10]

50.06 FBA ACT1 TR SRC

50.07 FBA ACT2 TR SRC

50.08 FBA SW B12 SRC

50.09 FBA SW B13 SRC

50.10 FBA SW B14 SRC

50.11 FBA SW B15 SRC

DRIVE LOGIC

TLF10 2mmc

21

(3)

2.18 D2D FOLLOWER CW

6.01 STATUS WORD 1

6.02 STATUS WORD 2

6.03 SPEED CTRL STAT

6.05 LIMIT WORD 1

6.07 TORQ LIM STATUS

6.09 POS CTRL STATUS

6.10 POS CTRL STATUS2

6.11 POS CORR STATUS

10.01 EXT1 START FUNC

10.02 EXT1 START IN1

10.03 EXT1 START IN2

10.04 EXT2 START FUNC

10.05 EXT2 START IN1

10.06 EXT2 START IN2

10.07 JOG1 START

10.08 FAULT RESET SEL

10.09 RUN ENABLE

10.10 EM STOP OFF3

10.11 EM STOP OFF1

10.12 START INHIBIT

10.13 FB CW USED

10.14 JOG2 START

10.15 JOG ENABLE

10.16 D2D CW USED

10.17 START ENABLE

START/STOP MODE

TLF10 2mmc

22

(4)

11.01 START MODE

11.02 DC MAGN TIME

11.03 STOP MODE

11.04 DC HOLD SPEED

11.05 DC HOLD CUR REF

11.06 DC HOLD

11.07 AUTOPHASING MODE

MECH BRAKE CTRL

TLF10 2mmc

30

(2)

3.14 BRAKE TORQ MEM

3.15 BRAKE COMMAND

35.01 BRAKE CONTROL

35.02 BRAKE ACKNOWL

35.03 BRAKE OPEN DELAY

35.04 BRAKE CLOSE DLY

35.05 BRAKE CLOSE SPD

35.06 BRAKE OPEN TORQ

35.07 BRAKE CLOSE REQ

35.08 BRAKE OPEN HOLD

35.09 BRAKE FAULT FUNC

D2D COMMUNICATION

TLF9 500 junc

44

(2)

2.17 D2D MAIN CW

2.19 D2D REF1

2.20 D2D REF2

57.01 LINK MODE

57.02 COMM LOSS FUNC

57.03 NODE ADDRESS

57.04 FOLLOWER MASK 1

57.05 FOLLOWER MASK 2

57.06 REF 1 SRC

57.07 REF 2 SRC

57.08 FOLLOWER CW SRC

57.09 KERNEL SYNC MODE

57.10 KERNEL SYNC OFFS

57.11 REF 1 MSG TYPE

57.12 REF1 MC GROUP

57.13 NEXT REF1 MC GRP

57.14 NR REF1 MC GRPS

FIGURE 4 Drive Logic  
Firmware Library ID = 1, ver = 1.0  
Standard Library ID = 10000, ver = 1.1

Based on  
Quintix  
Quintix Doc. No.  
Quintix

Approved  
Project name

Title



Doc. Rev.  
Resp. Dept.  
Doc. No.


BRAKE CHOPPER	
TLF10 7 msec	35 (11)
(Drive value)	48.01 BC ENABLE
(Drive value)	< 48.02 BC RUN-TIME ENA
(Drive value)	48.03 BRTHRTIMECONST
(Drive value)	48.04 BR POWER MAX ONT
(Drive value)	48.05 R BR
(Drive value)	48.06 BR TEMP FAULT LIM
(Drive value)	48.07 BR TEMP ALARM LIM


VOLTAGE CTRL	
TLF11 10 msec	34 (1)
(Drive value)	1.19 USED SUPPLY VOLT
(Drive value)	47.01 OVERVOLTAGE CTRL
(Drive value)	47.02 UNDERVOLT CTRL
(Drive value)	47.03 SUPPLVOLT-AUTO-ID
(Drive value)	47.04 SUPPLY VOLTAGE


Page 5 Drive Control Firmware version = 4.46 Standard Library ID = 10000, ver = 1.1	Based on Customer Ctrl. Doc. No. Date	Prepared Author Project name	Title		Doc. desc. Best. date Doc. No.





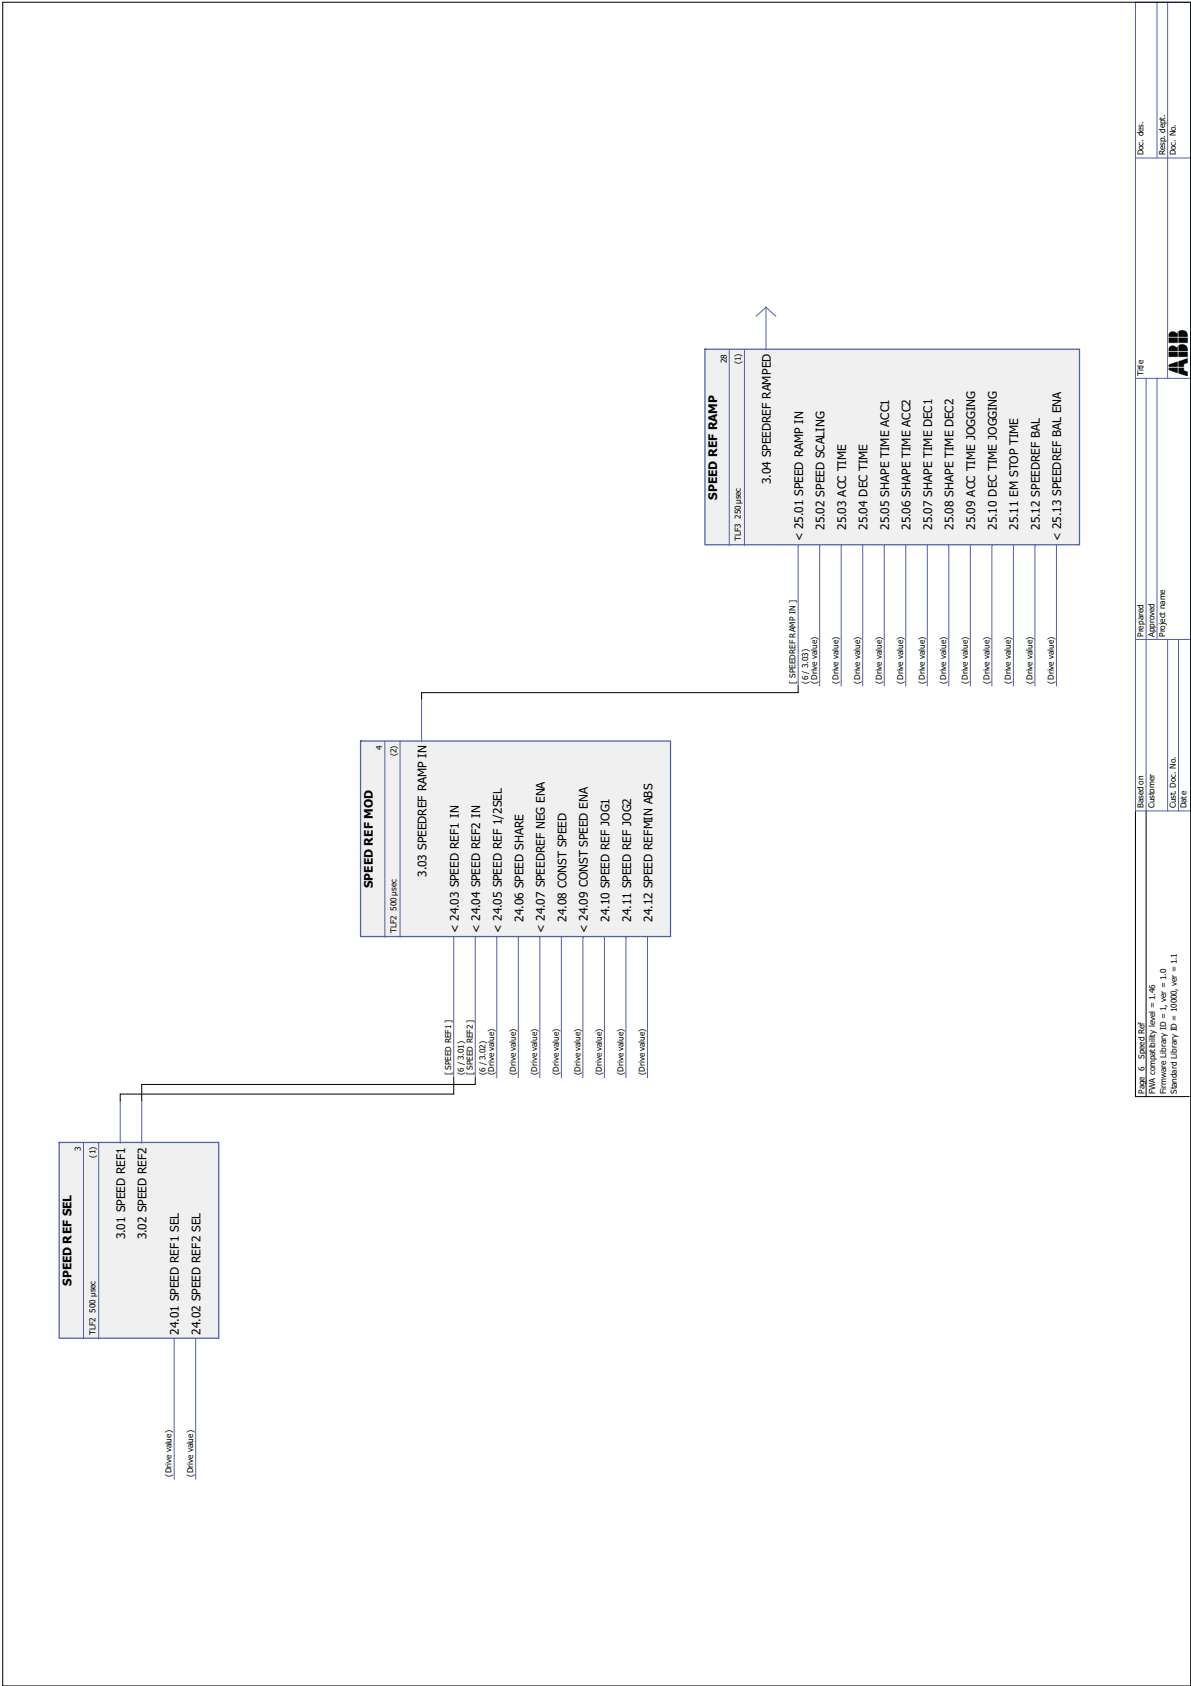

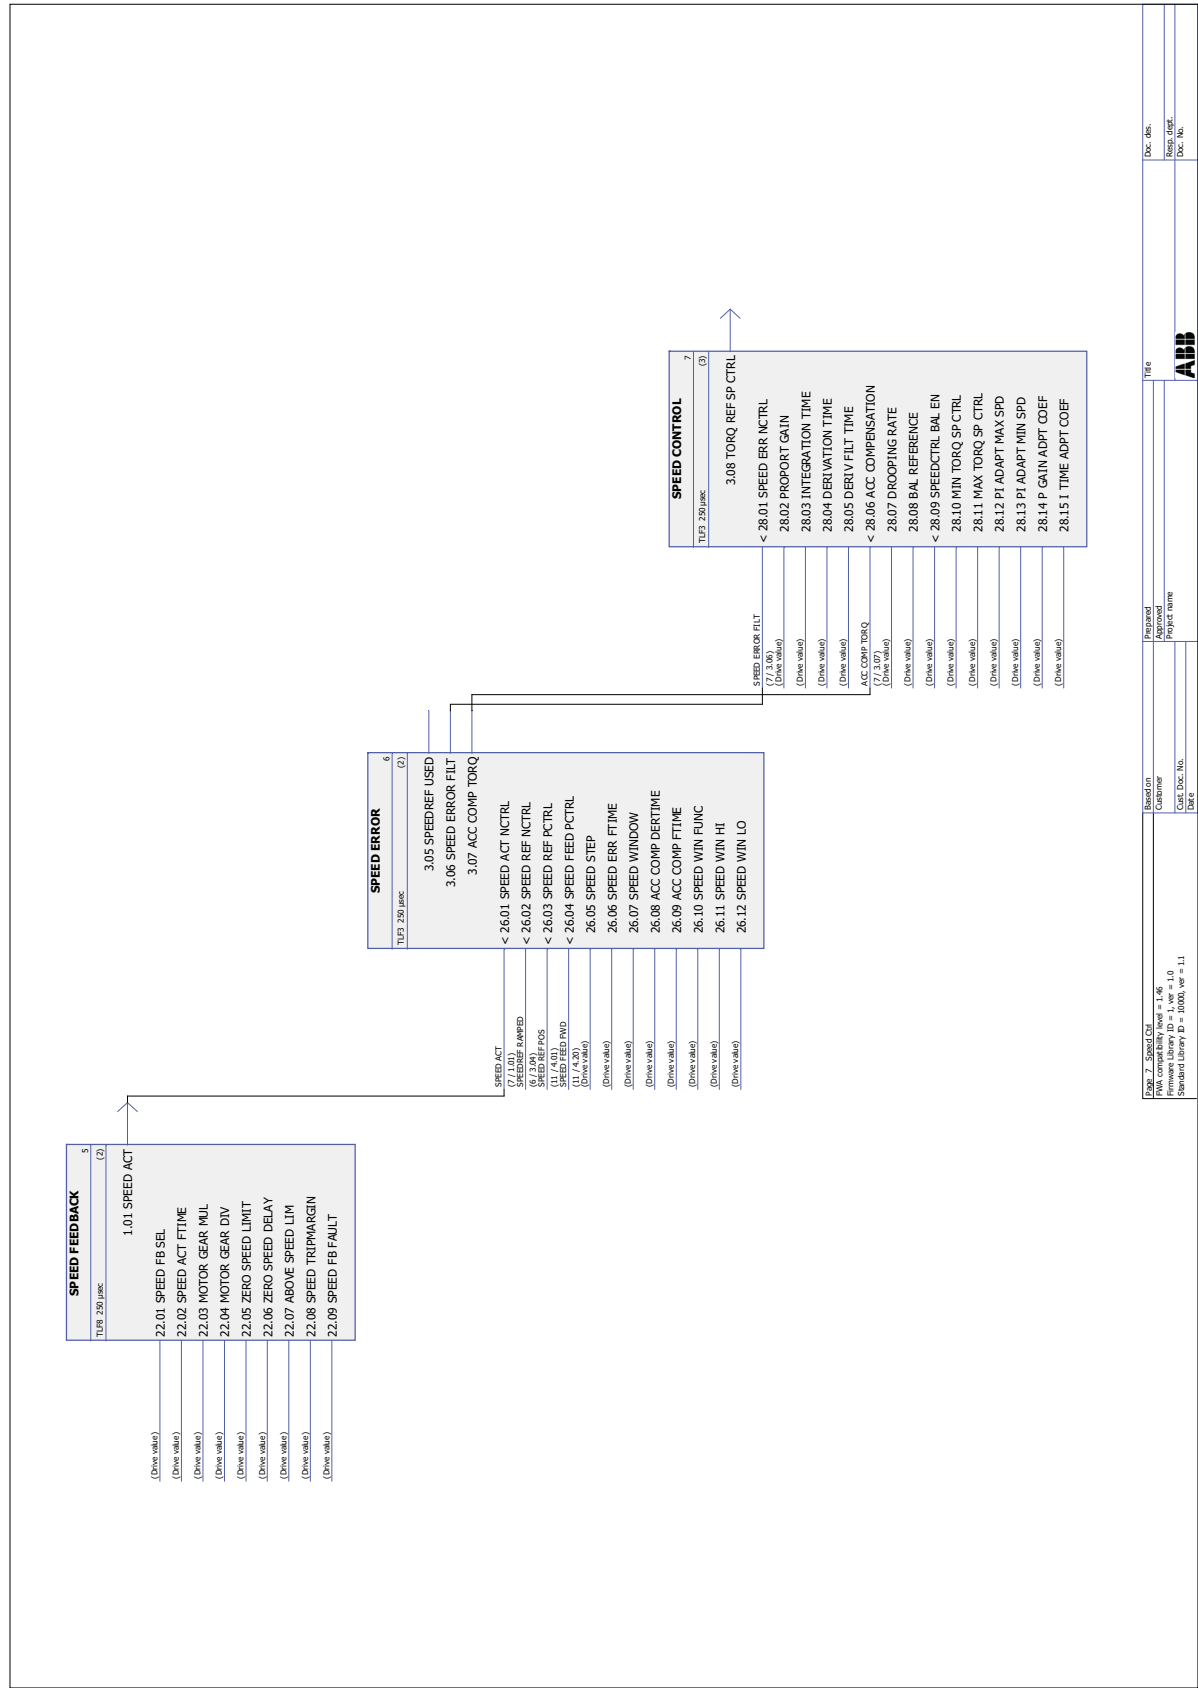

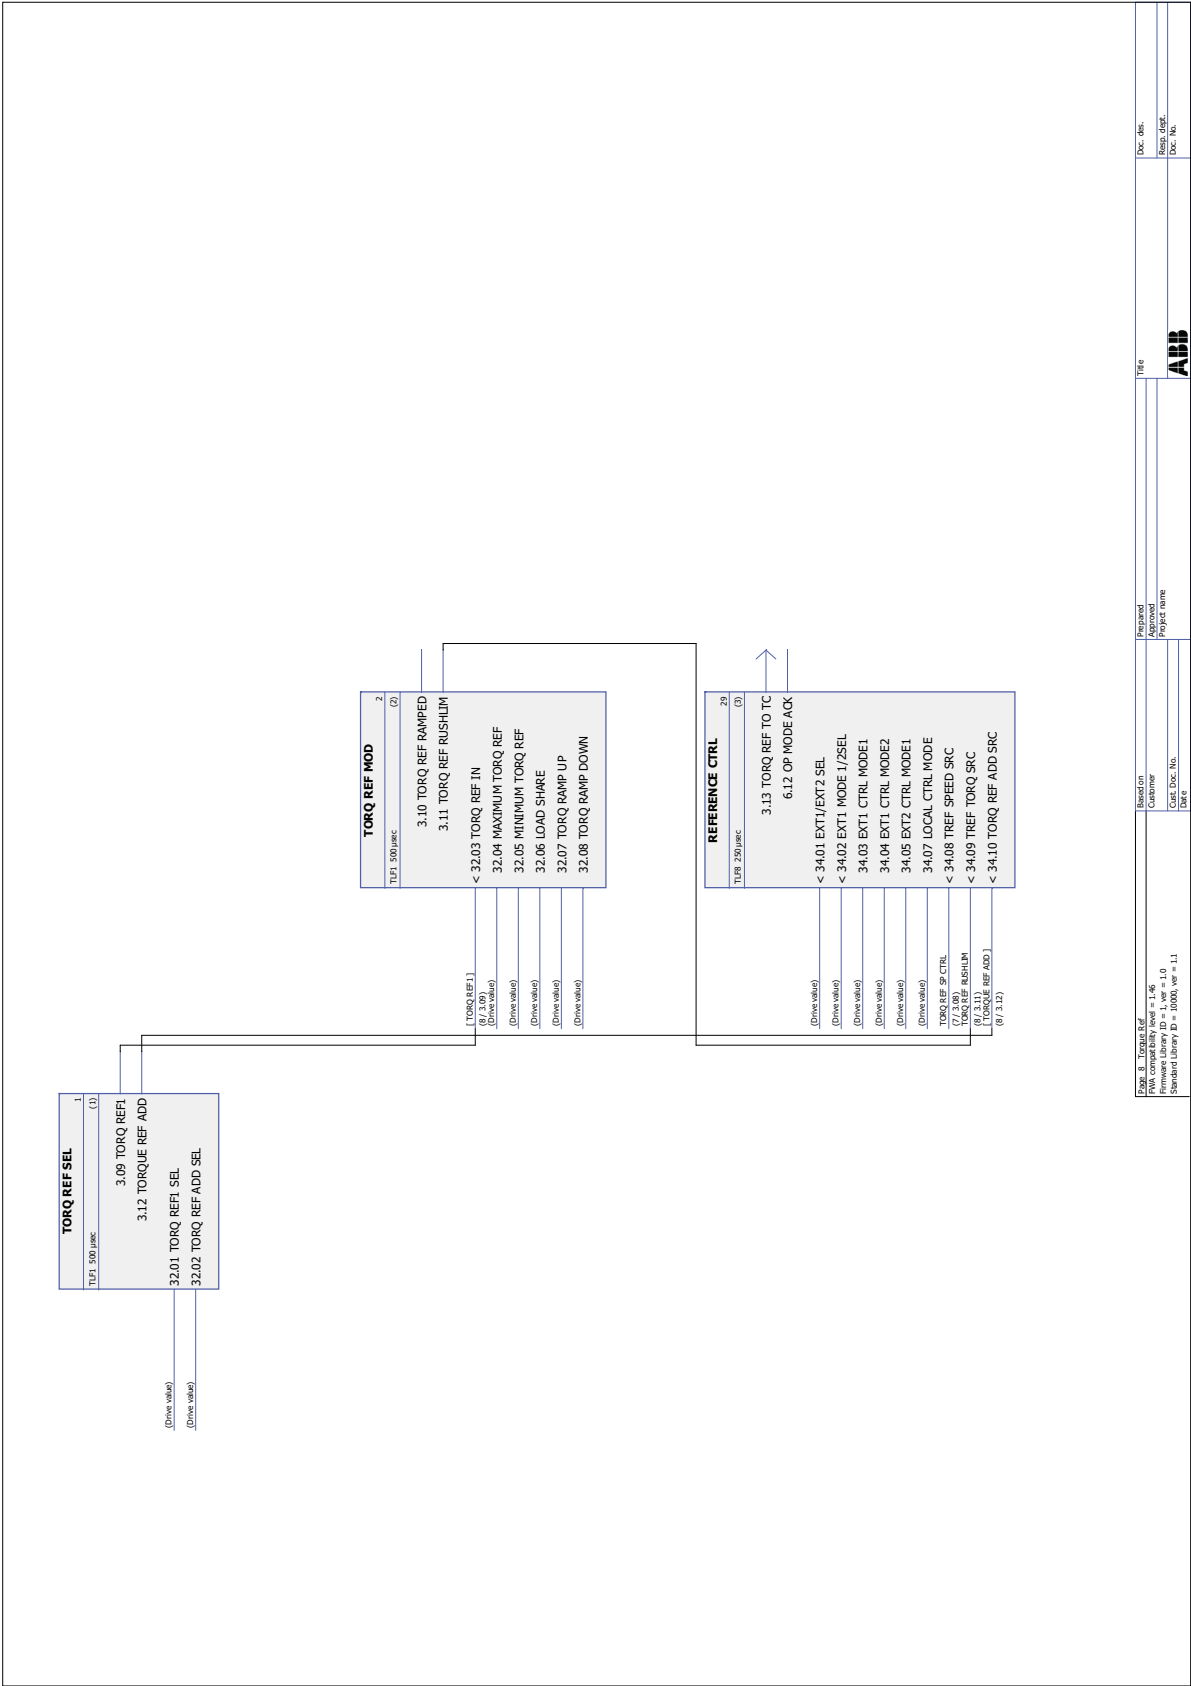

Page 3: Torque Ref  
Firmware Library ID = 1, ver = 1.0  
Standard Library ID = 10001, ver = 1.1

Project name  
Project name

ABB

Doc. No.  
Doc. No.

PROFILE REF SEL

TIME 500 µsec

4.06 POS REF

4.07 PROF SPEED

4.08 PROF ACC

4.09 PROF DEC

4.10 PROF FILT TIME

4.11 POS STYLE

4.12 POS END SPEED

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

65.01 POS REFSOURCE

< 65.02 PROF SET SEL

< 65.03 POS START 1

65.04 POS REF 1 SEL

65.05 POS SPEED 1

65.06 PROF ACC 1

65.07 PROF DEC 1

65.08 PROF FILT TIME 1

65.09 POS STYLE 1

65.10 POS END SPEED 1

< 65.11 POS START 2

65.12 POS REF 2 SEL

65.13 POS SPEED 2

65.14 PROF ACC 2

65.15 PROF DEC 2

65.16 PROF FILT TIME 2

65.17 POS STYLE 2

65.18 POS END SPEED 2

65.19 POS REF 1

65.20 POS REF 2

65.21 POS REF ADD SEL

65.22 PROF VEL REF SEL

65.23 PROF VEL REF 1

65.24 POS START MODE

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

PROFILE GENERATOR

TIME 500 µsec

4.13 POS REF IPO

4.14 DIST TGT

POS REF

(9 / 4.06)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

4.13 POS REF IPO

4.14 DIST TGT

↑

↑

Page 9 Position Ref

PLM compatibility level = 1.46

Standard Library ID = 10000, ver = 1.1

Prepared

Approved

Customer

Cal. Doc. No.


Date


Doc. des.

Rev. date

Doc. No.

ABB

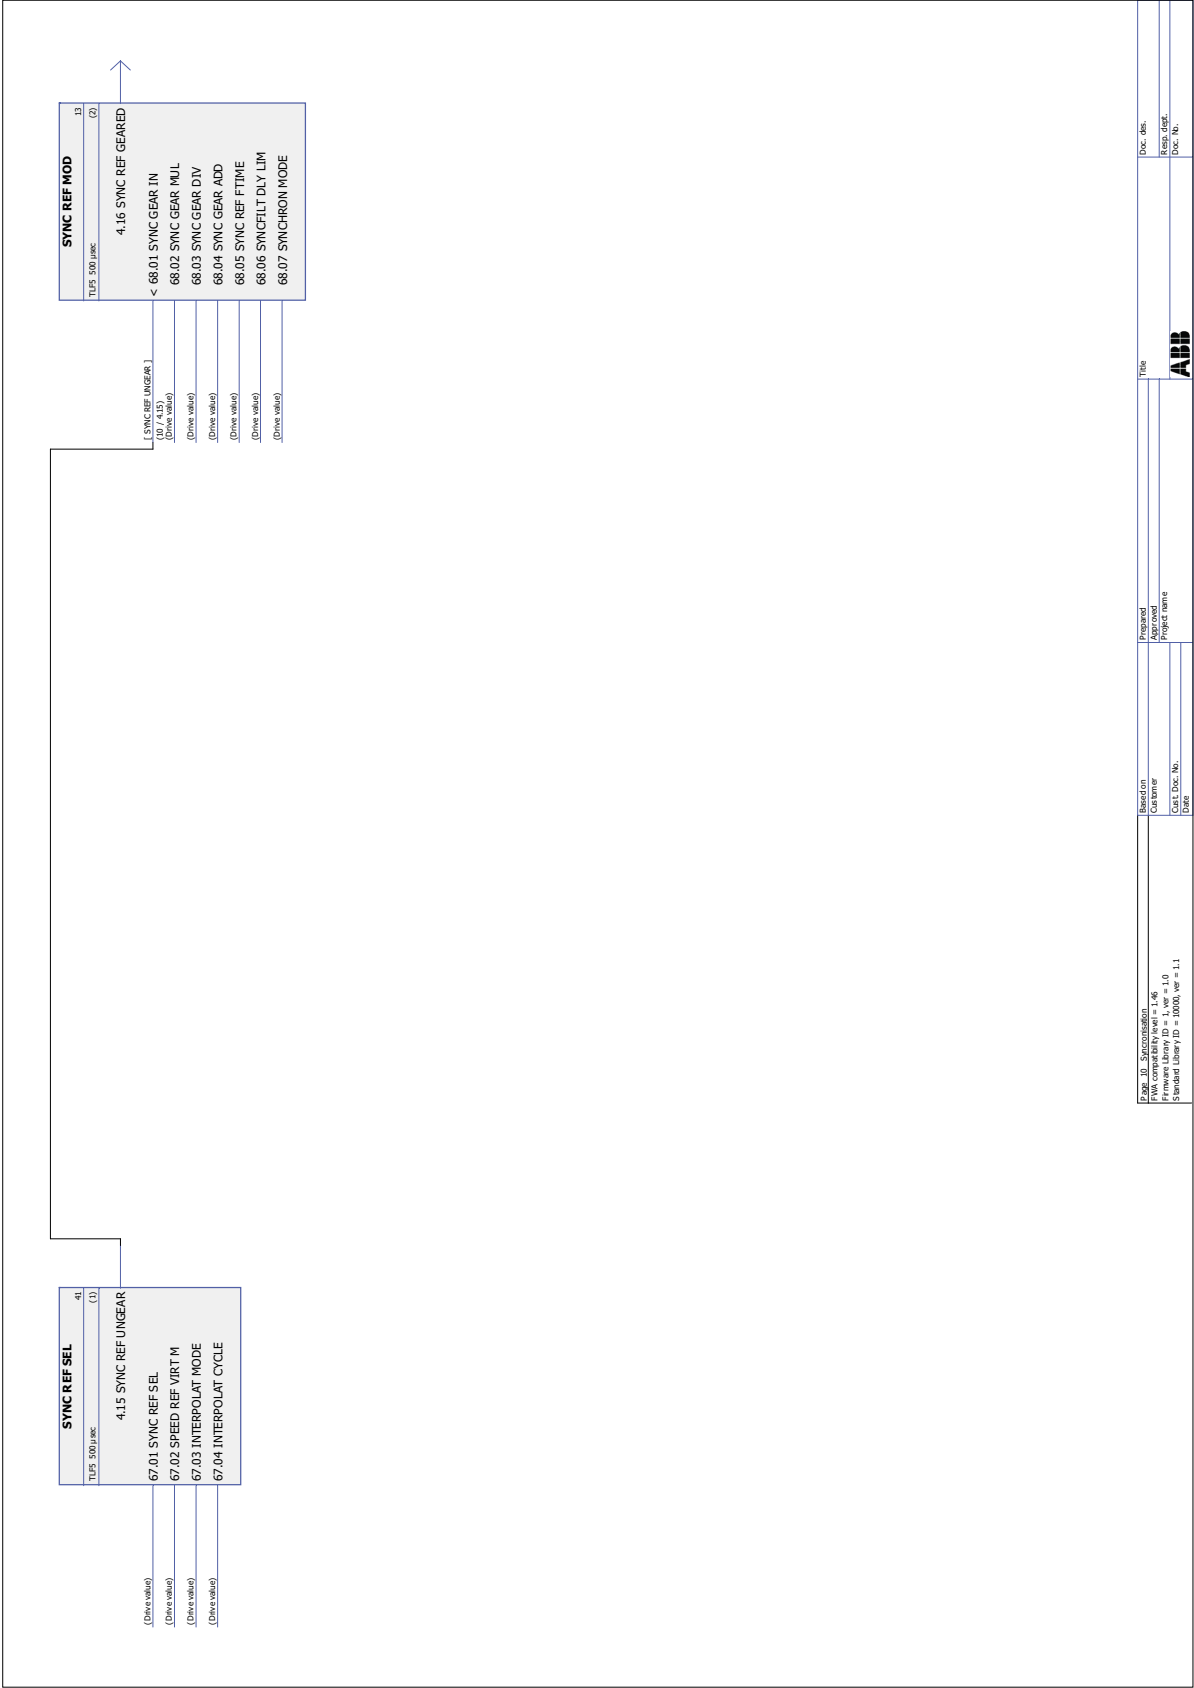

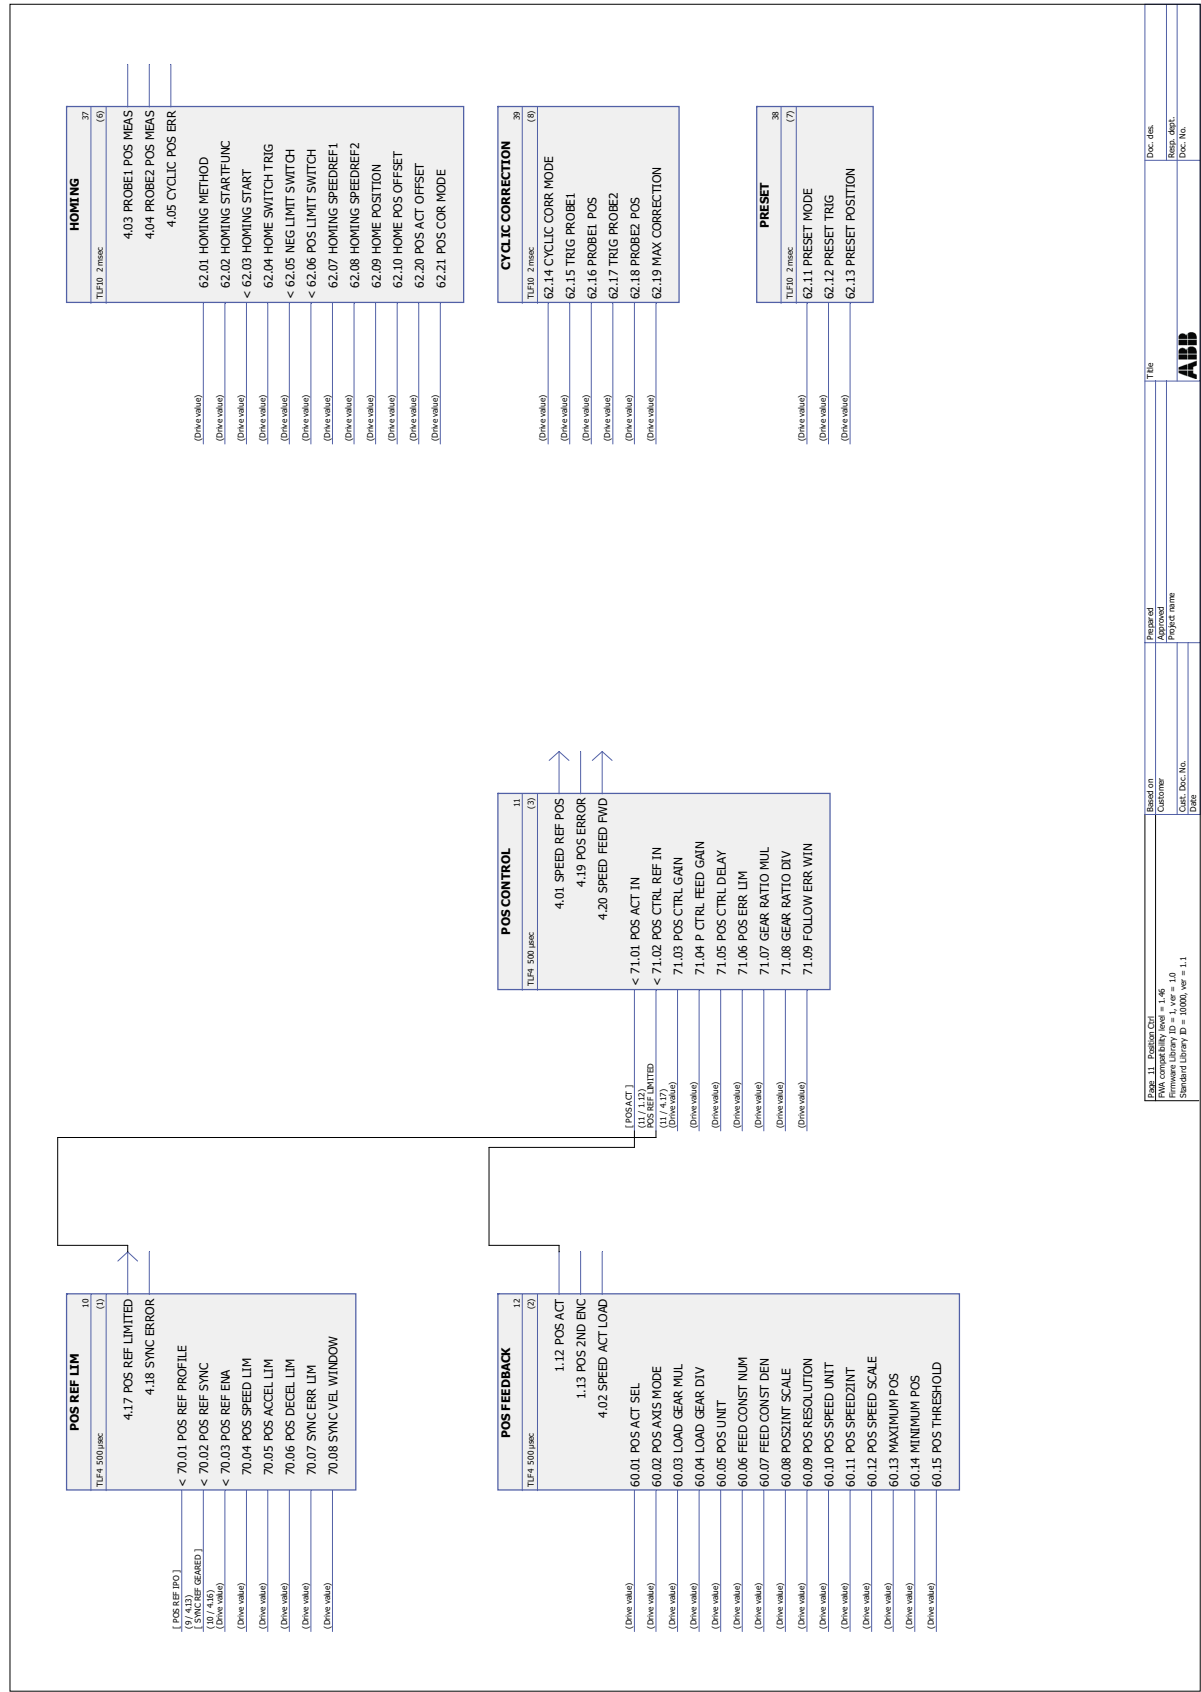

39

TLF20 2 msec

CYCLIC CORRECTION

62.14 CYCLIC CORR MODE

62.15 TRIG PROBE1

62.16 PROBE1 POS

62.17 TRIG PROBE2

62.18 PROBE2 POS

62.19 MAX CORRECTION

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

(Drive value)

38

TLF20 2 msec

PRESET

62.11 PRESET MODE

62.12 PRESET TRIG

62.13 PRESET POSITION

(Drive value)

(Drive value)

(Drive value)

Page 11: Position Ctrl

FWA compatibility level = 1.46

Standard Library ID = 10000, ver = 1.1

Based on

Customer

Conf. Doc. No.

Date

Prepared

Approved

Project name

Time

Doc. des.

Sign. Appl.

Doc. No.

ABB



Sym ID : 0097-01	Researcher Approved	Title
PMA compatibility level = 146	Cat Name: Project name	
Firmware Library ID = 1, ver = 1.0		
Serialized Library ID = 10000, ver = 1.1		
	Doc. No. Date:	Doc. date Receipt Date User No.



Page 14 Protections  
 AVA compatibility level = 1.46  
 Firmware Library ID = 1, ver = 1.0  
 Standard Library ID = 10000, ver = 1.1




# Control chain block diagrams


---


## What this chapter contains

This chapter presents the drive control chain in different control modes.

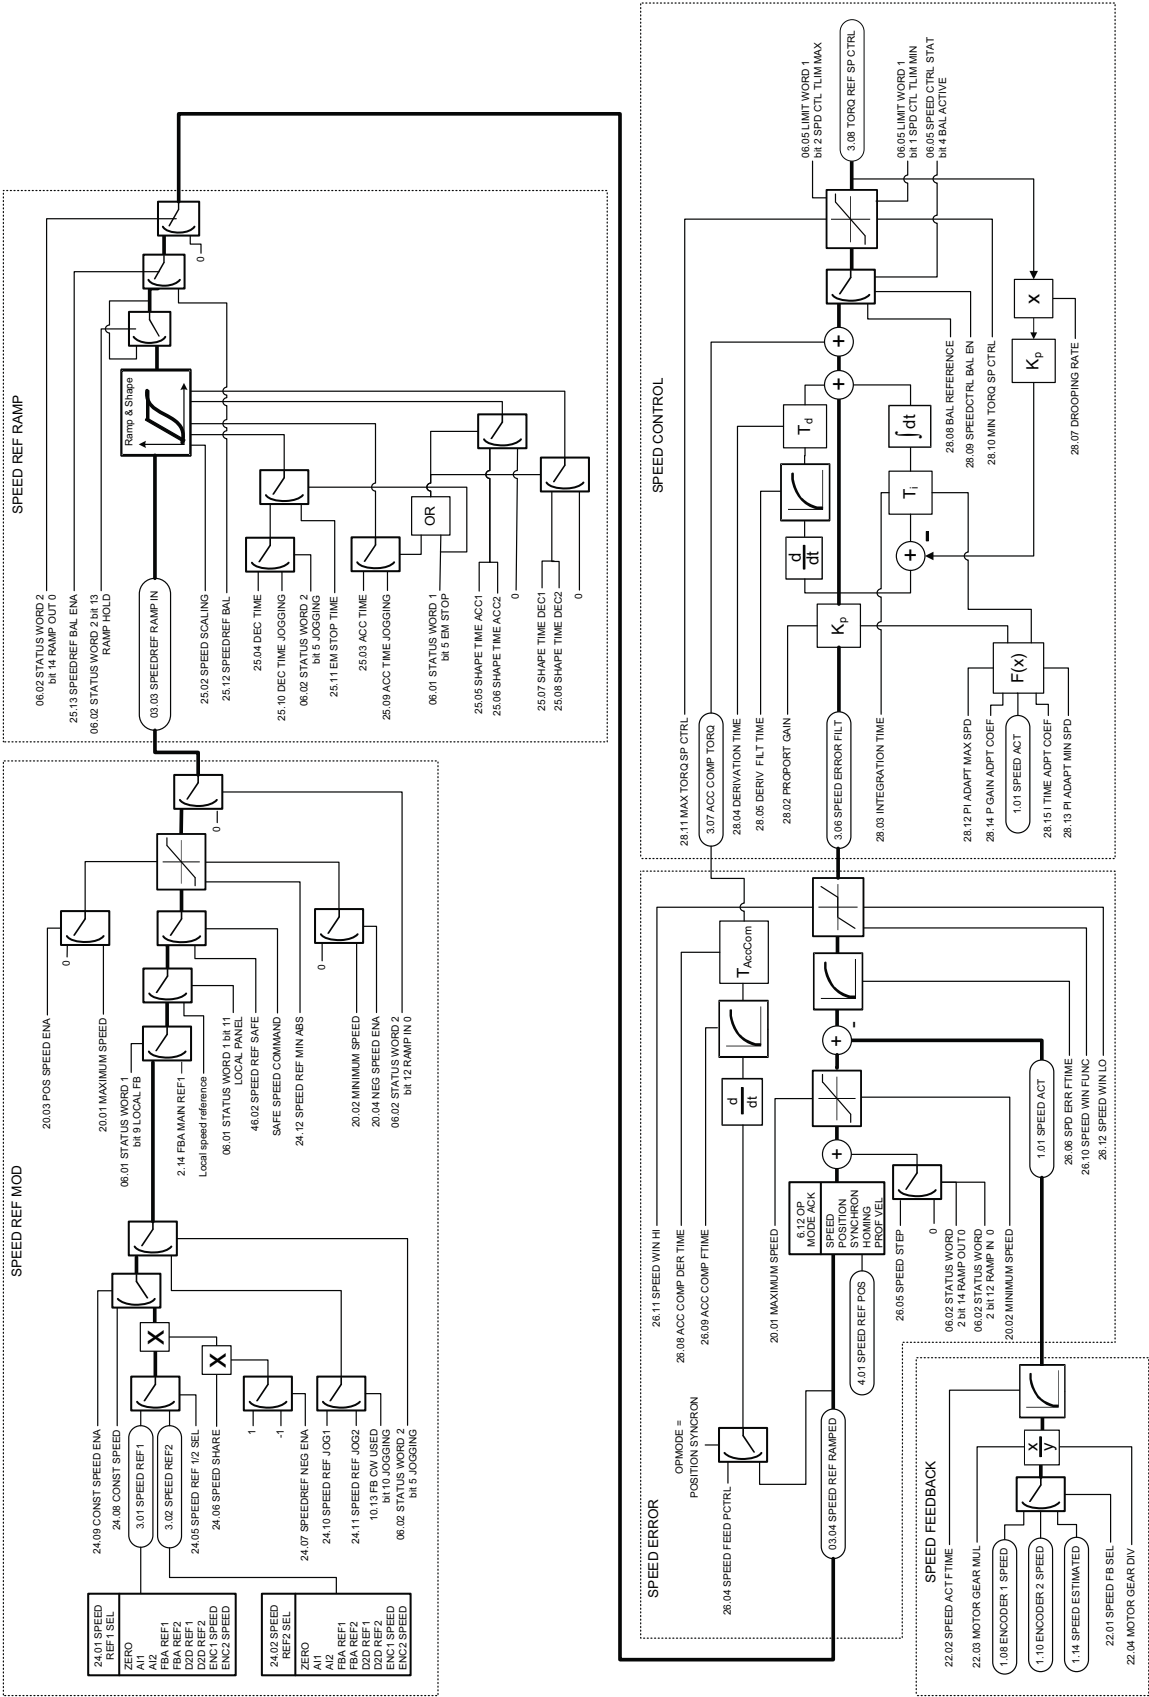



Torque control chain

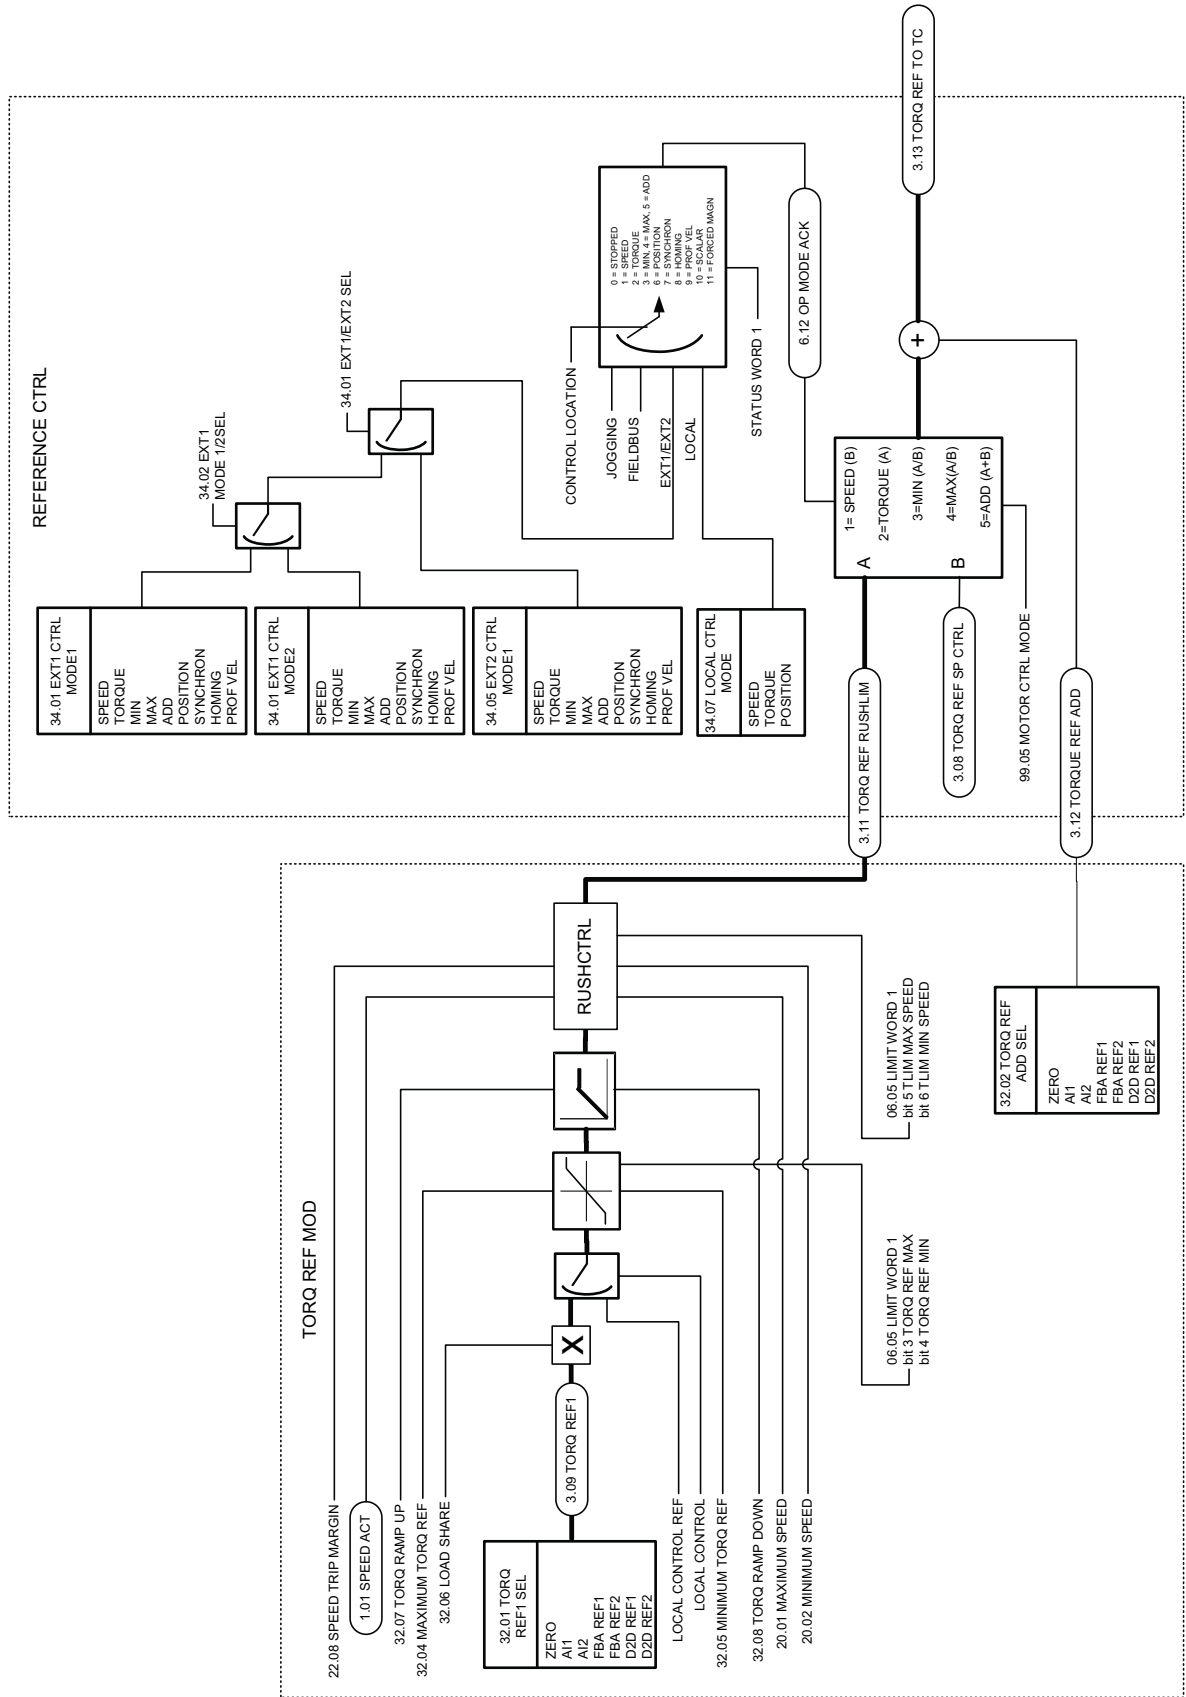

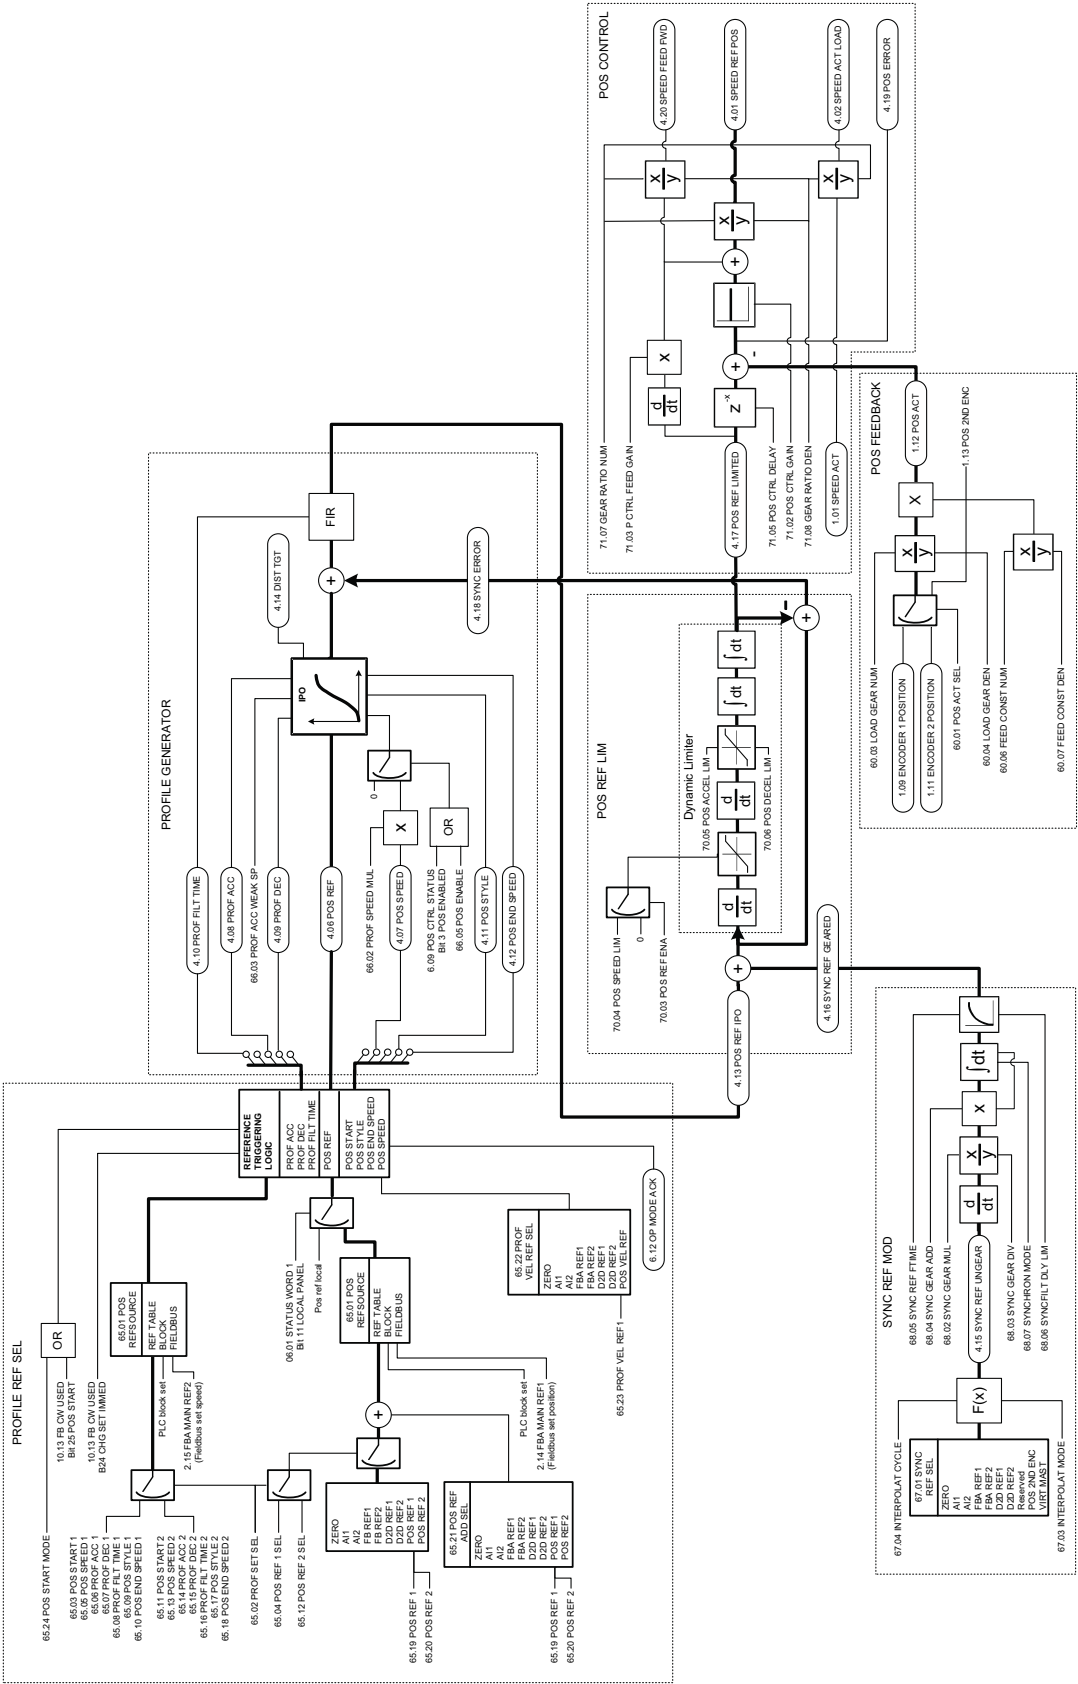

Drive logic

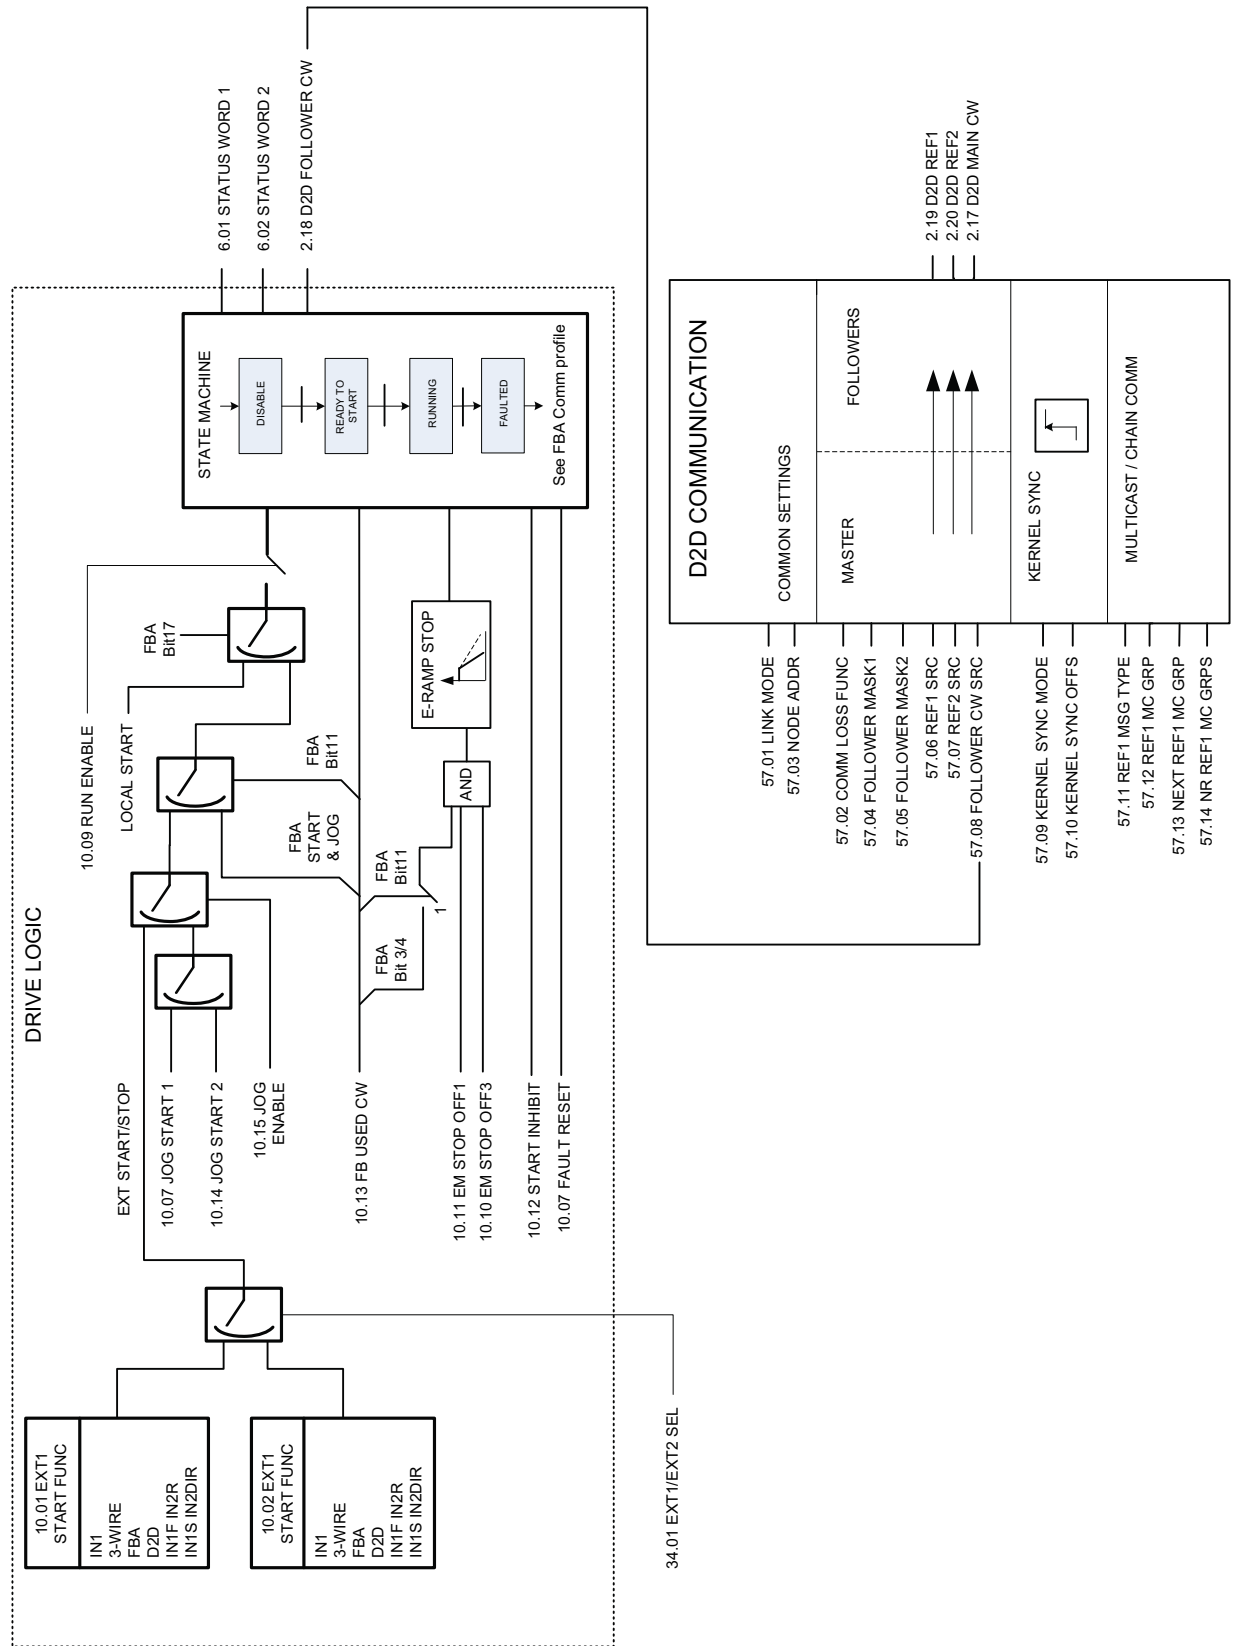

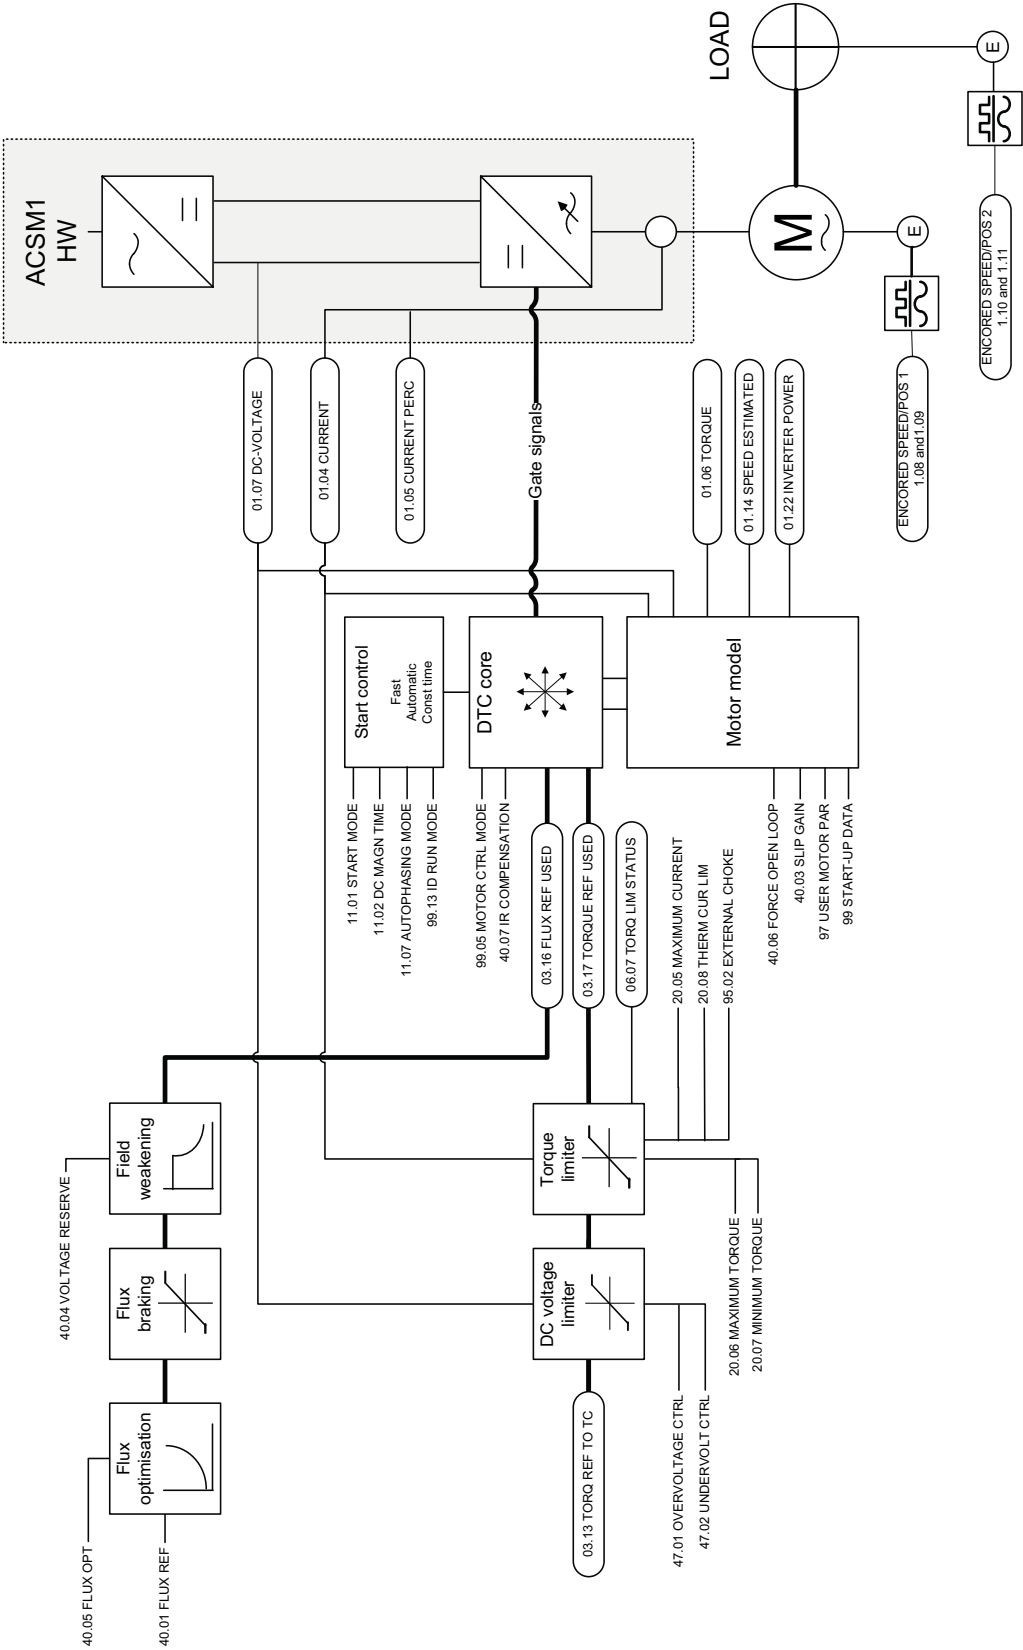




# Appendix A – Fieldbus control

## What this chapter contains

The chapter describes how the drive can be controlled by external devices over a communication network.

## System overview

The drive can be connected to a fieldbus controller via a fieldbus adapter module. The adapter module is connected to drive Slot 3.

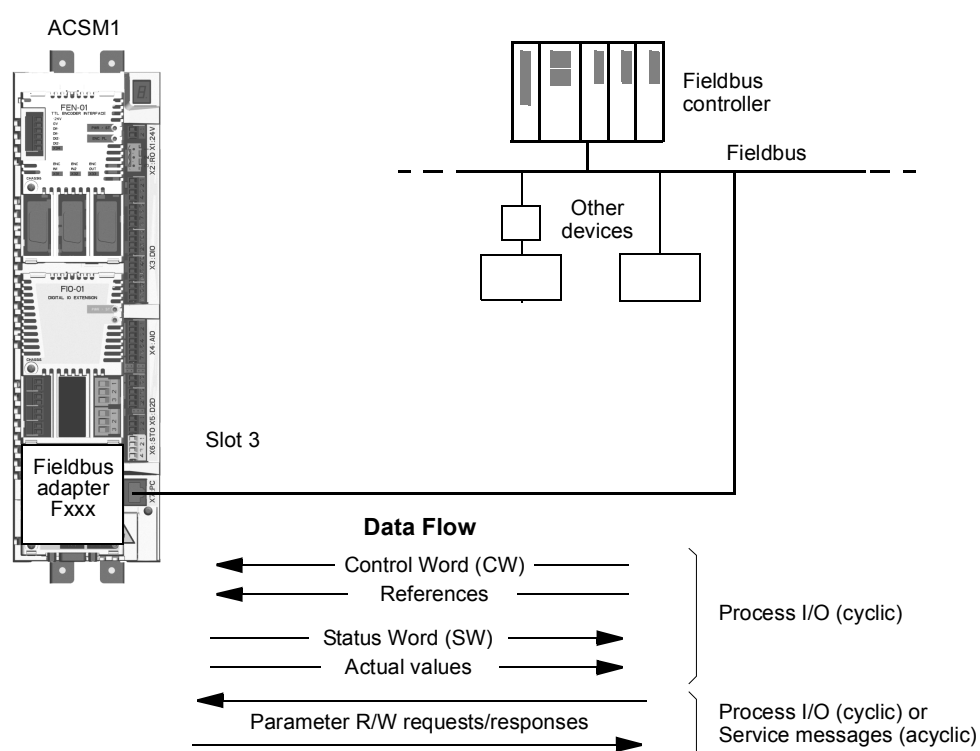

The drive can be set to receive all of its control information through the fieldbus interface, or the control can be distributed between the fieldbus interface and other available sources, for example digital and analogue inputs.

The drive can communicate with fieldbus controller via fieldbus adapter using one of the following serial communication protocols:

- PROFIBUS-DP® (FPBA-01 adapter)
- CANopen® (FCAN-01 adapter)
- DeviceNet® (FDNA-01 adapter).

## Setting up communication through a fieldbus adapter module

Before configuring the drive for fieldbus control, the adapter module must be mechanically and electrically installed according to the instructions given in the User's Manual of the appropriate fieldbus adapter module.

The communication between the drive and the fieldbus adapter module is activated by setting parameter **50.01 FBA ENABLE** to **(1) ENABLE**. The adapter-specific parameters must also be set. See the table below.

Parameter	Setting for fieldbus control	Function/Information
COMMUNICATION INITIALISATION AND SUPERVISION		
<b>50.01 FBA ENABLE</b>	<b>(1) ENABLE</b>	Initialises communication between drive and fieldbus adapter module.
<b>50.02 COMM LOSS FUNC</b>	<b>(0) NO</b> <b>(1) FAULT</b> <b>(2) SPD REF SAFE</b> <b>(3) LAST SPEED</b>	Selects how the drive reacts in a fieldbus communication break.
<b>50.03 COMM LOSS T OUT</b>	0.3...6553.5 s	Defines the time between communication break detection and the action selected with parameter <b>50.02 COMM LOSS FUNC</b> .
<b>50.04 FBA REF1 MODESEL</b> and <b>50.05 FBA REF2 MODESEL</b>	<b>(0) RAW DATA</b> <b>(1) TORQUE</b> <b>(2) SPEED</b> <b>(3) POSITION</b> <b>(4) VELOCITY</b> <b>(5) AUTO</b>	Defines the fieldbus reference scaling. When <b>(0) RAW DATA</b> is selected, see also parameters <b>50.06...50.11</b> .
ADAPTER MODULE CONFIGURATION		
<b>51.01 FBA TYPE</b>	–	Displays the type of the fieldbus adapter module.
<b>51.02 FBA PAR2</b>	These parameters are adapter module-specific. For more information, see the User's Manual of the fieldbus adapter module. Note that not all of these parameters are necessarily used.	
...		
<b>51.26 FBA PAR26</b>		
<b>51.27 FBA PAR REFRESH</b>	<b>(0) DONE</b> <b>(1) REFRESH</b>	Validates any changed adapter module configuration parameter settings.
<b>51.28 PAR TABLE VER</b>	–	Displays the parameter table revision of the fieldbus adapter module mapping file stored in the memory of the drive.
<b>51.29 DRIVE TYPE CODE</b>	–	Displays the drive type code of the fieldbus adapter module mapping file stored in the memory of the drive.
<b>51.30 MAPPING FILE VER</b>	–	Displays the fieldbus adapter module mapping file revision stored in the memory of the drive.
<b>51.31 D2FBA COMM STA</b>	–	Displays the status of the fieldbus adapter module communication.
<b>51.32 FBA COMM SW VER</b>	–	Displays the common program revision of the adapter module.
<b>51.33 FBA APPL SW VER</b>	–	Displays the application program revision of the adapter module.
<b>Note:</b> In the User's Manual of the fieldbus adapter module, the parameter group number is 1 or A for parameters <b>51.01...51.26</b> .		

Parameter	Setting for fieldbus control	Function/Information
TRANSMITTED DATA SELECTION		
52.01 FBA DATA IN1 ... 52.12 FBA DATA IN12	0 4...6 14...16 101...9999	Defines the data transmitted from drive to fieldbus controller. <b>Note:</b> If the selected data is 32 bits long, two parameters are reserved for the transmission.
53.01 FBA DATA OUT1 ... 53.12 FBA DATA OUT12	0 1...3 11...13 1001...9999	Defines the data transmitted from fieldbus controller to drive. <b>Note:</b> If the selected data is 32 bits long, two parameters are reserved for the transmission.
<b>Note:</b> In the User's Manual of the fieldbus adapter module, the parameter group number is 3 or C for parameters 52.01...52.12 and 2 or B for parameters 53.01...53.12.		

After the module configuration parameters have been set, the drive control parameters (see section [Drive control parameters](#)) must be checked and adjusted when necessary.

The new settings will take effect when the drive is powered up the next time (before powering off the drive, wait at least 1 minute), or when parameter 51.27 FBA PAR REFRESH is activated.

## Drive control parameters


The Setting for fieldbus control column gives the value to use when the fieldbus interface is the desired source or destination for that particular signal. The Function/Information column gives a description of the parameter.

Parameter	Setting for fieldbus control	Function/Information
CONTROL COMMAND SOURCE SELECTION		
10.01 EXT1 START FUNC	(3) FBA	Selects fieldbus as the source for the start and stop commands when EXT1 is selected as the active control location.
10.04 EXT2 START FUNC	(3) FBA	Selects fieldbus as the source for the start and stop commands when EXT2 is selected as the active control location.
24.01 SPEED REF1 SEL	(3) FBA REF1 (4) FBA REF2	Fieldbus reference REF1 or REF2 is used as speed reference 1.
24.02 SPEED REF2 SEL	(3) FBA REF1 (4) FBA REF2	Fieldbus reference REF1 or REF2 is used as speed reference 2.
32.01 TORQ REF1 SEL	(3) FBA REF1 (4) FBA REF2	Fieldbus reference REF1 or REF2 is used as torque reference 1.
32.02 TORQ REF ADD SEL	(3) FBA REF1 (4) FBA REF2	Fieldbus reference REF1 or REF2 is used for torque reference addition.
SYSTEM CONTROL INPUTS		
16.07 PARAM SAVE	(0) DONE (1) SAVE	Saves parameter value changes (including those made through fieldbus control) to permanent memory.

## The fieldbus control interface

The cyclic communication between a fieldbus system and the drive consists of 16/32-bit input and output data words. The drive supports at the maximum the use of 12 data words (16-bit) in each direction.

Data transmitted from the drive to the fieldbus controller is defined by parameters [52.01...52.12](#) (FBA DATA IN) and data transmitted from the fieldbus controller to the drive is defined by parameters [53.01...53.12](#) (FBA DATA OUT).

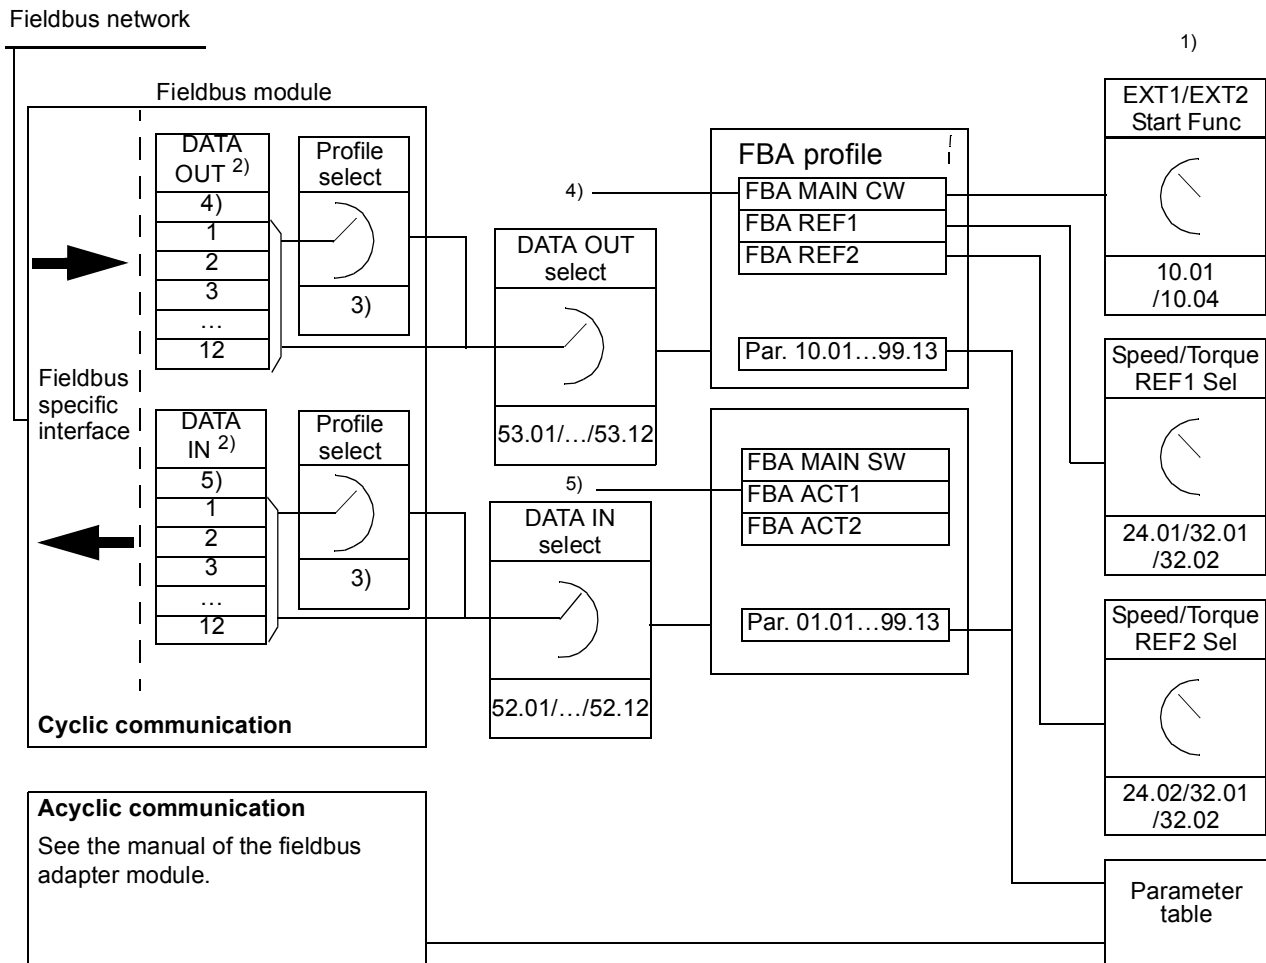

- 1) See also other parameters which can be controlled by the fieldbus.
- 2) The maximum number of used data words is protocol-dependent.
- 3) Profile/instance selection parameters. Fieldbus module specific parameters. For more information, see the User's Manual of the appropriate fieldbus adapter module.
- 4) With DeviceNet the control part is transmitted directly.
- 5) With DeviceNet the actual value part is transmitted directly.

### The Control Word and the Status Word

The Control Word (CW) is the principal means of controlling the drive from a fieldbus system. The Control Word is sent by the fieldbus controller to the drive. The drive switches between its states according to the bit-coded instructions of the Control Word.

The Status Word (SW) is a word containing status information, sent by the drive to the fieldbus controller.

### Actual values

Actual values (ACT) are 16/32-bit words containing information on selected operations of the drive.

## FBA communication profile

The FBA communication profile is a state machine model which describes the general states and state transitions of the drive. The [State diagram](#) on page 390 presents the most important states (including the FBA profile state names). The FBA Control Word ([2.12 FBA MAIN CW](#), page 81) commands the transitions between these states and the FBA Status Word ([2.13 FBA MAIN SW](#), page 84) indicates the status of the drive.

Fieldbus adapter module profile (selected by adapter module parameter) defines how the control word and status word are transmitted in a system which consists of fieldbus controller, fieldbus adapter module and drive. With transparent modes, control word and status word are transmitted without any conversion between the fieldbus controller and the drive. With other profiles (e.g. PROFIdrive for FPBA-01, AC/DC drive for FDNA-01, DS-402 for FCAN-01 and ABB Drives profile for all fieldbus adapter modules) fieldbus adapter module converts the fieldbus-specific control word to the FBA communication profile and status word from FBA communication profile to the fieldbus-specific status word.

For descriptions of other profiles, see the *User's Manual* of the appropriate fieldbus adapter module.

### Fieldbus references


References (FBA REF) are 16/32-bit signed integers. A negative reference (indicating reversed direction of rotation) is formed by calculating the two's complement from the corresponding positive reference value. The contents of each reference word can be used as torque or speed reference.

When torque or speed reference scaling is selected (by parameter [50.04 FBA REF1 MODESEL](#) / [50.05 FBA REF2 MODESEL](#)), the fieldbus references are 32-bit integers. The value consists of a 16-bit integer value and a 16-bit fractional value. The speed/torque reference scaling is as follows:

Reference	Scaling	Notes
Torque reference	FBA REF / 65536 (value in %)	Final reference is limited by parameters <a href="#">20.06 MAXIMUM TORQUE</a> and <a href="#">20.07 MINIMUM TORQUE</a> .
Speed reference	FBA REF / 65536 (value in rpm)	Final reference is limited by parameters <a href="#">20.01 MAXIMUM SPEED</a> , <a href="#">20.02 MINIMUM SPEED</a> and <a href="#">24.12 SPEED REFMIN ABS</a> .
Position reference	See parameter group <a href="#">60 POS FEEDBACK</a> .	
Velocity reference		

## State diagram

The following presents the state diagram for the FBA communication profile. For other profiles, see the *User's Manual* of the appropriate fieldbus adapter module.

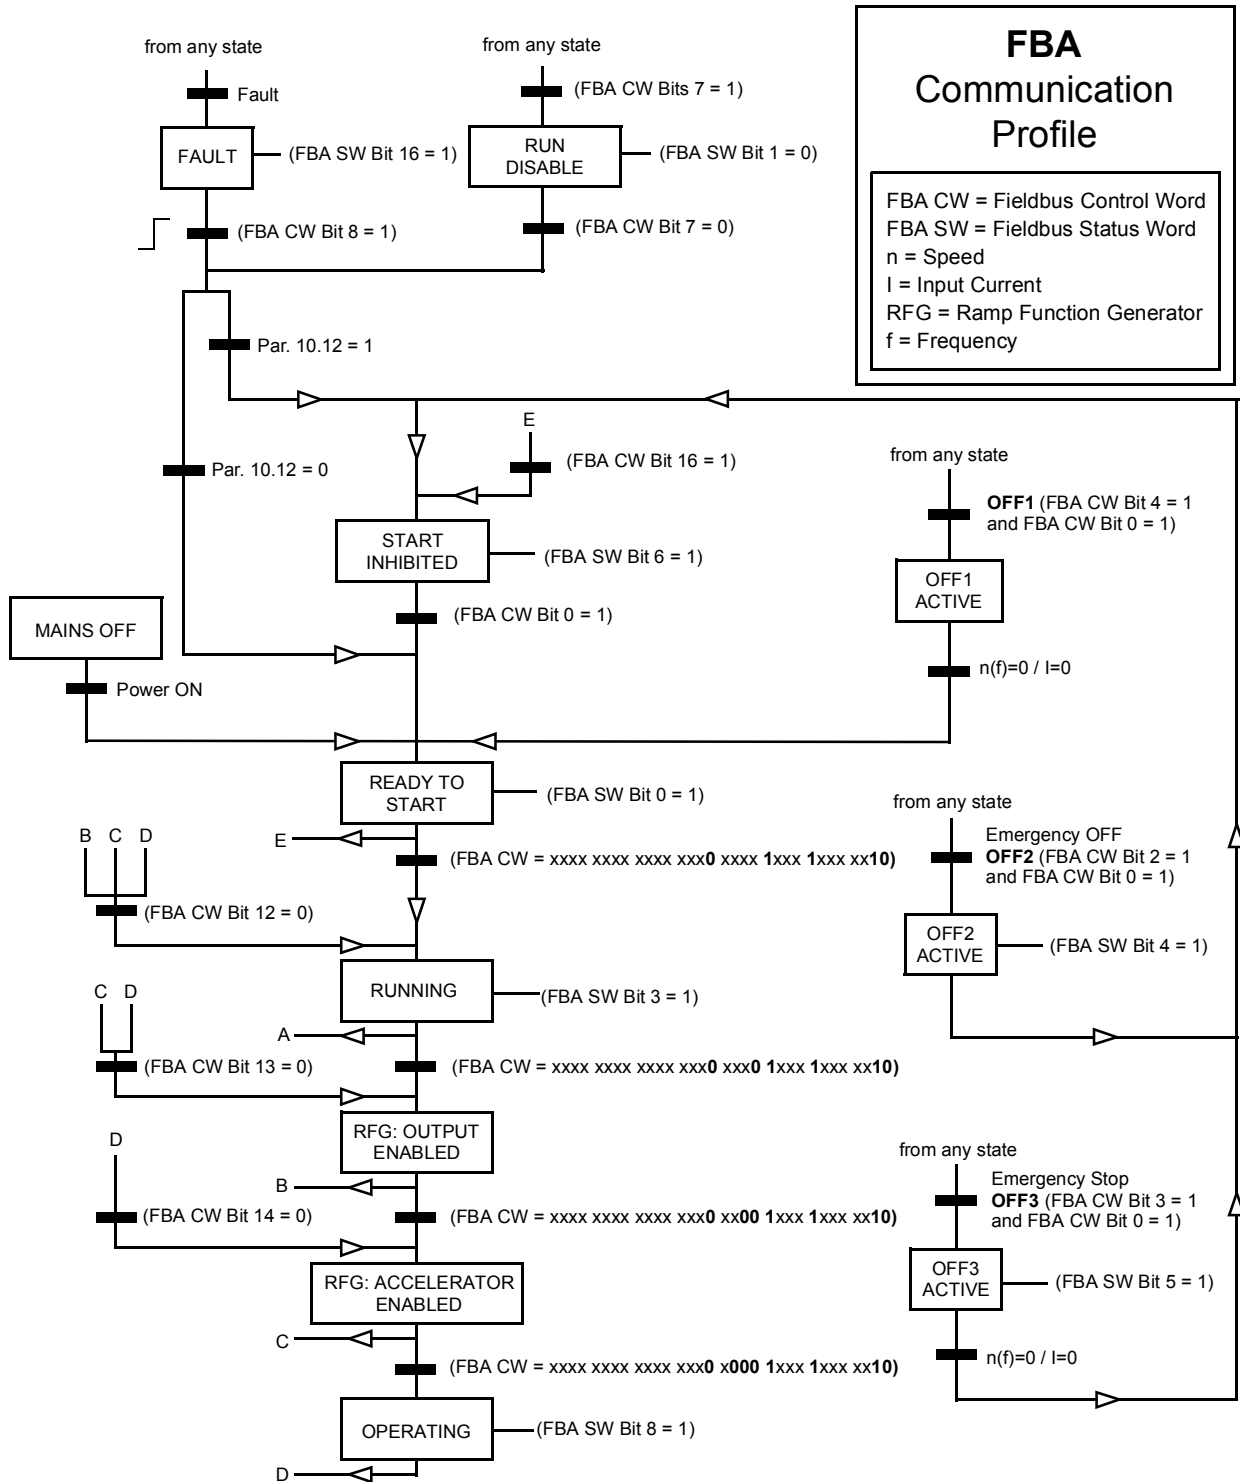

## Appendix B – Drive-to-drive link

---

### What this chapter contains

This chapter describes the wiring of, and available communication methods on the drive-to-drive link. Examples of using standard firmware blocks in the communication are also given starting on page [399](#).

### General

The drive-to-drive link is a daisy-chained RS-485 transmission line, constructed by connecting the X5 terminal blocks of the JCU Control Units of several drives. It is also possible to use an FMBA Modbus extension module installed into an option slot on the JCU. The firmware supports up to 63 nodes on the link.

The link has one master drive; the rest of the drives are followers. By default, the master broadcasts control commands as well as speed and torque references for all followers. The master can also be configured to send a position reference as either target position or synchronization reference. The master can send 8 messages per millisecond at 100/150-microsecond intervals. Sending one message takes approximately 15 microseconds, which results in a theoretical link capacity of roughly 6 messages per 100 microseconds.

Multicasting the control data and reference 1 to a pre-defined group of drives is possible, as is chained multicast messaging. Reference 2 is always broadcast by the master to all followers. See parameters [57.11](#)...[57.14](#).

### Wiring

Shielded twisted-pair cable (~100 ohm, e.g. PROFIBUS-compatible cable) must be used for the wiring. The maximum length of the link is 50 metres (164 ft).

The JCU Control Unit has a jumper (J3, "T") next to the X5 terminal block for bus termination. Termination must be ON on the drives at the ends of the drive-to-drive link; on intermediate drives, termination must be OFF.

Instead of the X5 connector, an FMBA Modbus extension module can be used.


For best immunity, high quality cable is recommended. The cable should be kept as short as possible. Unnecessary loops and running the cable near power cables (such as motor cables) must be avoided.

---

**Note:** The cable shields are to be grounded to the control cable clamp plate on the drive. Follow the instructions given in the *Hardware Manual* of the drive.

---

The following diagram shows the wiring of the drive-to-drive link.

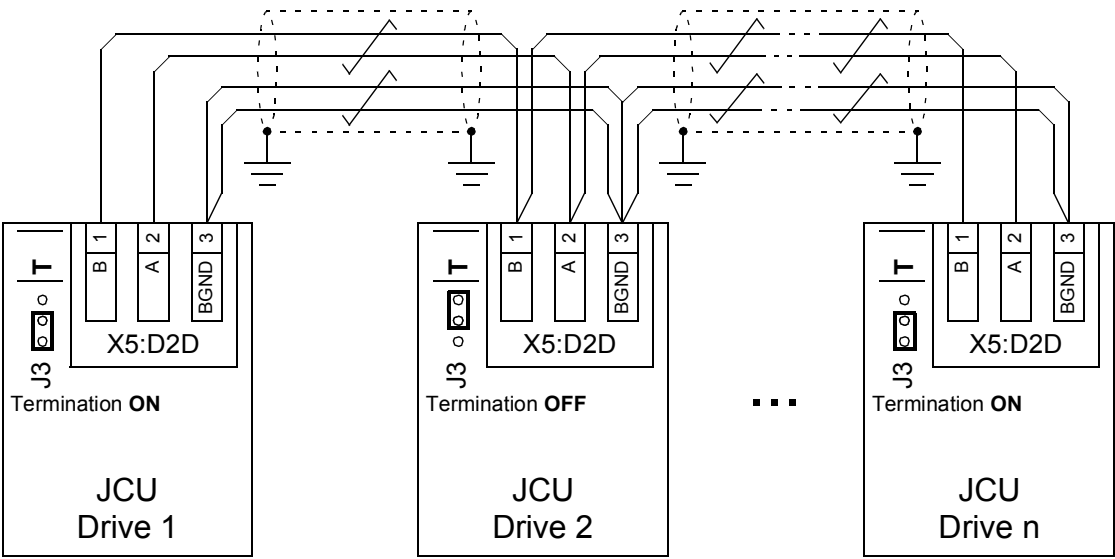

Datasets

Drive-to-drive communication uses DDCS (Distributed Drives Communication System) messages and dataset tables for data transfer. Each drive has a dataset table of 256 datasets, numbered 0...255. Each dataset contains 48 data bits.

By default, datasets 0...15 and 200...255 are reserved for the drive firmware; datasets 16...199 are available for the user application program.

The contents of the standard communication datasets (16-bit control word and two 32-bit references) can be configured freely with pointer parameters and/or application programming with the DriveSPC tool. Depending on the drive control mode, the followers can be configured to use the drive-to-drive commands and references with the following parameters:

Control data	Parameter	Setting for drive-to-drive communication
Start/Stop commands	10.01 EXT1 START FUNC 10.04 EXT2 START FUNC	(4) D2D
Speed reference	24.01 SPEED REF1 SEL 24.02 SPEED REF2 SEL	(5) D2D REF1 or (6) D2D REF2
Torque reference	32.01 TORQ REF1 SEL 32.02 TORQ REF ADD SEL	(5) D2D REF1 or (6) D2D REF2
Position reference	65.04 POS REF 1 SEL 65.12 POS REF 2 SEL	(5) D2D REF1 or (6) D2D REF2
Position reference in synchron control operating mode	67.01 SYNC REF SEL 67.02 SPEED REF VIRT M	(5) D2D REF1 or (6) D2D REF2

The communication status of the followers can be supervised by a periodic supervision message from the master to the individual followers (see parameters 57.04 FOLLOWER MASK 1 and 57.05 FOLLOWER MASK 2).



Drive-to-drive function blocks can be used in the DriveSPC tool to enable additional communication methods (such as follower-to-follower messaging) and to modify the use of datasets between the drives. See the function blocks under [Communication](#) (page 301).

## Types of messaging

Each drive on the link has a unique node address allowing point-to-point communication between two drives. The node address 0 is automatically assigned to the master drive; on other drives, the node address is defined by parameter [57.03 NODE ADDRESS](#).

Multicast addressing is supported, allowing the composition of groups of drives. Data sent to a multicast address is received by all drives that have that address. A multicast group can consist of 1...62 drives.

In broadcast messaging, data can be sent to all drives (actually, all followers) on the link.

Both master-to-follower(s) and follower-to-follower(s) communication is supported. A follower can send one message to another follower (or a group of followers) after receiving a token message from the master.


Type of messaging		Note
Point-to-point	Master point-to-point	Supported only at master
	Read remote	Supported only at master
	Follower multicast	Supported only at followers
Standard multicast		For both master and followers
Broadcast		For both master and followers
Token message for follower-to-follower communication		–
Chained multicast (Reference 1 only)		Supported only for drive-to-drive reference 1

**Master point-to-point messaging**

In this type of messaging, the master sends one dataset (LocalDsNr) from its own dataset table to the follower's. TargetNode stands for the node address of the follower; RemoteDsNr specifies the target dataset number.

The follower responds by returning the contents of the next dataset. The response is stored into dataset LocalDsNr+1 in the master.


**Note:** Master point-to-point messaging is only supported at the master because the response is always sent to node address 0 (the master).

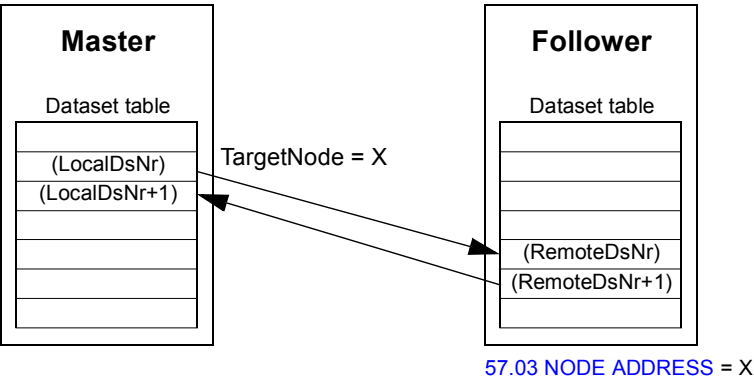

**Read remote messaging**

The master can read a dataset (RemoteDsNr) from a follower specified by TargetNode. The follower returns the contents of the requested dataset to the master. The response is stored at dataset LocalDsNr in the master.


**Note:** Read remote messaging is only supported at the master because the response is always sent to node address 0 (the master).

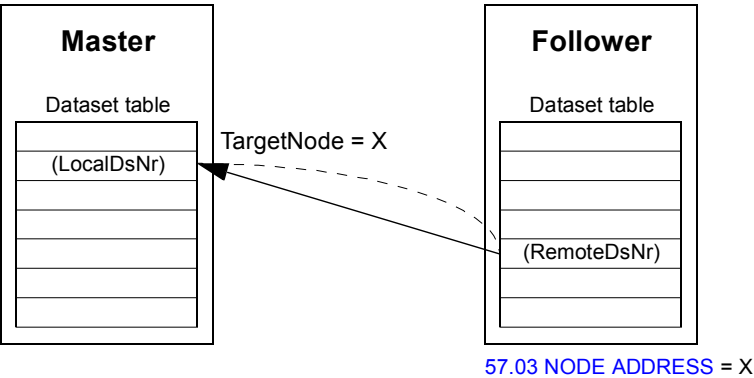

### Follower multicast messaging (write only)

This type of messaging is for point-to-point communication between followers. After receiving a token from the master, a follower can send one dataset to another follower with a follower multicast message. The target drive is specified using the node address.

**Note:** The data is not sent to the master.

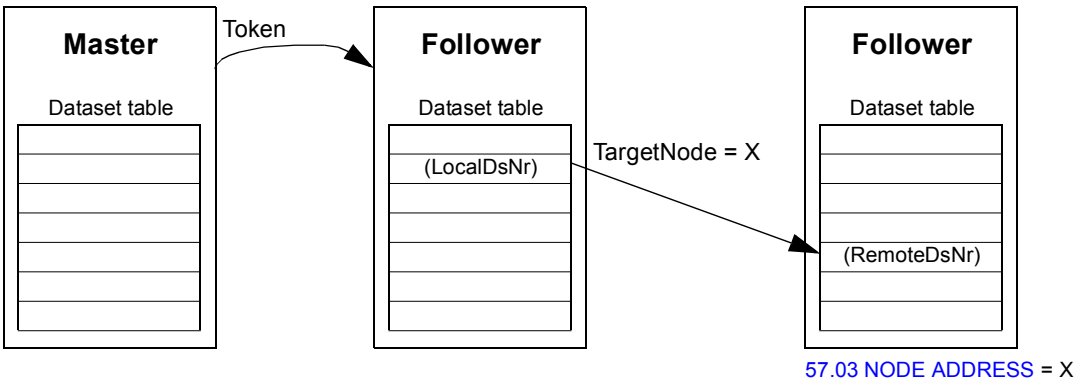


### Standard multicast messaging (write only)

In standard multicast messaging, one dataset can be sent to a group of drives having the same standard multicast group address. The target group is defined by the [D2D\\_Conf](#) standard function block (see page 301).


The sending drive can either be the master, or a follower after receiving a token from the master.

**Note:** The master does not receive the sent data even if it is a member of the target multicast group.

*Master-to-follower(s) multicasting*

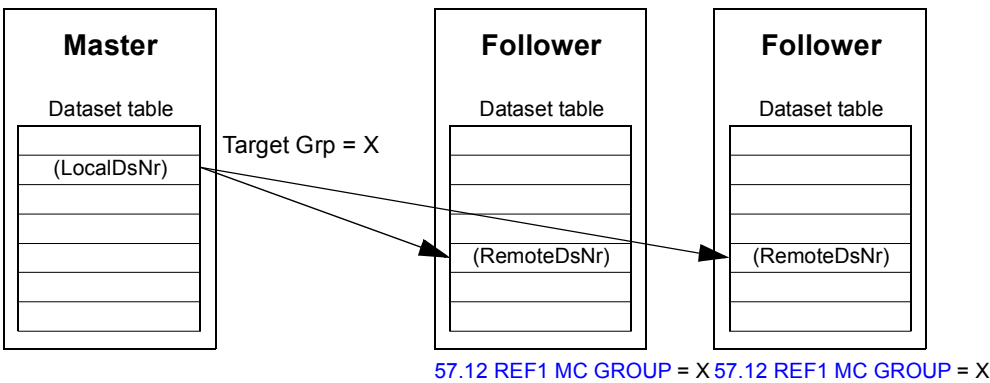

*Follower-to-follower(s) multicasting*

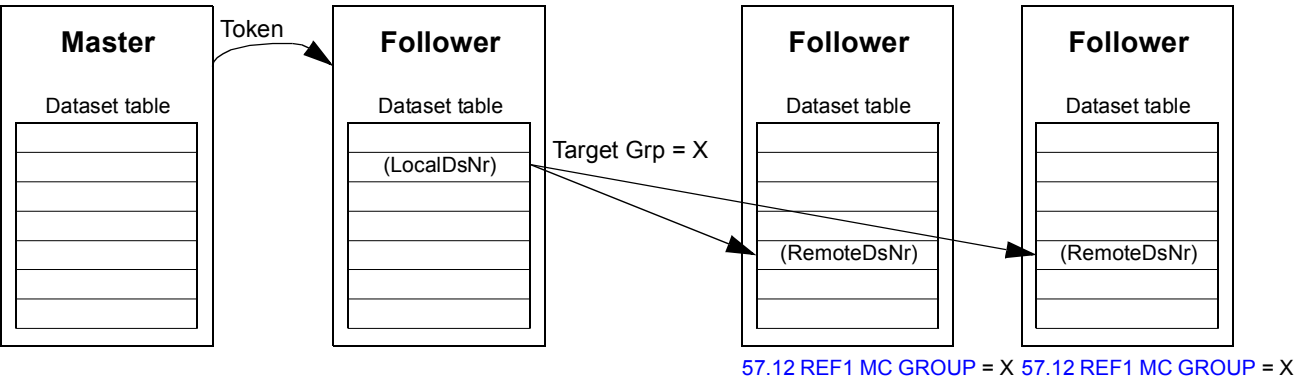


**Broadcast messaging (write only)**

In broadcasting, the master sends one dataset to all followers, or a follower sends one dataset to all other followers.


The target (Target Grp) is automatically set to 255 denoting all followers.

**Note:** The master does not receive any data broadcast by the followers.

*Master-to-follower(s) broadcasting*

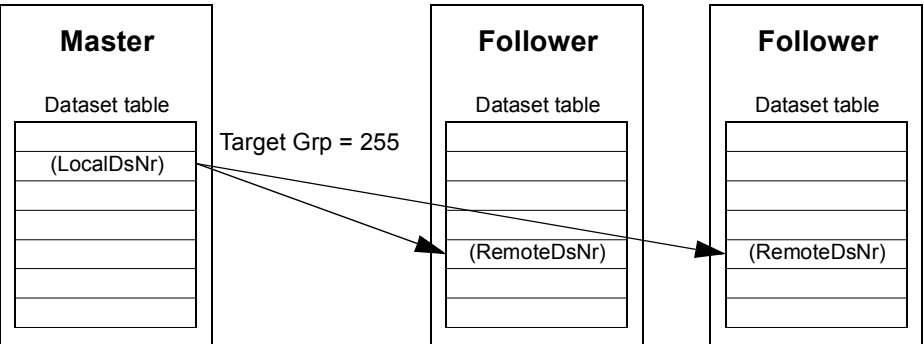

### *Follower-to-follower(s) broadcasting*

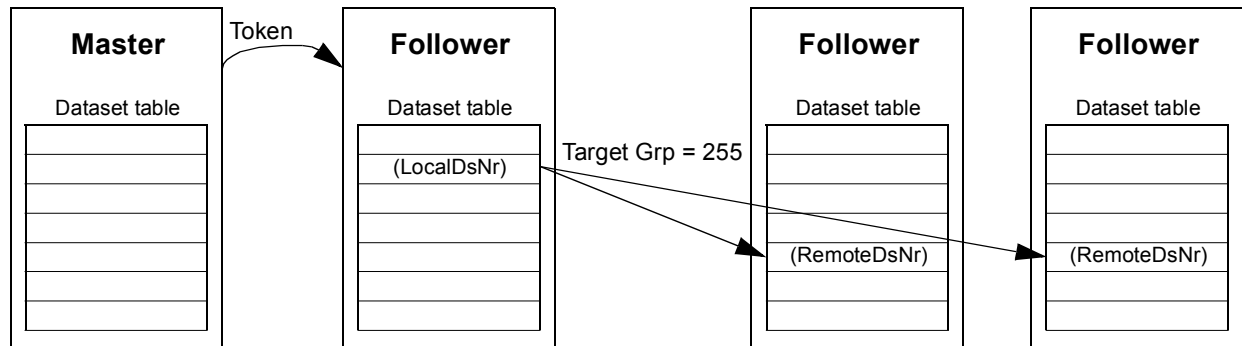


### **Chained multicast messaging**

Chained multicasting is supported only for drive-to-drive reference 1 by the firmware.

The message chain is always started by the master. The target group is defined by parameter [57.13 NEXT REF1 MC GRP](#). The message is received by all followers that have parameter [57.12 REF1 MC GROUP](#) set to the same value as parameter [57.13 NEXT REF1 MC GRP](#) in the master.

If a follower have parameters [57.03 NODE ADDRESS](#) and [57.12 REF1 MC GROUP](#) set to the same value, it becomes a submaster. Immediately after a submaster receives the multicast message, it sends its own message to the next multicast group defined by parameter [57.13 NEXT REF1 MC GRP](#).

The duration of the entire message chain is approximately 15 microseconds multiplied by the number of links in the chain (defined by parameter [57.14 NR REF1 MC GRPS](#) in the master).

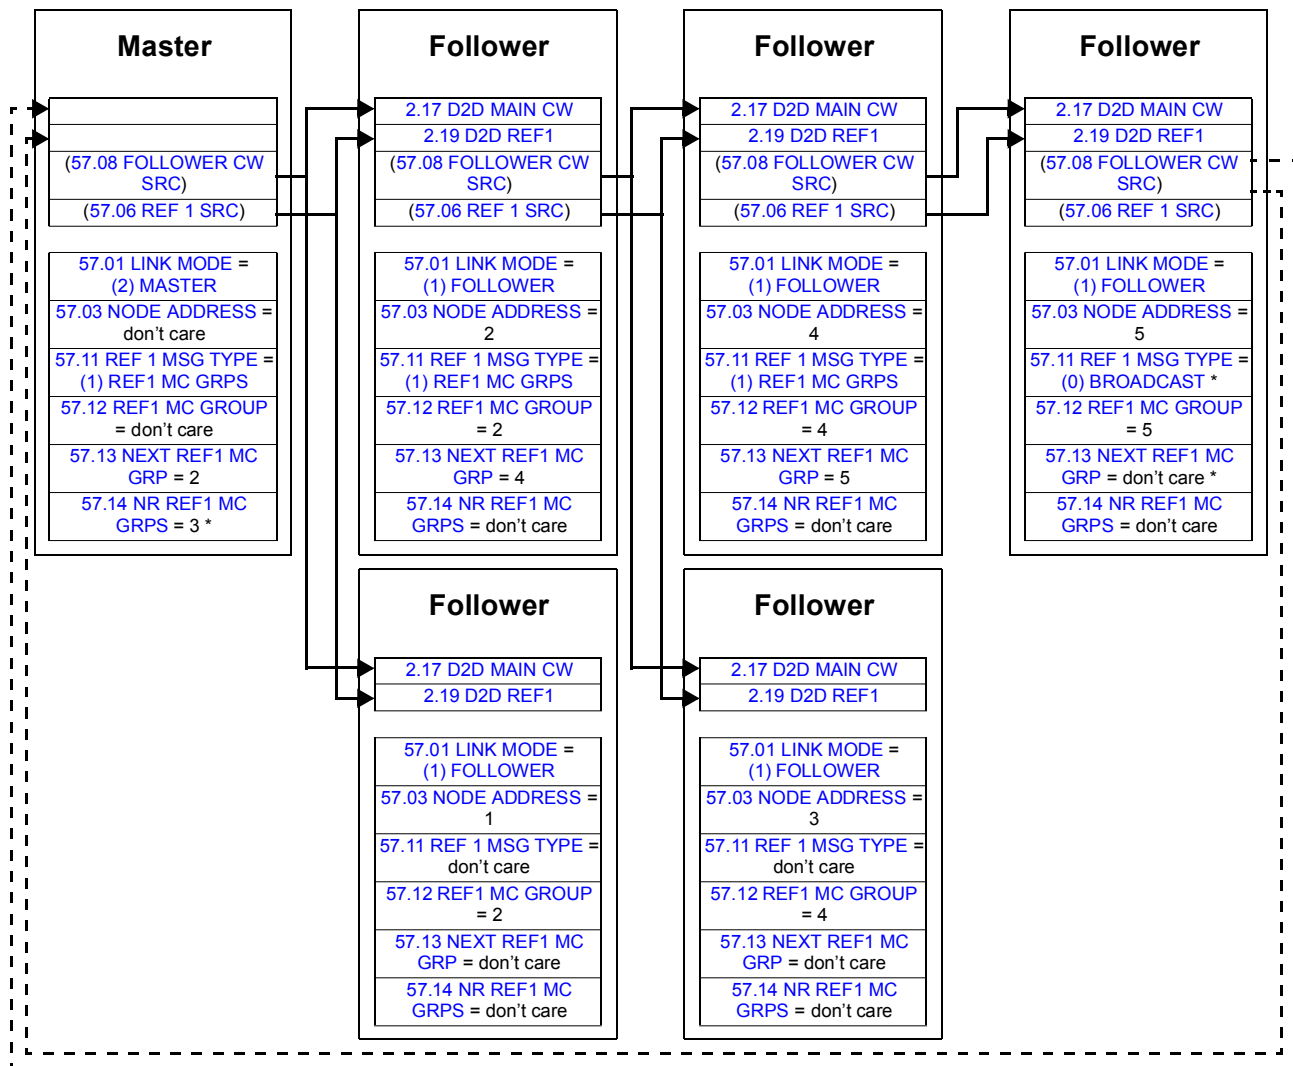

\* If the last follower should send an acknowledgement to the master, the following changes would be required: In the master drive, par. 57.14 NR REF1 MC GRPS should be set to 4; in the last follower, par. 57.11 REF 1 MSG TYPE should be set to (1) REF1 MC GRPS and par. 57.13 NEXT REF1 MC GRP to 0. Note that, at the time of printing, the acknowledgement is not used in any way. In the example, sending the acknowledgement is prevented by setting par. 57.11 REF 1 MSG TYPE to (0) BROADCAST in the last follower. Alternatively, parameters 57.03 NODE ADDRESS and 57.12 REF1 MC GROUP could be set to non-equal values.


## Examples of using standard function blocks in drive-to-drive communication

See also the descriptions of the drive-to-drive function blocks starting on page [301](#).

### Example of master point-to-point messaging

Master


Follower (node 1)

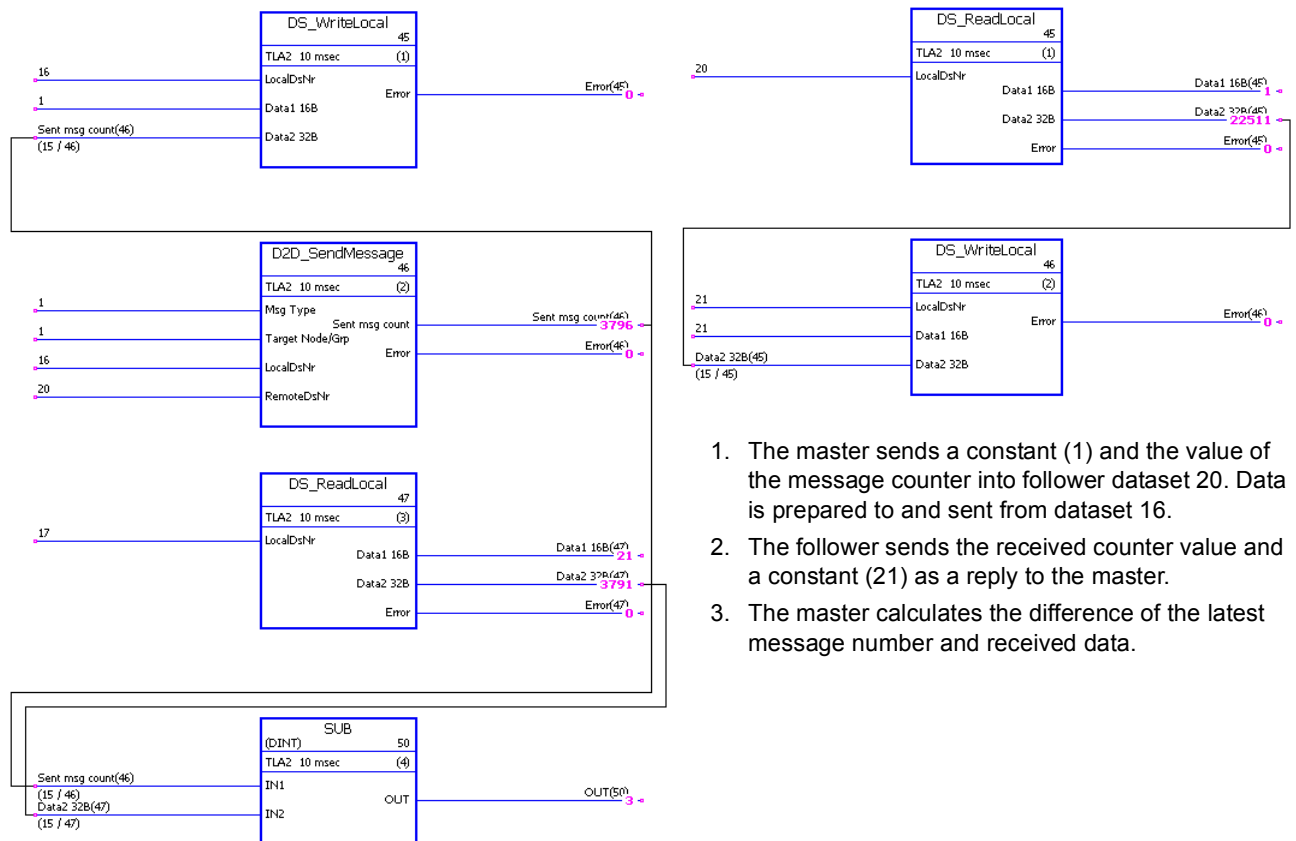


1. The master sends a constant (1) and the value of the message counter into follower dataset 20. Data is prepared to and sent from dataset 16.
2. The follower sends the received counter value and a constant (21) as a reply to the master.
3. The master calculates the difference of the latest message number and received data.

Example of read remote messaging

Master

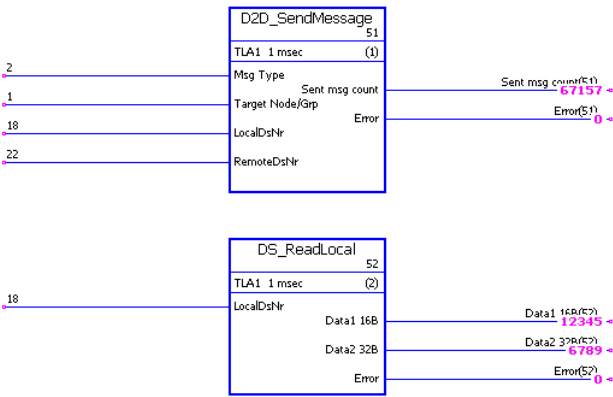


Follower (node 1)

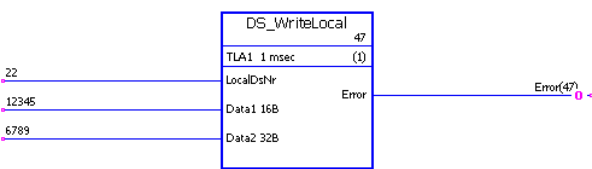

1. The master reads the contents of the follower dataset 22 into its own dataset 18. Data is accessed using the **DS\_ReadLocal** block.
2. In the follower, constant data is prepared into dataset 22.

Releasing tokens for follower-to-follower communication

Master

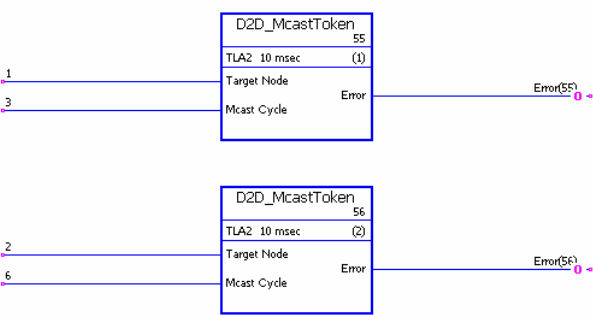


1. This drive-to-drive link consists of three drives (master and two followers).
2. The master operates as a “chairman”. Follower 1 (node 1) is allowed to send one message every 3 milliseconds. Follower 2 (node 2) is allowed to send one message every 6 milliseconds.




## Example of follower-to-follower multicasting

*Follower 1*

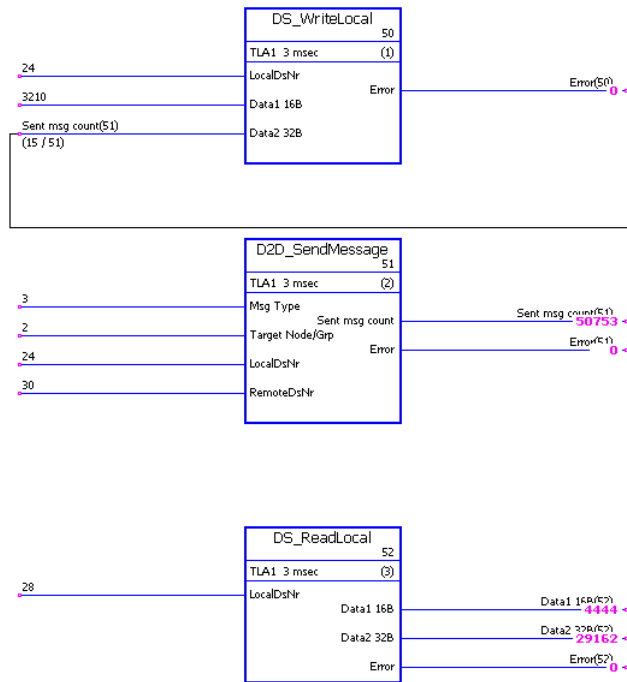


*Follower 2*

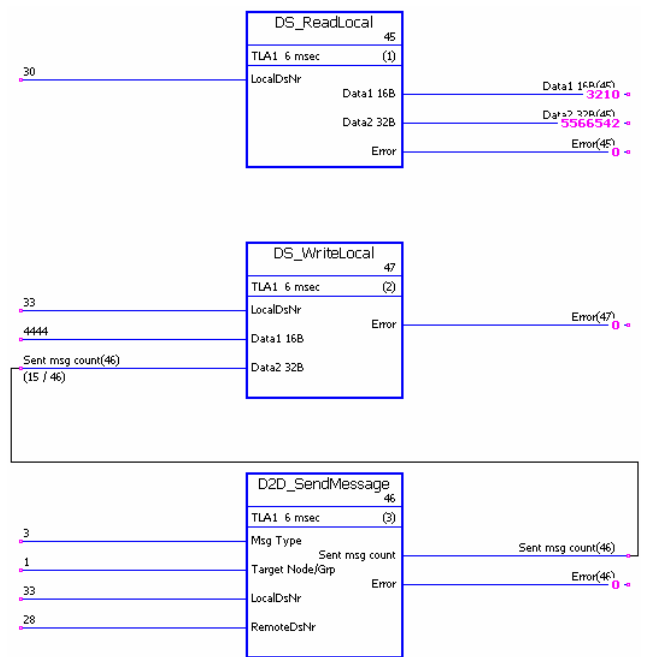


1. Follower 1 writes local dataset 24 to follower 2 dataset 30 (3 ms interval).
2. Follower 2 writes local dataset 33 to follower 1 dataset 28 (6 ms interval).
3. In addition, both followers read received data from local datasets.

Example of standard master-to-follower(s) multicast messaging

Master

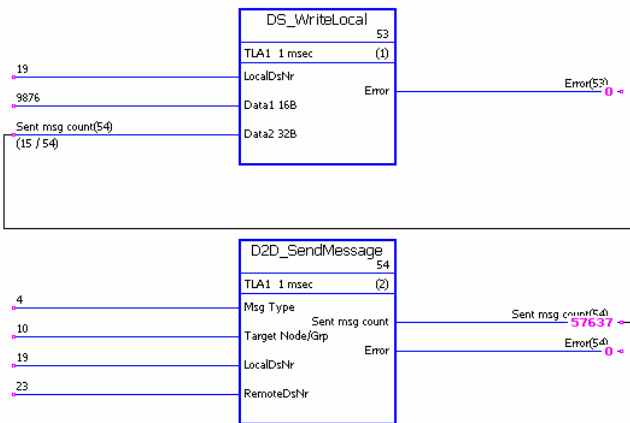

Follower(s) in Std Mcast Group 10

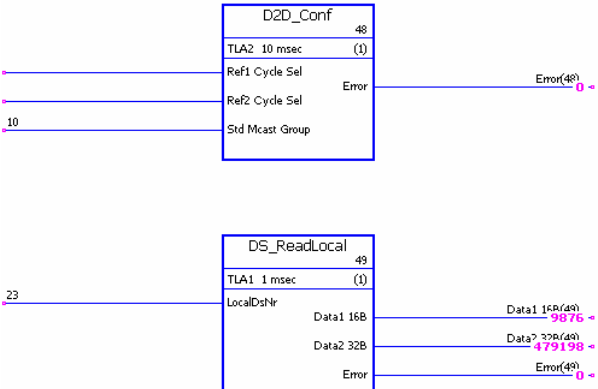


1. The master sends a constant (9876) and the value of the message counter to all followers in standard multicast group 10. The data is prepared into and sent from master dataset 19 to follower dataset 23.
2. Received data is read from dataset 23 of the receiving followers.


**Note:** The example application shown for Master above also applies to the sending follower in standard follower-to-follower multicasting.

Example of broadcast messaging

Master

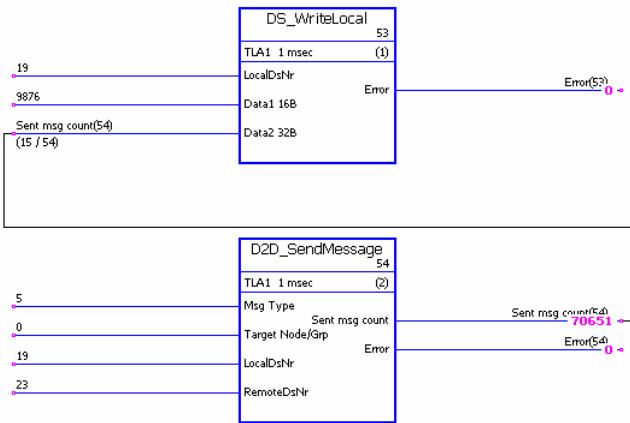

Follower(s)

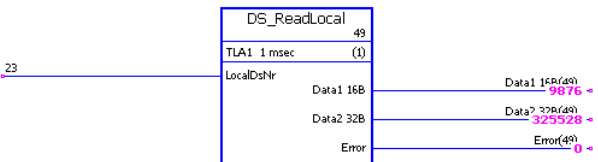

1. The master sends a constant (9876) and the value of the message counter to all followers. The data is prepared into and sent from master dataset 19 to follower dataset 23.
2. Received data is read from dataset 23 of the followers.

**Note:** The example application shown for Master above also applies to the sending follower in follower-to-follower broadcasting.

## Appendix C – Homing modes


---

### What this chapter contains

This chapter describes homing modes 1...35.


Negative direction means that the movement is to the left and positive direction means that the movement is to the right.

The following picture presents an example of an homing application:

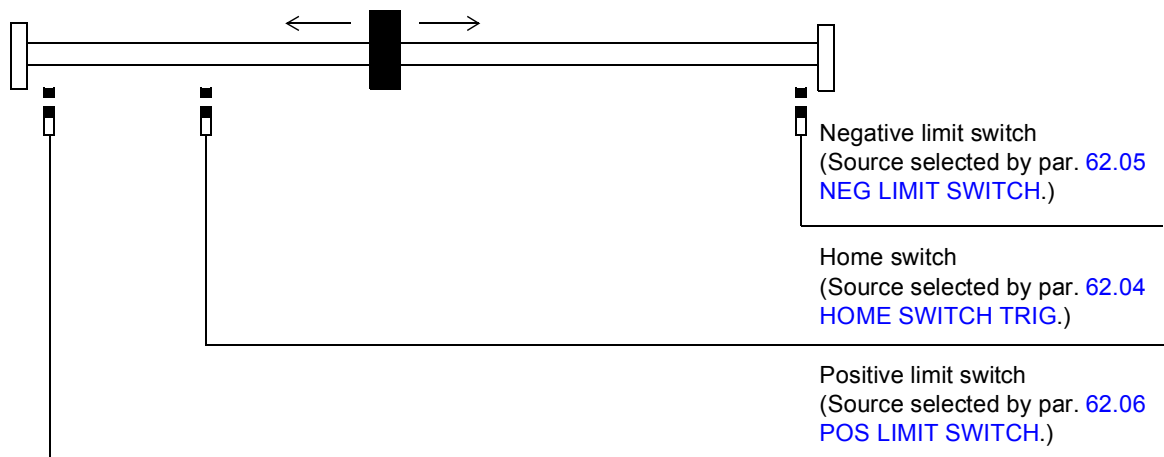


Homing mode 1

The status of the home switch at start is insignificant.

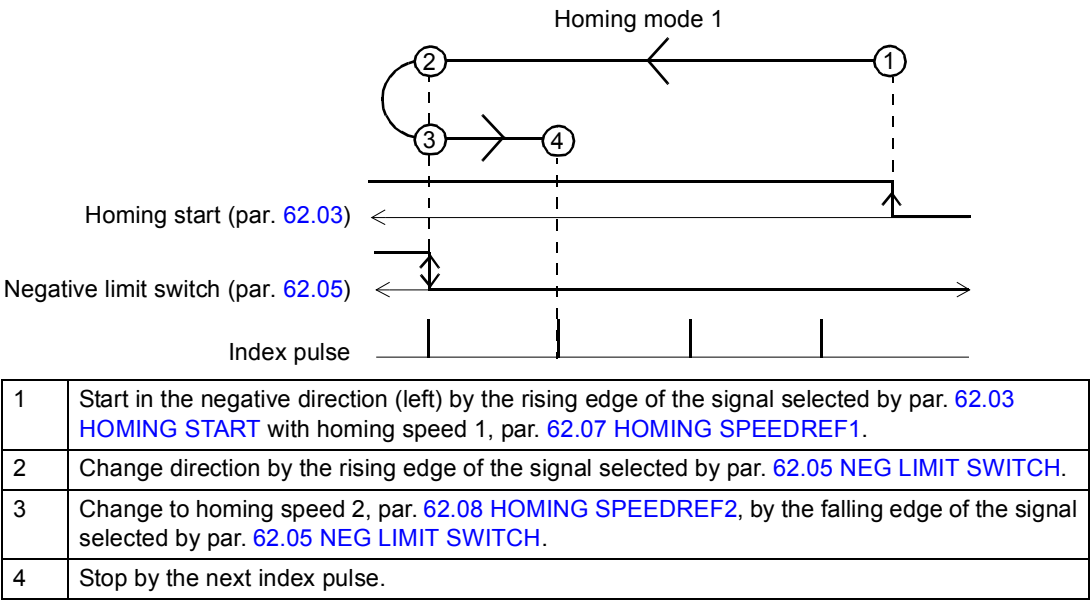


Homing mode 2


The status of the home switch at start is insignificant.

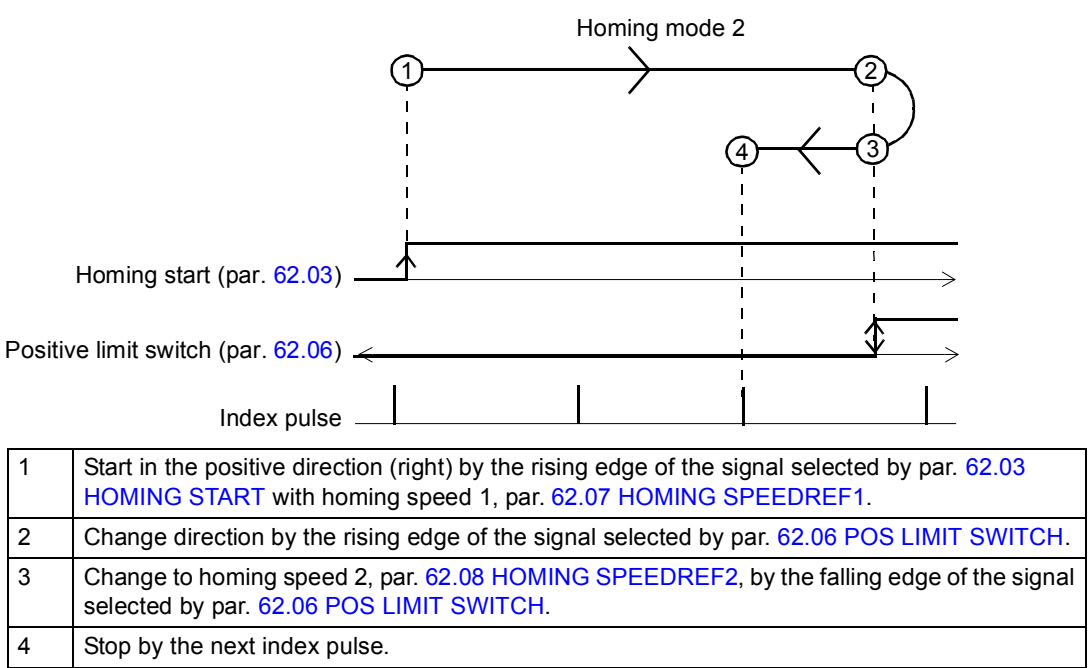

### Homing mode 3

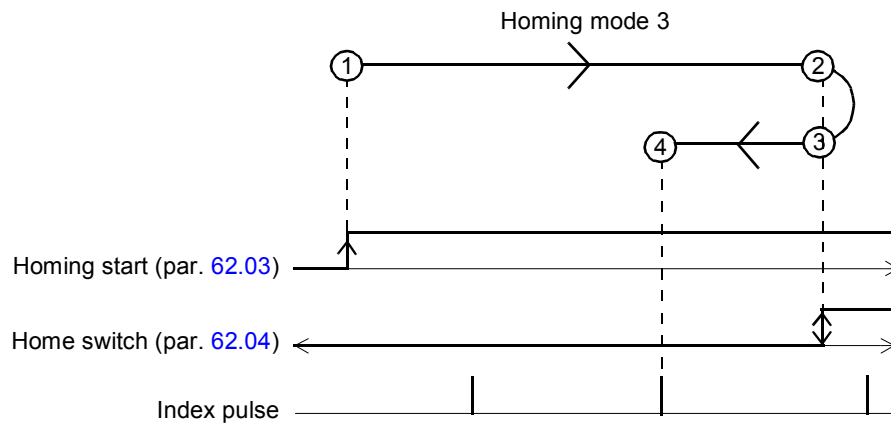


1	If the home switch signal is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

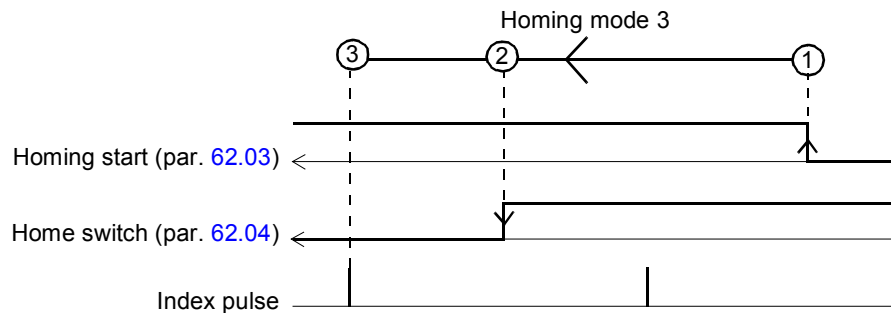


1	If the home switch signal is 1 (par. 62.04 HOME SWITCH TRIG): Start in the negative direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the next index pulse.

### Homing mode 4

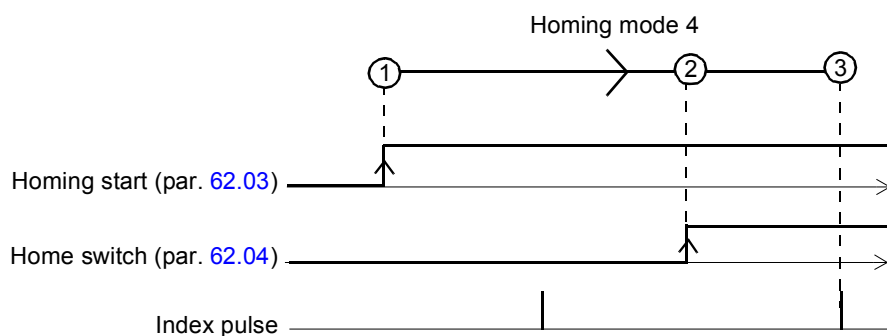


1	If the home switch signal is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the next index pulse.

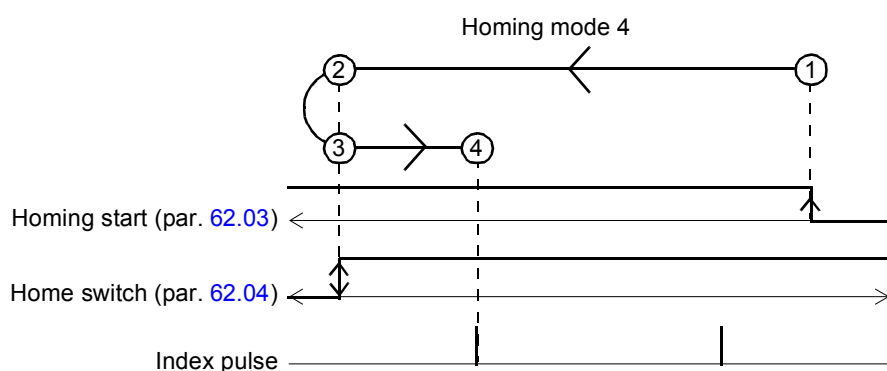


1	If the home switch signal is 1 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

### Homing mode 5


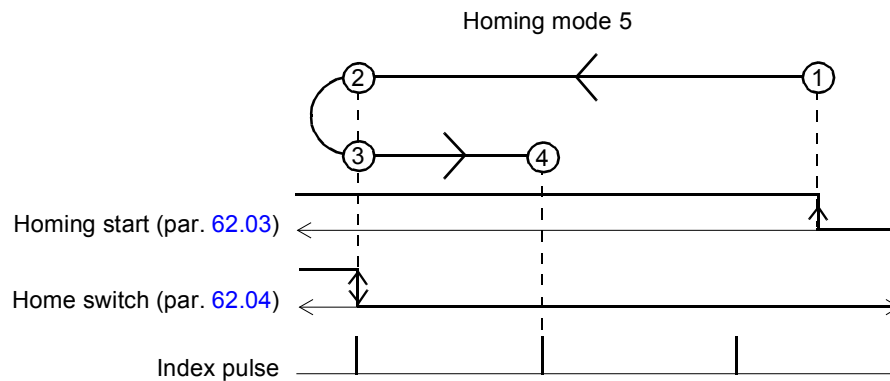


1	If the home switch signal is 0 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

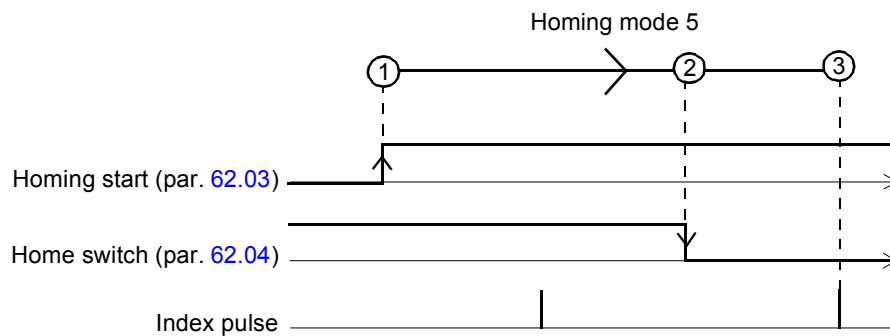


1	If the home switch signal is 1 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the next index pulse.

Homing mode 6

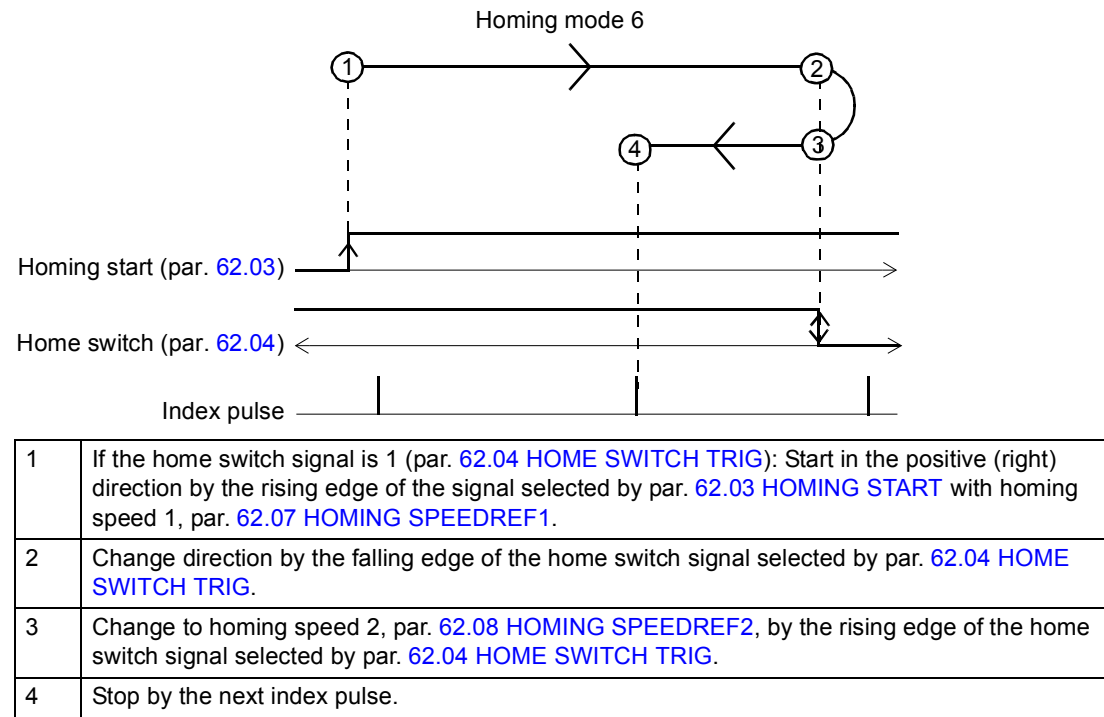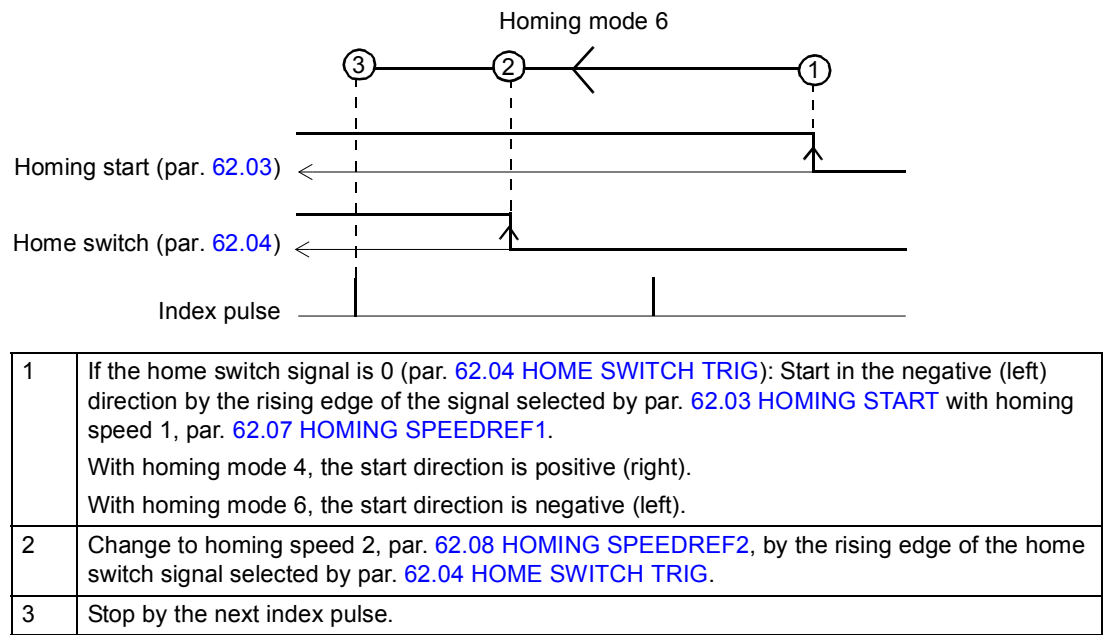





# Homing mode 7

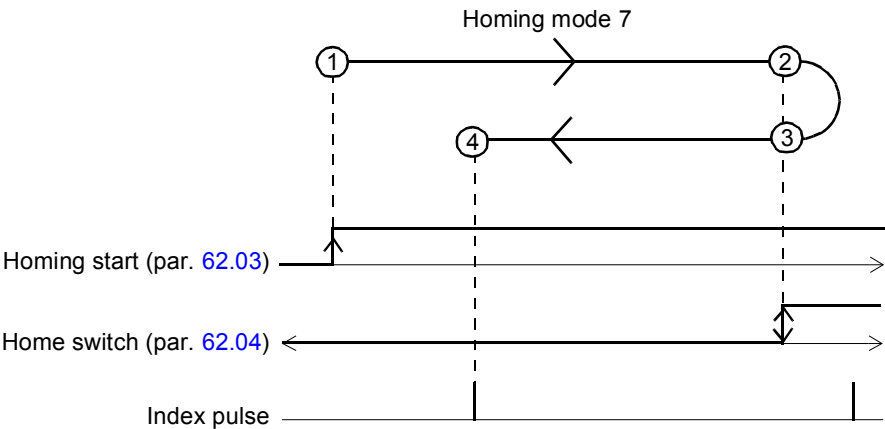


1	If the home switch signal is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

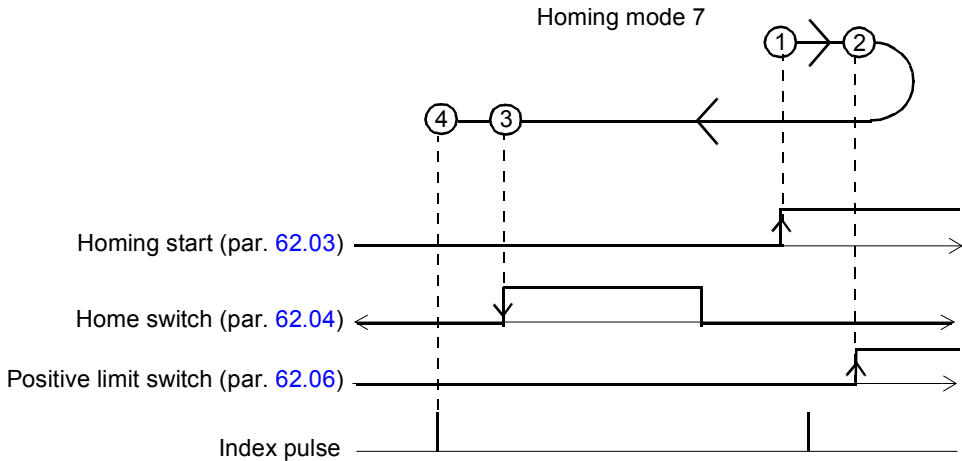


1	If the home switch signal is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the positive limit switch signal selected by par. 62.06 POS LIMIT SWITCH.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

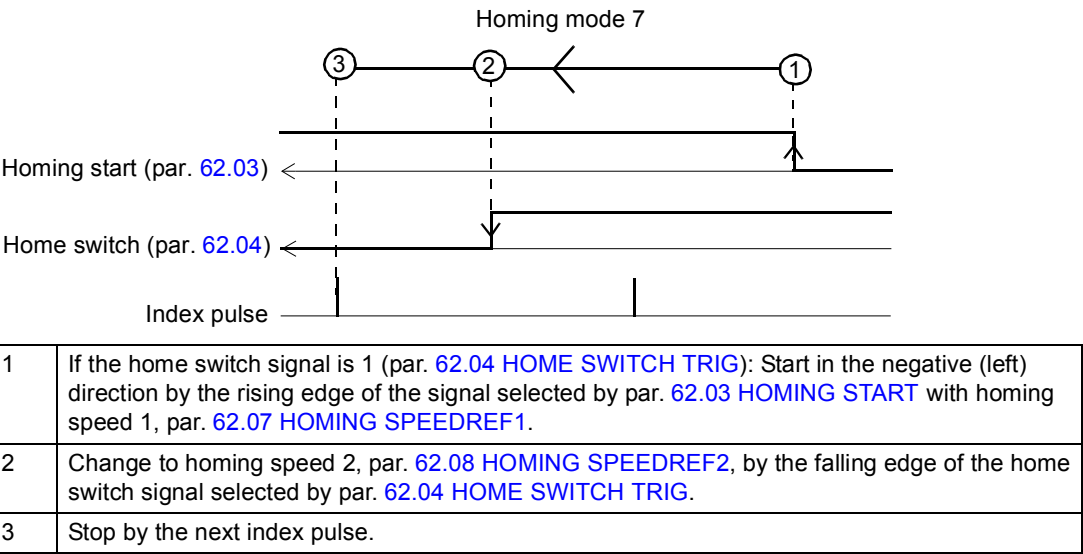


### Homing mode 8

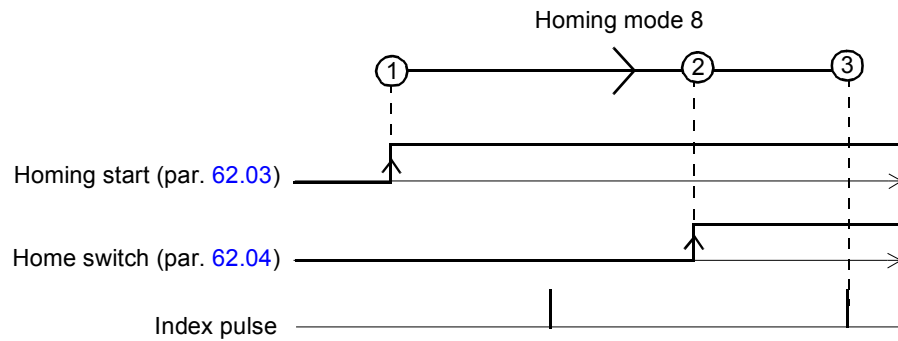


1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the next index pulse.

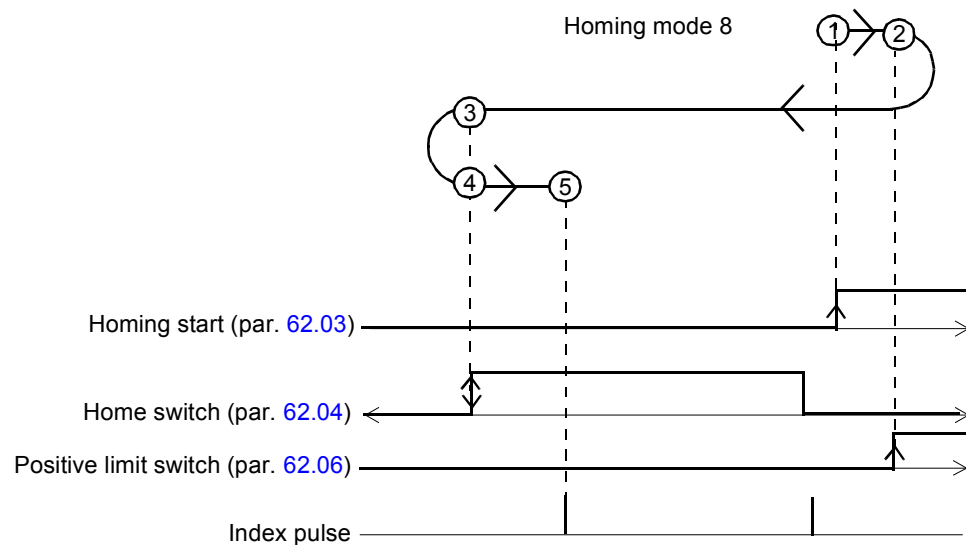


1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the positive limit switch signal selected by par. 62.06 POS LIMIT SWITCH.
3	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
5	Stop by the next index pulse.

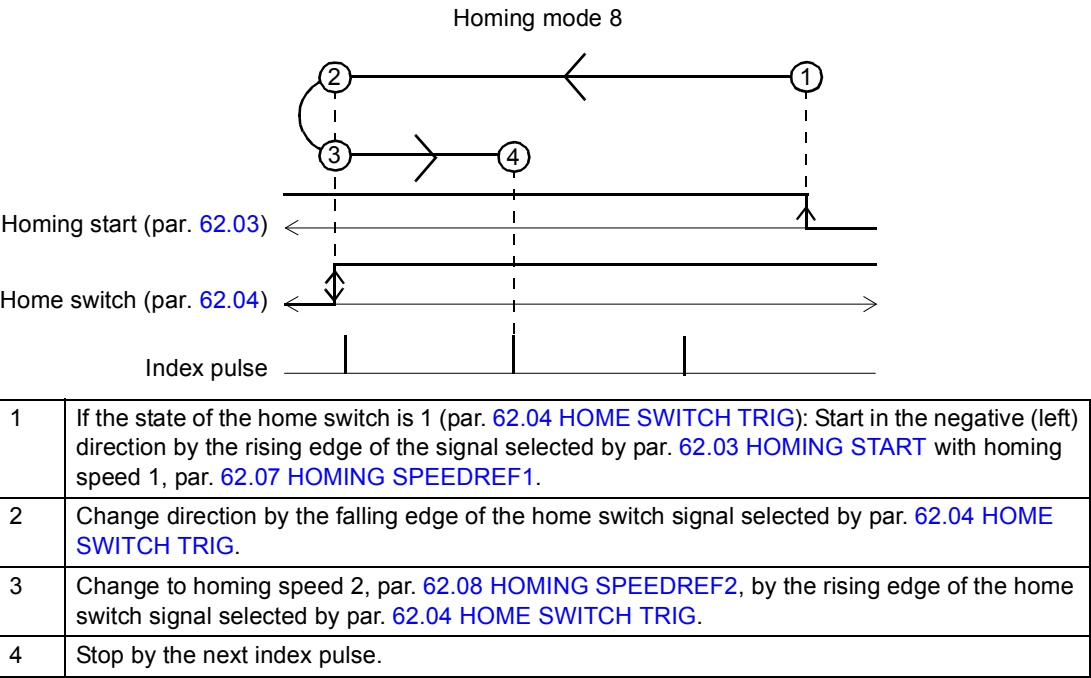


### Homing mode 9

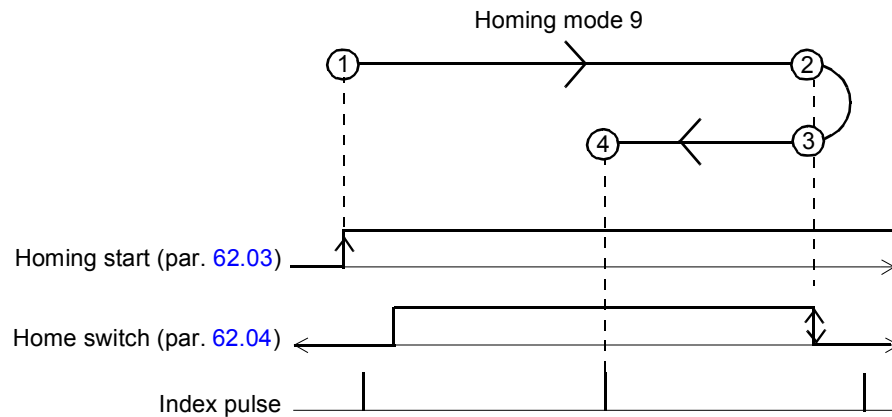

1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the positive limit switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

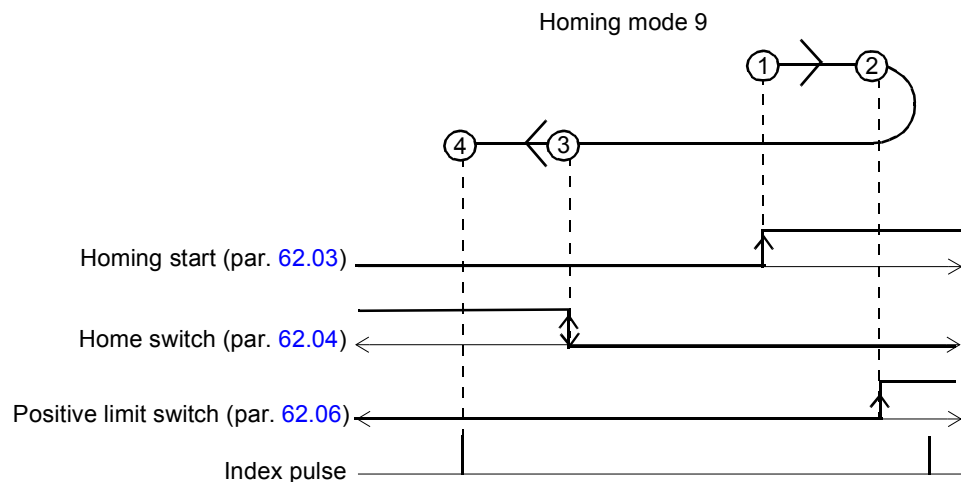


1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the home switch signal selected by par. 62.06 POS LIMIT SWITCH.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

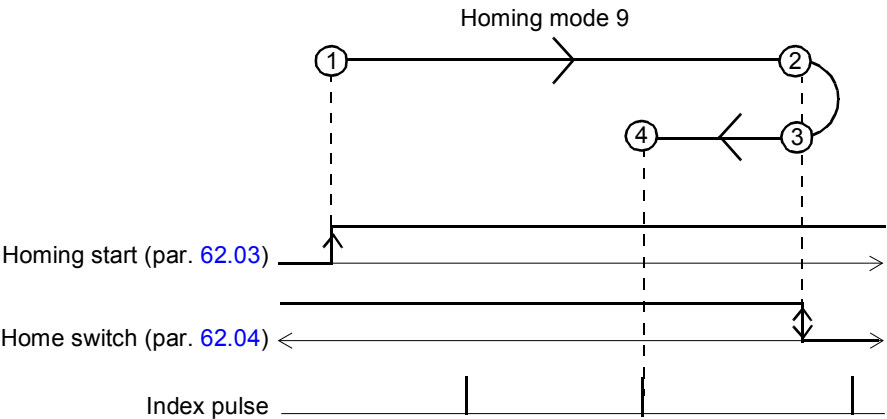


1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the positive limit switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.


### Homing mode 10

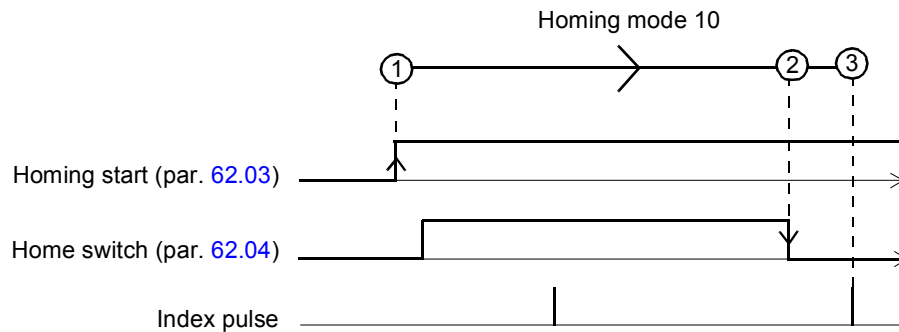

1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the next index pulse.

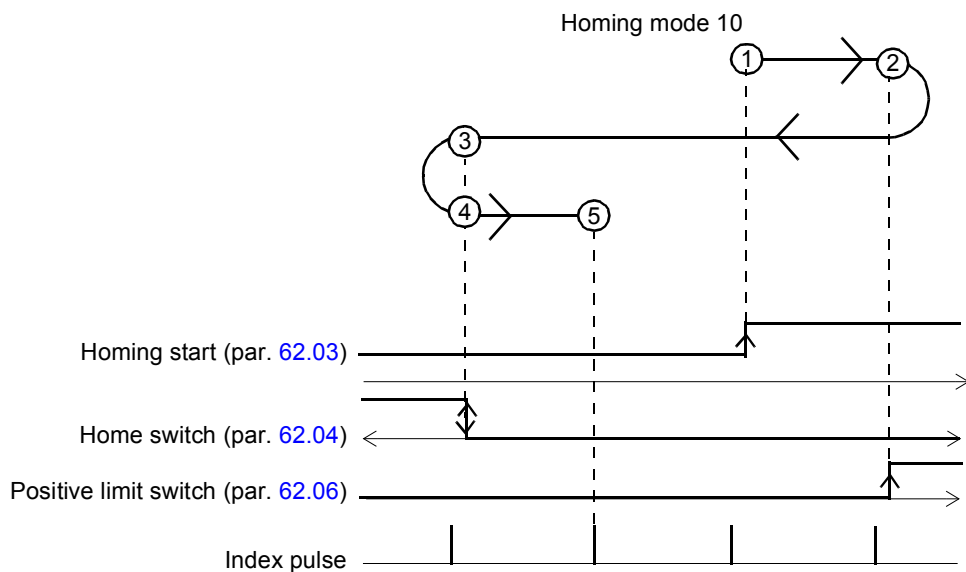


1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the positive limit switch signal selected by par. 62.06 POS LIMIT SWITCH.
3	Change direction by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
5	Stop by the next index pulse.

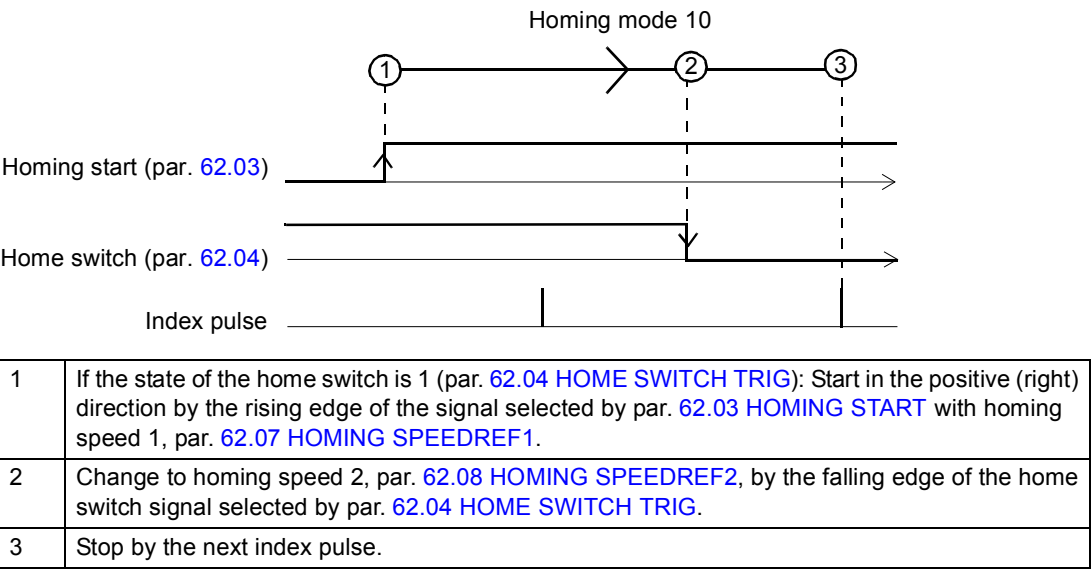





# Homing mode 11

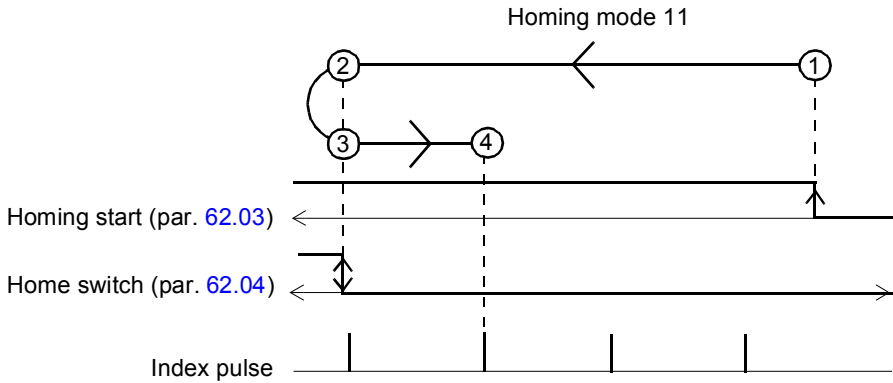

1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

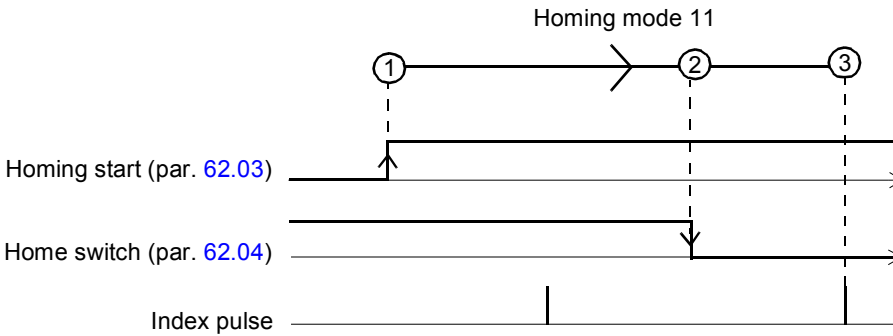


1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the next index pulse.

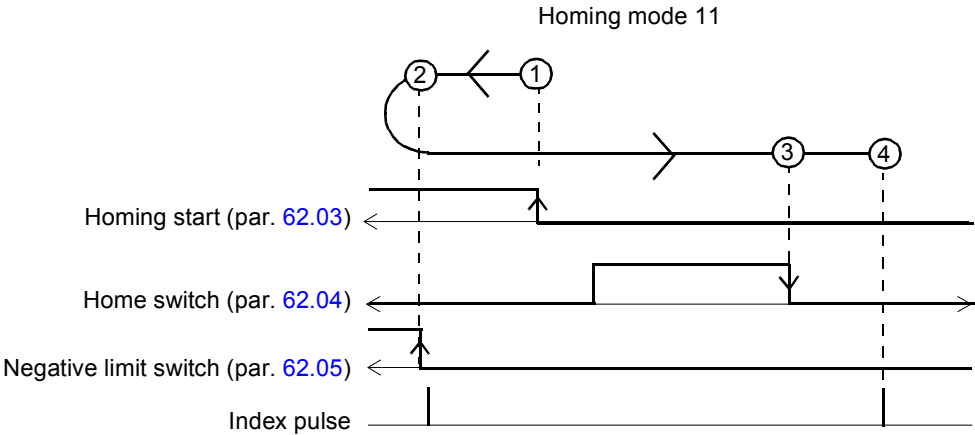


1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the negative limit switch signal selected by par. 62.05 NEG LIMIT SWITCH.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.


## Homing mode 12

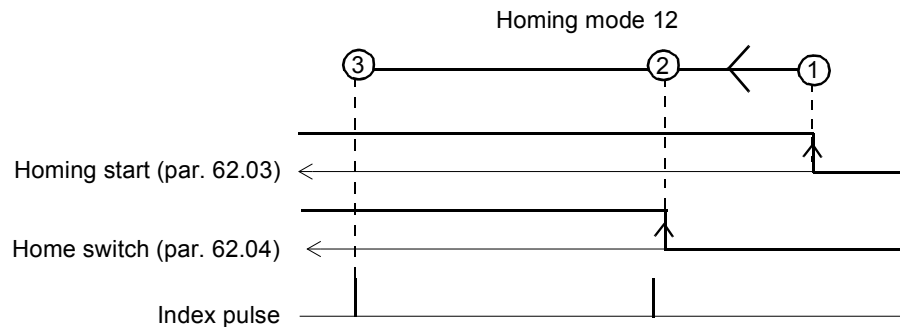

1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the next index pulse.

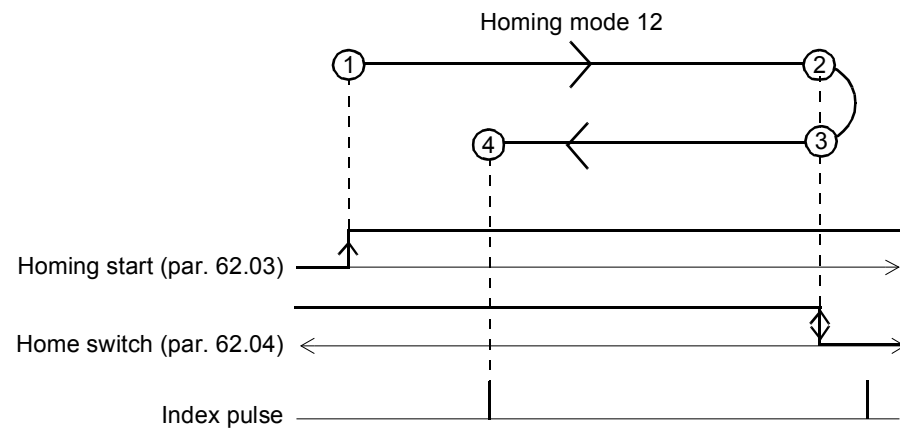


1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

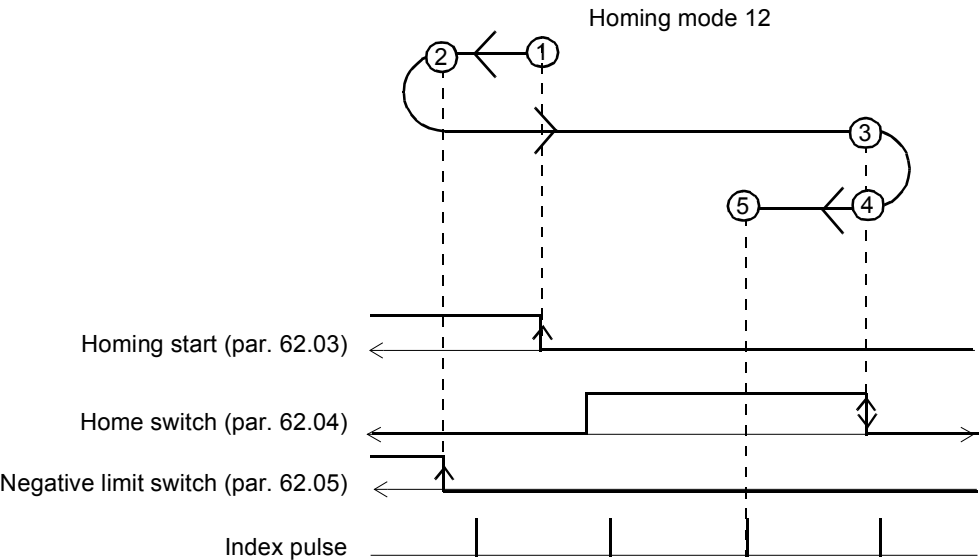


1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the negative limit switch signal selected by par. 62.05 NEG LIMIT SWITCH.
3	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
5	Stop by the next index pulse.


### Homing mode 13

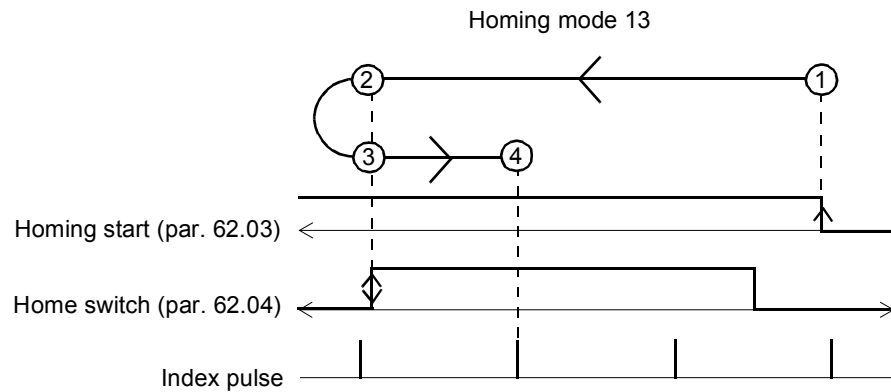


1	If the state of the home switch is 0: Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

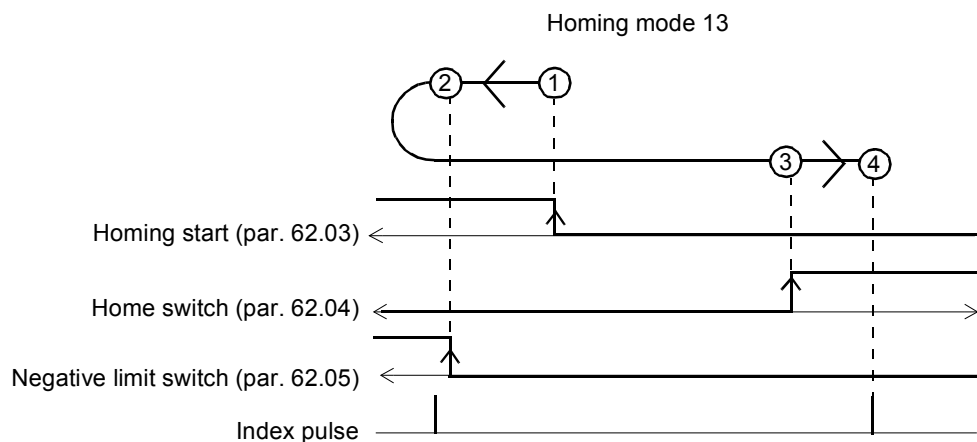


1	If the state of the home switch is 0: Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the negative limit switch signal selected by par. 62.05 NEG LIMIT SWITCH.
3	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Stop by the next index pulse.

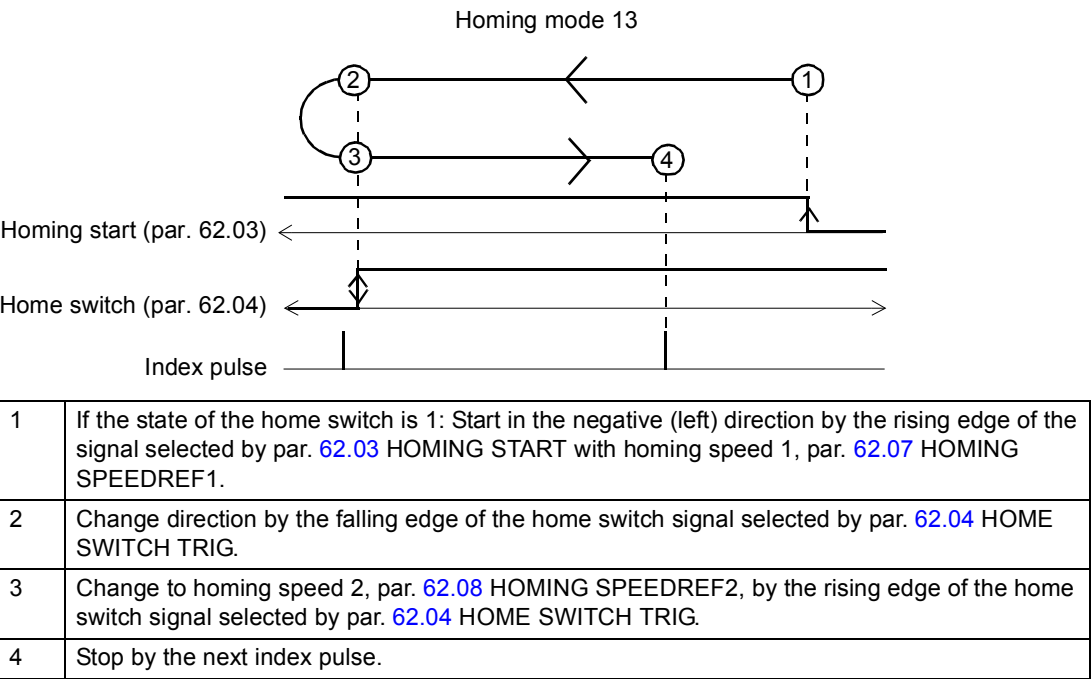


### Homing mode 14

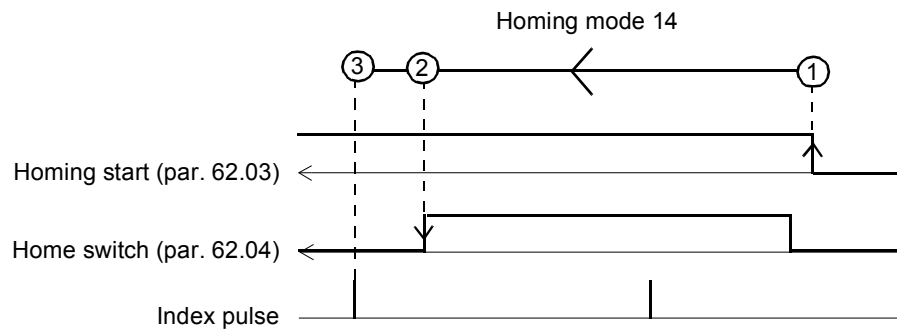

1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the next index pulse.

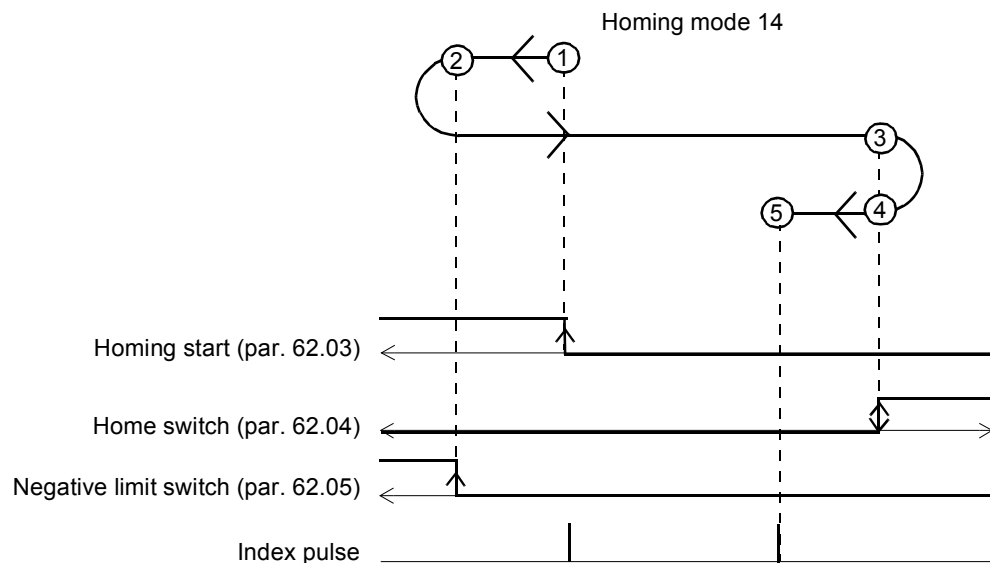

1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the negative limit switch signal selected by par. 62.05 NEG LIMIT SWITCH.
3	Change direction by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
4	Change to homing speed 2, par. 62.08 HOMING SPEEDREF2, by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
5	Stop by the next index pulse.

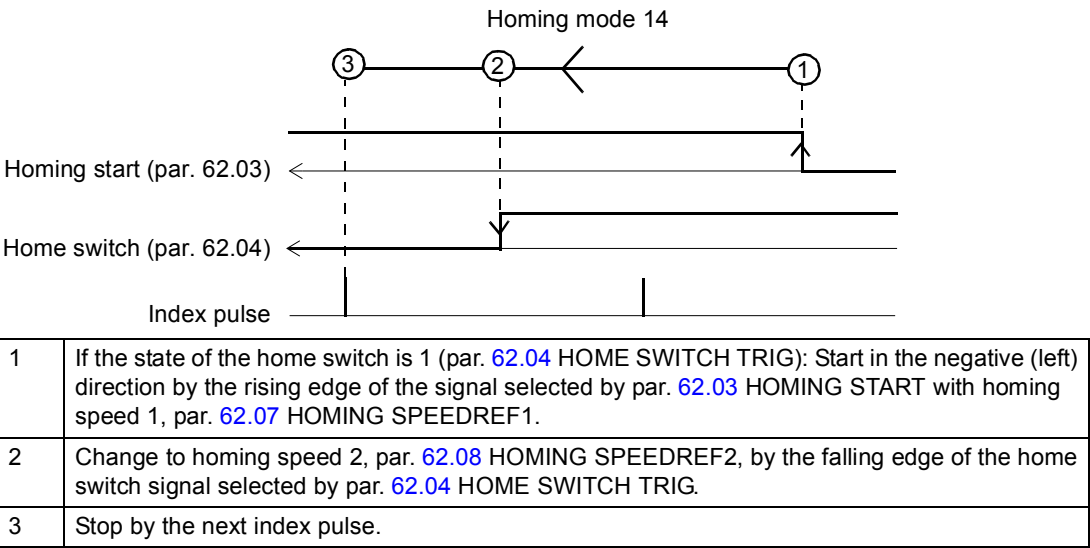


*Homing modes 15 and 16*

Reserved



### Homing mode 17


The status of the home switch at start is insignificant.

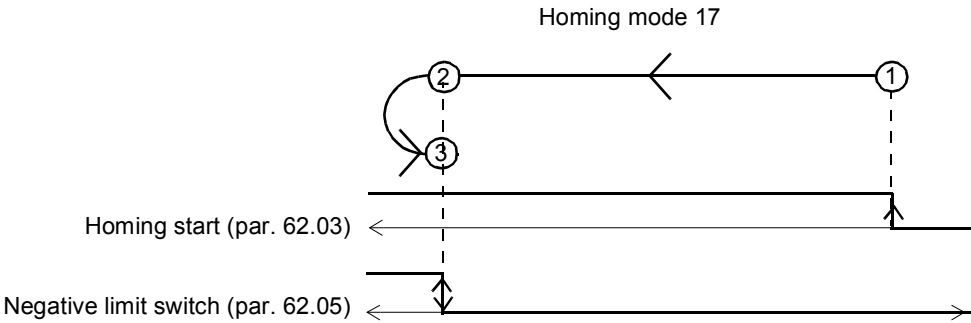

1	Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the negative limit switch signal selected by par. 62.05 NEG LIMIT SWITCH.
3	Stop by the falling edge of the negative limit switch signal selected by par. 62.05 NEG LIMIT SWITCH.


### Homing mode 18

The status of the home switch at start is insignificant.

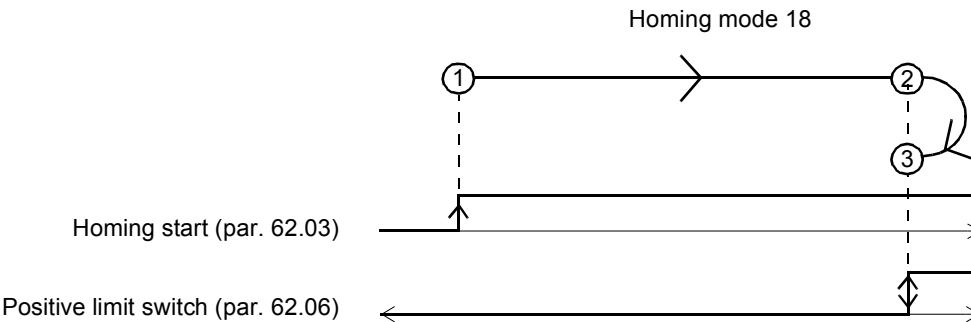


1	Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the positive limit switch signal selected by par. 62.06 POS LIMIT SWITCH.
3	Stop by the falling edge of the positive limit switch signal selected by par. 62.06 POS LIMIT SWITCH.

Homing mode 19

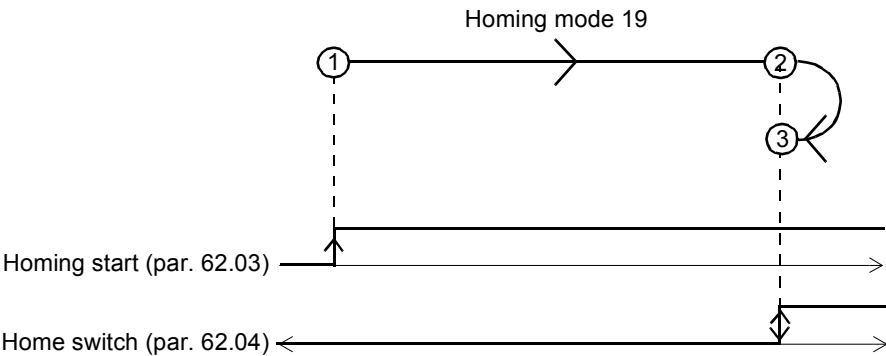


1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.

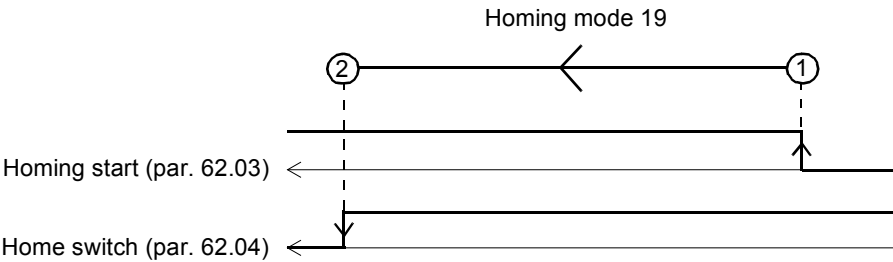


1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Stop by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.

Homing mode 20


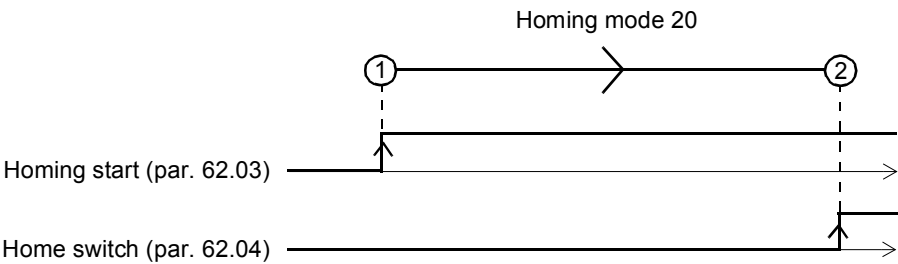


1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Stop by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.

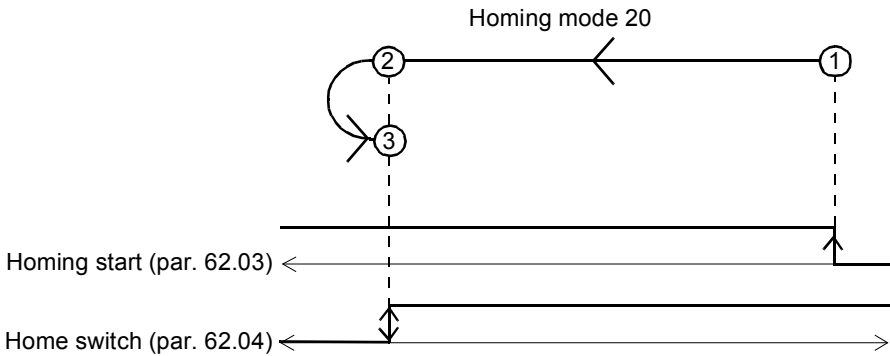


1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.


Homing mode 21

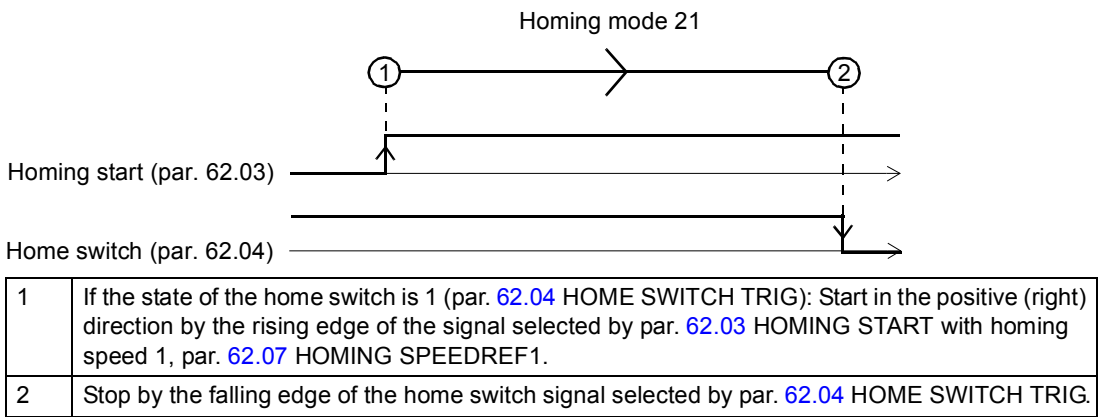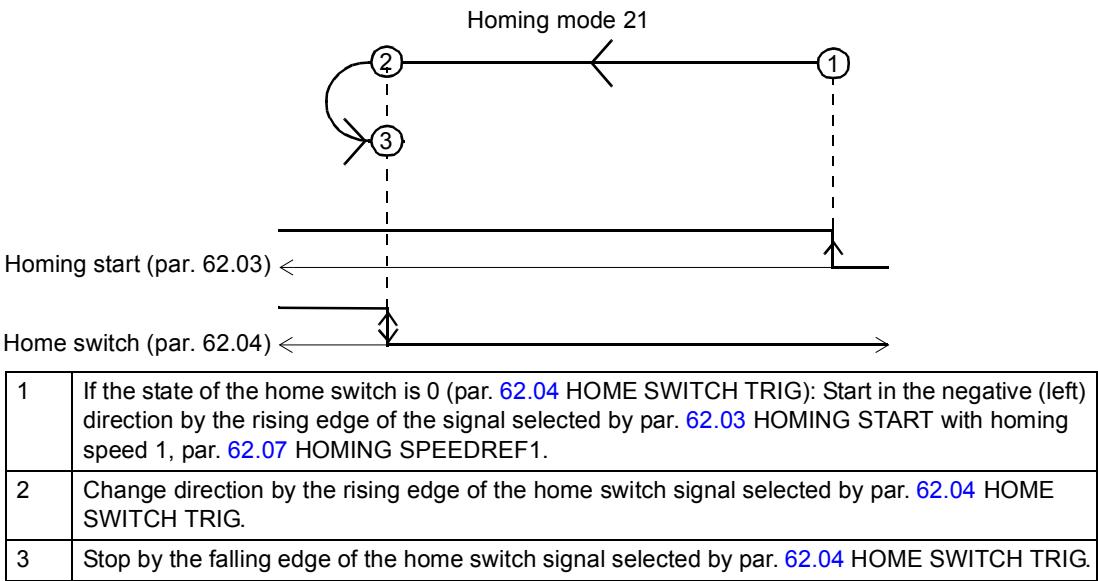

# Homing mode 22


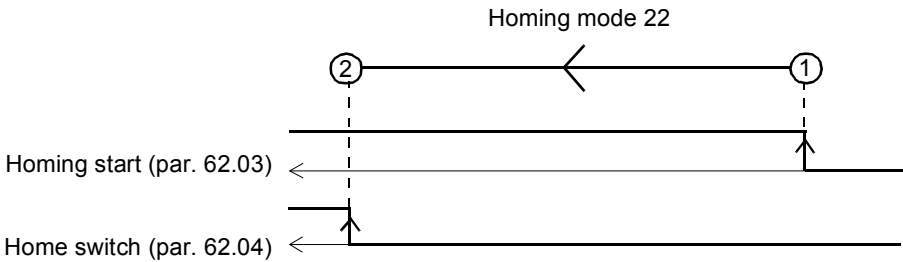



1	If the state of the home switch is 0 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Stop by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.

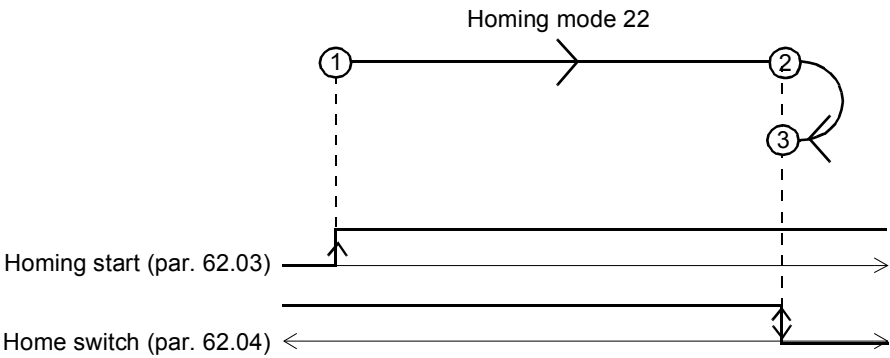

1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.



Homing mode 23

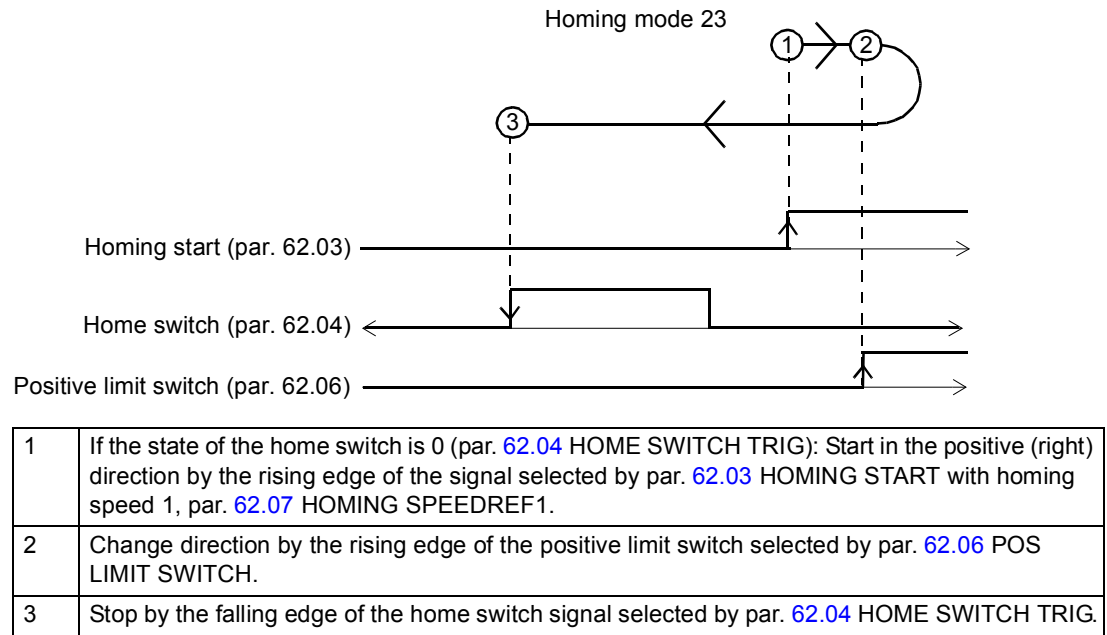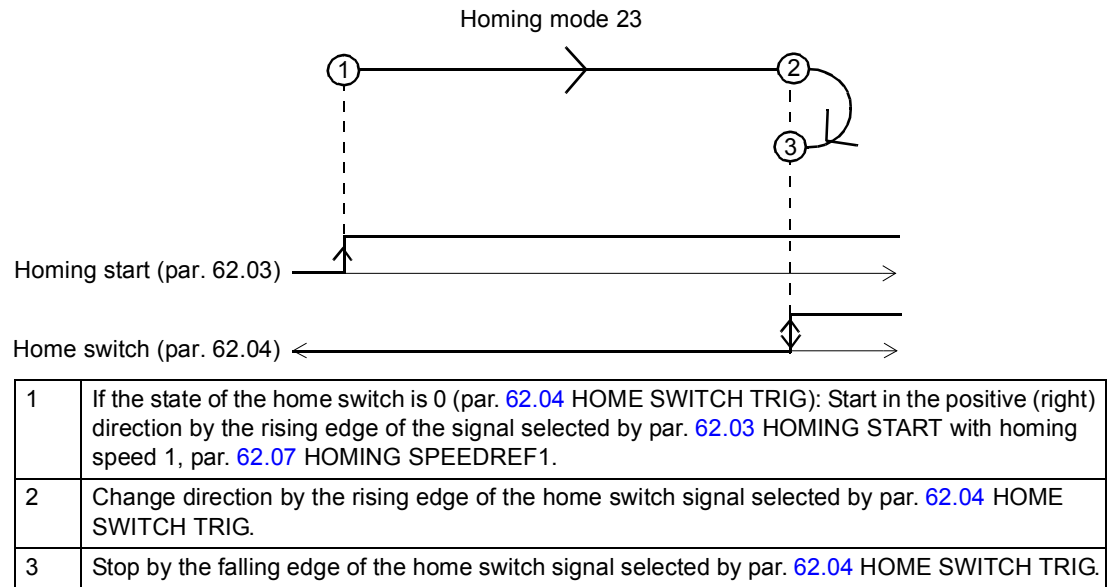

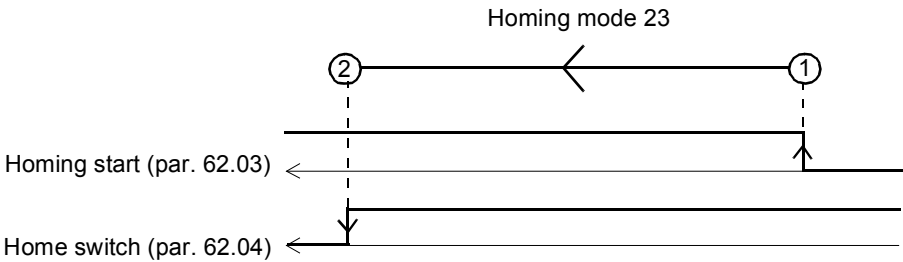


1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Stop by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.



Homing mode 24

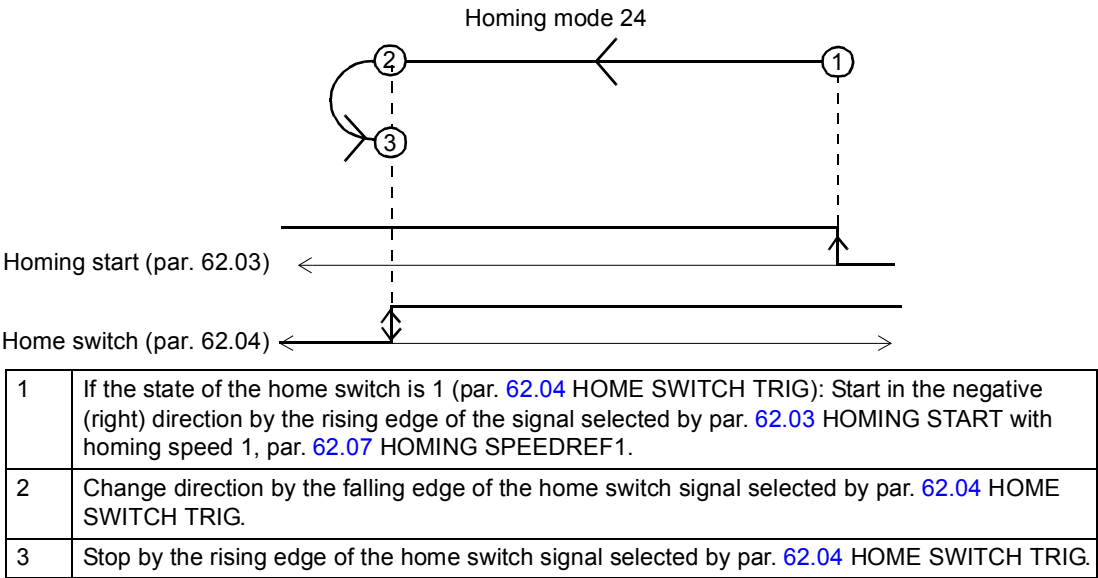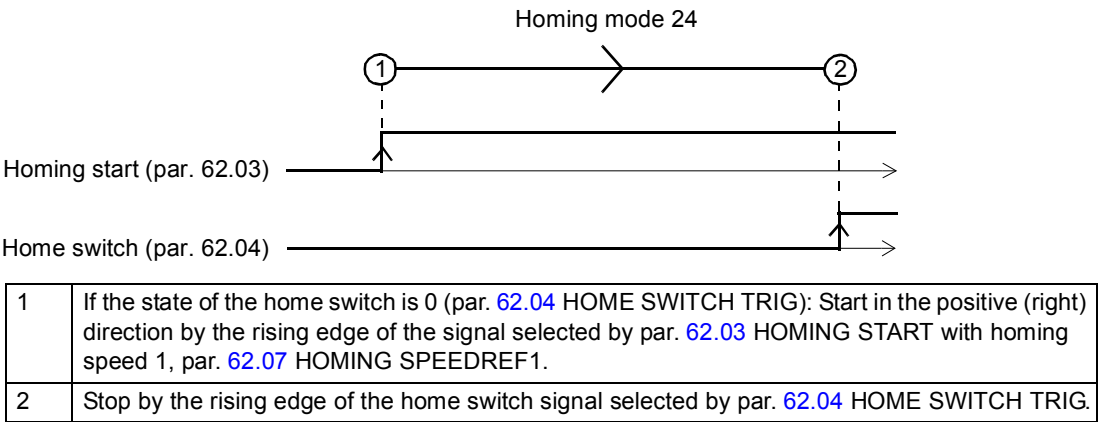




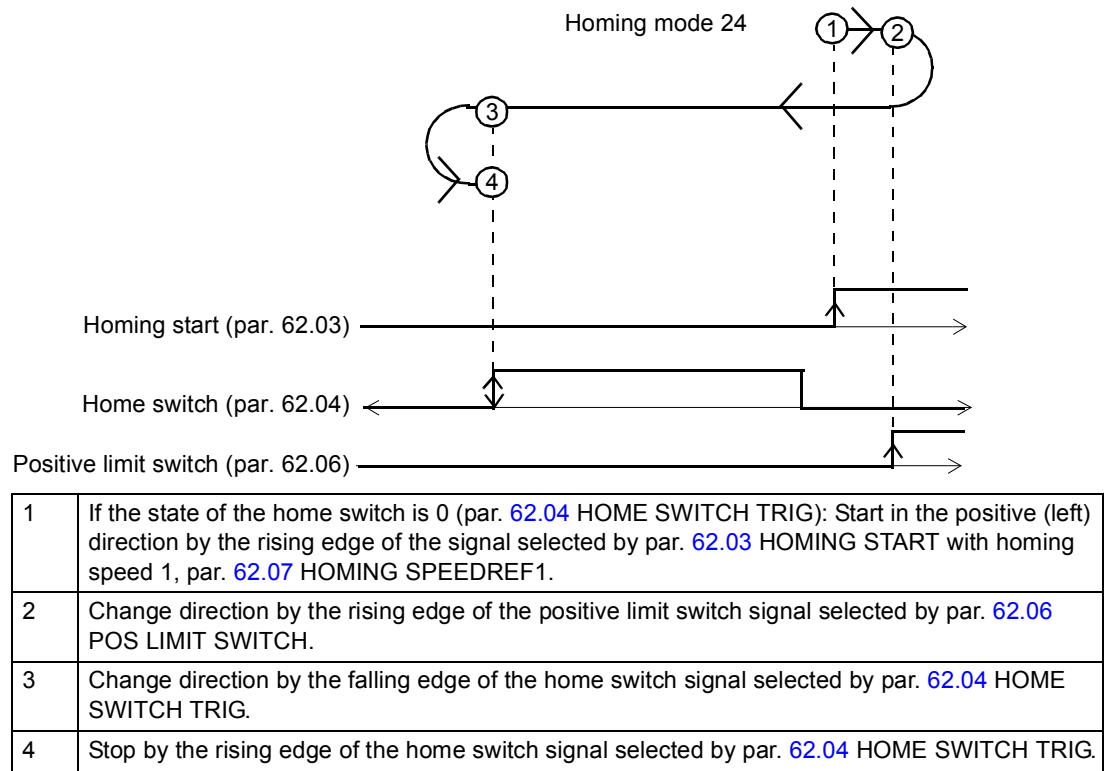



Homing mode 25

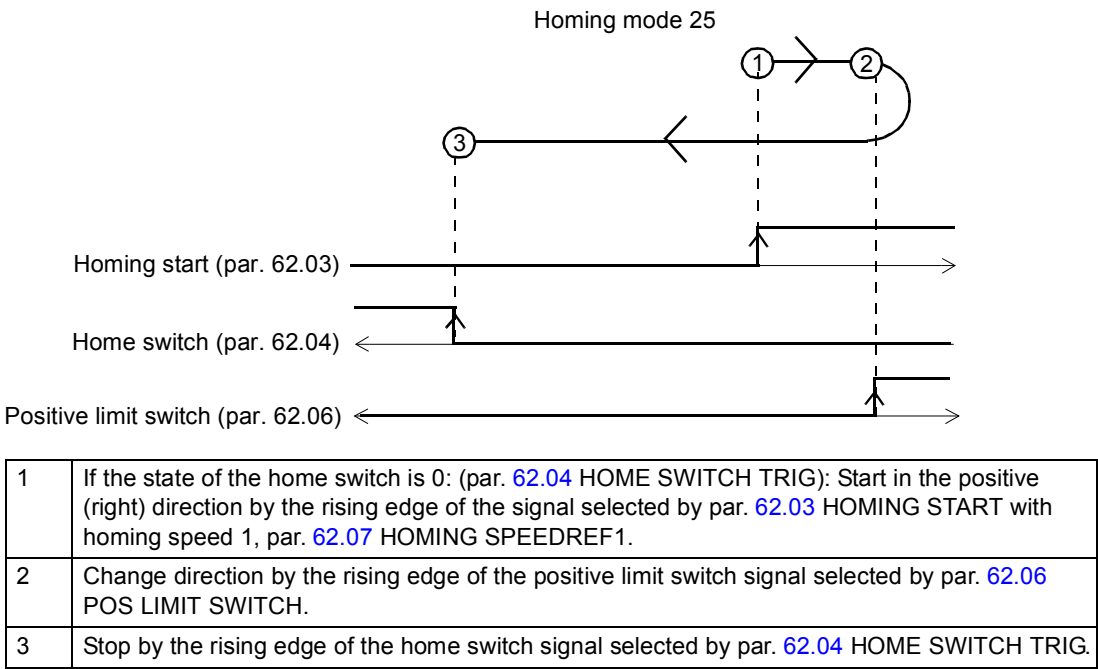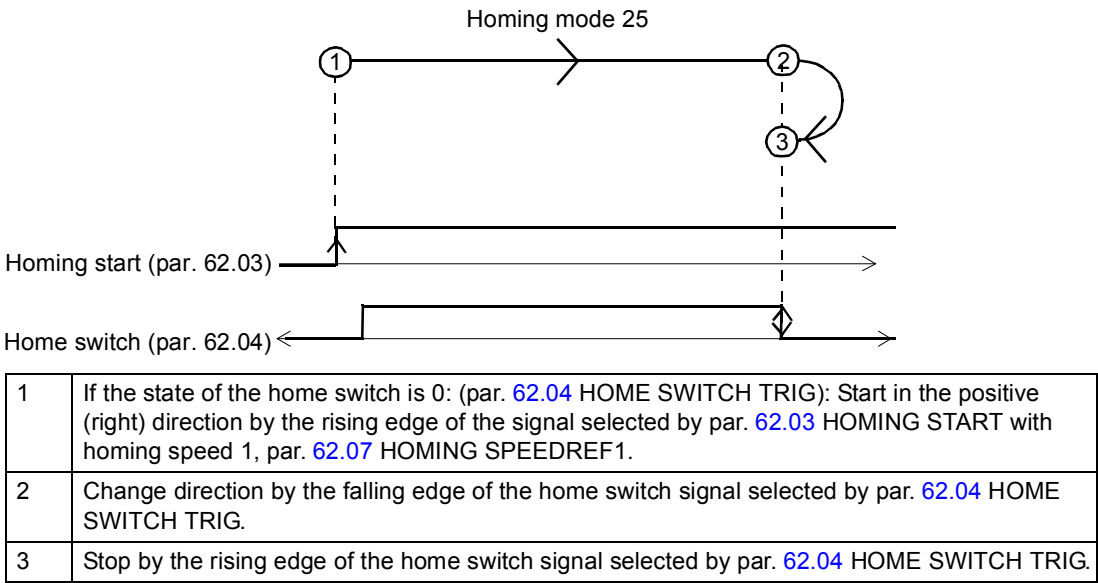






Homing mode 26

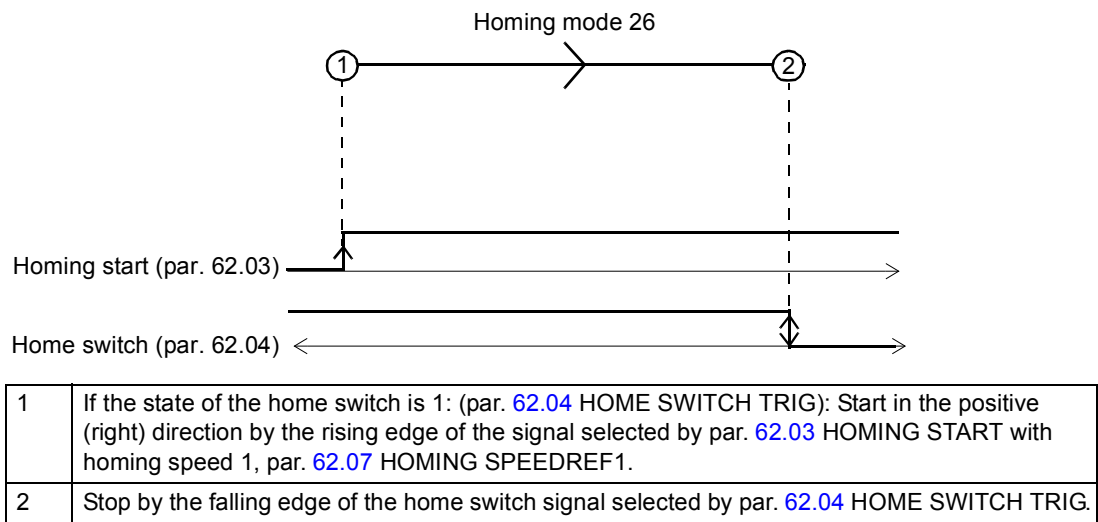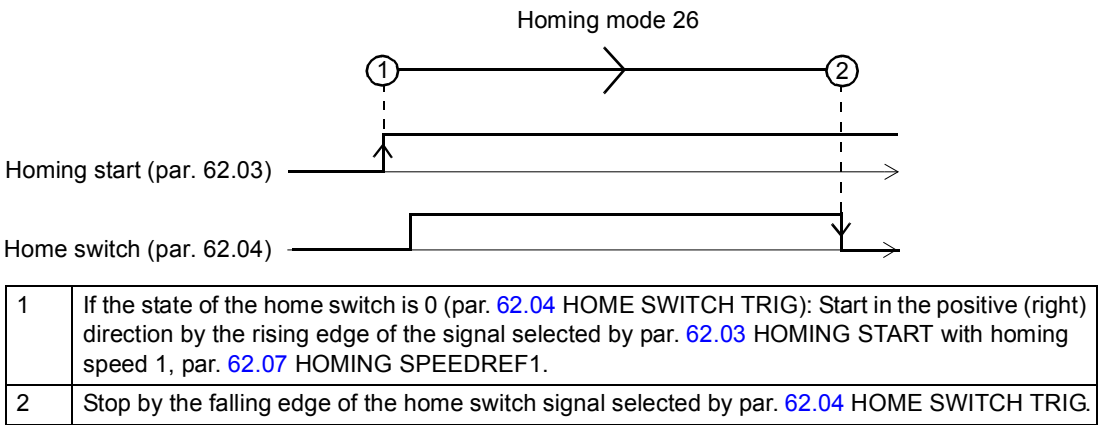


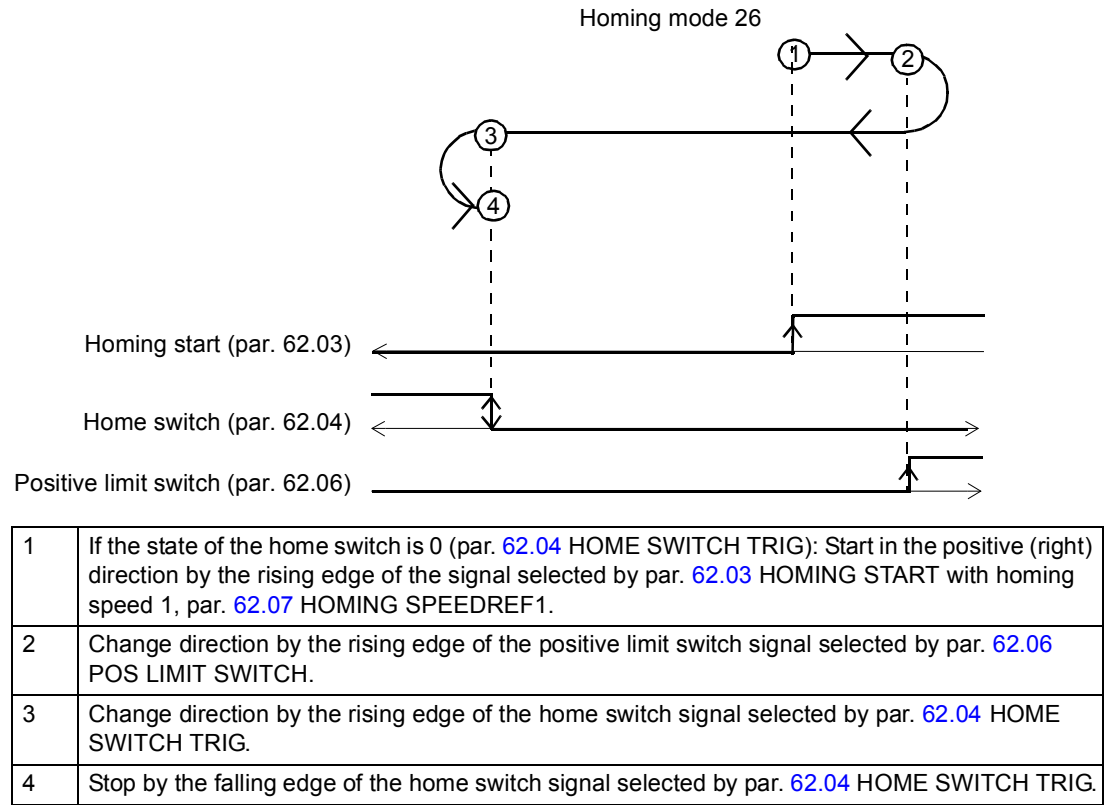


Homing mode 27

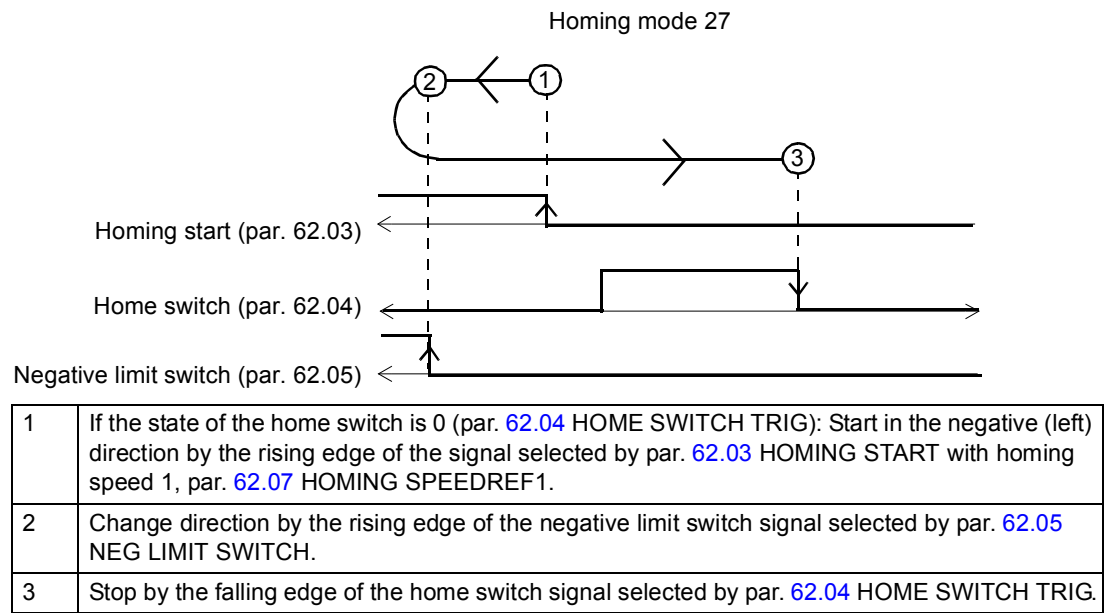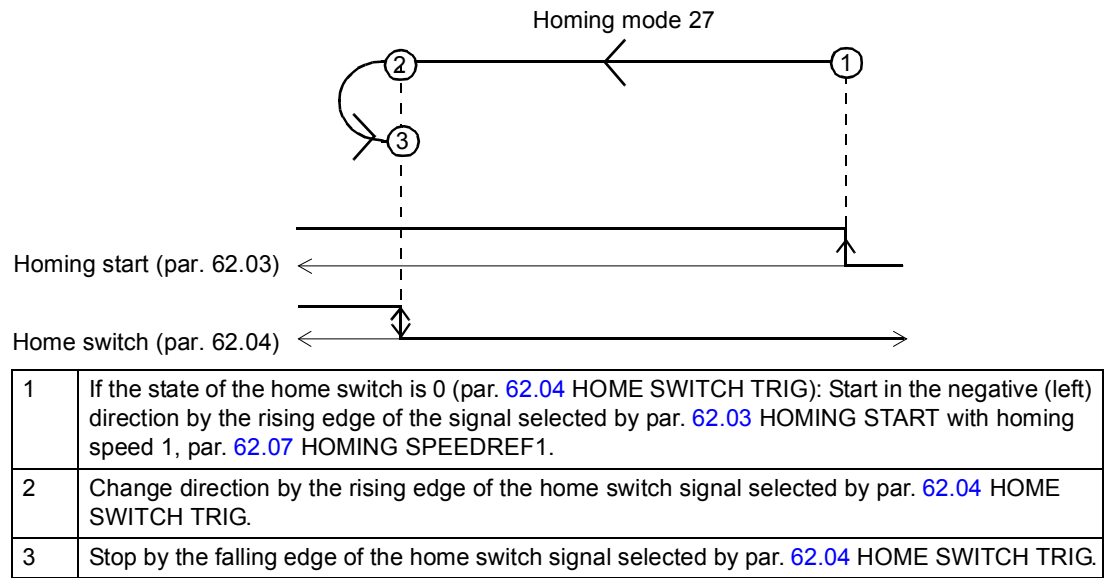


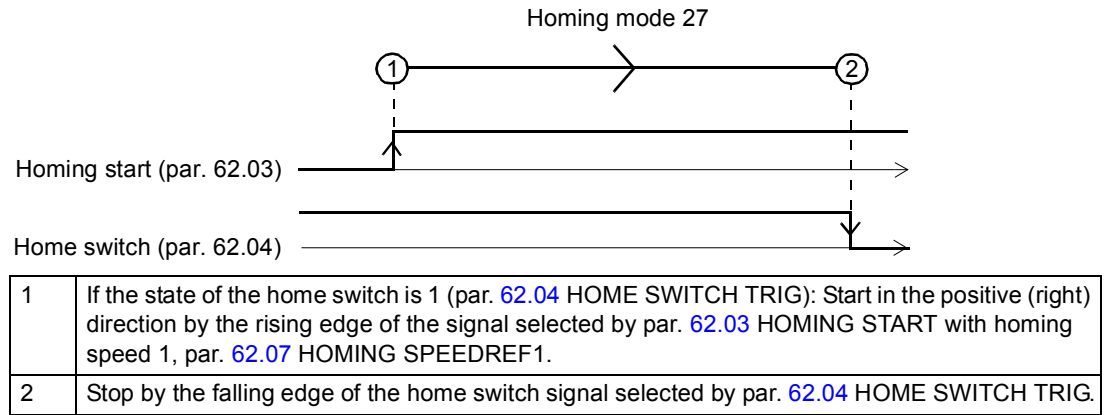

Homing mode 28

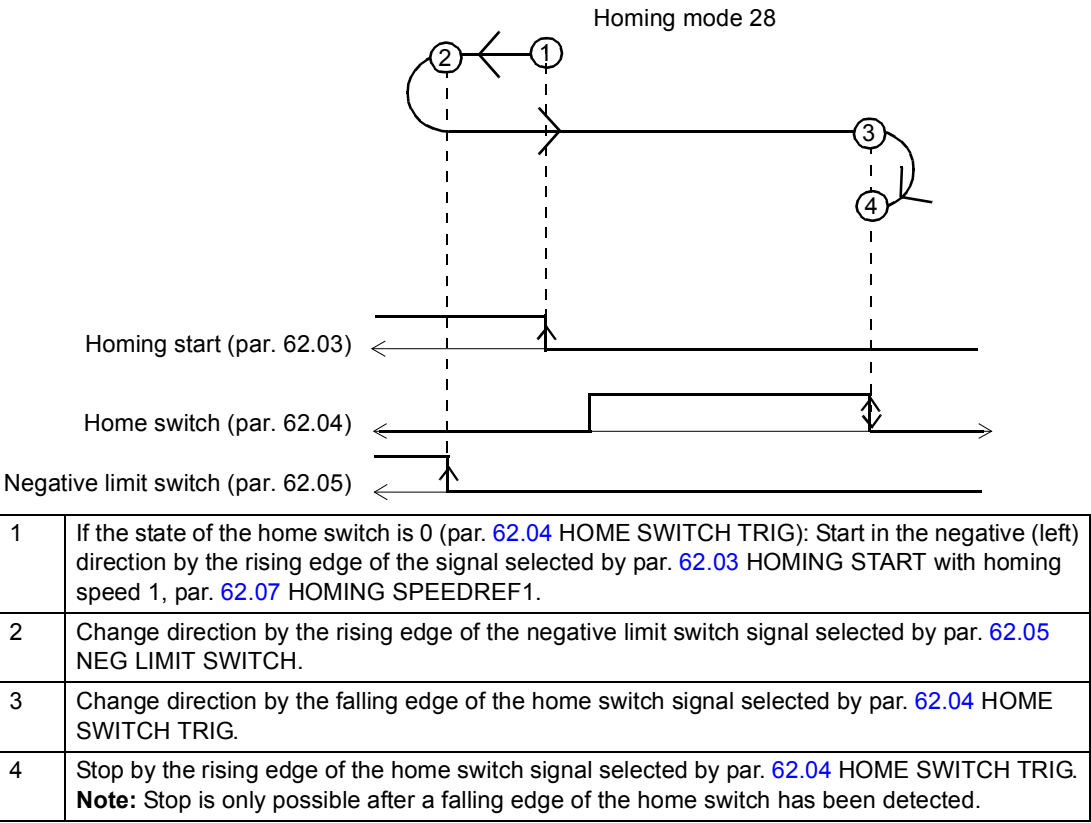
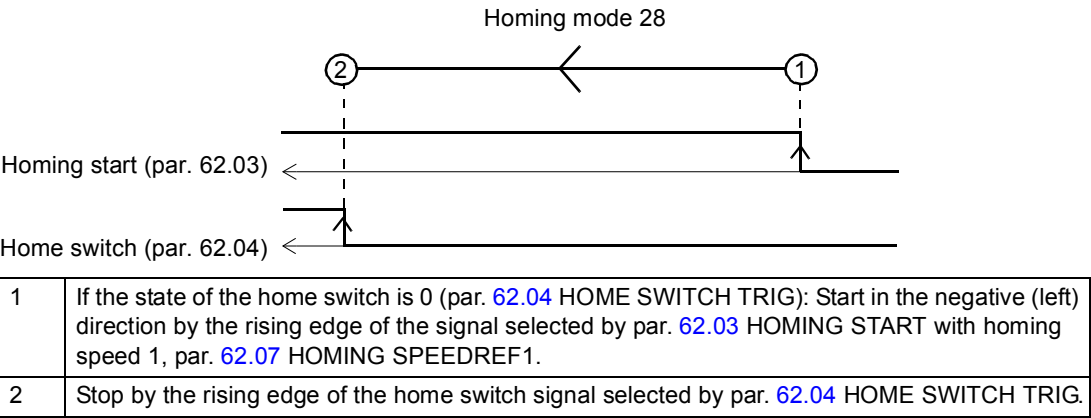





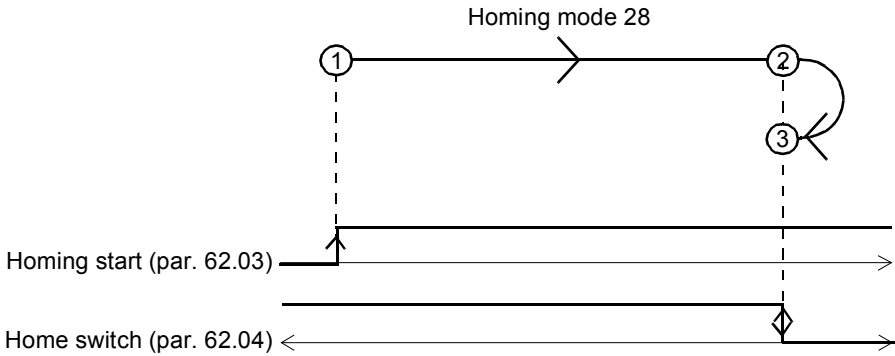

1	If the state of the home switch is 1: (par. 62.04 HOME SWITCH TRIG): Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.



Homing mode 29

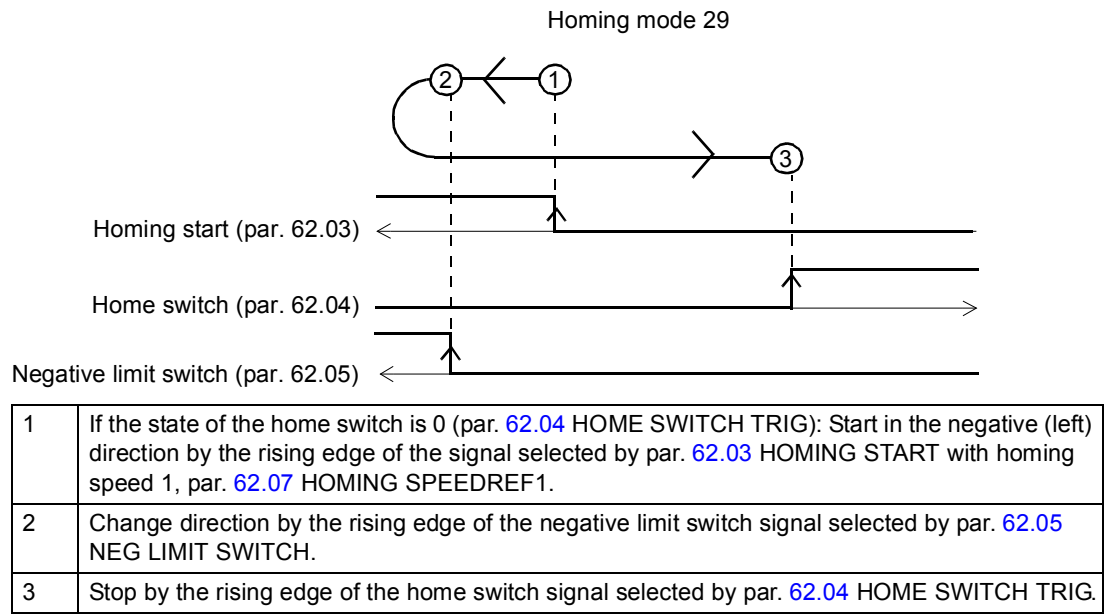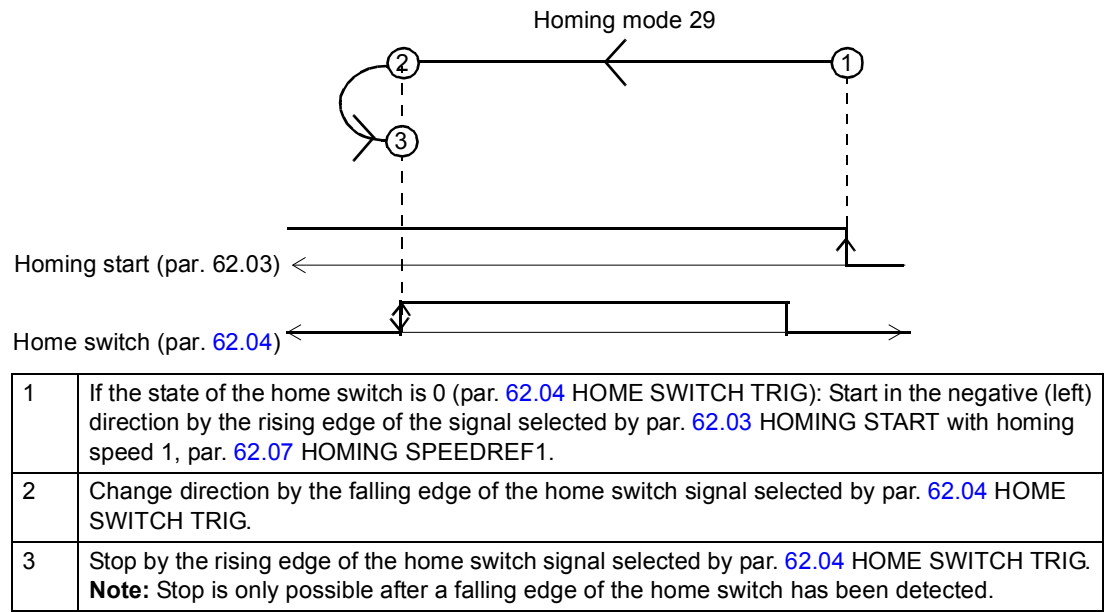


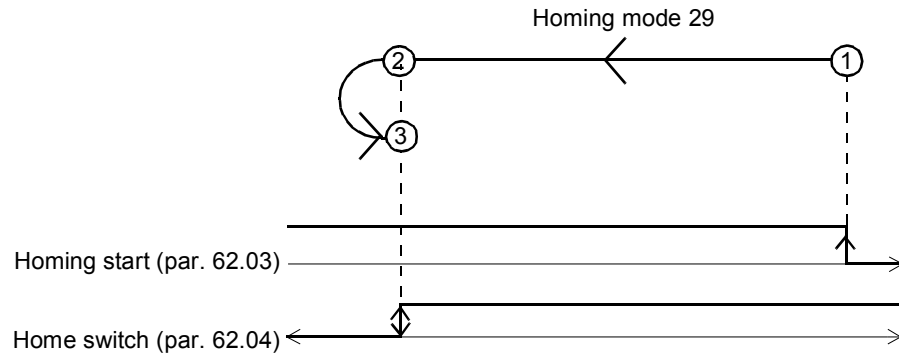

1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Change direction by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.
3	Stop by the rising edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG. <b>Note:</b> Stop is only possible after a falling edge of the home switch has been detected.

Homing mode 30

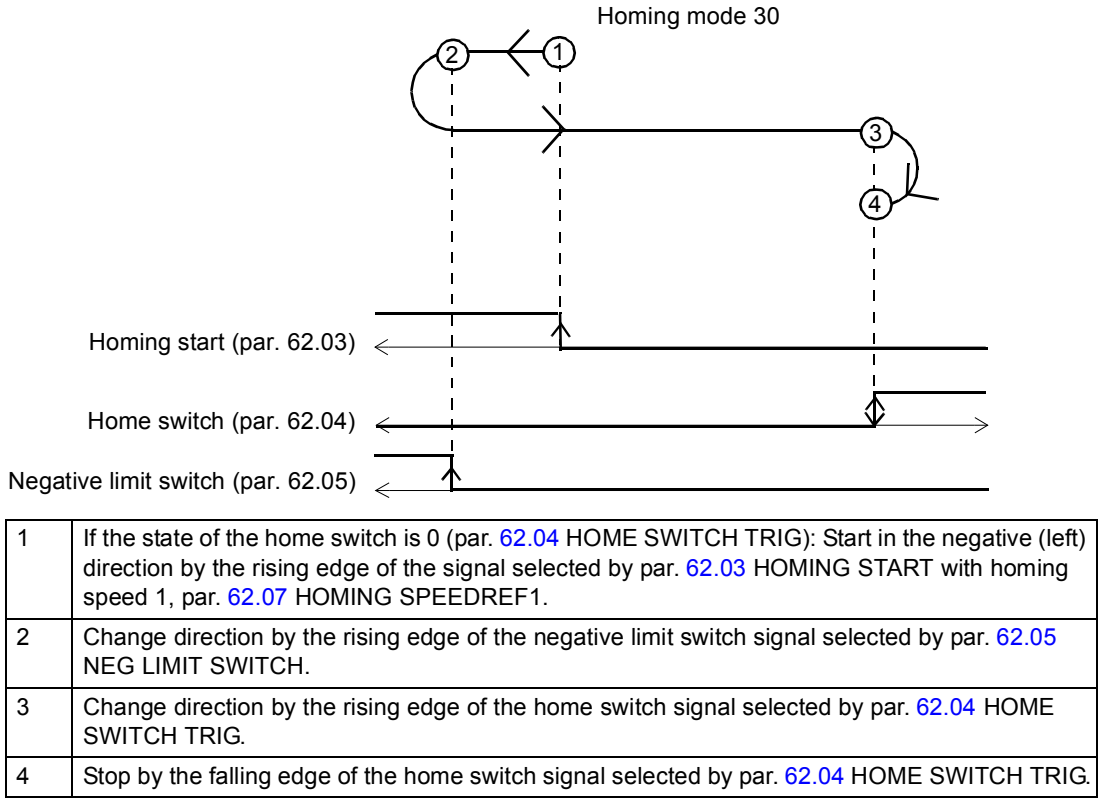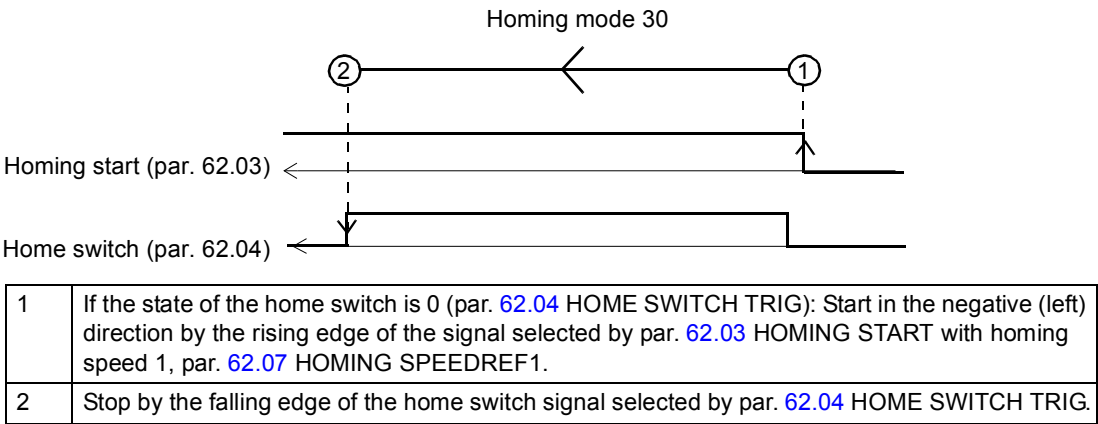

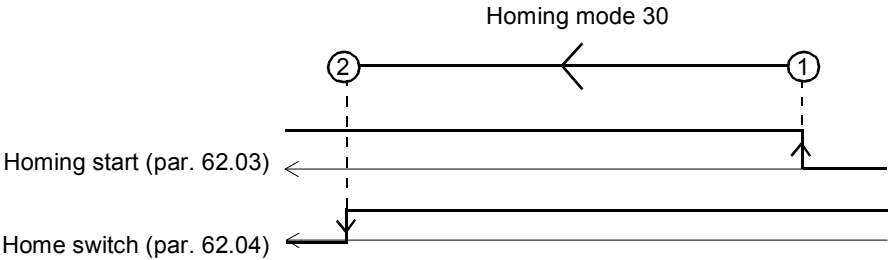


1	If the state of the home switch is 1 (par. 62.04 HOME SWITCH TRIG): Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Stop by the falling edge of the home switch signal selected by par. 62.04 HOME SWITCH TRIG.

*Homing modes 31 and 32*

Reserved

Homing mode 33


The status of the home switch at start is insignificant.

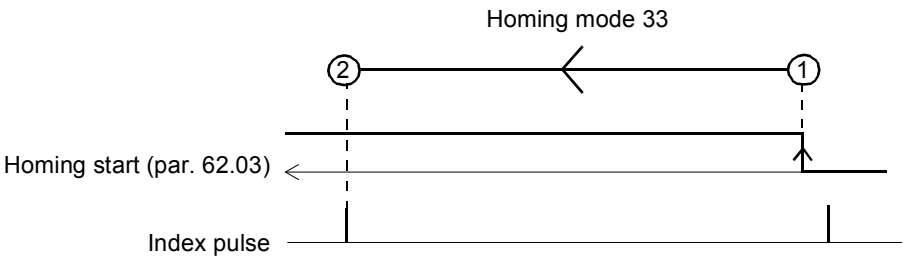

1	Start in the negative (left) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Stop by the next index pulse.

Homing mode 34

The status of the home switch at start is insignificant.

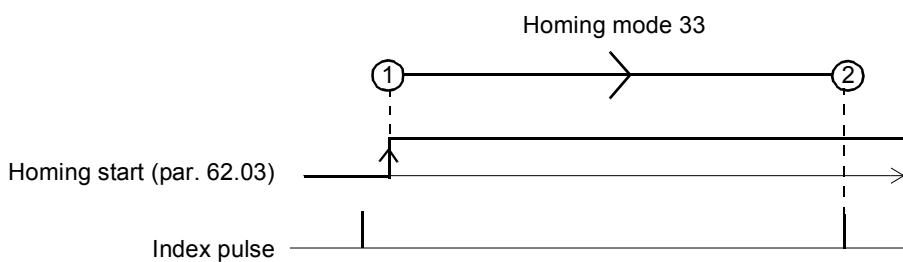

1	Start in the positive (right) direction by the rising edge of the signal selected by par. 62.03 HOMING START with homing speed 1, par. 62.07 HOMING SPEEDREF1.
2	Stop by the next index pulse.

Homing mode 35

In method 35 the current position is used as home position.





3AFE68848270 REV D / EN  
EFFECTIVE: 08.12.2008

---

**ABB Oy**

AC Drives  
P.O. Box 184  
FI-00381 HELSINKI  
FINLAND

Telephone +358 10 22 11  
Fax +358 10 22 22681  
Internet <http://www.abb.com>

**ABB Inc.**

Automation Technologies  
Drives & Motors  
16250 West Glendale Drive  
New Berlin, WI 53151  
USA

Telephone 262 785-3200  
800-HELP-365  
Fax 262 780-5135

**ABB Beijing Drive Systems Co. Ltd.**

No. 1, Block D, A-10 Jiuxianqiao Beilu  
Chaoyang District  
Beijing, P.R. China, 100015

Telephone +86 10 5821 7788  
Fax +86 10 5821 7618  
Internet <http://www.abb.com>