Eurotherm

2408 and 2404 Installation and Operation Handbook

2408 and 2404 PID Controller

HA025132/12 December 2011

© 2011 Eurotherm Limited

All rights are strictly reserved. No part of this document may be reproduced, modified, or transmitted in any form by any means, nor may it be stored in a retrieval system other than for the purpose to act as an aid in operating the equipment to which the document relates, without the prior, written permission of Eurotherm Limited.

Eurotherm Limited pursues a policy of continuous development and product improvement. The specification in this document may therefore be changed without notice. The information in this document is given in good faith, but is intended for guidance only. Eurotherm Limited will accept no responsibility for any losses arising from errors in this document.

MODELS 2408 and 2404 PID CONTROLLERS

INSTALLATION AND OPERATION HANDBOOK

| Contents | | Page |
|------------|---|------------|
| Chapter 1 | INSTALLATION | 1-1 |
| Chapter 2 | OPERATION | 2-1 |
| Chapter 3 | ACCESS LEVELS | 3-1 |
| Chapter 4 | TUNING | 4-1 |
| Chapter 5 | PROGRAMMER OPERATION | 5-1 |
| Chapter 6 | CONFIGURATION | 6-1 |
| Chapter 7 | USER CALIBRATION | 7-1 |
| Appendix A | UNDERSTANDING THE ORDERING CODE | A-1 |
| Appendix B | SAFETY and EMC INFORMATION | B-1 |
| Appendix C | TECHNICAL SPECIFICATION | C-1 |
| Appendix D | LOAD CURRENT MONITORING AND DIAGNOSTICS | D-1 |
| Appendix E | PROFIBUS COMMUNICATIONS | E-1 |
| Appendix F | RoHS | F-1 |

"This product is covered by one or more of the following US Patents:

5,484,206; Additional patents pending.

PDS and INSTANT ACCURACY are trademarks of Eurotherm."

Issue Status of this Manual

Issue 11 of this handbook applies to software version 4 (see below) and includes RoHS statement.

Issue 12 corrects the procedure to access Read only Configuration Chapter 3 and correction to ordering code Digital Inputs 1 & 2 PB changed to PR.

Enhancements to Software Version 4

The following enhancements have been added to software versions 4.

- Isolated Single Logic Output Module
- Transducer Power Supply Module to provide 5 or 10Vdc to an external transducer. (Not
 intended for melt pressure control)
- DeviceNet communications
- Linear over range limits are +5% of high instrument range and -5% of low instrument range for all process input ranges (i.e. 0-20mA, 4-20mA, 0-10V)
- Sensor break or input open circuit faults are detected on all analogue inputs (PV1.PV2 and remote input channels)
- PV2 alarm, full scale high and low limits default to maximum and minimum display limits
- Deviation alarms are not inverted when direct acting control is selected. Alarm behaviour when using reverse acting control is unchanged
- The PD track valve positioning parameter (Pd£r) has been removed

Controllers Affected:-

| Standard controllers – which include programmers with up to 4 programs | Version 4.11 or later |
|--|-----------------------|
| Setpoint programming controllers with up to 20 programs | Version 4.61 or later |
| Profibus controllers – which include programmers with up to 4 programs | Version 4.32 or later |

• The 10Amp output relay in module 4 is not available on controllers supplied after Jan 04

Related Information

- DeviceNet Communications Handbook part no. HA027506 which includes the parameter address map.
- Profibus Communications Handbook part no. HA026290
- EMC (Electromagnetic Compatibility) Installation Guide, part no. HA025464

These are available on www. eurotherm.co.uk.

Chapter 1 INSTALLATION

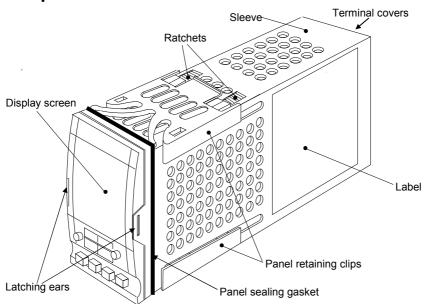


Figure 1-1 2408 1/8 DIN controller

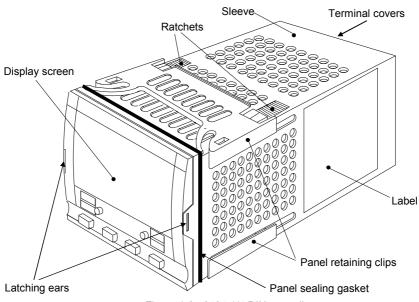


Figure 1-2 2404 1/4 DIN controller

Outline dimensions Model 2408

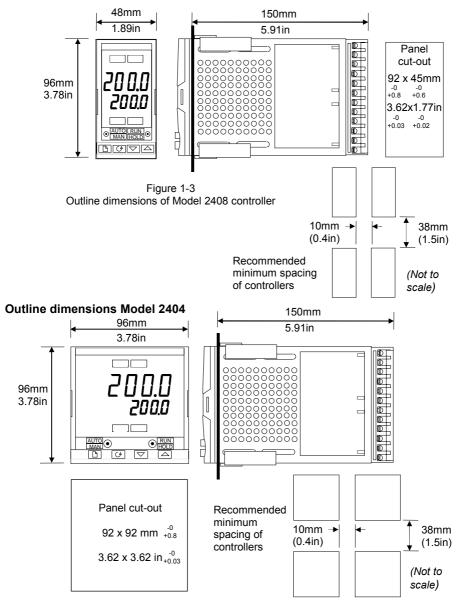


Figure 1-4 Outline dimensions Model 2404 controller

The electronic assembly of the controller plugs into a rigid plastic sleeve, which in turn fits into the standard DIN size panel cut-out shown in Figures 1-3 and 1-4.

INTRODUCTION

Models 2408 and 2404 are high stability, temperature or process controllers with self and adaptive tuning. They have a modular hardware construction which accepts up to three plugin Input/Output modules and two interface modules to satisfy a wide range of control requirements. Two digital inputs and an optional alarm relay are included as part of the fixed hardware build.

The instruments are available as:

• standard controllers - which include a basic 8-segment programmer

Models 2408/CC and 2404/CC

• setpoint programming controllers: Models 2408/CP, P4, CM and 2404/CP, P4, CM

motorised valve controllers - which include a basic 8-segment programmer

Models 2408/VC and 2404/VC

• setpoint programming motorised valve controllers: Models 2408/VP, V4, VM and 2404/VP, V4, VM

Before proceeding, please read the chapter called, Safety and EMC Information.

Controller labels

The labels on the sides of the controller identify the ordering code, the serial number, and the wiring connections.

Appendix A, *Understanding the Ordering Code*, explains the hardware and software configuration of your particular controller.

MECHANICAL INSTALLATION

To install the controller

- 1. Prepare the control panel cut-out to the size shown in Figure 1-3, or 1-4.
- 2. Insert the controller through the panel cut-out.
- 3. Spring the upper and lower panel retaining clips into place. Secure the controller in position by holding it level and pushing both retaining clips forward.

Note: If the panel retaining clips subsequently need removing, in order to extract the controller from the control panel, they can be unhooked from the side with either your fingers, or a screwdriver.

Unplugging and plugging-in the controller

If required, the controller can be unplugged from its sleeve by easing the latching ears outwards and pulling it forward out of the sleeve. When plugging the controller back into its sleeve, ensure that the latching ears click into place in order to secure the IP65 sealing.

NEW SLEEVE DESIGN MKIII

From Jan-03 an improved design of 1/8 DIN long sleeve is shipped with all new 2408 controllers and indicators. (The month and year of manufacture are shown in the last two pairs of digits of the instrument serial number).

Details

A new sealing gasket will be fitted onto the instrument bezel \mathbb{O} . This gasket replaces the gasket which was moulded into the front of the sleeve of all previous instruments. The gasket previously moulded into the sleeve where it fits behind the panel is now supplied as a separate item \mathbb{O} .

Reasons for the Change

This change is to ensure that IP65 sealing is reliably achieved and less physical effort is required to insert the instrument into the new sleeve.

Recommendations


- 1. An instrument delivered after Jan 03 should be used with the sleeve supplied
- 2. If the instrument is required to replace one already in use, the existing sleeve should also be replaced
- 3. A new instrument can be fitted into an existing sleeve by carefully removing gasket ① but IP65 sealing will not be maintained
- An existing instrument can be fitted into a new sleeve but IP65 sealing will not be maintained

It is, however, possible to achieve IP65 sealing for 3 and 4 above. A gasket kit is available by quoting Part No SUB24/GAS2408.

Then:-

- 5. To fit a new instrument in an older sleeve carefully remove gasket ①. Replace it with the thinner (1.25mm) gasket from the kit
- 6. To fit an existing instrument into a new sleeve fit the thicker (1.6mm) gasket from the kit between the instrument and the sleeve

The seal ② supplied as a separate item with a new instrument, should be placed over the sleeve prior to mounting it through the panel cut out as shown below:-



ELECTRICAL INSTALLATION

This section consists of five topics:

- Rear terminal layouts
- Fixed connections
- Plug-in module connections
- · Typical wiring diagrams
- Motorised valve connections.

WARNING

You must ensure that the controller is correctly configured for your application. Incorrect configuration could result in damage to the process being controlled, and/or personal injury. It is your responsibility, as the installer, to ensure that the configuration is correct. The controller may either have been configured when ordered, or may need configuring now. See Chapter 6, *Configuration*.

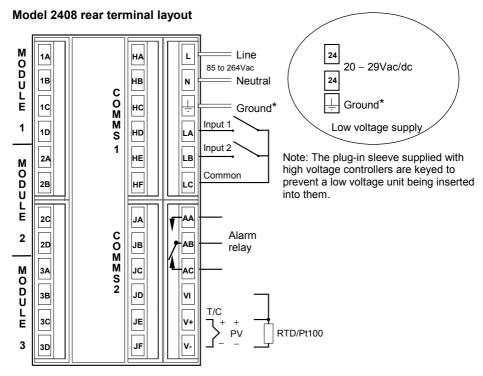


Figure 1-5 Rear terminal layout - Model 2408

^{*} The ground connection is provided as a return for internal EMC filters. It is not required for safety purposes, but must be connected in order to satisfy EMC requirements.

Wire Sizes

All electrical connections are made to the screw terminals at the rear of the controller. They accept wire sizes from 0.5 to 1.5 mm² (16 to 22 AWG) and should be tightened to a torque of 0.4Nm (3.5lbin). If you wish to use crimp connectors, the correct size is AMP part number 349262-1. The terminals are protected by a clear plastic hinged cover to prevent hands, or metal, making accidental contact with live wires.

Rear terminal layouts

The rear terminal layouts are shown in Figures 1-5 and 1-6. The right-hand column carries the connections to the power supply, digital inputs 1 and 2, alarm relay and sensor input. The second and third columns from the right carry the connections to the plug-in modules. The connections depend upon the type of module installed, if any. To determine which plug-in modules are fitted, refer to the ordering code and wiring data on the controller side labels.

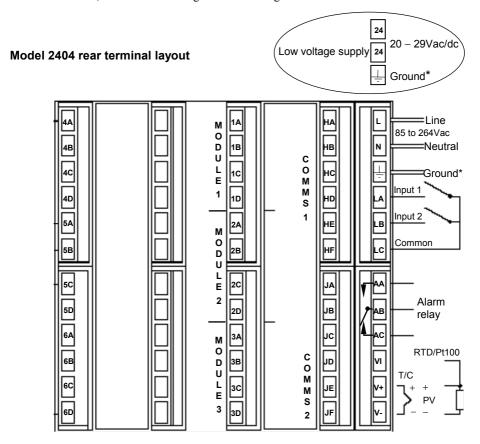


Figure 1-6 Rear terminal layout - Model 2404

Sensor input connections

The connections for the various types of sensor input are shown below.

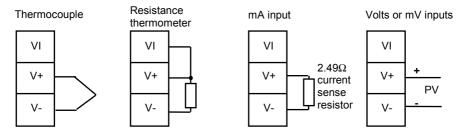


Fig 1-7 Sensor input connections

PLUG-IN MODULE CONNECTIONS

Module 1, 2 and 3

Module positions 1, 2 and 3 are plug-in modules. They can be either two terminal modules of the types shown in Figure 1-7, or four terminal modules of the types shown in Table 1-1.

The tables show the connections to each module and the functions that they can perform. Module 1 is normally used for heating and module 2 for cooling although the actual functions will depend upon how the controller has been configured.

PDS modes

Table 1-8 refers to PDS modes 1 and 2.

PDS stands for 'Pulse Density Signalling' Input/Output. This is a proprietary technique for bi-directional transmission of analogue and digital data over a simple 2-wire connection. PDS 1 mode uses a logic output module to control aTE10S solid state relay and provides a load failure alarm.

PDS 2 mode uses a logic output module to control a TE10S solid state relay, provide load/SSR failure alarms, and read back the load current for display on the controller.

Two terminal modules

Note: Module 1 is connected to terminals 1A and 1B

Module 2 is connected to terminals 2A and 2B

Module 3 is connected to terminals 3A and 3B.

| | | Terminal id | | | | |
|--|-----------|-------------|--------|------|---|--|
| Module type | Α | В | O | D | Possible functions | |
| Relay: 2-pin (2A, 264 Vac max.) | | | Unused | | Heating, cooling, alarm, program event, valve raise, or valve lower | |
| Logic - non-isolated (18Vdc at 20mA) | | | Unused | | Heating, cooling, PDSIO mode 1, PDSIO mode 2, program event | |
| Triac (1A, 30 to 264Vac) | Line Load | | Uni | used | Heating, cooling, program event, valve raise, or valve lower | |
| DC output: - non-isolated (10Vdc, 20mA max.) | + | | Uni | used | Heating, or cooling, or retransmission of PV, setpoint, or control output | |

Table 1-1 Two terminal module connections

Snubbers

The relay and triac modules have an internal $15nF/100\Omega$ 'snubber' connected across their output, which is used to prolong contact life and to suppress interference when switching inductive loads, such as mechanical contactors and solenoid valves.

WARNING

When the relay contact is open, or the triac is off, the snubber circuit passes 0.6mA at 110Vac and 1.2mA at 240Vac. You must ensure that this current, passing through the snubber, will not hold on low power electrical loads. It is your responsibility as the installer to ensure that this does not happen. If the snubber circuit is not required, it can be removed from the relay module (BUT NOT THE TRIAC) by breaking the PCB track that runs crosswise, adjacent to the edge connectors of the module. This can be done by inserting the blade of a small screwdriver into one of the two slots that bound it, and twisting.

Four terminal modules

Note: Module 1 is connected to terminals 1A, 1B, 1C and 1D Module 2 is connected to terminals 2A, 2B, 2C and 2D Module 3 is connected to terminals 3A, 3B, 3C and 3D

| Module type | | Terminal identity | | | Possible functions | |
|--|--|-------------------|------------------|--------|--|--|
| | Α | В | С | D | | |
| Relay: changeover (2A, 264 Vac max.) | N/O | — \ | N/C | | Heating, cooling, alarm, or program event output | |
| DC control: Isolated (10V, 20mA max.) | + | | | | Heating, or cooling | |
| 24Vdc transmitter supply * | + | | | | To power process inputs | |
| Potentiometer input 100Ω to $15K\Omega$ * | | +0.5Vdc | - | 0V | Motorised Valve Position feedback | |
| DC retransmission | + | _ | | | Retrans. of setpoint, or process value | |
| DC remote input or Process Value 2 (Module 3 only) | 0-10Vdc | RT source | ±100mV 0-20mA | COM | Remote Setpoint Second PV | |
| Dual output modules | | | | | | |
| Dual relay (2A, 264 Vac max.) | | /L | <u>_</u> | ٦, | Heating + cooling Dual alarms Valve raise & lower | |
| Dual Triac (1A, 30 to 264Vac) | Line | Line Load | | Load | Heating + cooling Valve raise & lower | |
| Dual logic + relay (Logic is non-isolated) | + | + | | /ر | Heating + cooling | |
| Dual Logic + triac (Logic is non-isolated) | + | | Line Load | | Heating + cooling | |
| Triple logic input and o | Triple logic input and output modules - see ratings on the next page | | | | | |
| Triple contact input | Input 1 | Input 2 | Input 3 | Common | | |
| Triple logic input | Input 1 | Input 2 | Input 3 | Common | | |
| Triple logic output | Output 1 | Output 2 | Output 3 | Common | Program events | |


^{*} Can be ordered fitted in module positions 2 & 3 only.

| Module type | Terminal identity | | / | Possible functions | |
|----------------------------|-------------------|---|---|--------------------|---|
| | Α | В | С | D | |
| Isolated Logic Output | + | | | - | This is a fully isolated module which can be fitted in all three module slots. It may be used for heating, cooling or events outputs up to 18Vdc at 20mA. |
| Transducer Power Supply | + | - | | | This provides fully isolated 5 or 10Vdc to power external transmitters up to 20mA. It can be fitted in module slots 1 and 2. |

Table 1-2 Four terminal module connections

Connections for Process Value 2 in module position 3

The diagrams below show the connections for the various types of input. The input will have been configured in accordance with the ordering code.

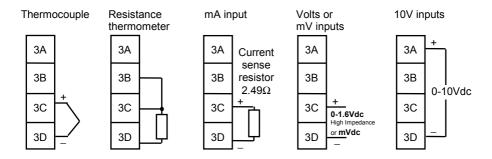

Triple Logic Input and output ratings

1. Triple logic input (current sinking)

OFF state: -3 to 5Vdc

ON state: 10.8 to 30Vdc(max), at 2 to 8mA

2. Triple contact closure or open collector transistor input

Internally generated switching Vdc & mA: 15 to 19Vdc at 10 to 14mA

OFF state $>28K\Omega$ input resistance

OFF state voltage >14Vdc

ON state $<100\Omega$ resistance

ON state voltage <1.0Vdc

3. Triple logic output (current sourcing)

OFF state output 0 to 0.7Vdc.

ON state output 12 to 13Vdc, at up to 8mA.

COMMUNICATION MODULES 1 AND 2

All 2408 and 2404 controllers can be fitted with up to two plug-in communications modules.

Only one of the two modules can be for serial communications and this will normally be installed in position COMMS 1 (although it is possible to install the serial communications module in position COMMS 2. Serial communications may be configured for either Modbus or EI bisynch protocol.

It is also possible to fit a PDS module in one or other of these positions.


Possible module types are shown in the table below.

| Communications module 1 | Terminal identity (COMMS 1) | | | | | |
|--------------------------------------|-----------------------------|-------------|-------------|--------|------------|------------|
| Module type | НА | НВ | HC | HD | HE | HF |
| 2-wire EIA-485 serial communications | - | - | - | Common | A (+) | B (-) |
| EIA-232 serial communications | - | - | - | Common | Rx | Tx |
| 4-wire EIA-485 serial communications | _ | A' (Rx+) | B' (Rx-) | Common | A (Tx+) | B (Tx-) |
| PDS Setpoint retransmission | 1 | - | _ | _ | Signal | Common |

| Communications module 2 | Terminal identity (COMMS 2) | | | | | |
|-----------------------------|-----------------------------|--------|--------|--|--|--|
| Module type | JD | JE | JF | | | |
| PDS Setpoint retransmission | _ | Signal | Common | | | |
| PDS Setpoint input | _ | Signal | Common | | | |

Table 1-3 Communication modules 1 and 2 connections

Wiring of 2-wire EIA-485 serial communications link

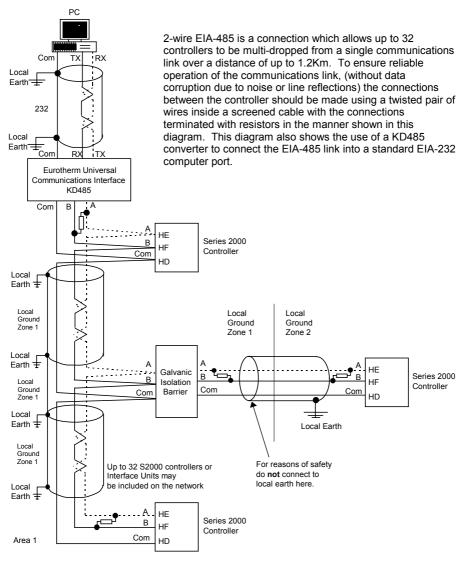

Note:

All resistors are 220 ohm 1/4W carbon composition.

Local grounds are at equipotential. Where equipotential is not available wire into separate zones using a galvanic isolator.

Use a repeater (KD845) for more than 32 units.

Figure 1-9 EIA-485 wiring

DeviceNet


Instruments fitted with software versions 4 onwards can be fitted with DeviceNet communications. The following shows the wiring connections for DeviceNet.

| Terminal | CAN | Color | Description |
|-----------|--------|-------|--|
| Reference | Label | Chip | |
| НА | V+ | Red | DeviceNet network power positive terminal. Connect the red wire of the DeviceNet cable here. If the DeviceNet network does not supply the power, connect to the positive terminal of an external 11-25 Vdc power supply. |
| НВ | CAN_H | White | DeviceNet CAN_H data bus terminal. Connect the white wire of the DeviceNet cable here. |
| HC | SHIELD | None | Shield/Drain wire connection. Connect the DeviceNet cable shield here. To prevent ground loops, ground the DeviceNet network in only one location. |
| HD | CAN_L | Blue | DeviceNet CAN_L data bus terminal. Connect the blue wire of the DeviceNet cable here. |
| HE | V- | Black | DeviceNet network power negative terminal. Connect the black wire of the DeviceNet cable here. If the DeviceNet network does not supply the power, connect to the negative terminal of an external 11-25 Vdc power supply. |
| HF | | | Connect to instrument earth |

Note: Power taps are recommended to connect the DC power supply to the DeviceNet trunk line. Power taps include:

- A Schottky Diode to connect the power supply V+ and allows for multiple power supplies to be connected.
- 2 fuses or circuit breakers to protect the bus from excessive current which could damage the cable and connectors.
- The earth connection, HF, to be connected to the main supply earth terminal.


Example of Devicenet Wiring

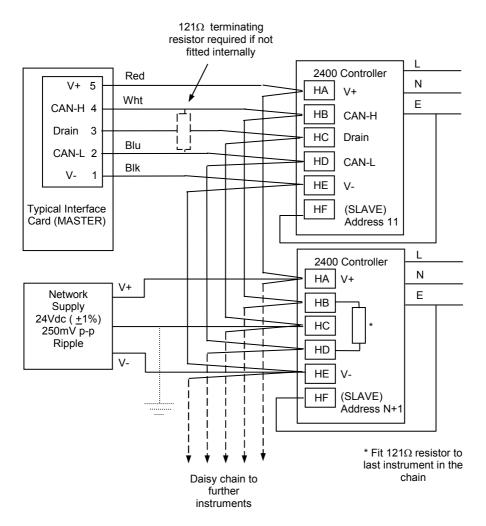

To configure DeviceNet Communications see Chapter 6.

ProfiBus Wiring

Controllers supplied with model numbers 2408f and 2404f are fitted with ProfiBus communications modules fitted in the H slot. Further details of ProfiBus communications is given in Appendix E and the ProfiBus Communications handbook part number HA026290. This handbook can be downloaded from www.eurotherm.co.uk.

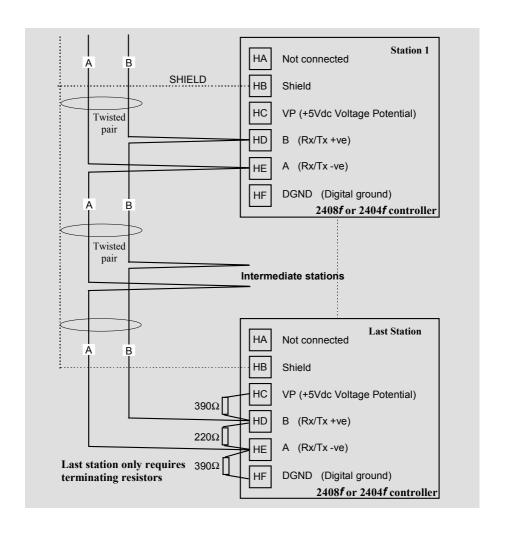

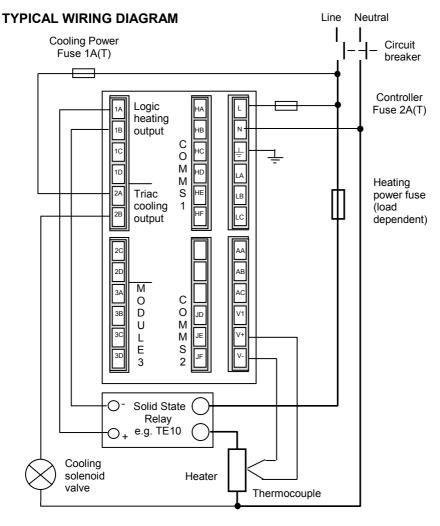


Fig 1-10 Typical wiring diagram, Model 2408 Controller

Safety requirements for permanently connected equipment state:

- A switch or circuit breaker shall be included in the building installation
- It shall be in close proximity to the equipment and within easy reach of the operator
- It shall be marked as the disconnecting device for the equipment.

Note: a single switch or circuit breaker can drive more than one instrument.

For logic drive capability see following chart:-

Logic Drive Fan Out

The logic outputs from the 2400 series controllers are capable of driving more than one solid state relay (SSR) in series or parallel. The following table shows the number of SSRs which can be driven depending on type of SSR. S = Series; P = Parallel.

| | Drive mA | SVDA | RVDA | TE10S | | 425S | |
|--------------|-------------|-------------|-------------|-------------|--------------|--------------|---------------|
| | | Logic DC | Logic DC | Logic DC | Logic 10V | Logic 24V | Logic 20mA |
| Logic | 18V@2 0 | 4S 6P | 4S 3P | 3S 2P | 3S 3P | 1S 2P | 6S 1P |
| Triple logic | 12V@9 | 3S 3P | 2S 1P | 2S 1P | 2S 1P | 1 | 4S 1P |

| | 450 | | | TC1027 | TE200S | TC2000 | RS3D |
|--------|----------|------|--------|---------|--------|--------|-------|
| | | | | CE | | CE | A |
| | Standard | TTL | Multi- | Logic V | Logic | Logic | Logic |
| | | | drive | | DC | DC | DC |
| Logic | 2S 3P | 1S2P | 6S 1P | 3S 3P | 3S 3P | 3S 1P | 4S 2P |
| Triple | 1 | 1 | 4S 1P | 2S 1P | 2S 1P | 0 | 0 |
| logic | | | | | | | |

MOTORISED VALVE CONNECTIONS

Motorised valves will normally be wired either to dual relay, or dual triac, output modules installed in the Module 1 position, or to single channel relay and triac outputs installed in Module positions 1 and 2. In the latter case, the convention is to configure output 1 as the raise output and output 2 as the lower output.

Depending on the configuration, control of the valve is achieved in one of three ways:

- 1. With no position feedback potentiometer.
- 2. With a feedback potentiometer used to monitor the valve's position. It does not influence the control.
- 3. With a feedback potentiometer, where the valve's position is controlled in response to the signal from it.

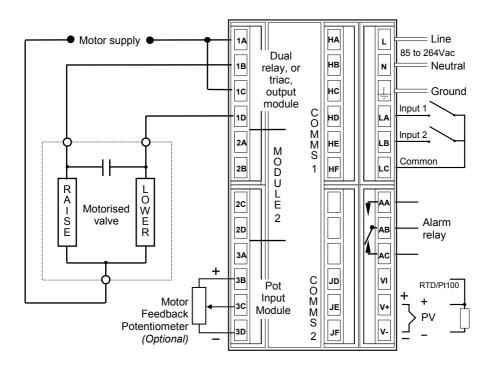


Fig 1-11 Motorised valve connections

Chapter 2 OPERATION

This chapter has nine topics:

- FRONT PANEL LAYOUTS
- BASIC OPERATION
- OPERATING MODES
- AUTOMATIC MODE
- MANUAL MODE
- PARAMETERS AND HOW TO ACCESS THEM
- NAVIGATION DIAGRAM
- PARAMETER TABLES
- ALARMS

FRONT PANEL LAYOUTS

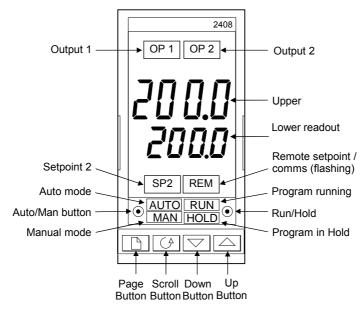


Figure 2-1 Model 2408 front panel layout

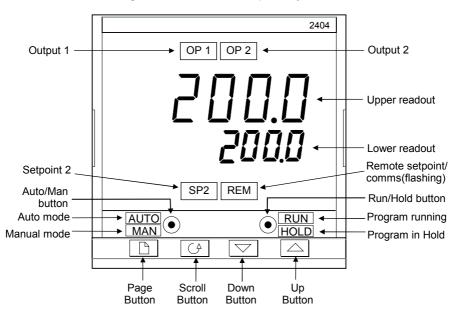


Figure 2-2 Model 2404 front panel layout

| Button or indicator | Name | Explanation |
|---------------------|-----------------------|--|
| OP1 | Output 1 | When lit, it indicates that the output installed in module position 1 is on. This is normally the heating output on a temperature controller. |
| OP2 | Output 2 | When lit, it indicates that the output installed in module position 2 is on. This is normally the cooling output on a temperature controller. |
| SP2 | Setpoint 2 | When lit, this indicates that setpoint 2, (or a setpoint 3-16) has been selected. |
| REM | Remote setpoint | When lit, this indicates that a remote setpoint input has been selected. 'REM' will also flash when communications is active. |
| © AUTO MAN | Auto/Manual button | When pressed, this toggles between automatic and manual mode: If the controller is in automatic mode the AUTO light will be lit. If the controller is in manual mode, the MAN light will be lit. The Auto/Manual button can be disabled in configuration level. |
| RUN () HOLD | Run/Hold button | Press once to start a program (RUN light on.) Press again to hold a program (HOLD light on) Press again to cancel hold and continue running (HOLD light off and RUN light ON) Press and hold in for two seconds to reset a program (RUN and HOLD lights off) The RUN light will flash at the end of a program. The HOLD light will flash during holdback or when a PDS retransmission output is open circuit. |
| | Page button | Press to select a new list of parameters. |
| () | Scroll button | Press to select a new parameter in a list. |
| | Down button | Press to decrease a value in the lower readout. |
| | Up button | Press to increase a value in lower readout. |

Figure 2-3 Controller buttons and indicators

BASIC OPERATION

Switch on the power to the controller. It runs through a self-test sequence for about three seconds and then shows the measured temperature, or process value, in the upper readout and the target value, called the *setpoint*, in the lower readout. This is called the **Home** display.

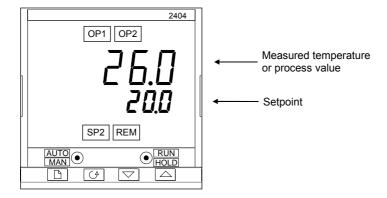


Figure 2-4 Home display

You can adjust the setpoint by pressing the or buttons. Two seconds after releasing either button, the display blinks to show that the controller has accepted the new value.

OP1 will light whenever output 1 is ON. This is normally the heating output when used as a temperature controller.

OP2 will light whenever output 2 is ON. This is normally the cooling output when used as a temperature controller.

Note: You can get back to this display at any time by pressing and together. Alternatively, you will always be returned to this display if no button is pressed for 45 seconds, or whenever the power is turned on.

Alarms

If the controller detects an alarm condition, it flashes an alarm message in the Home display. For a list of all the alarm messages, their meaning and what to do about them, see *Alarms* at the end of this chapter.

OPERATING MODES

The controller has two basic modes of operation:

- Automatic mode in which the output is automatically adjusted to maintain the temperature or process value at the setpoint.
- Manual mode in which you can adjust the output independently of the setpoint.


You toggle between the modes by pressing the AUTO/MAN button. The displays which appear in each of these modes are explained in this chapter.

Two other modes are also available:

- **Remote Setpoint mode**, in which the setpoint is generated from an external source. In this mode, the REM light will be on.
- **Programmer mode** which is explained in Chapter 5, *Programmer Operation*.

AUTOMATIC MODE


You will normally work with the controller in automatic mode. If the MAN light is on, press the AUTO/MAN button to select automatic mode. The AUTO light comes on.

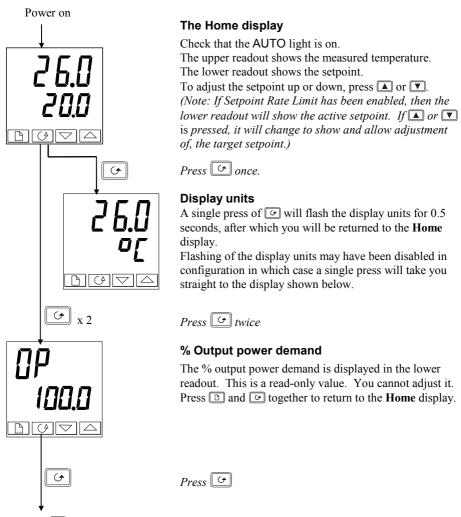

Pressing from the Output Power display may access further parameters. These may be in this scroll list if the 'Promote' feature has been used (see Chapter 3, *Edit Level*). When you reach the end of this scroll list, pressing will return you to the **Home** display.

MANUAL MODE

If the AUTO light is on, press the AUTO/MAN button to select manual mode. The MAN light comes on.

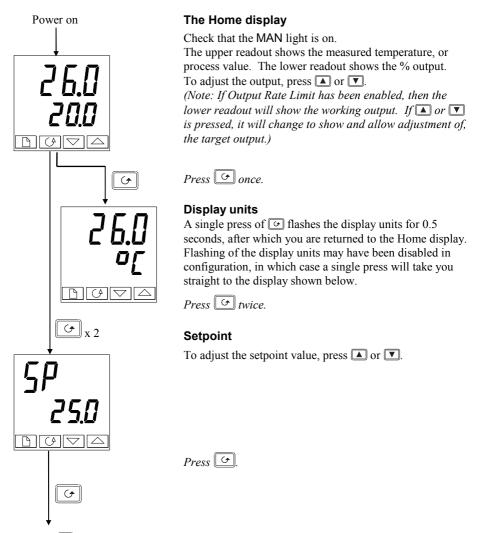

Pressing from the Output Power display may access further parameters. These may be in this scroll list if the 'Promote' feature has been used (see Chapter 3, *Edit Level*). When you reach the end of this scroll list, pressing will return you to the **Home** display.

PARAMETERS AND HOW TO ACCESS THEM

Parameters are settings, within the controller, that determine how the controller will operate. For example, alarm setpoints are parameters that set the points at which alarms will occur. For ease of access, the parameters are arranged in lists as shown in the navigation diagram on Pages 2-10 and 2-11. The lists are:

Home list PID list Communications list Run list Motor list Information list Programming list Setpoint list Access list.

Alarm list Input list Output list

Each list has a 'List Header' display.

List header displays

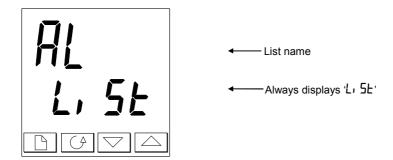


Figure 2-5 Typical list header display

A list header can be recognised by the fact that it always shows ' L_1 5L' in the lower readout. The upper readout is the name of the list. In the above example, 'RL' indicates that it is the Alarm list header. List header displays are read-only.

To step through the list headers, press . Depending upon how your controller has been configured, a single press may momentarily flash the display units. If this is the case, a double press will be necessary to take you to the first list header. Keep pressing . to step through the list headers, eventually returning you to the Home display.

To step through the parameters within a particular list, press .

When you reach the end of the list, you will return to the list header.

From within a list you can return to the current list header at any time can by pressing \(\bar{D} \). To step to the next list header, press \(\bar{D} \) once again.

Parameter names

In the navigation diagram, each box shows the display for a selected parameter. The Operator parameter tables, later in this chapter, list all the parameter names and their meanings.

The navigation diagram shows all the parameters that can, *potentially*, be present in the controller. In practice, a limited number of them appear, as a result of the particular configuration.

The shaded boxes in the diagram indicate parameters that are hidden in normal operation. To view all the available parameters, you must select Full access level. For more information about this, see Chapter 3, *Access Levels*.

Parameter displays

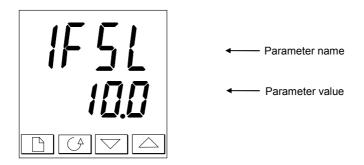


Figure 2-6 Typical parameter display

Parameter displays show the controller's current settings. The layout of parameter displays is always the same: the upper readout shows the parameter name and the lower readout its value. In the above example, the parameter name is **F5L** (indicating *Alarm 1, full scale low*), and the parameter value is **IDD**.

To change the value of a parameter


First, select the required parameter.

To change the value, press either \triangle or $\boxed{\bullet}$. During adjustment, single presses change the value by one digit.


Keeping the button pressed speeds up the rate of change.

Two seconds after releasing either button, the display blinks to show that the controller has accepted the new value.

NAVIGATION DIAGRAM (PART A) (The parameters that appear depend upon how the controller has been configured)

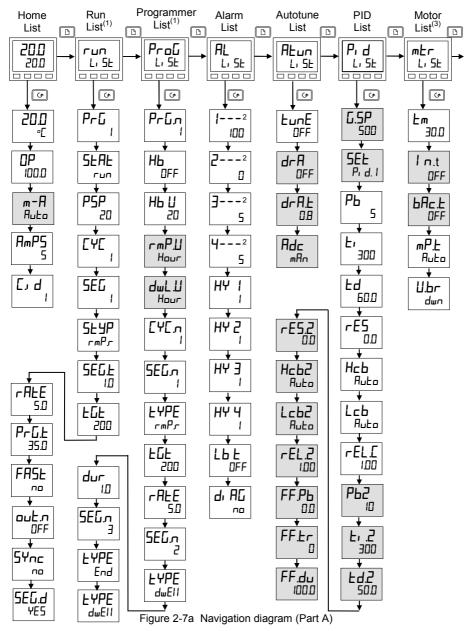

NAVIGATION DIAGRAM (PART B)

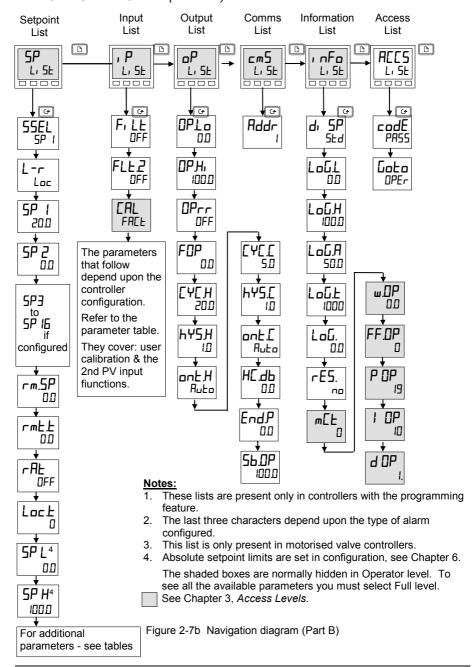

PARAMETER TABLES

| Name | Description |
|------|-------------|

| | Home list | | |
|---|--|--|--|
| Home | Measured value and Setpoint | | |
| OP . | % Output level | | |
| SP SP | Target setpoint (if in Manual mode) | | |
| m-A | Auto-man select | | |
| AmP5 | Heater current (With PDSIO mode 2) | | |
| [| Customer defined identification number | | |
| + Extra parameters, if the 'Promote' feature has been used (see Chapter 3, Edit Level). | | | |

| 1 | December was list. Descrit only in actualist agreement a controller. |
|-------|---|
| רחט | Program run list – Present only in setpoint programming controllers |
| PrG | Active program number (Only on Ч, or 2☐, program versions) |
| SEAF | Program status (DFF, run, hold, HbAc, End) |
| PSP | Programmer setpoint |
| [4[| Number of cycles remaining in the program |
| SEG | Active segment number |
| 5£YP | Active segment type |
| SEG.Ł | Segment time remaining in the segment units |
| FDF | Target setpoint |
| rALE | Ramp rate (if a rate segment) |
| PrGŁ | Program time remaining in hours |
| FASE | Fast run through program (na / YE5) |
| onfv | Event output states (DFF / not 8-segment programmer) |
| SYnc | Segment synchronisation (not / 4E5) (not 8-segment programmer) |
| SEG.d | Flash active segment type in the lower readout of the home display (np / YE5) |

| Name Description | Name | Description |
|------------------|------|-------------|
|------------------|------|-------------|

| ProG | | Program edit list – Present only in setpoint programming controller. For a fuller explanation of these parameters refer to Chapter 5 | | | | | | |
|-------|---|--|-------------|-------|------|----------|--|--|
| PrGn | | Select program number (Only on 4, or 20, program versions) | | | | | | |
| НЬ | | Holdback type for the program as a whole (if configured)(UFF, La, Hi, or bAnd) | | | | | | |
| нь и | | Holdback value (in display units) | | | | | | |
| rmP∐ | | Ramp units (5Ec, m, n, or Hour) [for both rmPr and rmPt type segments] | | | | | | |
| dwLIJ | | Dwell units (5Ec, m, n, or Hour) | | | | | | |
| [4[, | | Number of program cycles (1 to 999, or 'cont') | | | | | | |
| 5EG.s | | Segment number | | | | | | |
| FALE | | Segment type:(End) (rmPr=ramp rate) (rmPL=ramp time) (dwEII) (5LEP) (cALL) | | | | | | |
| | The following parameters depend on the LYPE selected, as shown below. | | | | | | | |
| | End | rmP.r | rmP.E | dwEll | SEEP | cALL | | |
| НЬ | | | | | | | Holdback type: UFF, La, Hi, or bAnd | |
| FDF | | ✓ | \ | | ✓ | | Target setpoint for a 'rmP' or 'SEEP' segment | |
| rAFE | | ✓ | | | | | Ramp rate for a 'rmPr' segment | |
| dur | | | ✓ | ✓ | | | 'dwEll' time / Time to target for a 'rmP.L' segment | |
| PrG.s | | | | | | √ | cALLed ProGram number | |
| בצבה | | | | | | ✓ | No. of cycles of cALL ed program | |
| outn | ✓ | ✓ | > | ✓ | ✓ | | Event output: UFF/on (not 8-segment programmer) | |
| 5Ync | | ✓ | > | ✓ | ✓ | | Segment synchronisation: no/YE5 (not 8-seg progr) | |
| End.Ł | ✓ | | | | | | End of prog – dwE11, \(\subseteq \subseteq \text{LP} \) | |

| Name | Description | | | | |
|---|---------------------------------------|--|--|--|--|
| IAL | Alarm list | | | | |
| 1 | Alarm 1 setpoint value | | | | |
| 2 | Alarm 2 setpoint value | | | | |
| 3 | Alarm 3 setpoint value | | | | |
| 4 | Alarm 4 setpoint value | | | | |
| In place of dashes, the last three characters indicate the alarm type. See alarm types table: | | | | | |
| HY I | Alarm 1 Hysteresis (display units) | | | | |
| HY 2 | Alarm 2 Hysteresis (display units) | | | | |
| E YH | Alarm 3 Hysteresis (display units) | | | | |
| НҰ Ч | Alarm 4 Hysteresis (display units) | | | | |
| Lb F | Loop Break Time in min utes | | | | |
| di AC | Enable Diagnostic alarms 'no' / 'YE5' | | | | |
| | Alarm types table | | | | |
| -F5L | PV Full scale low alarm | | | | |
| -F5H | PV Full scale high alarm | | | | |
| -dEu | PV Deviation band alarm | | | | |
| -dH ₁ | PV Deviation high alarm | | | | |
| -dLo | PV Deviation low alarm | | | | |
| -L[r | Load Current low alarm | | | | |
| -H[r | Load Current high alarm | | | | |
| -FL2 | Input 2 Full Scale low alarm | | | | |
| -FH2 | Input 2 Full Scale high alarm | | | | |
| -LOP | Working Output low alarm | | | | |
| -HOP | Working Output high alarm | | | | |
| -LSP | Working Setpoint low alarm | | | | |
| -H5P | Working Setpoint high alarm | | | | |
| 4-AF | Rate of change alarm (AL 4 only) | | | | |

| ALun | Autotune list |
|-------|---|
| FunE | One-shot autotune enable |
| drA | Adaptive tune enable |
| drA.Ł | Adaptive tune trigger level in display units. Range = 1 to 9999 |
| Adc | Automatic Droop Compensation (PD control only) |

| Name | Description | | | | | |
|-----------|---|-------------|--|--|--|--|
| Pı d | PID list | | | | | |
| G.5P | If Gain Scheduling has been | | | | | |
| | enabled (see Chapter 4 | 1), this | | | | |
| | parameter sets the PV below which 'Pı d. l' is active and above | | | | | |
| | which 'P' d.2' is active. | | | | | |
| SEŁ | P. d. I' or P. d.2' selected | | | | | |
| РЬ | Proportional Band | (SEL 1) | | | | |
| | (in display units) | | | | | |
| Ł, | Integral Time in secs | (SEL 1) | | | | |
| Fq | Derivative Time in secs | | | | | |
| rE5 | Manual Reset (%) | (SEL 1) | | | | |
| НсЬ | Cutback High | (SEL 1) | | | | |
| Lcb | Cutback Low | (SEL 1) | | | | |
| rELE | Relative Cool Gain | (SEL 1) | | | | |
| PP5 | Proportional Band | (SEL 2) | | | | |
| Fi 5 | Integral Time in secs | (SEL 2) | | | | |
| FqS | Derivative Time in secs | (SEL 2) | | | | |
| rE5.2 | Manual Reset (%) | (SEF 5) | | | | |
| HCP5 | Cutback High | (SEL 2) | | | | |
| ГСР5 | Cutback Low | (SEL 2) | | | | |
| rEL.2 | Relative Cool Gain | (SEL 2) | | | | |
| The follo | wing three parameters a | re used for | | | | |
| | control. If this facility is an they can be ignored. | not being | | | | |
| FF.Pb | SP, or PV, feedforward propband | | | | | |
| FFLr | Feedforward trim % | | | | | |
| FF.du | PID feedforward limits ± % | | | | | |
| mŁr | Motor list - see Table | 4-3 | | | | |
| Em | Valve travel time in seconds | | | | | |
| l n.E | Valve inertia time in secs | | | | | |
| bAc.E | Valve backlash time in secs | | | | | |
| mP.E | Minimum ON time of or | | | | | |
| U.br | Valve sensor break strategy | | | | | |
| ال.ت | Valve selisor break stie | acegy | | | | |

Name Description

| SP | Setpoint list | |
|--|--|--|
| 55EL | Select 5P 1 to 5P 15, depending on configuration | |
| L-r | Local (Loc) or remote (rmL) setpoint select | |
| SP 1 | Setpoint one value | |
| SP 2 | Setpoint two value | |
| rm.5P | Remote setpoint value | |
| rmŁ.Ł | Remote setpoint trim | |
| rAŁ | Ratio setpoint | |
| Loc.E | Local setpoint trim | |
| 5P L | Setpoint 1 low limit | |
| 5P H | Setpoint 1 high limit | |
| 5P2.L | Setpoint 2 low limit | |
| 5P2.H | Setpoint 2 high limit | |
| 5Prr | Setpoint Rate Limit | |
| НРЕЯ | Holdback Type for setpoint rate limit (DFF, La, Hi, or bAnd) | |
| Hb Holdback Value for setpoint limit in display units. (Hb.E. DFF) | | |

| , P | Input list | |
|--------------------------|---|--|
| F, LE | IP1 filter time constant (0.0 - 999.9 seconds). | |
| FLE.2 | IP2 filter time constant (0.0 - 999.9 seconds). | |
| H, J P LoJ P | Transition of control between P. I and P. P. (if configured) The transition region is set by the values of 'LoJ P' and 'H, J P'. PV = P. I below 'LoJ P' PV = P. Above 'H, J P' | |
| F. I F.2 | Derived function, (if configured) PV = $(F. I \times_1 P I) + (F.I \times_1 P I)$. 'F. I' and 'F.I' are scalars with the range -9.99 to 10.00 | |
| PU, P | Selects 'ı P. l' or 'ı P.2' | |
| Continued in next column | | |

Name Description

| , P | Input list - continued | |
|--|--|--|
| The next 3 parameters appear if User Calibration has been enabled. (Refer to Chapter 7.) By default they are hidden when in Operator level. To prevent unauthorised adjustment, we recommend that they are only made available in Full access level. | | |
| CAL | FREL' - reinstates the factory calibration and disables User calibration. Next 2 parameters will not appear. 'USEr' - reinstates any previously set User calibration. All parameters below now appear. | |
| CAL.5 | Selected calibration point – 'nonE', 'r P IL', 'r P IH', 'r P2L', 'r P2H' | |
| * LPA | User calibration adjust, if EAL.5 = '\text{? P IL', '\text{P IH', '\text{P P LL', '\text{P P H'}}} | |
| OF5.1 | IP1 calibration offset | |
| 0F5.2 | IP2 calibration offset | |
| mU. 1 | IP1 measured value (at terminals) | |
| m以こ IP2 measured value (at terminals), if DC input in Module position | | |
| EJE. I | IP1 cold junction temp. reading | |
| C.JC.2 | IP2 cold junction temp. reading | |
| Li.1 | IP1 linearised value | |
| L, 2 IP2 linearised value | | |
| PU.SL | Shows the currently selected PV input - '1 P. I' or '1 P.2' | |

^{*} Do not make adjustments using the Rd J parameter unless you wish to change the controller calibration.

| Name | Description | |
|--|-----------------------------------|-------|
| | | |
| aP | Output list | |
| Does not | appear if Motorised Valve control | |
| configure | d. | |
| OPLo | Low power limit (%) | |
| OP.H. | High power limit (%) | |
| 0Prr | Output Rate Limit (% per sec) | |
| FOP | Forced output level (%) | |
| [Y[H Heat cycle time (0.2S to 999. | | |
| HY5H | Heat hysteresis (display units) | |
| onEH | Heat output min. on-time (secs) | |
| | Auto (0.05S), or 0.1 - 999.9S | |
| [Y[[Cool cycle time (0.2S to 999.9 hy5[Cool hysteresis (display units) | | |
| | | ont.[|
| | Auto (0.05S), or 0.1 - 999.9S | |
| HE.db | Heat/cool deadband (display | |
| | units) | |
| End.P | To set power level in end | |
| L | segment | |
| 5b. P Sensor Break Output Power (% | | |

| cm5 | Comms list | |
|------|------------------------|--|
| Addr | Communications Address | |

| cm5 | DeviceNet (additional | |
|-------|---------------------------|--|
| | parameters) | |
| ∏w.5Ł | Indicates network status | |
| רחט | Network connected and | |
| | operational | |
| rdY | Network connected but not | |
| | operational | |
| oFF.L | Network not connected | |

| , nFo | Information list | | |
|--------------------------------|---|--|--|
| di SP | Configure lower readout of Home display to show: UPa5 Valve position Std Standard - display setpoint Load current in amps Output StAL Program status PrLL Program time remaining in hours Li 2 Process value 2 FRL Ratio setpoint PrL Selected program number Remote setpoint | | |
| LoGL | PV minimum | | |
| LoGH | PV maximum PV mean value Time PV above Threshold level | | |
| LoGA | | | |
| LoG.E | | | |
| רים PV Threshold for Timer Log | | | |
| Continu | Continued in next column | | |

| | Name | Description | |
|---|-------|------------------------------|--|
| | | | |
| | ı nFo | Information list - continued | |
| 1 | ררו | Lambian Darat (UEE) | |

rE5⊥ Logging Reset - 'YE5/n□'

The following set of parameters is for diagnostic purposes.

□□P Working output

FF□P Feedforward component of output

□□ PID output to motorised valve

| | Access List | |
|------|--|--|
| codE | Access password | |
| Goto | Goto level - OPEr, FuLL, Ed, E or canF | |
| ConF | Configuration password | |

ALARMS

Alarm annunciation

Alarms are flashed as messages in the Home display. A new alarm is displayed as a double flash followed by a pause, old (acknowledged) alarms as a single flash followed by a pause. If there is more than one alarm condition, the display cycles through all the relevant alarm messages. Table 2-1 and Table 2-2 list all of the possible alarm messages and their meanings.

Alarm acknowledgement and resetting

Pressing both and at the same time will acknowledge any new alarms and reset any latched alarms.

Alarm modes

Alarms will have been set up to operate in one of several modes, either:

- Non-latching, which means that the alarm will reset automatically when the Process Value is no longer in the alarm condition.
- Latching, which means that the alarm message will continue to flash even if the alarm condition no longer exists and will only clear when reset.
- Blocking, which means that the alarm will only become active after it has first entered a
 safe state on power-up.

Alarm types

There are two types of alarm: Process alarms and Diagnostic alarms.

Process alarms

These warn that there is a problem with the process which the controller is trying to control.

| Alarm Display | What it means |
|------------------|--------------------------|
| _F5L* | PV Full Scale Low alarm |
| _FSH* | PV Full Scale High alarm |
| _dEu* | PV Deviation Band alarm |
| _dH, * | PV Deviation High alarm |
| _dLo* | PV Deviation Low alarm |
| _L[r* | Load Current Low alarm |
| _H[r* | Load Current High alarm |

| Alarm Display | What it means |
|------------------|--|
| _FL2* | Input 2 Full Scale Low alarm |
| _FH2* | Input 2 Full Scale High alarm |
| _LOP* | Working Output Low alarm |
| _HOP* | Working Output High alarm |
| _LSP* | Working Setpoint Low alarm |
| _H5P* | Working Setpoint High alarm |
| 4-AF | PV Rate of change alarm Always assigned to Alarm 4 |

^{*} In place of the dash, the first character will indicate the alarm number.

Table 2-1 Process alarms

Diagnostic alarms

These indicate that a fault exists in either the controller or the connected devices.

| Display shows | What it means | What to do about it |
|------------------|---|--|
| EEEr | Electrically Erasable Memory Error: The value of an operator, or configuration, parameter has been corrupted. | This fault will automatically take you into Configuration level. Check all of the configuration parameters before returning to Operator level. Once in Operator level, check all of the operator parameters before resuming normal operation. If the fault persists, or occurs frequently, contact your supplier |
| 5.br | Sensor Break: Input sensor is unreliable or the input signal is out of range. | Check that the sensor is correctly connected. |
| Lbr | Loop Break The feedback loop is open circuit. | Check that the heating and cooling circuits are working properly. |
| LdF | Load failure Indication that there is a fault in the heating circuit or the solid state relay. | This is an alarm generated by feedback from a TE10S solid state relay (SSR) operating in PDSIO mode 1 - see Chapter 1, <i>Electrical Installation</i> . It indicates either an open or short circuit SSR, blown fuse, missing supply or open circuit heater. |
| 55r.F | Solid state relay failure Indication that there is a fault in the solid state relay. | This is an alarm generated by feedback from a TE10S solid state relay (SSR) operating in PDSIO mode 2 - see Chapter 1, <i>Electrical Installation</i> . It indicates either an open or short circuit condition in the SSR. |
| HErF | Heater failure Indication that there is a fault in heating circuit. | This is an alarm generated by feedback from a TE10S solid state relay (SSR) operating in PDSIO mode 2 - see Chapter 1, <i>Electrical Installation</i> . It indicates either a blown fuse, missing supply, or open circuit heater. |
| CE.DP | <u>Current Transformer Open</u> <u>Circuit</u> | Indicates that the PDS input is open circuit. Mode 5 only |
| Ct.5h | <u>Current Transformer Short</u> <u>Circuit</u> | Indicates that the PDS input is short circuit Mode 5 only |
| HwEr | Hardware error Indication that a module is of the wrong type, missing, or faulty. | Check that the correct modules are fitted. |

| | | · | | |
|-------|--|---|--|--|
| ם נפח | No I/O None of the expected I/O modules is fitted. | This error message normally occurs when preconfiguring a controller without installing any of the required I/O modules. | | |
| rmEF | Remote input failure. Either the PDSIO input, or the remote DC input, is open or short circuit | Check for open, or short circuit wiring on the PDSIO, or remote DC, input. | | |
| LLLL | Out of range low reading | Check the value of the input. | | |
| нннн | Out of range high reading | Check the value of the input. | | |
| Err I | Error 1: ROM self-test fail | Return the controller for repair. | | |
| Err2 | Error 2: RAM self-test fail | Return the controller for repair. | | |
| Err3 | Error 3: Watchdog fail | Return the controller for repair. | | |
| Err4 | Error 4: Keyboard failure Stuck button, or a button was pressed during power up. | Switch the power off and then on, without touching any of the controller buttons. | | |
| Err5 | Error 5: Faulty internal communications. | Check printed circuit board interconnections. If the fault cannot be cleared, return the controller for repair. | | |
| Err6 | Digital filter chip faulty or loose board inside controller | Return the controller for repair. | | |
| Err7 | PV id failure/PSU failure | Return the controller for repair. | | |
| Err8 | Module 1 id error | Faulty or loose module or may be isolation problem | | |
| Err9 | Module 2 id error | Faulty or loose module or may be isolation problem | | |
| ErrA | Module 3 id error | Faulty or loose module or may be isolation problem | | |
| dCF | DC output fail | Return the controller for repair | | |
| ŁuEr | Tune error – shown If any one stage of the autotuning process exceeds two hours | Check response time of process: check that the sensor has not failed: check that the loop is not broken. Acknowledge by pressing 'page' key and 'scroll' key together | | |
| P.br | Potentiometer break | Check that the feedback potentiometer is correctly connected or the pot is not open circuit | | |

Table 2-2 Diagnostic alarms

Chapter 3 ACCESS LEVELS

This chapter describes the different levels of access to the operating parameters within the controller.

There are three topics:

- THE DIFFERENT ACCESS LEVELS
- SELECTING AN ACCESS LEVEL
- EDIT LEVEL

THE DIFFERENT ACCESS LEVELS

There are four access levels:

- Operator level, which you will normally use to operate the controller.
- Full level, which is used to commission the controller.
- **Edit level**, which is used to set up the parameters that you want an operator to be able to see and adjust when in Operator level.
- Configuration level, which is used to set up the fundamental characteristics of the controller.


| Access level | Display shows | What you can do | Password Protection |
|-----------------|------------------|---|------------------------|
| Operator | OPEr | In this level, operators can view and adjust the value of parameters defined in Edit level (see below). | No |
| Full | FuLL | In this level, all the parameters relevant to a particular configuration are visible. All alterable parameters may be adjusted. | Yes |
| Edit | Edi F | In this level, you can determine which parameters an operator is able to view and adjust in Operator level. You can hide, or reveal, complete lists, individual parameters within each list and you can make parameters read-only or alterable. (See <i>Edit level</i> at the end of this chapter). | Yes |
| Configuration | conF | This special level allows access to set up the fundamental characteristics of the controller. | Yes |

Figure 3-1 Access levels

SELECTING AN ACCESS LEVEL

Access to Full, Edit or Configuration levels is protected by a password to prevent unauthorised access.

If you need to change the password, see Chapter 6, Configuration.



Access list header

Press until you reach the access list header 'ALL5'.

Press G

Password entry

The password is entered from the 'code' display.

Enter the password using or . Once the correct password has been entered, there is a two second delay after which the lower readout will change to show 'PH55' indicating that access is now unlocked.

The pass number is set to ' ${\bf l}$ ' when the controller is shipped from the factory.


Note; A special case exists if the password has been set to '1'. In this case access will be permanently unlocked and the lower readout will always show 'PR55'.

Press to proceed to the 'Loto' page.

(If an *incorrect* password has been entered and the controller is still 'locked' then pressing returns you to the 'ALLS' list header.)

Access to Read-only Configuration

From the 'ALLS' list display, press to 'code'. Then press and together will take you into Read-Only Configuration without entering a password. This will allow you to view all of the configuration parameters, but not adjust them. If no button is pressed for ten seconds, you will be returned to the Home display. Alternatively, pressing and together takes you immediately back to the Home display.

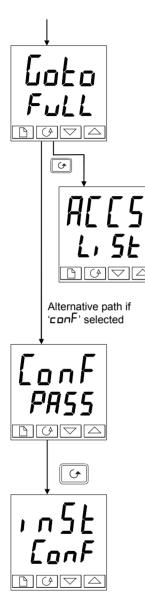

Level selection

The 'Loto' display allows you to select the required access level.

Use **\(\Lambda \)** and **\(\Lambda \)** to select from the following display

codes:

Operator level

Full: Full level

Ed. E: Edit level

configuration level

Press 🕝

If you selected either '<code>IPEr</code>', '<code>Full</code>' or '<code>Ed</code>' L' level you will be returned to the '<code>HLL5</code>' list header in the level that you chose. If you selected '<code>conF</code>', you will get a display showing '<code>LonF</code>' in the upper readout (see below).

Configuration password

When the 'Lanf' display appears, you must enter the Configuration password in order to gain access to this level. Do this by repeating the password entry procedure described in the previous section.

The configuration password is set to '2' when the controller is shipped from the factory. If you need to change the configuration password, see Chapter 6, *Configuration*.

Press 😉

Configuration level

The first display of configuration is shown. See Chapter 6, *Configuration*, for details of the configuration parameters.

For instructions on leaving configuration level, see Chapter 6, *Configuration*.

Returning to Operator Level

To return to operator level from either 'Full' or 'Ed, E' level, repeat entry of the password and select 'IPEr' on the 'Lolo' display.

In 'Ed, L' level, the controller will automatically return to operator level if no button is pressed for 45 seconds.

EDIT LEVEL

Edit level is used to set which parameters you can view and adjust in Operator level. It also gives access to the 'Promote' feature, which allows you to select and add ('Promote') up to twelve parameters into the Home display list, thereby giving simple access to commonly used parameters.

Setting operator access to a parameter

First you must select **Ed**, **b** level, as shown on the previous page.

Once in $Ed_i E$ level, you select a list, or a parameter within a list, in the same way as you would in Operator, or Full, level – that is to say, you move from list header to list header by pressing \Box , and from parameter to parameter within each list using \Box .

However, in Edit level what is displayed is not the value of a selected parameter, but a code representing that parameter's availability in Operator level.

When you have selected the required parameter, use
and
buttons to set its availability in Operator level.

There are four codes:

Makes a parameter alterable in Operator level.

Promotes a parameter into the Home display list.

Makes a parameter, or list header, read-only (it co

Makes a parameter, or list header, read-only (it can be viewed but not altered).

Hides a parameter, or list header.

For example:

HI dE



The parameter selected is Alarm 2, Full Scale Low

It will be alterable in Operator level

Hiding or revealing a complete list

To hide a complete list of parameters, all you have to do is hide the list header. If a list header is selected, only two selections are available: rEAd and HI dE.

(It is not possible to hide the 'ALLS' list, which always displays the code: 'L, 5E'.)

Promoting a parameter

Scroll through the lists to the required parameter and choose the $Pr\Box$ code. The parameter is then automatically added (promoted) into the Home display list. (The parameter will also be accessible, as normal, from the standard lists.) A maximum of twelve parameters can be promoted. Promoted parameters are automatically 'alterable'.

Please note, in the ' $PrDL L_1 SE$ ', the parameters from segment number (SEL_1) onwards *cannot* be promoted.

Chapter 4 TUNING

Before tuning, please read Chapter 2, *Operation*, to learn how to select and change a parameter.

This chapter has five topics:

- WHAT IS TUNING?
- AUTOMATIC TUNING
- MANUAL TUNING
- COMMISSIONING OF MOTORISED VALVE CONTROLLERS
- GAIN SCHEDULING

WHAT IS TUNING?

In tuning, you match the characteristics of the controller to those of the process being controlled in order to obtain good control. Good control means:

- Stable, 'straight-line' control of the temperature at setpoint without fluctuation
- No overshoot, or undershoot, of the temperature setpoint
- Quick response to deviations from the setpoint caused by external disturbances, thereby rapidly restoring the temperature to the setpoint value.

Tuning involves calculating and setting the value of the parameters listed in Table 4-1. These parameters appear in the $(P_i d)$ list.

| Parameter | Code | Meaning or Function | | |
|-----------------------|--|---|--|--|
| Proportional band | РЬ | The bandwidth, in display units, over which the output power is proportioned between minimum and maximum. | | |
| Integral time | Ł۱ | Determines the time taken by the controller to remove steady- state error signals. | | |
| Derivative time | Fd | Determines how strongly the controller will react to the rate-of- change of the measured value. | | |
| High Cutback | НсЬ | The number of display units, above setpoint, at which the controller will increase the output power, in order to prevent undershoot on cool down. | | |
| Low cutback | The number of display units, below setpoint, at which the controller will cutback the output power, in order to preven overshoot on heat up. | | | |
| Relative cool gain | rEL | Only present if cooling has been configured and a module is fitted. Sets the cooling proportional band, which equals the Pb value divided by the rEL value. | | |

Table 4-1 Tuning parameters

AUTOMATIC TUNING

Two automatic tuning methods are provided in the 2408 and 2404:

- A one-shot tuner, which automatically sets up the initial values of the parameters listed in Table 4-1 on the previous page.
- Adaptive tuning, which continuously monitors the error from setpoint and modifies the PID values, if necessary.

One-shot Tuning

The 'one-shot' tuner works by switching the output on and off to induce an oscillation in the measured value. From the amplitude and period of the oscillation, it calculates the tuning parameter values.

If the process cannot tolerate full heating or cooling being applied during tuning, then the level of heating or cooling can be restricted by setting the heating and cooling power limits in the ' $\neg P$ ' list. However, the measured value *must* oscillate to some degree for the tuner to be able to calculate values.

A One-shot Tune can be performed at any time, but normally it is performed only once during the initial commissioning of the process. However, if the process under control subsequently becomes unstable (because its characteristics have changed), you can re-tune again for the new conditions.


It is best to start tuning with the process at ambient temperature. This allows the tuner to calculate more accurately the low cutback and high cutback values which restrict the amount of overshoot, or undershoot.

How to tune

- 1. Set the setpoint to the value at which you will normally operate the process.
- 2. In the 'Akun' list, select 'kunk' and set it to 'un'.
- 3. Press the Page and Scroll buttons together to return to the Home display. The display will flash 'EunE' to indicate that tuning is in progress.
- 4. The controller induces an oscillation in the temperature by first turning the heating on, and then off. The first cycle is not complete until the measured value has reached the required setpoint.
- 5. After two cycles of oscillation the tuning is completed and the tuner switches itself off.
- The controller then calculates the tuning parameters listed in Table 4-1 and resumes normal control action.

If you want 'Proportional only', 'PD', or 'PI' control, you should set the 'L' ' or 'L' parameters to DFF before commencing the tuning cycle. The tuner will leave them off and will not calculate a value for them.

Typical automatic tuning cycle

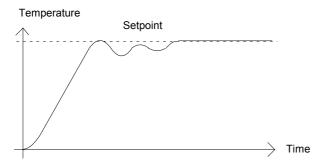

Calculation of the cutback values

Low cutback and High cutback are values that restrict the amount of overshoot, or undershoot, that occurs during large step changes in temperature (for example, under start-up conditions).

If either low cutback, or high cutback, is set to 'Auto' the values are fixed at three times the proportional band, and are not changed during automatic tuning.

Adaptive tune

Adaptive tuning is a background algorithm, which continuously monitors the error from setpoint and analyses the control response during process disturbances. If the algorithm recognises an oscillatory, or under-damped, response it recalculates the Pb, Er and Ed values.

Adaptive tune is triggered whenever the error from setpoint exceeds a trigger level. This trigger level is set in the parameter 'drfl', which is found in the Autotune list. The value is in display units. It is automatically set by the controller, but can also be manually re-adjusted.

Adaptive tune should be used with:

- 1. Processes whose characteristics change as a result of changes in the load, or setpoint.
- 2. Processes that cannot tolerate the oscillation induced by a One-shot tune.

Adaptive tune should not be used:

- Where the process is subjected to regular external disturbances that could mislead the adaptive tuner.
- 2. On highly interactive multiloop applications. However, moderately interactive loops, such as multi-zone extruders, should not give a problem.

MANUAL TUNING

If for any reason automatic tuning gives unsatisfactory results, you can tune the controller manually. There are a number of standard methods for manual tuning. The one described here is the Ziegler-Nichols method.

With the process at its normal running temperature:

- 1. Set the Integral Time 'L' and the Derivative Time 'Ld' to OFF.
- 2. Set High Cutback and Low Cutback, 'Hcb' and 'Lcb', to 'Auto'.
- 3. Ignore the fact that the temperature may not settle precisely at the setpoint.
- 4. If the temperature is stable, reduce the proportional band 'Pb' so that the temperature just starts to oscillate. If the temperature is already oscillating, increase the proportional band until it just stops oscillating. Allow enough time between each adjustment for the loop to stabilise. Make a note of the proportional band value 'B' and the period of oscillation 'T'
- 5. Set the Pb, ti, td parameter values according to the calculations given in Table 4-2.

| Type of control | Proportional band 'Pb' | Integral time 'ti' | Derivative time 'td' | |
|-------------------|------------------------|--------------------|-------------------------|--|
| Proportional only | 2xB | OFF | OFF | |
| P + I control | 2.2xB | 0.8xT | OFF | |
| P + I + D control | 1.7xB | 0.5xT | 0.12xT | |

Table 4-2 Tuning values

Setting the cutback values

The above procedure sets up the parameters for optimum steady state control. If unacceptable levels of overshoot or undershoot occur during start-up, or for large step changes in temperature, then manually set the cutback parameters 'Lcb' and 'Hcb'.


Proceed as follows:

- 1. Set the low and high cutback values to three proportional bandwidths (that is to say, Lcb = Hcb = 3 x Pb).
- 2. Note the level of overshoot, or undershoot, that occurs for large temperature changes (see the diagrams below).

In example (a) increase 'L c b' by the overshoot value. In example (b) reduce 'L c b' by the undershoot value.


Example (a)

Temperature

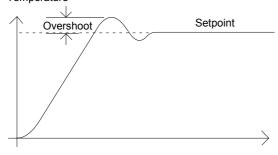

Example (b)

Temperature

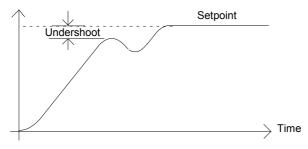

Where the temperature approaches setpoint from above, you can set 'Hcb' in a similar manner.

Integral action and manual reset

In a full three-term controller (that is, a PID controller), the integral term 'ti' automatically removes steady state errors from the setpoint. If the controller is set up to work in two-term mode (that is, PD mode), the integral term will be set to 'OFF'. Under these conditions the measured value may not settle precisely at setpoint. When the integral term is set to 'OFF' the parameter *manual reset* (code 'r E5') appears in the 'Pı d Lı 5E' in 'Full' level. This parameter represents the value of the power output that will be delivered when the error is zero. You must set this value manually in order to remove the steady state error.

Automatic droop compensation (Adc)

The steady state error from the setpoint, which occurs when the integral term is set to ' $\Box FF$ ' is sometimes referred to as 'droop'. 'Hdc' automatically calculates the manual reset value in order to remove this droop. To use this facility, you must first allow the temperature to stabilise. Then, in the autotune parameter list, you must set 'Hdc' to 'CHLc'. The controller will then calculate a new value for manual reset, and switch 'Hdc' to 'CHLc'.

'Fldc' can be repeated as often as you require, but between each adjustment you must allow time for the temperature to stabilise.

Tune Error

If any one stage of the automatic tuning process is not completed within two hours a diagnostic alarm will occur. The display shows EUEr - Tune Error.

This alarm could occur if:

- 1. The process to be tuned has a very slow response time
- 2. The sensor has failed or is incorrectly aligned
- 3. The loop is broken or not responding correctly

MOTORISED VALVE CONTROL

The 2408 and 2404 can be configured for motorised valve control as an alternative to the standard PID control algorithm. This algorithm is designed specifically for positioning motorised valves.

These are ordered pre-configured as Model numbers:

- 2408/VC and 2404/VC motorised valve controllers
- 2408/VP and 2404/VP motorised valve controllers with a single setpoint programmer
- 2408/V4 and 2404/V4 motorised valve controllers storing four setpoint programs.
- 2408/VM and 2404/VM motorised valve controllers storing twenty setpoint programs.

Figure 1-11 in Chapter 1 shows how to connect a motorised valve controller. The control is performed by delivering open, or close, pulses in response to the control demand signal.

The motorised valve algorithm can operate in one of three ways:

- The so-called boundless mode, which does not require a position feedback potentiometer for control purposes; although one can be connected and used purely to display the valve's position.
- 2. Bounded, (*or position*), control mode, which requires a feedback potentiometer. This is closed-loop control determined by the valve's position.

The desired control mode is selected in the '1 nSE' list in configuration level.

The following parameter list will appear in the navigation diagram shown in Chapter 2, if your controller is configured for motorised valve control.

| Name | Description | | S | |
|-------|--|---------|---------|---------|
| mEr | Motor list | Min | Max | Default |
| Em | Valve travel time in seconds. This is the time taken for the valve to travel from its fully closed position to its fully open position. | 0.1 | 240.0 | 30.D |
| InĿ | Valve inertia time in seconds. This is the time taken for the valve to stop moving after the output pulse is switched off. | OFF | 20.0 | OFF |
| ЬЯс.Е | Valve backlash time in seconds. This is the minimum on-time required to reverse the direction of the valve. i.e. the time to overcome the mechanical backlash. | OFF | 20.0 | OFF |
| mP.L | Output pulse minimum on-time, in seconds. | Auto | 100.0 | Auto |
| U.br | Valve sensor break strategy. | rESE, L | ıP, dwn | rE5Ł |

Table 4-3 Motorised valve parameter list

COMMISSIONING THE MOTORISED VALVE CONTROLLER

The commissioning procedure is the same for both bounded and boundless control modes, except in bounded mode you must first calibrate the position feedback potentiometer, as described in the section below.

Proceed as follows:

- 1. Measure the time taken for the valve to be raised from its fully closed to its fully open position and enter this as the value in seconds into the 'Em' parameter.
- 2. Set all the other parameters to the default values shown in Table 4-3.

The controller can then be tuned using any of the automatic, or manual, tuning procedures described earlier in this chapter. As before, the tuning process, either automatic or manual, involves setting the values of the parameters in Table 4-1. The only difference with boundless control is that the derivative term '\(\delta \delta' \), although present, will have no effect.

Adjusting the minimum on-time 'mPL'

The default value of 0.2 seconds is satisfactory for most processes. If, however, after tuning the process, the valve activity is excessively high, with constant oscillation between raise and lower pulses, the minimum on-time can be increased.

The minimum on-time determines how accurately the valve can be positioned and therefore the control accuracy. The shorter the time, the more precise the control. However, if the time is set too short, process noise will cause an excessively busy valve.

Inertia and backlash settings

The default values are satisfactory for most processes, i.e. 'DFF'.

Inertia is the time taken for the valve to stop after the output pulse is turned off. If this causes a control problem, the inertia time needs to be determined and then entered into the parameter, 4 nE. The inertia time is subtracted from the raise and lower output pulse times, so that the valve moves the correct distance for each pulse.

Backlash is the output pulse time required to reverse the direction of the valve, i.e. the time taken to overcome the mechanical backlash of the linkages. If the backlash is sufficient to cause a control problem, then the backlash time needs to be determined and then entered into the parameter. Back.

The above two values are not part of the automatic tuning procedure and must be entered manually.

CALIBRATING THE POSITION FEEDBACK POTENTIOMETER

Before proceeding with the feedback potentiometer calibration, you should ensure, in configuration level, that module position 2 (ZR), or 3 (3R), has its '1 d' indicating 'PoL' ', (meaning *Potentiometer Input*). Continue to scroll down the module configuration list. 'Func' should be set to 'UPo5', 'URLL' must be set to '0' and 'URLH' to '100'. Exit from configuration and you are now ready to calibrate the position feedback potentiometer. Proceed as follows.

- 1. In Operator level, press the AUTO/MAN button to put the controller in Manual mode.
- 2. Drive the valve to its fully open position using .
- 3. Press until you get to 'P-L, 5L'.
- 4. Press to get to 'PEAL-OFF'.

- 5. Press or to turn 'PEAL' to 'on'.
- 6. Press and the upper readout indicates 'Pot'.
- 7. Press or to get to 'Pob-3HHi'. (Assuming that the Potentiometer Input Module is in module position 3.)
- 8. Press 😉 to go to '🗓 no'.
- 9. Press ▲ or ▼ to see '♣□-¥E5', which starts the calibration procedure.
- 10. Calibration is complete when the display returns to '[0-no'.
- 11. Press 🗈 and 😉 together to return directly to the Operator level.
- 12. The controller should still be in Manual mode.
- 13. Drive the valve to its fully closed position using .
- 14. Press until you get to ', P-L, 5L'.
- 15. Press to get to 'PEAL-OFF'.
- 16. Press A or to turn 'PEAL' to 'on'.
- 17. Press and the upper readout indicates 'Pob'.
- 18. Press ▲ or ▼ to get to 'PoL-∃ALo'
- 19. Press to go to '[]-no'.
- 20. Press or to see ' u YE5', which starts the calibration procedure.
- 21. Calibration is complete when the display returns to '[]-no'.
- 22. Press and together to return directly to the Operator level.
- 23. Press the AUTO/MAN button to place the controller in AUTO and the calibration of the position feedback potentiometer is now complete.

GAIN SCHEDULING

Gain scheduling is the automatic transfer of control between one set of PID values and another. In the case of the 2408 and 2404 controllers, this is done at a presettable process value. It is used for the more difficult to control processes which exhibit large changes in their response time or sensitivity at, for example, high and low temperatures, or when heating or cooling.

The 2408 and 2404 has two sets of PID values. You can select the active set from either a digital input, or from a parameter in the PID list, or you can transfer automatically in gain scheduling mode. The transfer is bumpless and will not disturb the process being controlled.

To use gain scheduling, follow the steps below:



Step1: Enable in configuration level

Gain scheduling must first be enabled in Configuration level. Goto the InSt EunF list, select the parameter LSch, and set it to YES.



Step 2: Set the transfer point

Once gain scheduling has been enabled, the parameter \$\overline{L}.5P\$ will appear at the top of the \$P_1\$ \(\overline{d} \) list in \$\overline{Full} L\$ access level. This sets the value at which transfer occurs. PID1 will be active when the process value is below this setting and PID2 when the process value is above it. The best point of transfer depends on the characteristics of the process. Set a value between the control regions that exhibit the greatest change.

Step 3: Tuning

You must now set up the two sets of PID values. The values can be manually set, or automatically tuned as described earlier in this chapter. When tuning automatically you must tune twice, once above the switching point \Box .5P and again below the switching point. When tuning, if the process value is below the transfer point \Box .5P the calculated values will automatically be inserted into PID1 set and if the process value is above \Box .5P, the calculated values will automatically be inserted into PID2 set.

Chapter 5 PROGRAMMER OPERATION

This chapter deals with the setpoint programming option. All 2408 / 2404 instruments have a basic 8-segment programmer built-in as standard. This facility must be enabled by the user, as explained in the section, *Configuring the Programmer*.

Other programmer versions are listed below, and have 16-segments in each program.

16-segment programmer with:

a single program: Models 2408/CP and 2404/CP. four stored programs: Models 2408/P4 and 2404/P4. twenty stored programs: Models 2408/CM and 2404/CM.

16-segment Motorised Valve programmer with:

a single program: Models 2408/VP and 2404/VP. four stored programs: Models 2408/V4 and 2404/V4. twenty stored programs: Models 2408/VM and 2404/VM.

The 8-segment programmer differs from the other programmers in that it will not provide event outputs and program synchronisation. Otherwise they all operate in the same way.

There are eight topics:

- WHAT IS SETPOINT PROGRAMMING?
- PROGRAMMER STATES
- RUNNING A PROGRAM FROM THE RUN LIST
- RUNNING A PROGRAM USING THE RUN/HOLD BUTTON
- AUTOMATIC BEHAVIOUR
- CONFIGURING THE PROGRAMMER
- CONFIGURING DIGITAL INPUTS TO SELECT PROGRAM NUMBER
- CREATING A NEW PROGRAM, OR MODIFYING AN EXISTING PROGRAM.

To understand how to select and change parameters in this chapter you need to have read Chapter 2, *Operation* and Chapter 3, *Access Levels*.

WHAT IS SETPOINT PROGRAMMING?

Many applications need to vary temperature, or process value, with time. Such applications need a controller which varies a setpoint as a function of time; all 2408 and 2404 models can do this.

The setpoint is varied by using a *setpoint program*. Within each 2408 and 2404 controller, there is a software module called *the programmer*, which stores one, or more, such programs and drives the setpoint according to the selected program. The program is stored as a series of 'ramp' and 'dwell' segments, as shown below.

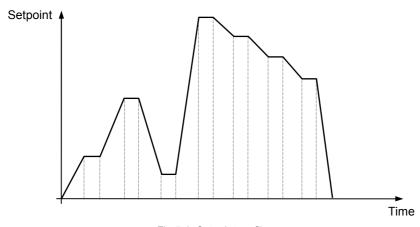


Fig 5-1 Setpoint profile

(If the 8-segment programmer is being used, then the information in the next paragraph does **not** apply.) In each segment you can define the state of up to eight (8) digital outputs, each of which can be used to trigger external events. These are called *event outputs* and can drive either relay, logic, or triac outputs, depending on the modules installed.

A program is executed either, once, repeated a set number of times, or repeated continuously. If repeated a set number of times, then the number of cycles must be specified as part of the program.

There are five different types of segment:

| Ramp | The setpoint ramps linearly, from its current value to a new value, either at a set rate (called ramp-rate programming), or in a set time (called time-to-target programming). You must specify the ramp rate or the ramp time, and the target setpoint, when creating or modifying a program. | | | |
|-------|--|--|--|--|
| Dwell | The setpoint remains constant for a specified period. | | | |
| Step | The setpoint steps instantaneously from its current value to a new value. | | | |
| Call | The main program calls another program as a subroutine. The called program then drives the setpoint until it returns control to the main program. This facility is available on those controllers with 4, or 20, stored programs. | | | |
| End | The program either ends in this segment, or repeats. You specify which is the case when you create, or modify, the program (see the final topic in this chapter). When the program ends, the programmer is put into either, a continuous Dwell state with all outputs staying unchanged, or the Reset state, or to a settable power level. | | | |

Table 5-1 Segment Types


PROGRAMMER STATES

The programs have five states: Reset, Run, Hold, Holdback and End.

| State | Description | Indication | |
|----------|---|---|--|
| Reset | In Reset, the programmer is inactive and the controller behaves as a standard controller, with the setpoint determined by the value set in the lower readout. | Both the RUN and HOLD lights are OFF | |
| Run | In Run, the programmer varies the setpoint according to the active program. | RUN light on | |
| Hold | In Hold, the program is frozen at its current point. In this state you can make temporary changes to any program parameter (for example, a target setpoint, a dwell time, or the time remaining in the current segment). Such changes will only remain effective until the program is reset and run again, when they will be overwritten by the stored program values. Note: When a program is running, you cannot alter a cflled program until it becomes active within that program. | HOLD light on | |
| Holdback | Holdback indicates that the measured value is lagging the setpoint by more than a preset amount and that the program is in Hold, waiting for the process to catch up. See <i>Holdback</i> in the section on Automatic behaviour later this chapter. | HOLD light flashes | |
| | A master controller can re-transmit a setpoint value to a number of slave units using PDSIO setpoint retransmission. Any of the slave units can generate a holdback signal which will also flash the HOLD light. Holdback will also occur if the PDSIO output is open circuit. This can be disabled in configuration by selecting the Pd5 output as 5PnH - 'setpoint retransmission without holdback' | HOLD light flashes | |
| End | The program is complete. | RUN light flashes | |

Table 5-2 Program States

RUNNING A PROGRAM FROM THE RUN LIST

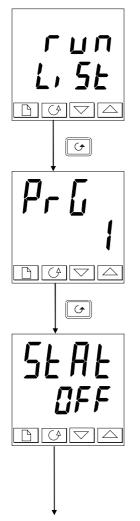

The Run List

From the Home display, press until you reach the 'run' list header.

Press 😉

Program number

This display only appears on programmers that can store more than one program. Use \triangle or ∇ to select the required program number, from 1 to 4, or 1 to 20, depending on the particular controller.

Alternatively, the program number can be selected remotely, using digital inputs on the rear terminals. See the section on *Configuring Digital Inputs to Select a Program Number* for information on how this is done.

Press [•

Status selection

Use or to select:

run: Run program.hold: Hold program.OFF: Program reset.

After two seconds, the lower readout blinks and the chosen state is now active.

To return to the Home display press and b together.

Other parameters

To access the other parameters in the 'run' list, continue to press . These parameters are shown in the 'Program run list' in Chapter 2, Parameter Tables. They show the current status of the active program.

Temporary changes

Temporary changes can be made to the parameters in this 'run' list, (for example a setpoint, ramp rate, or an unelapsed time), by first placing the programmer into 'hold'. Such changes remain active only for the duration of the segment; the segment parameters will revert to their original (stored) values whenever the segment is re-executed.

RUNNING A PROGRAM USING THE RUN/HOLD BUTTON

If you are using a 4, or 20, program version of the controller, you must first select the number of the program that you want to run. Do this in the 'run' list – see the previous topic, Running a program from the Run list.

Then:

RUN / HOLD button

Press once to run a program (RUN light on)
Press again to hold a program (HOLD light on)
Press again to cancel hold and continue running
(HOLD light off, RUN light on)
Press and hold in for two seconds to reset a program (RUN and HOLD lights off).

Note: The RUN/HOLD button can be disabled, either when ordering the controller, or subsequently in configuration. This will force you to operate the programmer from the 'run' list <u>all</u> the time. The main advantage of this method is that it will reduce the chance of accidentally changing the state of a program.

AUTOMATIC BEHAVIOUR

The preceding topics explain how to operate the programmer manually. The following topics cover aspects of its automatic behaviour: *Servo*, *Holdback* and *Power Failure*.

Servo

When a program is RUN, the setpoint can start either from the initial controller setpoint, or from the process value. Whichever it is, the starting point is called the 'servo' point and you set it up in configuration. When the program starts, the transition of the setpoint to its starting point is called 'servoing'.

The normal method is to servo to the process value, because this will produce a smooth and bumpless start to the process. However, if you want to guarantee the time period of the first segment, you should set the controller to servo to its setpoint.

Holdback

As the setpoint ramps up, or down (or dwells), the measured value may lag behind, or deviate from, the setpoint by an undesirable amount. 'Holdback' is available to freeze the program at its current state, should this occur. The action of Holdback is the same as a deviation alarm. It can be enabled, or disabled. Holdback has **two** parameters - a *value* and a *type*. If the error from the setpoint exceeds the set 'holdback' value, then the Holdback feature, if enabled, will automatically freeze the program at its current point and flash the HOLD light. When the error comes within the holdback value, the program will resume normal running.

There are *four* different Holdback types. The choice of type is made by setting a parameter when creating a program, and may be one of the following:—

'DFF' - Disables Holdback - therefore no action is taken.

- 'La' **Deviation Low Holdback** holds the program back when the process variable deviates *below* the setpoint by more than the holdback value.
- 'Hı' **Deviation High Holdback** holds the program back when the process variable deviates *above* the setpoint by more than the holdback value.
- 'Hand' **Deviation Band Holdback** is a combination of the two. It holds the program back when the process variable deviates *either above*, *or below*, the setpoint by more than the holdback value.

There is a single Holdback Value which applies to the whole program. However, the Holdback type and whether or not it is enabled, can be applied to the program as a whole, or individually in each segment.

Power failure

If power is lost and then restored, while a program is running, the behaviour of the programmer is determined by the setting of the parameter 'Pwr F' Power fail strategy in Programmer configuration. This can have one of three settings:—cont (Continue), rmPb (Ramp from PV), or r5Et (Reset).

If 'conb' is selected, then when power is restored the program continues from where it was interrupted when power was lost. All parameters, such as the setpoint and time remaining in the active segment, will be restored to their power-down values. For applications that need to bring the measured process value to the setpoint as soon as possible, this is the best strategy.

If 'rmP.b' is selected, then when power is restored the setpoint starts at ('servos to') the current measured value, and then ramps to the target setpoint of the active segment at the last ramp rate used by the program. This strategy provides a smoother recovery. The two diagrams below illustrate the respective responses, Fig 5-2 if power fails during a dwell segment and Fig 5-3 if it fails during a ramp segment.

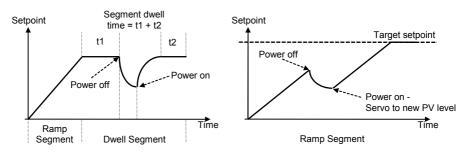


Figure 5-2 Continue after a power fail

Figure 5-3 Ramp back after a power fail

If '¬5EL' *is selected,* then when power is restored the program terminates.


CONFIGURING THE PROGRAMMER

When first installing a programmer you should check that the configuration conforms to your requirement.

Configuration defines:

- the number of stored programs (*multi-programmer only*)
- the holdback strategy
- the power fail strategy
- the servo type
- if event outputs are available (not 8-segment programmer)
- if program synchronisation is available. (not 8-segment programmer)
- selection of program number using digital inputs (*multi-programmer only*)

To check, or change, the configuration, select Configuration level. See Chapter 6.

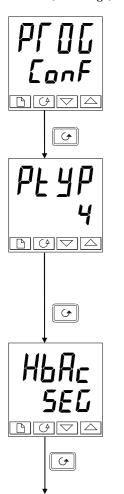

Programmer list header

After selecting Configuration mode, press until the PFDL LanF header is displayed.

Press 😉

Number of programs

Use **A** or **v** to select:

nonE: Disable built-in 8-segment programmer
l: Enable built-in 8-segment programmer

For 16-segment programmers:

• nonE: no programs

One stored program Four stored programs

• 20: Twenty stored programs

Press 😉


Holdback Strategy

Use **A** or **T** to select:

• **5EL**: Holdback type to be set in each segment

• Prou: Holdback type to be set for the whole program

Press 😉



Power fail strategy

Use or to select

continue from last setpoint
 rmPb: Ramp from PV to setpoint

rmPb: Ramp from PV to setpoint at last ramp rate
r5Eb: Reset the program.

Press 😉

Servo type

Use or to select:

• EoPU: Servo to PV

• Ło.5P: Servo to SP

Press 😉

Event Outputs (not in 8-segment programmer)

Use or to select:

no: Event outputs disabled YE5: Event outputs enabled

Press G

Synchronisation (not in 8-segment programmer)

Use ▲ or ▼ to select:

no: Synchronisation disabledYE5: Synchronisation enabled


Press to return the list header.

CONFIGURING DIGITAL INPUTS TO SELECT PROGRAM NUMBER

The program number can be selected by external BCD inputs from, for example, a thumbwheel switch.


The appropriate number of digital inputs must be installed in the controller and be configured for this function - see Chapter 6, *Configuration*.

To invoke this mode of operation, the parameter 'bcd' in ', n5t-LonF' must be set to 'Proff'.

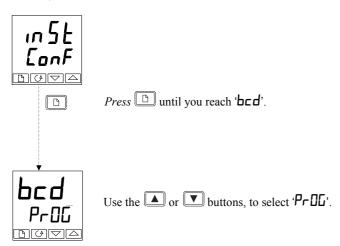

CREATING A NEW PROGRAM, OR MODIFYING AN EXISTING ONE

The only difference between creating a new program, and modifying an existing one, is that a new program starts with all its segments set to End in the EYPE parameter. The procedure for both consists of setting up the parameters in the Proble list of the Operator Navigation Diagram shown in Chapter 2. As explained earlier under 'Programmer states', temporary changes can be made to these parameters while in the HOLD state but permanent changes (to the stored values) can only be made when the programmer is in the Reset state. So, before modifying a stored program first make sure that it is in Reset and then follow the procedure below.



Program edit list

From the Home display press until you reach the ProL L, 5L header.

Press 😉

Program number

This display appears only on the multi-program controllers. Use or to select the number of the program which you wish to modify (from 1 to 4, or 1 to 20).

Press 😉

Holdback type

[Only appears when Holdback has been selected for the $\underline{\text{whole}}$ program.]

Use ▲ or ▼ to select:

• DFF: Holdback disabled

Lo: Deviation Low Holdback
Hi: Deviation High Holdback
bAnd: Deviation Band Holdback


Press 😉

Holdback value

<u>Note!</u> The value set in this parameter is always for the <u>whole</u> program.

Use or to set the value.

Press 😉



Ramp units

Use ▲ or ▼ to select:

- 5Ec
- шп
- Hour

Press 😉

Dwell units

Use ▲ or ▼ to select:

- 5Ec
- шіп
- Hour

Press 😉

Number of program cycles

Use or to set the number of program cycles required from to 999, or 'cont' for continuous cycling.

Press (4)

Segment number

Use \triangle or \blacktriangledown to select the number, from 1 to 16.

(1 to 8 in 8-segment programmers)

The parameters that follow '5ELn' set up the characteristics of the individually-selected segment number. By defining the characteristics of each segment of the program, you define the whole program.

Press (4)



Segment type

Select the segment type using **\(\rightarrow\)** or **\(\rightarrow\)**:

rmPr: Ramp to a new setpoint at a set rate
rmPt: Ramp to a new setpoint in a set time

duEll: Dwell for a set time
5EEP: Step to a new setpoint

• **CALL:** Call another program as a subroutine (only available in multi-program controllers)

• End: Make this segment the end of the program.

Press 😉

The parameters that follow 'LYPE' depend on the type of segment selected as shown in the table below. The function of each parameters follows the table.

| Parameter | Segment type selected | | | | | |
|-----------|-----------------------|-------|-------|------|------|-----|
| | rmP.r | rmP.Ł | dwEll | SEEP | cALL | End |
| НЬ | ✓ | ✓ | ✓ | ✓ | | |
| FDF | ✓ | ✓ | | ✓ | | |
| rALE | ✓ | | | | | |
| dur | | ✓ | ✓ | | | |
| PrGn | | | | | ✓ | |
| בלבת | | | | | ✓ | |
| onFu | ✓ | ✓ | ✓ | ✓ | | ✓ |
| 5Ync | ✓ | ✓ | ✓ | ✓ | | |
| End.E | | | | | | ✓ |

Hb bAnd by VA LGE 100

Table 5-3 Parameters that follow segment type

Holdback type

Only appears when Holdback per segment has been selected.

Use ▲ or ▼ to select:

• UFF: Holdback disabled


Lo: Deviation Low Holdback
Hi: Deviation High Holdback
bAnd: Deviation Band Holdback

Press 😉

Target setpoint

Target setpoint for 'rmPr', 'rmPr' or '5\text{EP'} segments. Set the target setpoint using ▲ or ▼.

Press 😉

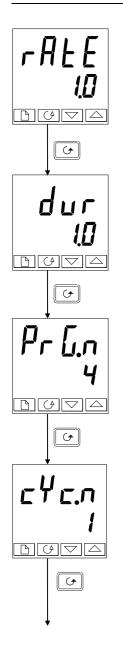

Ramp rate

Ramp rate for 'rmPr' segments

Using \triangle or \bigvee , set a value for the ramp rate, ranging from 0.0 to 999.9. The units are the ramp units ($\lceil mP \rfloor \rfloor$) set earlier in this sequence.

Press 😉

Duration time

Time for a 'dwEII' segment, or time to target for a 'rmP.L' segment.

Set the time using or . You have set the units earlier in this sequence. ['dwL'!' defines the units for 'dwE!!' segments: 'rmPL' defines the units for 'rmPL' segments.]

Press []

Called program number

Only appears for 'EALL' segments. (multi-program controllers only)
Set a called program number from 1 to 4, or from 1 to 20, using


or


Press (4)

Number of cycles of the cALLed program

Only appears for 'EALL' segments. (multi-program controllers only) Sets the number of cycles of the CALLed program from 1 to 999, using or .

Press 😉

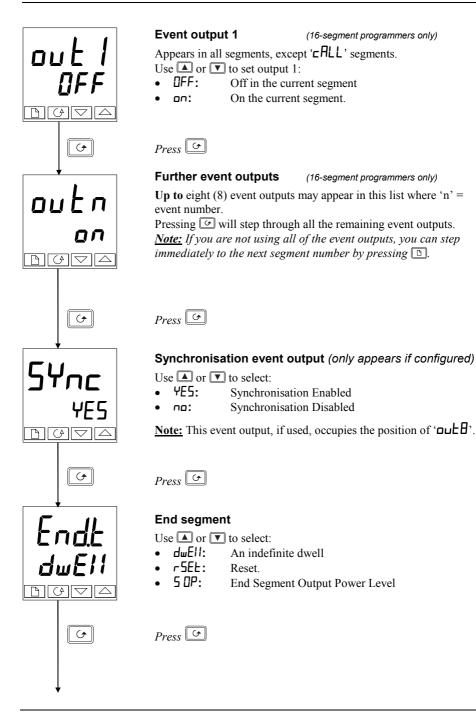



Power Value [End Segment]

Use \triangle or $\boxed{}$ to set the power value in the range $\pm 100.0\%$. This power level is clipped by the parameters ' $\square PH_{i}$ ' and ' $\square PL_{a}$ ' before being applied to the process.

Note: In programmer/controller software versions 3.56 onwards this parameter has been replaced by a parameter EndP which appears at the end of the Output List, see Chapter 2

Press to return to the Prou-Li 5E header.

Chapter 6 CONFIGURATION

This chapter consists of six topics:

- SELECTING CONFIGURATION LEVEL
- LEAVING CONFIGURATION LEVEL
- SELECTING A CONFIGURATION PARAMETER
- CHANGING THE PASSWORDS
- NAVIGATION DIAGRAM
- CONFIGURATION PARAMETER TABLES.

In configuration level you set up the fundamental characteristics of the controller. These are:

- The type of control (e.g. reverse or direct acting)
- The Input type and range
- The Setpoint configuration
- The Alarms configuration
- The Programmer configuration
- The Digital input configuration
- The Alarm Relay configuration
- The Communications configuration
- The Modules 1, 2 & 3 configuration
- Calibration
- The Passwords.

WARNING

Configuration is protected by a password and should only be carried out by a qualified person, authorised to do so. Incorrect configuration could result in damage to the process being controlled and/or personal injury. It is the responsibility of the person commissioning the process to ensure that the configuration is correct.

SELECTING CONFIGURATION LEVEL

There are two alternative methods of selecting Configuration level:

- If you have already powered up, then follow the access instructions given in Chapter 3, Access levels.
- Alternatively, press and together when powering up the controller. This will take you directly to the 'LonF' password display.



Password entry

When the 'Lonf' display appears, you must enter the Configuration password (which is a number) in order to gain access to Configuration level.

Enter the password using the or buttons. The configuration password is set to 'Z' when the controller is shipped from the factory.

Once the correct password has been entered, there is a two second delay, after which the lower readout will change to 'PR55' indicating that access is now unlocked.

Note: A special case exists if the password has been set to ''D'. In this situation, access is permanently unlocked and the lower readout will always show 'PR55'.

Press to enter configuration.

(If an incorrect password has been entered and the controller is still 'locked' then pressing at this point will take you to the 'Er, E' display with 'no' in the lower readout. Simply press to return to the 'Lonf' display.)

You will obtain the first display of configuration.

LEAVING CONFIGURATION LEVEL

To leave the Configuration level and return to Operator level Press until the 'Eı, E' display appears.

Alternatively, pressing and together will take you directly to the 'EI' E' display.



Use or to select 'YE5'. After a two-second delay, the display will blank and revert to the Home display in Operator level.

SELECTING A CONFIGURATION PARAMETER

The configuration parameters are arranged in lists as shown in the navigation diagram in Figure 6.1.

To step through the list headers, press the Page button.

To step through the parameters within a particular list press the Scroll button. When you reach the end of the list you will return to the list header.

You can return directly to the list header at any time by pressing the Page \(\bullet \) button.

Parameter names

Each box in the navigation diagram shows the display for a particular parameter. The upper readout shows the name of the parameter and the lower readout its value. For a definition of each parameter, see the Configuration Parameter Tables at the end of this chapter. To change the value of a selected parameter, use the

and

buttons.


The navigation diagram shows all the lists headers and parameters that can, potentially, be present in the controller. In practice, those actually present will vary according to the particular configuration choices you make.

CHANGING THE PASSWORDS


There are TWO passwords. These are stored in the Password configuration list and can be selected and changed in the same manner as any other configuration parameter. The password names are:

'HLLP' which protects access to Full level and Edit level which protects access to Configuration level.

NAVIGATION DIAGRAM (PART A)

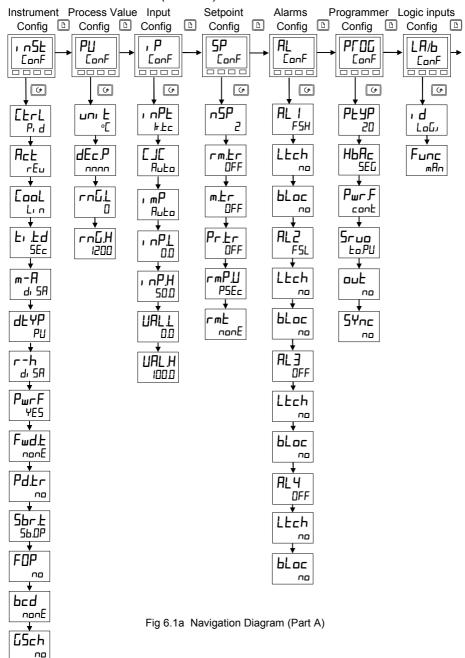

NAVIGATION DIAGRAM (PART B)

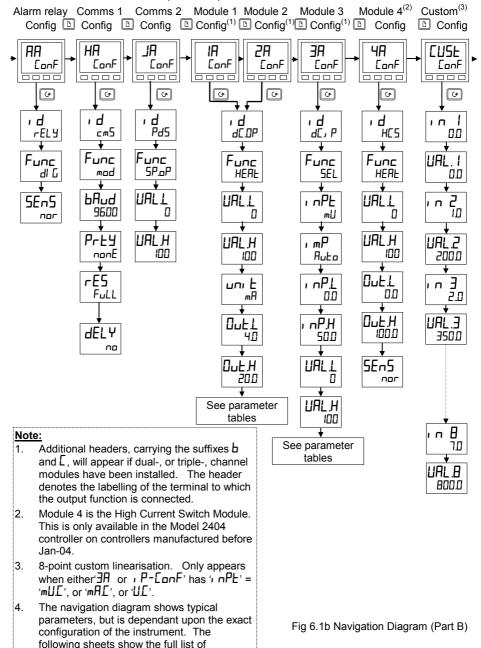

parameters.

NAVIGATION DIAGRAM (PART C)

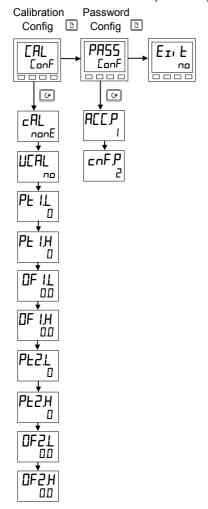


Fig 6.1c Navigation Diagram (Part C)

CONFIGURATION PARAMETER TABLES

| Name | Description | Values | Meaning |
|-------|--|------------------------------------|---|
| ı n5E | Instrument configuration | | |
| EErL | Control type | Prd On:OF UP UP b | PID control On/off control Boundless motorised valve control - no feedback required Bounded motorised valve control - feedback required |
| Act | Control action | rEu di r | Reverse acting Direct acting |
| Cool | Type of cooling | Li n ai L H20 FAn anOF | Linear Oil (50mS minimum on-time) Water (non-linear) Fan (0.5S minimum on-time) On/off cooling |
| F: Fq | Integral & derivative time units | SEc min | Seconds, OFF to 9999 Minutes, OFF to 999.9 |
| dEYP | Derivative type | PU Err | Operates on rate of change of PV Operates on rate of change of error |
| m-A | Front panel Auto/Man button | EnAb di SA | Enabled Disabled |
| r-h | Front panel Run/Hold button | EnAb di SA | Enabled Disabled |
| PwrF | Power feedback | OFF | On Off |
| Fwd.Ł | Feed forward type | nonE FEEd SPFF PUFF | None Normal feed forward Setpoint feed forward PV feed forward |
| Pd.Er | Manual/Auto transfer when using PD control | YES | Non-bumpless transfer Bumpless transfer - (Pre-loads Manual Reset value) |
| 5br.E | Sensor break output | Sb.DP HoLd | Go to pre-set value Freeze output |
| FOP | Forced manual output | no ErAc | Bumpless Auto/Manual transfer Returns to the Manual value that was set when last in Manual mode |
| | | 5EEP | Steps to forced output level. Value set in 'FDP' of 'pP-L, 5L' in Operator Level |
| bcd | BCD input function | prob Prob SP | Not used Select program number Select setpoint number |
| 05ch | Gain schedule enable | 9E5 | Disabled Enabled |

| Name | Description | Values | Meaning |
|------|-------------|--------|---------|
| | | | |

| PU | Process value config | | |
|--------|-----------------------|--------------|---|
| חטי F | Instrument units | <u>"</u> | Celsius |
| | | ٥Ē | Fahrenheit |
| | | □ ├ _ | Kelvin |
| | | nonE | Display units blanked |
| dEc.P | Decimal places in the | חחחח | None |
| | displayed value | תחחת | One |
| | | חתחח | Two |
| rn[j.L | Range low | | Low range limit. Also setpoint limit for |
| | | | alarms and programmers |
| rn[].h | Range high | | High range limit. Also setpoint limit for |
| | | | alarms and programmers |

Notes:

1. Pyrometer Emmisivity

Controllers which are specifically supplied for pyrometer inputs (not Exergen K80), have the curve downloaded in the Custom Input. The parameter, **Em.** 5, Pyrometer Emmissivity, appears in the Input List on page 2-15. This parameter is also now correctly adjusted.

2. Range

If a decimal point was configured, negative display and setpoint ranges were limited to -99.9 in previous software versions. The range has been increased to -199.9 by combining the negative sign with the figure one. This allows Setpoints, Process Variables, Alarm Setpoints and Programmers to be set to -199.9.

| Name | Description | Values | Meaning |
|-------------|-----------------------------|---------------|--|
| | | • | |
| , P | Input configuration | | |
| , nPE | Input type | J.Ec | J thermocouple |
| | | h.Ec | K thermocouple |
| | | L.E.c | L thermocouple |
| | | r.Łc | R thermocouple (Pt/Pt13%Rh) |
| | | b.Łc | B thermocouple (Pt30%Rh/Pt6%Rh) |
| | | n.Ec | N thermocouple |
| | | FFC | T thermocouple |
| | | 5.Ec_ | S thermocouple (Pt/Pt10%Rh) |
| | | PL 2 | PL 2 thermocouple |
| | | [.Łc | Custom downloaded t/c (default = type C) |
| | | rEd | 100Ω platinum resistance thermometer |
| | | mU, , | Linear millivolt |
| | | norr | Linear voltage |
| | | mA | Linear milliamps |
| | | 5r U 5r A | Square root volts |
| | * see EUSE List. | MUE MUE | Square root milliamps |
| | see Lude List. | | 8-point millivolt custom linearisation* |
| | | U.C | 8-point Voltage custom linearisation* |
| | | mA.C | 8-point milliamp custom linearisation* |
| | Cold Junction | Auto | Automatic internal compensation |
| | Compensation | 0°C | 0°C external reference |
| | | 450[| 45°C external reference |
| | | 50°C | 50°C external reference |
| | | OFF | No cold junction compensation |
| , mP | Sensor Break Impedance | OFF | Disabled (applies to any input) |
| | | | Caution: |
| | | | If sensor break is disabled the |
| | | | controller will not detect open circuit |
| | | Auto | faults Factory set (Default i.e. enabled) |
| | | Hi Luco | Impedance of input > $5K\Omega$ |
| | | H, H, | Impedance of input > $5K\Omega$ |
| l inear Inn | ut Scaling – The next 4 ner | | y appear if a linear or sq rt input is chosen. |
| | | arriotoro orn | |
| ı nP.L | Displayed Value ∧ | | Input value low |
| | Ч URL. Н ¹ | | |
| , nPH | | | Input value high |
| | / / | | |
| UAL.L | | | Displayed reading low |
| 1101 11 | UAL. L | Electrical | Displayed as a displaying |
| UALH | i nPL i r | PH Input | Displayed reading high |
| <u> </u> | 1 | | |

| Name | Description | Values | Meaning |
|-------|-------------------------------|----------|---|
| SP . | Setpoint configuration | | |
| nSP | Number of setpoints | 2, 4, 16 | Select number of setpoints available |
| rm£r | Remote Tracking | OFF . | Disable |
| | | FrAc | Local setpoint tracks remote setpoint |
| m.Łr | Manual Track | OFF . | Disable |
| | | FrAc | Local setpoint tracks PV when in manual |
| Pr.Łr | Programmer Track | OFF . | Disable |
| | | FrAc | Local setpoint tracks programmer SP |
| rmP.U | Setpoint rate limit units | PSEc | Per second |
| | | Pmin | Per minute |
| | | PHr | Per hour |
| rmE | Remote setpoint configuration | nonE | Disable |
| | | SP SP | Remote setpoint |
| | | Loc.E | Remote setpoint + local trim |
| | | rmŁ.Ł | Remote trim + local setpoint |

| AL | Alarm configuration | Values | | |
|--------------------|--|---------------------------|--|--|
| configu attache | The controller contains four 'soft' alarms, which are configured in this list. Once configured, they can be attached to a physical output as described in the alarm relay configuration list, 'AA LonF'. | | | |
| AL I | Alarm 1 Type | see Table A | | |
| | Latching | no/YES/EunE/mAn* | | |
| bLoc | Blocking | na/YES | | |
| AL2 | Alarm 2 Type | see Table A | | |
| LEch | Latching | no/YES/EunE/mAn* | | |
| bLoc | Blocking | na/YES | | |
| AL3 | Alarm 3 Type | see Table A | | |
| LEch | Latching | no/YES/EunE/mAn* | | |
| bLoc | Blocking | na/YES | | |
| AL4 | Alarm 4 Type | see Table A | | |
| LEch | Latching | no/YES/EunE/mAn* | | |
| bLoc | Blocking (not if 'AL4' = 'rAL') | na/YES | | |
| 5br.£ | Sensor break trip alarm latching type. Disable = process alarms inhibited when in sensor break Enable = process alarms shown when in sensor break | En Enable di 5 Disable | | |

| Table A | Table A - Alarm types | | |
|---------|------------------------|--|--|
| Value | Alarm type | | |
| OFF | No alarm | | |
| F5L | PV Full scale low | | |
| F5H | PV Full scale high | | |
| dΕυ | PV Deviation band | | |
| dНı | PV Deviation high | | |
| dLo | PV Deviation low | | |
| L[r | Load Current low | | |
| H[r | Load Current high | | |
| FL2 | Input 2 Full Scale low | | |
| FH2 | Input 2 Full Scale | | |
| | high | | |
| LOP | Working Output low | | |
| HOP | Working Output high | | |
| LSP | Working Setpoint low | | |
| HSP | Working Setpoint high | | |
| rAŁ | PV Rate of change | | |
| | AL4 only | | |
| CE.DP | CT open circuit | | |
| CE.5h | CT short circuit | | |

* Alarm Modes

'no' means that the alarm will be non-latching.

'YE5' means that the alarm will be latched, with automatic resetting. Automatic resetting means that if a reset is actioned before the alarm has cleared, then it will automatically reset when it clears.

Eunt' means that the alarm is used to trip an external event. If this option is selected the front panel alarm message will not appear.

'mHn' means that the alarm will be latched, and can only be reset after it has first cleared (called 'manual reset mode').

| The following parameters apply if the standard 8-segment programmer is to be configured. | | | |
|---|--|-----------------------|--|
| PC OG | Programmer configuration | Values | Meaning |
| PEAD | Programmer type | nonE 1 | Programmer disabled (<i>factory setting</i>) 8-segment programmer enabled |
| НЬЯс | Holdback | SEG ProG | Holdback is individually selectable in each segment. Holdback is applied across the whole Program. |
| Pwr.F | Power fail recovery | cont rmP.b rSEt | Continue from last setpoint (SP) Ramp from PV to SP at last ramp rate Reset the program |
| Sruo | Starting setpoint of a program (Servo point) | Ło.5P Ło.5P | From the Process Value (PV) From the setpoint |

| The following parameters apply if a 16-segment programmer is to be configured. | | | |
|--|-----------------------------|--------|--|
| PCOG | Programmer configuration | Values | Meaning |
| PEAD | Programmer type | nonE | Programmer disabled |
| | | 1 | Single program |
| | | 4 | Four programs |
| | | 20 | Twenty programs |
| ньяс | Holdback | SEG | Holdback is individually selectable in each segment. |
| | | ProG | Holdback is applied across the whole Program. |
| PwrF | Power fail recovery | cont | Continue from last setpoint (SP) |
| | | rmP.b | Ramp from PV to SP at last ramp rate |
| | | r5EŁ | Reset the program |
| Sruo | Starting setpoint of a | Ło.PU | From the Process Value (PV) |
| | program (Servo point) | Ło.SP | From the setpoint |
| out | Programmable event | по | Disabled |
| | outputs | YE5 | Enabled |
| SYNE | Synchronisation of programs | ПП | Disabled |
| | of several programmers | YE5 | Enabled |

| Name | Description | Values | Meaning |
|------|-------------|--------|---------|
| | | | |

| LA Lb | Digital input 1/2 configuration | | Action on contact closure |
|-------|---|----------------|--|
| ı d | Identity | LoGi | Logic input |
| Func | Function of input | nonE | No function |
| | The function is active | mΑn | Manual mode select |
| | when the input has a contact | rmE | Remote setpoint select |
| | closure to the common | SP.2 | Setpoint 2 select |
| | terminal - LC | Pr d.2 | PID set 2 select |
| | | E, H | Integral hold |
| | | FunE | One-shot self-tune enable |
| | | drA_ | Adaptive tune enable |
| | | Ac.AL | Acknowledge alarms |
| | | Acc5 | Select Full access level |
| | | rocp | Keylock |
| | | υP | Simulate pressing of the 🔼 button |
| | | qmu . | Simulate pressing of the button |
| | | ScrL | Simulate pressing of the 🕝 button |
| | | PAGE | Simulate pressing of the 🗅 button |
| | | רחט | Run program |
| | | HoLd | Hold program |
| | | r-H | Run program (<i>closed</i>) / Hold (<i>open</i>) |
| | | rES Sk. P | Reset program |
| | | א ואב | Skip to End of Current Segment, |
| | | НЬЯс | without changing the setpoint |
| | Those BCD innuts are used to | none bed. I | Program holdback enabled |
| | These BCD inputs are used to select either a program number | | Least significant BCD digit 2nd BCD digit |
| | or the setpoint number | | 3rd BCD digit |
| | according to the setting of the | | 4th BCD digit |
| | parameter 'bcd' in the 'i n5L' | bcd.5 | 5th BCD digit |
| | configuration list | bcd.5 | Most significant BCD digit |
| | comigaration list | rmP.E | Setpoint Rate Limit Enable |
| | | 54nc | Program waits at the end of the |
| | | | current segment |
| | | rrE5 | Program Run (closed) / Reset (open) |
| | | rE5r | Program Reset (closed) / Run (open) |
| | | 5E64 | Standby - ALL control outputs turned |
| | | | OFF (alarm Outputs are not affected) |
| | | PU.SL | PV Select: |
| | | | Closed = PV1 / Open = PV2 |
| | | AAU | Advance to End of Segment and to |
| | | | Target Setpoint |
| | | AmPS | Current – LB only |
| | | 1000 | Ourient - LD Only |

| Name | Description | Values | Meaning |
|-------------------|--|------------------------------|--|
| RA | Alarm relay configuration | | |
| ı d | Identity | rELY | Relay output |
| Func | Function | nonE | No function |
| | | 41 G | Digital output |
| SE _n S | Digital output sense | חםר | Normal (output energises when TRUE, e.g. program events) |
| | | י רט | Inverted (output de-energises when TRUE, e.g. alarms) |
| The follow | wing digital events appear after '5Er d on to the output (see Fig. 6-2) by s | 15'. Any one electing 'YE | e, or more, of the events can be 5' in the lower readout. |
| 1 | Alarm 1 active | YES / no | () = alarm type (e.g. F5L). |
| 2 | Alarm 2 active | YES / no | If an alarm has not been configured |
| 3 | Alarm 3 active | YES / no | in 'AL ConF' list, then display will |
| 4 | Alarm 4 active | YES / no | differ:- e.g. Alarm 1 = 'AL I'. |
| mAn | Controller in manual mode | YES / no | |
| 5br | Sensor break | YES / no | |
| 5PAn | PV out of range | YES / no | |
| Lbr | Loop break | YES / no | |
| LdF | Load failure alarm | YES / no | |
| FunE | Tuning in progress | YES / no | |
| dc F | Voltage output open circuit, or mA output open circuit | YES / no | |
| rmŁF | PDS module measurement connection or remote input open circuit | YES / no | |
| , P I.F | Input 1 failure | YES / no | |
| nwЯL | New Alarm has occurred | YES / no | |
| End | End of setpoint rate limit, or end of program | YES / no | |
| 5Ync | Program Synchronisation active | YES / no | |
| Ргбл | Programmer event output active, where 'n' = event number from 1 to 8. (Not available with 8-segment programmer.) | YES / no | |







Figure 6-2 Combining several digital events on to one output

| Name | Description | Values | Meaning |
|------|----------------------------------|--------|---|
| НЯ | Comms 1 module config | | |
| , д | Identity of the module installed | c m 5 | EIA-232, or 2-wire EIA-485, or 4-wire EIA-485 comms |
| | | PdS | PDS retransmission |
| | | Pd5, | PDS input |
| | | dnEŁ | DeviceNet |

| For ', d ' | For ', d' = 'cm5' (Digital communications) use this parameter table: | | | | | |
|-------------------|--|---------------------|--|--|--|--|
| Func | Function | m□d Modbus protocol | | | | |
| | | El .bi | Bisynch protocol | | | |
| PBnq | Baud Rate | 1200, 21 | 400, 4800, 9600, <i>19.</i> 20(19,200) | | | |
| | | 125(K), 2 | 250(K), 500(K) for DeviceNet | | | |
| GELA | Delay - quiet period, required by | | No delay | | | |
| | some comms adaptors | YE5 | Delay active - 10mS | | | |
| The follow | wing parameters only appear if the f | unction ch | osen is Modbus protocol. | | | |
| PrEY | Comms Parity | nonE | No parity | | | |
| | | EuEn | Even parity | | | |
| | | | Odd parity | | | |
| rE5 | Comms Resolution | FuLL | Full resolution | | | |
| | | l nE | Integer resolution | | | |

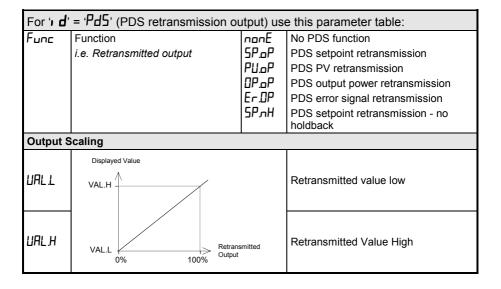

Name Description

| For ', d ' | = $^{\prime}Pd5_{\prime}$ ' (PDS setpoint input) u | ise this par | rameter table: |
|-------------------|--|--------------|---------------------------------|
| Func | Function | 5P, P | PDS setpoint input |
| UALT | Displayed Value VAL.H | | Setpoint Displayed Value - Low |
| UAL H | VAL.L 0% 100% | trical Input | Setpoint Displayed Value - High |

Values Meaning

Note: Having configured the module function as remote setpoint you must then specify the type of remote setpoint in the SP-conf list

| JA | Comms 2 module config | |
|--|-----------------------|--|
| Same as HA but is only available as PDS. | | |

| | Name | Description | Values | Meaning | |
|--|------|-------------|--------|---------|--|
|--|------|-------------|--------|---------|--|

| IR/Ь/С ⁽¹⁾ | Module 1 configuration | | |
|-----------------------|---|---|---|
| , d | Identity of module installed | nonE rELY dC.DP | Module not fitted Relay output DC output isolated and non- isolated |
| | (1) If a dual-, or triple-, channel module is installed then the list headers Ib and IE also appear | LoG LoG, 55r dc.rE dc.DP 5G.SU | Logic/PDS output Logic input Triac output DC retransmission (isolated) Isolated DC output Transducer power supply |

| For ', d ' = ' | For ' \mathbf{d} ' = ' Γ EL'', ' $L_0 L$ ', or ' $S_1 L$ ' use this parameter table: | | | | | |
|-----------------------|---|-------|---|--|--|--|
| Func | Function | nonE | Function disabled | | | |
| | (Only Channels IR and IE can be | dl G | Digital output function | | | |
| | Heating, or Cooling). | HERL | Heating output | | | |
| | If a single logic output module is | COOL | Cooling output | | | |
| | fitted (code LO) this function will need to be configured. | uР | Open motorised valve | | | |
| | neca to be comigarea. | qmu | Close motorised valve | | | |
| | (Only if 'ı d' = 'La[i') | 55r.1 | PDS mode 1 heating | | | |
| | (Only if 'ı d' = 'Laŭ') | 55r.2 | PDS mode 2 heating | | | |
| UAL.L | PID Demand Signal | | % PID demand signal giving minimum output – 'Ū⊔ŁŁ' | | | |
| LIAL H | VAL.H | | | | | |
| ипс л | | | % PID demand signal giving maximum output – 'Ū⊔Łℋ' | | | |
| Outl | VAL.L | and . | Minimum average power | | | |
| OnFH | Out.L Out.H | idi | Maximum average power | | | |
| SEn5 | Sense of output (Only if 'Func' = 'dl [i') | חםר | Normal (output energises when TRUE, e.g program events) | | | |
| | | 1 UU | Inverted (output de-energises when TRUE, e.g. alarms) | | | |


Notes:

- 1. When 'SEnS' appears, then further parameters are available. These are identical to those in the 'AR EunF' list on Page 6-14.
- 2. If a Tranducer Power Supply is fitted, the 5En5 parameter selects the output voltage. npr = 5V, np = 10V
- 3. A Transducer Power Supply does not provide any calibration facility and is simply a 5 or 10V power supply.
- 4. To invert a PID output, the Val. H can be set below the Val.L

| Name | Description | Values | Meaning |
|------------------------|-------------------------------------|-----------|--|
| • | | | |
| For ' ı d ' = ' | ˈdC.DP', 'dc.rE', or 'dc.DP' use t | his paran | neter table: |
| Func | Function | nonE | Function disabled |
| | | HEAF | Heating output |
| | | COOL | Cooling output |
| | | PU | Retransmission of PV |
| | | wSP | Retransmission of setpoint |
| | | Err | Retransmission of error signal |
| | | OP | Retransmission of OP power |
| UAL.L | %PID, or Retransmission Value VAL.H | | % PID, or Retrans'n Value, giving minimum output |
| UALН | | | % PID, or Retrans'n Value, giving maximum output |
| חטי F | | | uoLE = Volts, ⋒A = milliamps |
| Outl | VAL.L - Floatical | | Minimum electrical output |
| Out.H | Out.L Out.H Output | | Maximum electrical output |

For ', $\mathbf{d}' = L_0 \mathbf{L}_1$ ' (i.e logic input) use the $\mathbf{L}\mathbf{R}$ $\mathbf{L}_0 \mathbf{L}$ list on Page 6-13.

| 2A/P/C | Module 2 configuration | | | | |
|-------------|---|------|--------------------------|--|--|
| As per modu | As per module 1 configuration, but excluding the '55r. l', '55r.2' functions. | | | | |
| ı d | Identity of module installed. | | | | |
| | As per module 2 plus: | EPSU | Transmitter power supply | | |
| | | Pob | Potentiometer input | | |

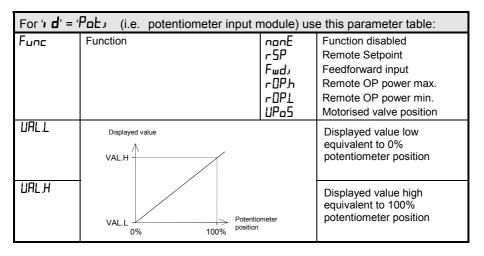

| 3A/P/C | Module 3 configuration | | |
|---|------------------------|---------|--|
| As per module 2 configuration, plus ' $\iota d' = 'dL \iota P'$ | | ,qE, P, | |


| For ', d ' - | For ', d ' = 'dE, P' use this parameter table. | | | | | |
|---------------------|--|----------------|---|--|--|--|
| | THIS INCLUDES THE SECOND PV FUNCTIONS | | | | | |
| Func | Function | nonE | Function disabled | | | |
| | | r5P | Remote Setpoint | | | |
| | | Fwd, | Feedforward input | | | |
| | | rOP.h | Remote OP power max. | | | |
| | | -OPL | Remote OP power min. | | | |
| | | Н | PV = The highest of P. I or P.2 | | | |
| | | Lo | PV = The lowest of , P. I, or , P.2 | | | |
| | | FEn | Derived function, where | | | |
| | | , =,, | $PV = (F.1 \times 1 P 1) + (F.2 \times 1 P2).$ | | | |
| | | | 'F. I' and 'F. I' are scalars which are found | | | |
| | | | in ', P-L, 5E' of Operator Level | | | |
| | | SEL | Select, P. I, or, P.2 via Comms, front | | | |
| | | | panel buttons, or a digital input | | | |
| | | ErAn | Transition of control between , P. I and | | | |
| | | | , P.⊇. The transition region is set by the | | | |
| | | | values of 'LoJ P' and 'Hi J P', which are | | | |
| | | | found in ', P-L, 5L' of Operator Level. | | | |
| | | | PV = , P. I below 'La J P' | | | |
| | | | PV = , P2 above 'H, J P' | | | |
| , nPE | Input type | Refer to | | | | |
| | | Hiln | High Impedance (range = 0 to 2 volt) | | | |
| | Cold Junction | OFF. | No cold junction compensation | | | |
| | Compensation | Anfo | Automatic internal compensation | | | |
| | | 0°E | 0°C external reference 45°C external reference | | | |
| | | 45°C 50°C | 50°C external reference | | | |
| , mP | Sensor Break Impedance | OFF | Disabled (applies to any input) | | | |
| , ,,,, | Cerioor Break impedance | ' ' | Caution: | | | |
| | | | If sensor break is disabled the controller | | | |
| | | | will not detect open circuit faults | | | |
| | | Anto | Factory set | | | |
| | | H ₁ | Impedance of input > 15KΩ | | | |
| | | Н. Н. | Impedance of input > 30KΩ | | | |
| | near Input Scaling – The next four parameters only appear if a linear input is chosen. | | | | | |
| ı nP.L | _ · · ^ | | Input value low | | | |
| | UALH | | | | | |
| , nP.H | | | Input value high | | | |
| UALL | | | Displayed value low | | | |
| J, IL.L | UALL | | Diopiayou value low | | | |
| UAL.H | I OPL I OP | ⇒ Electrical | Displayed value high | | | |
| | INFL INF | л "" | . , , | | | |

when TRUE, e.g. alarms)

| Name | Description | Values | Meaning |
|-------|---|------------------------------|--|
| ЧЯ | Module 4 configuration | | |
| | Note: This option is not available | on control | lers from 01 Jan-04 |
| ıЬ | Identity of module installed | HE5 | High Current Switch |
| Func | Function | nonE dl G HEAL COOL | Function disabled Digital output function Heating output Cooling output |
| UAL.L | PID Demand Signal URL H | | % PID demand signal giving minimum output – 'ป็นLL' |
| UALH | | | % PID demand signal giving maximum output – '□⊔Ł H' |
| OnFT | UALL - | | Minimum electrical output |
| OnFH | El El | ectrical utput | Maximum electrical output |
| SEn5 | Sense of output (Only if 'Func' = 'dl' [') | ו חם | Normal (output energises when TRUE, e.g. program events) Inverted (output de-energises |

When '5En5' appears, then further parameters are available.

These are identical to those in the 'AR EnnF' list on Page 6-14.

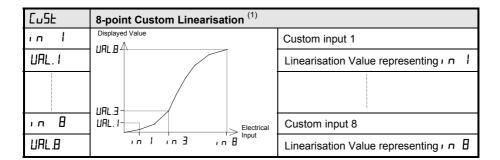

Note:

- 1. Custom Linearisation is only available when '∃R-ConF' or P- ConF list has 'InPE' set to 'mUL', or 'mRL', or 'UL'.
- 2. The values and inputs must be continuously increasing or decreasing

| Name | Descripti | on | | Values | Meaning | |
|------------------|--------------------------------------|------------------|------------|-------------|------------------|--|
| CAL | Calibration | | | | | |
| | ode you can | | | | | |
| 1. Calib cal. | rate the instru | ıment usin | g a mV so | ource - r_A | Z or ref source | |
| meas | et the calibrations and surement and | a ref sens | or - UEAL | or user ca | libration | |
| 3. Retu | rn to factory s | et calibrati | ion - FA[[| or factory | set calibration. | Goto User |
| rcAL | Calibration point | nonE | No calib | ration | | calibration table- See also chapter 7 |
| | | | | | | _(, |
| | | PU | | | ess Value input. | Go to input |
| | | PU.2 | Calibrate | e DC input, | or PV 2. | Calibation table |
| | | IR.H. | Calibrat | e DC output | high - Module 1 | |
| | | IRL ₀ | | | low - Module 1 | Go to |
| | | 2A.H. | Calibrat | e DC output | high - Module 2 | |
| | | 2A.L.o | Calibrate | e DC output | low - Module 2 | Calibration |
| | | 3R.H. | Calibrat | e DC output | high - Module 3 | table |
| | | 3A.L.o | Calibrate | e DC output | low - Module 3 | 7/ |

| | INPUT CALIBRATION | | | |
|-----------|--|---------|---|--|
| For 'EAL' | For 'CRL' = 'PU', or 'PU.2', the following parameters apply. | | | |
| PU | PV Calibration Value | 1 dLE | Idle | |
| | | mu.L | Select 0mV as the calibration point | |
| | | Mum | Select 50mV as the calibration point | |
| | | υ О | Select 0Volt as the calibration point | |
| | Select calibration value | И 10 | Select 10V as the calibration point | |
| | 2. Apply specified input | | Select 0°C CJC calibration point | |
| | 3. Press 	 to step to '☐☐' | rEd | Select 400Ω as the calibration point | |
| | | HI [] | High impedance: 0Volt cal'n point | |
| | | HI I.[] | High impedance: 1.0 Volt cal'n point | |
| | See Note below. | FREE | Restore factory calibration | |
| 60 | Start calibration | חם | Waiting to calibrate PV point | |
| | Select 'YE5' with ▲ or ▼ | YE5 | Start calibration | |
| | Wait for calibration to | Pn27 | Busy calibrating | |
| | complete. | donE | PV input calibration completed | |
| | | FRIL | Calibration failed | |

Note. When a DC input module is installed for the first time, or there is a requirement to change one, then the microprocessor in the controller needs to read the factory calibration data stored in the module. Select 'FALL' as the calibration value. Step to 'LD' and start calibration.

| DC Outp | ut Calibration | | |
|------------|---------------------------------|---------------|--|
| The follow | ing parameters apply to DC outp | out modules i | e for rcAL = IAH, to 3ALa |
| cALH | Output Calibration High | 0 | ☐ = Factory set calibration. Trim value until output = 9V, or 18mA |
| cALL | Output Calibration Low | 0 | ☐ = Factory set calibration. Trim value until output = 1V, or 2mA |

| User cali | User calibration | | | |
|-----------|------------------------------------|---|--|--|
| UERL | User calibration enable | Yes/no | | |
| PE IL | Low calibration point for Input 1 | The factory calibration point at which the low point offset was performed. | | |
| PE I.H | High calibration point for Input 1 | The factory calibration point at which the high point offset was performed. | | |
| OF I.L | Offset Low for Input 1 | Calculated offset, in display units. | | |
| OF I.H | Offset High for Input 1 | Calculated offset, in display units. | | |
| PF5T | Low calibration point for Input 2 | The factory calibration point at which the low point offset was performed. | | |
| PF5H | High calibration point for Input 2 | The factory calibration point at which the high point offset was performed. | | |
| 0F2.L | Offset Low for Input 2 | Calculated offset, in display units. | | |
| OF2H | Offset High for Input 2 | Calculated offset, in display units. | | |

| Name | Description | Values | Meaning |
|-------|------------------------------|--------|---------|
| | | | |
| PRSS | Password configuration | | |
| ACC.P | FuLL or Edit level password | | |
| cnF.P | Configuration level password | | |

Note:- When passwords are changed please make a note of the new numbers

| EziE | Exit configuration | no/YES | |
|------|--------------------|--------|--|
|------|--------------------|--------|--|

CONFIGURATION EXAMPLES

Transducer Power Supply

To configure the choice of output voltage:-

| | Do This | The Display You Should See | Additional Notes |
|----|---|-------------------------------|--|
| 1. | Press as many times as necessary to select the slot position in which the transducer power supply is fitted | IA Conf | The transducer power supply can be fitted in slot positions 1 and 2. The display will show IA or Ib accordingly |
| 2. | Press to read the identity of the module | , d 56.5U | This is read only where: 50.50 = Transducer Power Supply |
| 3. | Press (twice) to read 'SEn5' Press and to select 'i nu' or 'nor' | SEn5 | The Transducer Power supply uses existing software written for digital modules. A list of parameters follow which are not applicable to this module. |

DeviceNet

To configure Function, Baud Rate, Resolution and Node Address:-

| | Do This | The Display You Should See | Additional Notes |
|------------------------|--|-------------------------------|---|
| 1. | Press as many times as necessary to select 'HA' | HA ConF | This is the position in which the DeviceNet module is fitted |
| 2. | Press 👉 to read 'ı d' | r d cm5 | If the module is present I d = 'cm5' (digital communications) or 'ncnE' if the module is not present |
| 3. | Press to read | Func dnEt | If the DeviceNet module is fitted 'Func' = 'dnEL' and will be read only |
| 4. 5. | Press to read 'bHud' Press and to select the baud rate | 6Aud 500 | Baud rate can be set to 125(K), 250(K) or 500(K) |
| 7. | ʻrES' | rE5 Full | Full - the decimal point position is implied, eg 100.1 is transmitted as 1001. 'I nE' - rounded to the nearest integer value |

| Nod | Node Address is set up in Operator or Full Access level. Select either of these levels, then:- | | | |
|-----|--|-------|---|--|
| 8. | Press as many times as necessary to select 'cm5' | | | |
| 9. | Press to read 'Addr' | Addr | Valid addresses are from 0 - 63 | |
| 10. | Press A and V to select the address | | | |
| 11. | Press o to read | | Indicates the network status:- | |
| | 'nw.5Ł' | nw.5E | היבוח' = network connected and operational | |
| | | ГПП | 'rd' = network connected but not operational | |
| | | | '☐FFL' = network not connected | |

Chapter 7 USER CALIBRATION

This chapter has five topics:

- WHAT IS THE PURPOSE OF USER CALIBRATION?
- USER CALIBRATION ENABLE
- OFFSET CALIBRATION
- TWO POINT CALIBRATION
- CALIBRATION POINTS AND CALIBRATION OFFSETS

To understand how to select and change parameters in this chapter you will need to have read Chapter 2 - *Operation*, Chapter 3- *Access Levels* and Chapter 6 - *Configuration*.

WHAT IS THE PURPOSE OF USER CALIBRATION?

The basic calibration of the controller is highly stable and set for life. User calibration allows you to offset the 'permanent' factory calibration to either:


- 1. Calibrate the controller to the your reference standards.
- 2. Match the calibration of the controller to that of a particular transducer or sensor input.
- 3. Calibrate the controller to suit the characteristics of a particular installation.
- 4. Remove long term drift in the factory set calibration.

User calibration works by introducing a single point, or two-point, offset onto the factory set calibration.

USER CALIBRATION ENABLE

The User calibration facility must first be enabled in configuration level by setting the parameter 'UERL' in the input conf list to 'YE5'. This will make the User calibration parameters visible in Operator 'FuLL' level.

Select configuration level as shown in Chapter 6, Configuration.

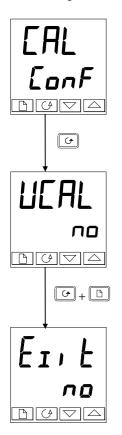

The Calibration Configuration List

Press until you reach the 'EAL-EonF' list.

Press until you reach 'UEAL'.

User Calibration Enable

Use or to select:

• YE5: Calibration enable

• no: Calibration disabled


Press and together to go to the E11 E display.

Exit configuration

Use or to select 'YE5' to return to Operator level.

OFFSET CALIBRATION


Offset calibration is used to apply a single fixed offset over the full display range of the controller.

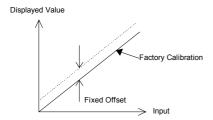

To calibrate, proceed as follows:

- 1. Connect the input of the controller to the source device to which you wish to calibrate.
- 2. Set the source to the desired calibration value.
- 3. The controller will display the current measurement of the value.
- 4. If the displayed value is correct, then the controller is correctly calibrated and no further action is necessary. If it is incorrect, then follow the steps shown below.

Select 'Full' access level, as described in Chapter 3.



Input list header

Press until you reach the input list header.

Press until you reach the 'EAL' display.

Calibration type

• FACE: Factory Calibration

• USEr: User Calibration


Use or to select 'FALL'.

Selecting 'FALL' reinstates the factory calibration and allows the application of a single fixed offset.

Press 😉

continued

on the next page



Set Offset 1

Use or to set the offset value of Process Value 1 (PV1).

The offset value is in display units.

Press 😉

Set Offset 2

Use or vote to set the offset value of Process Value 2 (PV2), if configured.

The offset value is in display units.

Press (5)

The table below shows the parameters which appear after 'UF5.2'. These are all read only values and are for information.

Press to step through them.


| m∐. I | IP1 measured value (at terminals) |
|--------|---|
| mU.2 | IP2 measured value (at terminals), if DC input in Module 3 position |
| [][.1 | IP1 Cold Junction Compensation |
| C.JC.2 | IP2 Cold Junction Compensation |
| Li.1 | IP1 Linearised Value |
| Li 2 | IP2 Linearised Value |
| PU.SL | Shows the currently selected input |

If you do not want to look at these parameters, then press and this returns you to the ', P-L, 5L', header.

To protect the calibration against unauthorised adjustment, return to Operator level and make sure that the calibration parameters are hidden. Parameters are hidden using the 'Edit' facility described in Chapter 3, *Access Levels*.


TWO-POINT CALIBRATION

The previous section described how to apply a offset, or trim, calibration, which applies a fixed offset over the full display range of the controller. A two-point calibration is used to calibrate the controller at two points and applies a straight line between them. Any readings above, or below, the two calibration points will be an extension of this straight line. For this reason it is best to calibrate with the two points as far apart as possible.

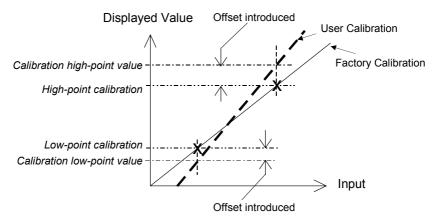

Proceed as follows:

- 1. Decide upon the low and high points at which you wish to calibrate.
- 2. Perform a two point calibration in the manner described below.



Input list header

Press until you reach the input list header, ', PL, 5E'.

Press until you reach the 'EAL' display.


Calibration type

FACE: Factory CalibrationUSEC: User Calibration

Use or to select 'USEr'.

Selecting 'USEr' enables two-point calibration. [If two-point calibration is unsatisfactory, select 'FACE' to return to the factory set calibration.]

Press 😉



Select Low-point Calibration

This is the Calibration Status display. This display shows that no input is selected for calibration.

• nonE: No selection

• PIL: Input 1 (PV1) calibration low-point selected
• PIH: Input 1 (PV1) calibration high-point selected

• P2L: Input 2 (PV2) calibration low-point selected

• P2H: Input 2 (PV2) calibration high-point selected

Use to select the parameter for the Low Calibration point of Input 1, '1 P IL'.

Press 😉

Adjust low-point calibration

This is the display for adjusting the Low Calibration point of Input 1. The lower readout is a live reading of the process value, which changes as the input changes.

Make sure that the calibration source is connected to the terminals of Input 1, switched on and feeding a signal to the controller. It should be set to the desired low-point calibration value. If the lower readout does not show this value, then use to adjust the reading to the required value.

Press to return to the ', P-L, 5L' header.


To perform the High-point Calibration, repeat the above procedure, selecting 'P IH' in the 'EAL.5' display for adjustment.

Press three times.

Calibration type

'USEr' was selected for the Low-point Calibration, and has remained selected

Press 😉



Select High-point Calibration

This is the Calibration Status display, again.

Use \(\bigcup \) to select the parameter for the High-point Calibration of Input 1, '\(\bigcup \) \(\bigcup \) !\(\bigcup \)'.

Press 😉

Adjust High-point Calibration

This is the display for adjusting the High Calibration point of Input 1. The lower readout is a live reading of the process value, which changes as the input changes.

Feed the desired high-point calibration signal to the controller, from the calibration source. If the lower readout does not show this value, then use \(\bigcirc \bigcirc \text{v} \) to adjust the reading to the required value.

Press to return to the ', P-L, 5E' header.


To protect the calibration against unauthorised adjustment return to Operator level and make sure that the calibration parameters are hidden. Parameters are hidden using the 'Ed, E' facility described in Chapter 3.

To perform a User Calibration on Input 2, proceed as with Input 1 above, except that when 'LAL.5-nonE' appears, press until 'LAL.5-, P2.L' is obtained, then proceed as with Input 1. Repeat the procedure for ', P2H'.

Appendix A UNDERSTANDING THE ORDERING CODE

The 2408 and 2404 controllers have a modular hardware construction, which accepts up to three plug-in Input/Output modules and two communications modules to satisfy a wide range of control requirements. Two digital inputs and an optional alarm relay form part of the fixed hardware build.

The ordering code is in two parts. The hardware coding and an optional configuration coding. The hardware coding specifies the basic build of the controller and the plug-in modules that are fitted.

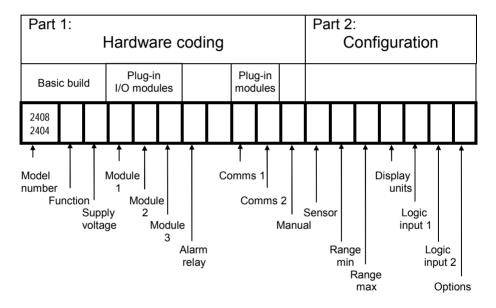

The controller may have been ordered with just the hardware build specified, or with configuration included. This is indicated by the ordering code on the side of the controller.

FΗ

FL

| | Part 1A: Hardware coding | | | | |
|------------------------------------|--------------------------|----|----------|--|--|
| | Plug-in modules | | | | |
| Model number Function Supply volta | | | Module 1 | | |
| 2408 | CC | VH | LH | | |



| Model Number | | | |
|--------------|--------------------|--|--|
| 2408 | 1/8 DIN Controller | | |
| 2404 | 1/4 DIN Controller | | |
| Profibu | Profibus units | | |
| 2408f | 1/8 DIN Controller | | |
| 2404f | 1/4 DIN Controller | | |
| | | | |
| | | | |

| | wodule i | |
|---------|---------------------|--|
| XX | Not fitted | |
| Relay | r: 2-pin | |
| R2 | Fitted unconfigured | |
| | DID to a Care | |

RH PID heating Valve raise output

Relay: change-over Fitted unconfigured

YΗ PID heating RP Valve raise (note 6)

Or Alarm 1: select from table A Logic: (Non-isolated)

Fitted unconfigured L2 LH Heating output M1 PDS heater break detect

(note 2) M2 PDS current monitoring (note3)

Logic: (isolated) LO

Single logic output * Triac T2 Fitted unconfigured Heating output TH

TU Valve raise output DC control (isolated)

D4 Fitted unconfigured H6 0-20mA PID heating

H7 4-20mA PID heating Н8 0-5V PID heating H9 1-5V PID heating

HΖ 0-10V PID heating Digital I/O (unconfigured)

ΤK Triple contact input Triple logic input TL Triple logic output

Dual relay

TP

RR Fitted unconfigured PID heat + PID cool RD RM Valve raise and lower

Dual triac

Fitted unconfigured TT TD PID heat + PID cool Valve raise and lower TM

Logic + relay

LR Fitted unconfigured LD PID heat + PID cool

QC Mode 2 + cool Logic + triac

LT Fitted unconfigured

GD PID heat + PID cool QD Mode 2 + cool

Transducer P5

G3 5Vdc G5 10Vdc

Function Standard PID control

| | Controller |
|----|------------------|
| CG | 1 x 8 seg prog |
| CP | 1 x 16 seg prog |
| P4 | 4 x 16 seg prog |
| CM | 20 x 16 seg prog |

Note 1

On/Off control

| INF | Controller only |
|-----|------------------|
| NG | 1 x 8 seg prog |
| NP | 1 x 16 seg prog |
| N4 | 4 x 16 seg prog |
| NM | 20 x 16 seg prod |

Motorised valve control VC Valve positioner (VP)

| | . a poo (. |
|----|------------------|
| VG | 1 x 8 seg prog |
| VP | 1 x 16 seg prog |
| V4 | 4 x 16 seg prog |
| VM | 20 x 16 seg prog |
| | Note 1 |

Supply voltage

| VH | 85 to 264Vac |
|----|----------------|
| VL | 20 to 29Vac/dc |
| | |

* fitted unconfigured

Low dev. alarm

Low alarm DB Deviation band DI DH High dev alarm

functions

High alarm

Table B : DC retransmission

D6 Fitted unconfigured First character

V-PV retrans S-Setpoint retrans

Output retrans 0-7-Error retrans Second character

-1 0-20mA -2 4-20mA

-3 0-5V -4 1-5V -5 0-10V

| | Part 1B: Hardware coding | | | | | | |
|-----------|--------------------------|---------|-------|--|-----------|---------|--------|
| ļ | Plug-in r | nodules | | | Plug-in r | nodules | |
| continued | Module | Module | Alarm | | Comms | Comms | Manual |
| | 2 | 3 | relay | | 1 | 2 | |
| | RC | RR | RA | | ΥM | TS | ENG |

Module 3

Not fitted

XX

| | Module 2 | | | |
|----------|----------------------------|--|--|--|
| XX | Not fitted | | | |
| Rela | y: 2-pin | | | |
| R2 | Fitted unconfigured | | | |
| RC | Cooling output | | | |
| RW | Valve lower output | | | |
| Relay | y: change-over | | | |
| R4 | Fitted unconfigured | | | |
| YC | Cooling Output | | | |
| RL | Valve lower (note 6) | | | |
| PO | Program event output 1 | | | |
| | (note 7) | | | |
| PE | Program END segment | | | |
| Or Al | arm 2: select from table A | | | |
| Dual | relay | | | |
| RR | Fitted unconfigured | | | |
| PP | Program events 1 & 2 | | | |
| | (note 7) | | | |
| Logic | c (non-isolated) | | | |
| L2 | Fitted unconfigured | | | |
| LC | PID cooling | | | |
| | c (isolated) | | | |
| LO | Single logic output * | | | |
| Triac | | | | |
| T2 | Fitted unconfigured | | | |
| TC | PID cooling | | | |
| TW | Valve lower output | | | |
| | ontrol isolated | | | |
| D4 | Fitted unconfigured | | | |
| 06 | 0-20mA PID cooling | | | |
| C7 | 4-20mA PID cooling | | | |
| C8 | 0-5V PID cooling | | | |
| 09 | 1-5V PID cooling | | | |
| CZ | 0-10V PID cooling | | | |
| | al I/O (unconfigured) | | | |
| TK | Triple contact input | | | |
| TL TP | Triple logic input | | | |
| | Triple logic output | | | |
| MS | 24Vdc transmitter | | | |
| | etran (isolated) | | | |
| | from table B | | | |
| | ntiometer input | | | |
| VU | Fitted unconfigured | | | |
| VS | Valve position feedback | | | |
| VR | Setpoint input | | | |
| | sducer PSU | | | |
| G3 | 5Vdc | | | |
| 0.5 | 401/4- | | | |

| XX | Not fitted | | |
|------------------------|---------------------------|--|--|
| Relay | y: 2-pin | | |
| R2 Fitted unconfigured | | | |
| Relay | y: change-over | | |
| R4 | Fitted unconfigured | | |
| PO | Program event 4 (note | | |
| | 7) | | |
| PE | Program END output | | |
| Or Al | arm 3 select from table A | | |
| | c (non-isolated) | | |
| L2 | Fitted unconfigured | | |
| Logic | c (isolated) | | |
| LO | Single logic output * | | |
| Triac | | | |
| T2 | Fitted unconfigured | | |
| Dual | relay | | |
| RR | Fitted unconfigured | | |
| PP | Program event 4 & 5 | | |
| | (note 7) | | |
| Digita | al I/O (unconfigured) | | |
| TK | Triple contact input | | |
| TL | Triple logic input | | |
| TP | Triple logic output | | |
| | er supply | | |
| MS | 24V transmitter | | |
| | emote input | | |
| D5 | Fitted unconfigured | | |
| W2 | 4 to 20mA setpoint | | |
| W5 | 0 to 10V setpoint | | |
| WP | Second PV input | | |
| | etran (isolated) | | |
| | ct from table B | | |
| | ntiometer input | | |
| VU | Fitted unconfigured | | |
| VS VP feedback | | | |
| VR | Setpoint input | | |
| | sducer PSU | | |
| G3 | 5Vdc | | |
| G5 | 10Vdc | | |
| | | | |

| Collillis I | | | |
|-----------------|---------------------|--|--|
| XX | None | | |
| 2-wir | e EIA-485 | | |
| Y2 | Fitted unconfigured | | |
| YM | Modbus protocol | | |
| YE | El Bisynch protocol | | |
| | (note 1) | | |
| RS-2 | 32 | | |
| A2 | Fitted unconfigured | | |
| AM | Modbus protocol | | |
| AE | El Bisynch protocol | | |
| | (note 1) | | |
| 4-wir | e RS-485 | | |
| F2 | Fitted unconfigured | | |
| FM | Modbus protocol | | |
| FE | El Bisynch protocol | | |
| | (note 1) | | |
| PDS | PDS output | | |
| M7 | Fitted unconfigured | | |
| PT | PV retransmission | | |
| TS | Setpoint retrans | | |
| OT | Output retrans | | |
| Profibus module | | | |
| PB | High speed RS485 | | |
| DeviceNet | | | |
| DN | DeviceNet | | |
| • | | | |

| Comms 2 | | | | | |
|---------|---------------------|--|--|--|--|
| XX | Not fitted | | | | |
| PDS | PDS input | | | | |
| M6 | Fitted unconfigured | | | | |
| RS | Setpoint input | | | | |
| PDS | PDS output | | | | |
| M7 | Fitted unconfigured | | | | |
| PT | PV retransmission | | | | |
| TS | Setpoint retrans | | | | |
| OT | Output retrans | | | | |

| Alarm relay | | | |
|-----------------------------|---------------------|--|--|
| XX | Not fitted | | |
| Alarn | n 4 relay | | |
| RF | Fitted unconfigured | | |
| Table A alarm options plus: | | | |
| RA Rate of change | | | |
| PDS alarms | | | |

| | LI | i leater break detect |
|-----------------------|----|----------------------------|
| | HF | Current monitor heater brk |
| * fitted unconfigured | SF | Current monitor SSR fail |
| itted uncomigured | PO | Program event 7 (note 7) |
| | PF | Program FND output |

| Manual | |
|--------|-----------|
| XXX | No manual |
| ENG | English |
| FRA | French |
| GER | German |
| NED | Dutch |
| SPA | Spanish |
| SWE | Swedish |
| IT A | Italian |

10Vdc

| Hardware | Part 2: Configuration | | | | | |
|----------|-----------------------|--------------|----------------|------------------|---------------------|--|
| coding | Sensor input | Range min | Range max | Display Units | Continued next page | |
| | К | See i | note 4 1000 | С | • | |

| | D | | | | |
|-----|------------------------|--------------|--------------|--|--|
| | Sensor input | | min &max | | |
| | andard sensor inputs | °C | °F | | |
| J | J thermocouple | -210 to 1200 | -340 to 2192 | | |
| K | K thermocouple | -200 to 1372 | -325 to 2500 | | |
| Т | T thermocouple | -200 to 400 | -325 to 750 | | |
| L | L thermocouple | -200 to 900 | -325 to 650 | | |
| Ν | N thermocouple | -250 to 1300 | -418 to 2370 | | |
| R | Type R - Pt13%Ph/Pt | -50 to 1768 | -58 to 3200 | | |
| S | Type S - Pt10%Rh/Pt | -50 to 1768 | -58 to 3200 | | |
| В | Type B - | 0 to 1820 | 32 to 3308 | | |
| | Pt30%Rh/Pt6%Rh | | | | |
| Р | Platinel II | 0 to 1369 | 32 to 2496 | | |
| Ζ | RTD/PT100 | -200 to 850 | -325 to 1562 | | |
| Pre | ocess inputs | | | | |
| F | +/- 100mV | 0 to 9999 | | | |
| Υ | 0-20 mA Linear | 0 to 9999 | | | |
| Α | 4-20 mA Linear | 0 to 9999 | | | |
| W | 0-5V DC Linear | 0 to 9999 | | | |
| G | 1-5V DC Linear | 0 to 9999 | | | |
| V | 0-10V DC Linear | 0 to 9999 | | | |
| Fa | ctory downloaded input | | | | |
| С | *Type C | 0 to 2319 | 32 to 4200 | | |
| | W5%Re/W26%Re | | | | |
| | (Hoskins)* | | | | |
| D | Type D - | 0 to 2399 | 32 to 4350 | | |
| | W3%Re/W25%Re | | | | |
| Е | E thermocouple | -270 to 1000 | -450 to 1830 | | |
| 1 | Ni/Ni18%Mo | 0 to 1399 | 32 to 2550 | | |
| 2 | Pt20%Rh/Pt40%Rh | 0 to 1870 | 32 to 3398 | | |
| 3 | W/W26%Re | 0 to 2000 | 32 to 3632 | | |
| | (Englehard) | | | | |
| 4 | W/W26%Re | 0 to 2010 | 32 to 3650 | | |
| | (Hoskins) | | | | |
| 5 | W5%Re/W26%Re | 10 to 2300 | 50 to 4172 | | |
| | (Englehard) | | | | |
| 6 | W5%Re/W26%Re | 0 to 2000 | 32 to 3632 | | |
| | (Bucose) | | - | | |
| 7 | Pt10%Rh/Pt40%Rh | 200 to 1800 | 392 to 3272 | | |
| 8 | Exergen K80 I.R. | -45 to 650 | -50 to 1200 | | |
| | pyrometer | .0 .0 000 | 20 10 .200 | | |
| | 1.7 | | | | |

| | Display Units | | | | |
|---|---------------|--|--|--|--|
| С | Celcius | | | | |
| F | Fahrenheit | | | | |
| Κ | Kelvin | | | | |
| Х | Linear input | | | | |

| | | Part 2: Configuration | | | | | |
|-----------|---------|-----------------------|---------|----------|---------|---------|---------|
| continued | Digital | Digital | Control | Power | Cooling | Buttons | Program |
| | input 1 | input 2 | | feedback | | | |
| | AM | S2 | XX | XX | XX | MD | XX |

| Digital inputs 1 & 2 | | | | |
|----------------------|------------------------|----|---------------------------|--|
| XX | Disabled | AT | Adaptive tune enable | |
| AM | Manual select | FA | Select full access level | |
| SR | Remote setpoint | RB | Simulates UP button | |
| 00 | select | | Circulates DOMAN butter | |
| S2 | Second setpoint select | LB | Simulates DOWN button | |
| EH | Integral hold | SB | Simulates SCROLL button | |
| AC | Alarm acknowledge | PR | Simulates PAGE button | |
| RP | Setpoint rate limit | B1 | Least sig. BCD dig. | |
| | enable | | | |
| RN | Run program | B2 | 2nd BCD digit | |
| НО | Hold program | В3 | 3rd BCD digit | |
| RE | Reset program | B4 | 4th BCD digit | |
| RH | Run/hold program | B5 | 5th BCD digit | |
| KL | Keylock | B6 | Most sig. BCD digit | |
| NT | Run/Reset program | SY | Standby - ALL ops OFF | |
| TN | Reset/Run program | SG | Skip segment (without | |
| | | | changing SP) | |
| HB | Prog. holdback | SC | Program synch. | |
| | enable | | | |
| P2 | PID2 select | PV | Select PV2 | |
| ST | One-shot tune enable | AG | Advance to end of | |
| | | | segment (& step to target | |
| | | | setpoint) | |
| | | M5 | CTX (mode 5) | |
| | | | (input 2 only) | |

| Options | | | | | |
|-----------------------|---------------------------|--|--|--|--|
| Contro | Control action | | | | |
| XX | Reverse acting (standard) | | | | |
| DP | Direct acting PID control | | | | |
| Power | Power feedback | | | | |
| XX | Enabled on logic, relay & | | | | |
| | triac heating | | | | |
| PD | Feedback disabled | | | | |
| Coolin | g options | | | | |
| XX | Linear cooling | | | | |
| CF | Fan cooling | | | | |
| CW | Water cooling | | | | |
| CL | Oil cooling | | | | |
| CO | On/off cooling | | | | |
| Front p | panel buttons | | | | |
| XX | Enabled | | | | |
| MD | Auto/man button disabled | | | | |
| MR | Auto/man & run/hold | | | | |
| | disabled | | | | |
| RD | Run/hold button disabled | | | | |
| Programmer time units | | | | | |
| XX | Dwell & ramp in minutes | | | | |
| HD | Dwell time in hours | | | | |
| HR | Ramp rate in units/hour | | | | |
| | | | | | |

The example given in the coding is for 2408 PID controller, 85 to 264 Vac, logic heating, relay cooling, low alarm relay, high alarm relay, RS485 Modbus comms, PDSIO setpoint retransmission, type K thermocouple, 0 to 1000°C, Auto/manual select, second setpoint select, manual button disabled.

Notes:

- 1. Not available with profibus controllers
- 2. PDS heater break detect will transmit the power demand to a TE10S solid state relay and read back a heater break alarm
- 3. PDS current monitoring will transmit the power demand signal to a TE10S solid state relay and read back load current and open and short circuit alarms
- 4. Setpoint limits: include the decimal position required in the displayed value. Up to one for temperature inputs, up to two for process inputs
- 5. An external 1% current sense resistor is supplied as standard. If greater accuracy is required, a $0.1\% 2.49\Omega$ can be ordered as part number SUB2K/249R.1
- 6. Only available with Profibus controller
- 7. Not available with 8 segment programmer
- PDS is a proprietary technique for bi-directional transmission of analogue and digital data between instruments.
 - Mode 1: provides logic heating to a TE10S (fitted with option PDS1) solid state relay with feedback of a general load fault alarm.
 - Mode 2: provides logic heating to a TE10S (fitted with option PDS2) solid state relay with feedback of load current and two alarms: solid state relay failure and heater circuit failure.
- Range min and Range max: Thermocouple and RTD sensor inputs will always display
 over the full operating range shown in Sensor input table. For these inputs, the values
 entered here are the low and high setpoint limits. For process inputs, the values are the
 display scaling. corresponding to the minimum and maximum input values.

SAFETY and EMC INFORMATION

This controller is manufactured in the UK by Eurotherm Ltd.

Please read this section carefully before installing the controller

This controller is intended for industrial temperature and process control applications when it will meet the requirements of the European Directives on Safety and EMC. Use in other applications, or failure to observe the installation instructions of this handbook may impair the safety or EMC protection provided by the controller. It is the responsibility of the installer to ensure the safety and EMC of any particular installation.

GENERAL

The information contained in this manual is subject to change without notice. While every effort has been made to ensure the accuracy of the information, your supplier shall not be held liable for errors contained herein.

Safety

This controller complies with the European Low Voltage Directive 73/23/EEC, by the application of the safety standard EN 61010.

Electromagnetic compatibility

This controller conforms with the essential protection requirements of the EMC Directive 89/336/EEC, by the application of appropriate product specific international standards. This instrument satisfies the general requirements of the commercial and industrial environments defined in EN 61326. For more information on product compliance refer to the Technical Construction File

Unpacking and storage

The packaging should contain an instrument mounted in its sleeve, two mounting brackets for panel installation and an Installation & Operating guide. Certain ranges are supplied with an input adapter.

If on receipt, the packaging or the instrument are damaged, do not install the product but contact your supplier. If the instrument is to be stored before use, protect from humidity and dust in an ambient temperature range of -20° C to $+70^{\circ}$ C.

SERVICE AND REPAIR

This controller has no user serviceable parts. Contact your nearest Eurotherm agent for repair.

Caution: Charged capacitors

Before removing an instrument from its sleeve, disconnect the supply and wait at least two minutes to allow capacitors to discharge. Failure to observe this precaution will expose capacitors that may be charged with hazardous voltages. In any case, avoid touching the exposed electronics of an instrument when withdrawing it from the sleeve.

Electrostatic discharge precautions

When the controller is removed from its sleeve, some of the exposed electronic components are vulnerable to damage by electrostatic discharge from someone handling the controller. To avoid this, before handling the unplugged controller discharge yourself to ground.

Cleaning

Do not use water or water based products to clean labels or they will become illegible. Isopropyl alcohol may be used to clean labels. A mild soap solution may be used to clean other exterior surfaces of the product.

INSTALLATION SAFETY REQUIREMENTS

Safety Symbols

Various symbols are used on the instrument, they have the following meaning:



The functional earth connection is not required for safety purposes but to ground RFI filters.

Personnel

Installation must only be carried out by suitably qualified personnel.

Enclosure of live parts

To prevent hands or metal tools touching parts that may be electrically live, the controller must be installed in an enclosure

Caution: Live sensors

All isolated inputs and outputs have reinforced insulation to provide protection against electric shock. The non-isolated dc, logic and PDSIO outputs are all electrically connected to the main process variable input, (thermocouple etc.). If the temperature sensor is connected directly to an electrical heating element then these non-isolated inputs and outputs will also be live. The controller is designed to operate under these conditions. However you must ensure that this will not damage other equipment connected to these inputs and outputs and that service personnel do not touch connections to these i/o while they are live. With a live sensor, all cables, connectors and switches for connecting the sensor and non-isolated inputs and outputs must be mains rated.

Wiring

It is important to connect the controller in accordance with the wiring data given in this handbook. Take particular care not to connect AC supplies to the low voltage sensor input or DC or logic inputs and output. Only use copper conductors for connections (except thermocouple inputs) and ensure that the wiring installations comply with all local wiring regulations. For example in the UK use the latest version of the IEE wiring regulations, (BS7671). In the USA use NEC Class 1 wiring methods.

Power Isolation

The installation must include a power isolating switch or circuit breaker. This device should be in close proximity to the controller, within easy reach of the operator and marked as the disconnecting device for the instrument.

Earth leakage current

Due to RFI Filtering there is an earth leakage current of less than 0.5mA. This may affect the design of an installation of multiple controllers protected by Residual Current Device, (RCD) or Ground Fault Detector, (GFD) type circuit breakers.

Overcurrent protection

To protect the internal PCB tracking within the controller against excess currents, the AC power supply to the controller and power outputs must be wired through the fuse or circuit breaker specified in the technical specification.

Voltage rating

The maximum continuous voltage applied between any of the following terminals must not exceed 264Vac:

- relay output to logic or dc sensor connections;
- any connection to ground.

The controller should not be wired to a three phase supply with an unearthed star connection. Under fault conditions such a supply could rise above 264Vac with respect to ground and the product would not be safe.

Conductive pollution

Electrically conductive pollution must be excluded from the cabinet in which the controller is mounted. For example, carbon dust is a form of electrically conductive pollution. To secure a suitable atmosphere, fit an air filter to the air intake of the cabinet. Where condensation is likely, for example at low temperatures, include a thermostatically controlled heater in the cabinet.

This product has been designed to conform to BSEN61010 installation category II, pollution degree 2. These are defined as follows:-

Installation Category II

The rated impulse voltage for equipment on nominal 230V supply is 2500V.

Pollution Degree 2

Normally only non conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation shall be expected.

Over-temperature protection

When designing any control system it is essential to consider what will happen if any part of the system should fail. In temperature control applications the primary danger is that the heating will remain constantly on. Apart from spoiling the product, this could damage any process machinery being controlled, or even cause a fire.

Reasons why the heating might remain constantly on include:

- the temperature sensor becoming detached from the process;
- thermocouple wiring becoming short circuit;
- the controller failing with its heating output constantly on;
- an external valve or contactor sticking in the heating condition;
- the controller setpoint set too high.

Where damage or injury is possible, we recommend fitting a separate over-temperature protection unit, with an independent temperature sensor, which will isolate the heating circuit.

Please note that the alarm relays within the controller will not give protection under all failure conditions

Grounding of the temperature sensor shield

In some installations it is common practice to replace the temperature sensor while the controller is still powered up. Under these conditions, as additional protection against electric shock, we recommend that the shield of the temperature sensor is grounded. Do not rely on grounding through the framework of the machine.

INSTALLATION REQUIREMENTS FOR EMC

To ensure compliance with the European EMC directive certain installation precautions are necessary as follows:

- For general guidance refer to Eurotherm EMC Installation Guide, HA025464.
- When using relay or triac outputs it may be necessary to fit a filter suitable for suppressing the emissions. The filter requirements will depend on the type of load. For typical applications we recommend Schaffner FN321 or FN612.
- If the unit is used in table top equipment which is plugged into a standard power socket, then it is likely that compliance to the commercial and light industrial emissions standard is required. In this case to meet the conducted emissions requirement, a suitable mains filter should be installed. We recommend Schaffner types FN321 and FN612.

Routing of wires

To minimise the pick-up of electrical noise, the wiring for low voltage dc and particularly the sensor input should be routed away from high-current power cables. Where it is impractical to do this, use shielded cables with the shield grounded at both ends. In general keep cable lengths to a minimum.

TECHNICAL SPECIFICATION

Main Process Value Input and Second DC Input

Low level range $\pm 100 \text{mV}$

High level range 0 to 10Vdc or 0-20mA with external 2.49Ω current shunt. All

configurable between limits

Sample Rate 9Hz (110mS)

Resolution <2µV for low level range, <0.2mV for high level range, with default

input filter time constant of 1.6 seconds.

Linearity Better than 0.2°C

Calibration accuracy The greater of 0.25% of reading or \pm 1°C or \pm 1LSD

User calibration Low and high offsets can be applied
Input filter Off to 999.9 secs Default 1.6 seconds.
Thermocouple types Refer to the ordering code sensor input table

Cold junction >30 to 1 rejection of ambient temperature changes in automatic mode. Uses INSTANT ACCURACYTM cold junction sensing technology to eliminate warm up drift and to respond quickly to

ambient temperature changes. External references 0, 45, and 50°C

RTD/PT100 input 3-wire, Pt100 DIN43750. Bulb current 0.3mA. Up to 22Ω in each

lead without error

Potentiometer input 100 to 15Kohm

Analogue input Process value, remote setpoint, setpoint trim, external power limit,

functions feedforward input,, valve position feedback

Second process value Select min, select max, derived value, transfer to 2nd PV

input functions

Digital inputs

Isolated except for fixed digital inputs 1 & 2

Contact closure Open circuit voltage: 24 to 30 Vdc inputs Short circuit current: 24 to 29mA

Off state: < 100 ohms input resistance On state: > 28Kohm input resistance

Logic inputs Off state: -3 to 5Vdc @ <-0.4mA (current sinking) On state: 10.8 to 30Vdc @ 2.5mA

Digital input Refer to the ordering code

functions

Digital Outputs

Relay rating Min: 12V, 100mAdc. Max:2A, 264Vac resistive

Single logic output 18Vdc, 20mA. This output is not isolated from the main process

value input

Triple logic output 12Vdc, 8mA per channel (isolated)

Digital o/p functions As per the ordering code

High current output 10Amp, 264Vac resistive. This option is not available on controller

from Jan-04

Triac rating 1A, 30 to 264Vac resistive (isolated)

Analogue outputs

Range Scaleable between 0-20mA and 0-10Vdc (isolated)
Resolution 1 part in 10,000 for analogue retransmission

Analogue output

Refer to ordering code

functions

Transmitter supply

Rating 20mA, 24Vdc

Control functions

Control modes On/Off, PID, or motorised valve control, with or without feedback

potentiometer

Cooling algorithms Linear, water (non-linear), fan (min on time), oil

Tuning One shot (automatic tune of PID and overshoot inhibition

parameters) and continuous adaptive tuning

Number of PID sets Two

Auto/manual control Bumpless transfer or forced manual output available

Setpoint rate limit Display units per second, minutes or hour

Alarms

Number of alarms Four

Alarm types Absolute high or low. Deviation band, deviation high, deviation

low. Rate of change

Alarm modes Latching or non-latching. Blocking. Energised or de-energised in

alarm

Setpoint programming

Number of programs 1, 4 or 20 Segments per 16

program

Event outputs Up to eight

Communications (all modules are isolated)

Profibus High speed, RS485. Up to 1.5Mb/s

Modbus ® RS232,2-wire,RS 485 and 4 wire RS485 modules

Baud rate 1200, 2400, 4800, 9600 and 19,200 baud

PDS

Slave input (isolated) Remote setpoint input with holdback to master

Master output Isolated from main PV. Retransmission of setpoint, process value

or output

General

Display Dual, 4 digit x 7 segment LED. Up to two decimal places

Supply 85 to 264Vac, 48 to 62 Hz, 10 W max OR

24Vdc or ac -15%, +20%. 10W max

Operating ambient 0 to 55°C and 5 to 90% RH non-condensing

Storage temperature $-10 \text{ to } +70^{\circ}\text{C}$

Panel sealing IP65

Dimensions 2408: 48mm wide x 96mm high x 150mm deep

2404: 96mm wide x 96mm high x 150mm deep

Weight 250g

EMC standards EN61326-1 generic standards for industrial environments

Safety standards Meets EN61010, installation category II (voltage transients must not

exceed 2.5kV), pollution degree 2

Atmospheres Not suitable for use above 2000m or in explosive or corrosive

atmospheres. Electrically conductive pollution must be excluded

from the cabinet in which this controller is mounted

Appendix D LOAD CURRENT MONITORING AND DIAGNOSTICS

Current flowing in a system of electrical heating elements (the 'Load') can be displayed on the controller by using a TE10 SSR fitted with intelligent current transformer, PDCTX, or an SSR or contactor with an external PDCTX.

Load current monitoring and diagnostics may be used with any time proportioned output, fitted in module position 1A, and uses the logic output wires which drive the SSR to return signals back to the controller These signals represent the RMS value of the load current during the ON period, or load related alarm conditions. It is not designed for analogue outputs i.e. phase angle control.

It is also designed for single phase operation only.

There are three modes of operation:-

1. Mode 1

Detects if there is a **break in the heater circuit**. This includes heater or SSR open circuit. A single **Load Failure** alarm message is displayed on the lower readout of the controller.

2. Mode 2

Provides the following:-

| Display of true RMS load current On the lower readout of the controller | Displays the true RMS current in the ON state to the load. |
|---|---|
| Low current alarm Analogous to Partial Load Failure (PLF) supplied in some SSRs | Provides advanced warning of failure of one or more heaters in parallel |
| High current alarm Activated when the heater exceeds a set limit | Typically used where element bunching may occur |
| SSR short circuit | This will apply full power to the heaters which could result in an over temperature condition. This alarm provides early warning. |
| Heater failure | Indicates open circuit load conditions |

3. Mode 5

Provides the same features as mode 2 with two additional alarms. This mode is for use with contactors or other devices which do not use the PDS logic output from the controller as the drive signal. For example, a time proportioning logic, relay or triac output to operate a contactor. Mode 5, therefore, requires an additional input to the controller to display the load conditions. It uses the LB digital input terminals for this, as shown in Figure D.2.

| Current Transformer Open Circuit | Alarm is shown if the PDS connection to |
|--|---|
| _ | PDCTX or SSR become disconnected |
| Current Transformer Short Circuit Alarm is shown if the PDS connection | |
| | PDCTX or SSR are short circuited |

EXAMPLE WIRING DIAGRAM (FOR MODE 1 & 2 OPERATION)

Hardware Required

- 1. SSR type TE10/PDS2 OR
- 2. Intelligent current transformer type PD/CTX + contactor or zero voltage switching SSR 2408 or 2404 controller configured for PDS mode 2 option using logic output. This module must be fitted in module position 1. (order code M2).

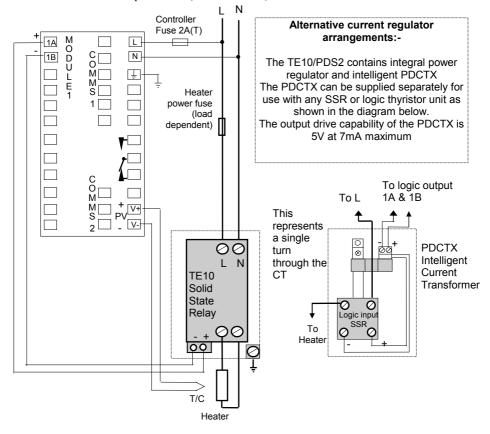


Figure D.1 Connections for Mode 1 & 2


WARNING!

Take care that the controller is correctly wired for the mode of operation which is configured. Failure to do so may be hazardous in some situations.

EXAMPLE WIRING DIAGRAM (FOR MODE 5 OPERATION)

Hardware Required

- 1. Intelligent current transformer type PD/CTX + contactor
- 2408 or 2404 controller configured for PDS mode 5 option using logic, relay or triac output. This module must be fitted in module position 1. Digital input LB (order code M5) must be configured to accept PDCTX input as described in the configuration section of this appendix.

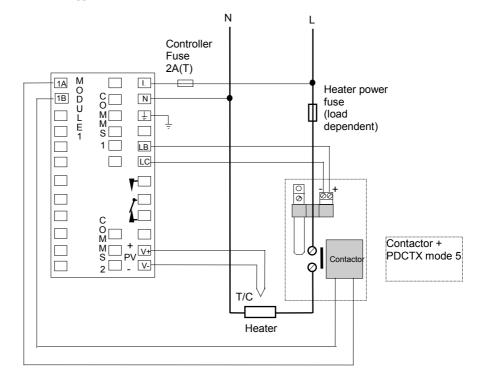

The controller will have the order code M5 in the Logic Input position.

Figure D.2 Example Wiring Connections For Contactor Operation (mode 5)

WARNING!

Take care that the controller is correctly wired for the mode of operation which is configured. Failure to do so may be hazardous in some situations.

OPERATION

To Read Load Current (modes 2 and 5 only)

| Do This | This Is The Display You Should See | | Additional Notes |
|---|------------------------------------|---|--|
| From the 'InFo' list Press until AmP5 is shown in the upper display | AmP5 | Current will be displayed in the lower readout. See also 'Display Modes' below. | It will revert to the HOME display after 45 seconds or 10 seconds if an alarm is present |
| | AmP5 | This display will be shown if: I. The controller is unable to the controller is obtaining. III. The measurement has tire not flowed for 15 seconds. | g a reading med out i.e. current has |

To Display Load Current Continuously in the Lower Readout (modes 2 and 5 only)

| Do This | This Is The Display You Should See | Additional Notes |
|---|------------------------------------|--|
| From the 'HOME' display, Figure 1.4, Press until di 5P is shown in the upper display | d, SP AmPS | Current will be displayed in the lower readout continuously when the controller reverts to the HOME display, see also 'Display Modes' |
| Press or until RmP5 is displayed in the lower display | | below. |

Display Modes

SSR RMS On State Current

This is the default state when high or low current alarms are configured. The load current displayed is the steady state true rms current measured during the ON period.

The minimum on times are:-

Mode 2 0.1 second Mode 5 3 seconds

Meter Mode

Meter mode applies to mode 5 only. If low current alarms are **not** configured the current displayed is a filtered instantaneous RMS value. This behaves like a damped analogue meter. It may be used in applications where the current sensor is not linked to control, for example, telemetry, indication.

How Heater Alarms Are Displayed

| Do This | This Is The Display You Should See | | Additional Notes |
|---|------------------------------------|-----------------------------------|--|
| If an alarm is present it will flash a four character mnemonic in the lower display | Actual Temperature → (PV) | HOME Display OP1 OP2 20.0 ILCr | If more than one alarm is active, the display will alternate between the alarm messages and the default parameter in the lower display |

The Alarm Messages are:-

| Mnemonic | Meaning | Description | | |
|-----------------|--|---|--|--|
| | The following two messages are alarms which are produced as a result of failure within the process. In place of dashes the alarm number will appear i.e. $1, 2, 3$, or 4 | | | |
| -L[r | Alarm numberLow Current Used for partial load failure detection. To avoid nuisantripping due to supply voltage variations set to a value a least 15% below the minimum normal operating current | | | |
| -H[r | Alarm number - High Current | Used for load overcurrent protection. To avoid nuisance tripping due to supply voltage variations set to a value at least 15% above the maximum normal operating current. | | |
| | | Note: This alarm is not intended to provide instantaneous safety protection from short circuit fault conditions | | |
| The following i | message is a diag | nostic alarm which appears for mode 1 operation only. | | |
| LdF | <u>L</u> oa <u>d</u> <u>F</u> ail This includes failure of the heater circuit or the SSR | | | |
| equipment or v | The following four messages are diagnostic alarms produced as a result of failure within the equipment or wiring connections. They appear for modes 2 and 5 operation only. They may be enabled using the diffusion parameter in the AL Lise, see 'SHORT CIRCUIT SSR ALARM' AND HEATER FAIL ALARM' | | | |
| HErF | <u>H</u> ea <u>t</u> e <u>r</u> <u>F</u> ail | No current is being drawn while the controller output demand signal is on | | |
| | | The load is continuously on while the controller output demand signal is off | | |
| CE.DP | <u>C</u> urrent | Indicates that the PDS input is open circuit. | | |
| | <u>Transformer</u> <u>Open Circuit</u> | Mode 5 only | | |
| [E.Sh | <u>C</u> urrent <u>T</u> ransformer <u>S</u> hort <u>C</u> ircuit | Indicates that the PDS input is short circuit Mode 5 only | | |

TO SET THE ALARM TRIP LEVELS

| Do This | This Is The Display You Should See | Additional Notes |
|---|---|--|
| From the HOME display press until the HL L, 5L is displayed | AL L, St | To select the Alarm List header |
| Press button until the desired alarm number is displayed Press or to adjust the alarm trip level | 1 2 3 or 4 indicates the alarm number; indicates the alarm type:- e.g. LLr or HLr | To select the diagnostic alarm parameter found under the Alarm List header The alarm trip level is set to 123 |

SHORT CIRCUIT SSR ALARM AND HEATER FAIL ALARM

These alarms exist as **Diagnostic Alarms** in the controller. To make the alarm active it is only necessary to turn on the diagnostic alarm feature in the Alarm List in the Operator Level

| Do This | This Is The Display You Should See | Reason |
|--|------------------------------------|---|
| From the HOME display press button until the FLL 15 is displayed | AL L, SE | This opens the list which contains the d. HL mnemonic |
| Press until | | This activates the di RL mnemonic to allow Diagnostic Alarms to be |
| Press or to select YE5 | YES | displayed in the lower readout of the HOME display |

RELAY OUTPUTS

The fixed relay output connected to terminals AA to AC in a 1/8 or 1/4 DIN controller is normally used for alarm purposes. In addition, any plug in module can be used for alarms provided they are not already being used for another purpose , such as control. Any one or more alarms can be attached to an output, which will operate when an alarm occurs. Contacts are rated at 2A 264Vac for operating external beacons or audible devices.

TO CONFIGURE PDS LOAD CURRENT DIAGNOSTICS

Configuration of PDS load current diagnostics is in four parts:-

- 1. Configure the Logic Module for PDS Mode 1 or 2 operation. If the control device is a contactor or standard SSR, configure the LA digital input for mode 5 operation.
- 2. Configure the Low and High Current trip alarms.
- 3. Attach the alarms to operate an output relay.
- 4. Set up the Scaling Factor.

First enter Configuration Level. See Chapter 5

TO CONFIGURE THE LOGIC MODULE FOR PDS MODES 1 OR 2

| Do This | This Is The Display You Should See | Additional Notes |
|--|------------------------------------|--|
| Press until the IA ConF is displayed | IA ConF | This opens the configuration list associated with module position 1A |
| Press to show | r d Lou | This shows the identity of the module The module identity is <u>log</u> ic output |
| Press to show Func Press or to show 55r 1 or 55r 2 as required. | Func 55r I | This shows the function of module The module function is set to PDS mode 1 |
| Press to show URLL Press or to show DD | UALL | This is the lower PID demand level To set the minimum PID signal to 0% |

| Press to show URL H) Press or to show IDDD | UAL H 100.0 | This is the upper PID demand level To set the maximum PID signal to 100% |
|---|---|---|
| Press to show DUE.L Press or to show DU | Warning! If DUEL is set to any figure other than 0 the minimum output power will be limited to this level. You must ensure that this does not present an unsafe condition for the process | This is the minimum output power To set the min |
| Press to show DUL H Press or to show IDDD | OUL H | output power to 0 This is the maximum output power To set the max output power to 100 |
| Press to show Press or to show to show nor | SEn5 nor | This sets the output signal to normal for heating control |

TO CONFIGURE LOGIC INPUT B FOR PDS (MODE 5 ONLY)

| Do This | This Is The Display You Should See | Additional Notes |
|---|------------------------------------|--|
| Press button until the Lb ConF is displayed | Lb ConF | |
| Press 👉 to show | ر ط | This identifies the LA input as logic and is read only |
| Press to show Func Press or voto select RmP5 | Func 8mP5 | To configure the input for the PDCTX. |

The system is designed to operate in either mode 2 or mode 5 configuration only. Selecting both simultaneously will disable the output. However, mode 1 and mode 5 can be used together.

TO CONFIGURE LOW AND HIGH CURRENT TRIP ALARMS

Alarm 1 will be configured as Load Current Low (Lcr) Alarm 2 will be configured as Load Current High (Hcr)


| Do This | This Is The Di | splay You Should See | Additional Notes |
|---|----------------|---|---|
| Press button until the AL ConF is displayed | AL Conf | | This opens the configuration list which contains the Alarms |
| Press to show AL I (alarm 1) Press or to show L[r | AL 1 LEr | After 0.5 sec the display will blink to show the alarm type has been accepted | To select alarm 1 To make alarm 1 = Low Current |
| Press until AL2 (alarm 2) appears Press or to show HLr | AL 2 HCr | After 0.5 sec the display will blink to show the alarm type has been accepted | To select alarm 2. To make alarm 2 = High Current |

Note:- The above alarms are known as SOFT ALARMS because they are indication only.

TO ATTACH SOFT ALARMS TO A RELAY OUTPUT

Any one alarm indicated above may be attached to an output (normally a relay). Alternatively any combination of alarms may be attached to operate a relay using the procedure below:-

| Do This | This Is The Display You Should See | Additional Notes |
|--|--|--|
| Press "PAGE" key as many times as necessary to AA EanF | AA Conf | To select the output which you want to operate when the alarm condition occurs. You may also choose 1A, 1B, 1C, 2A, 2B, 2C, 3A, 3B, 3C or 4A depending upon the controller and the number and type of modules fitted |
| Press until I is displayed Press or to select YE5 or | I denotes alarm 1 followed by three letters which denote the alarm type e.g. LLr | JE5 means that the selected output will activate when an alarm occurs in normal operation means the output will not |
| Repeat the above step for every alarm to be attached to the output | | activate |



THE SCALING FACTOR

The value of the current displayed on the controller is scaled using the scaling factor. This is found in the rafe list. It is set, by default, to 100 and assumes a single turn through the current transformer. If two turns are made through the current transformer it will be necessary to adjust the scaling factor to 50 to obtain the same reading.

Under normal conditions you should not need to change the scaling factor.

If, however, you wish to change the sensitivity of the current reading, for example, to read very low currents you may need to change the number of turns through the PDCTX and/or adjust the scaling factor to compensate. See also note 1 below.

TO ADJUST THE SCALING FACTOR

| Do This | This Is The Display You Should See | Additional Notes |
|--|------------------------------------|------------------|
| Press button until , n5t CanF is displayed | r n5L ConF | |
| Press until | LEH | |
| Press or voto change the scaling factor | 100 | |

Note 1:-

Minimum Resolvable Current

TE10 4A RMS. It is not possible to read currents lower than 4A when using a TE10.

PDCTX 4A RMS for a single turn through the PDCTX

Should you wish to read currents lower than 4A using a PDCTX it is necessary to increase the number of turns through the PDCTX and adjust the scaling factor to compensate.

For example: To read 1.0A wind 4 turns through the PDCTX and adjust the scaling factor to 25 as shown in the table below.

| Scalar = 100/N Where N = Turns through PDCTX | | | | | |
|--|-----------------|----|----|--|--|
| N | Scalar N Scalar | | | | |
| 1 | 100 | 5 | 20 | | |
| 2 | 50 | 10 | 10 | | |
| 4 | 25 | | | | |

Maximum Resolvable Current

TE10 Determined by the maximum range of the SSR

PDCTX 100A (or 100 ampere turns)

Finally Exit configuration level. See Chapter 5.

Appendix E: Profibus Communications

Introduction

The 2408f and 2404f are special versions of the 2408 and 2404 controllers designed for Profibus-DP communications. The 'standard' 2408 or 2404 controllers cannot be upgraded to a 2408f or 2404f as the latter uses a different version of the microprocessor board.

Profibus-DP is available with either the 85 to 264Vac or 20-29Vac/dc supply

Apart from the restrictions listed below, the operation, functions and wiring of the 2404*f* and 2404*f* are identical to that of the standard 2408 and 2404 controllers.

- Modbus communications may be configured to replace Profibus-DP if required.
- This must be installed in module slot H.
- EI Bisynch protocol is not supported, therefore the IPSG instrument programming system cannot be used.
- The 20 programmer option is not available.
- The PDSIO input and output modules can only be installed in module slot J.

About Profibus-DP

Profibus-DP is an industry standard, open network used to connect simple devices in a machine or manufacturing plant. It is most often used to allow a central Programmable Logic Controller or PC based control system to use external 'slave' devices for I/O or specialised functions. One advantage is that these devices may be distributed around a machine, saving on the cost of point to point wiring. The 'open' nature of the network permits equipment from different manufacturers to be mixed easily so that best of breed equipment may be used. Additionally, the off-loading of specialised tasks such as PID temperature control lessens the processing load on the central PLC so that its other functions may be carried out more efficiently.

Profibus-DP is described in DIN 19245 Part 3, and is part of EN 50170.

The Profibus-DP network uses a high speed version of the RS485 standard, permitting baud rates of up to 12Mbaud. The 2408f and the 2404f support rates of up to 1.5 MBaud in order to meet electrical isolation standards. A table of network speed against line length is given in the section on wiring below.

Up to 32 Profibus stations (nodes) may be wired to a single network segment. Use of RS485 repeaters allows a total of up to 127 stations.

Other variants of Profibus that exist are Profibus FMS, which is designed to allow higher level communication such as that between PLCs and SCADA systems, and Profibus PA, which has an optional low speed, intrinsically safe, physical medium and is designed for use in the Process Industry. The 2408f and 2404f controllers can be used on a combined DP and FMS network, sharing the same physical medium, but may only be used for PA when the intrinsically safe physical medium is not used.

Profibus-DP is a multimaster, master-slave, token passing network. The 2408f and the 2404f operate as intelligent slave units. More detailed information, including a detailed guide to products available, may be obtained from the various world wide Profibus user organisations. You will find contact information in trade magazines or by reference to http://www.profibus.com on the World Wide Web.

Technical Specification

Physical Medium 2-wire RS485

Network topology Linear bus with active termination of the bus at both ends

Stub lines permitted if < 6.6m in length


Protocol Profibus-DP, intelligent slave

Baud rate Up to 1.5Mb/s

Number of stations 32 per network segment. Up to 127 with repeaters

Electrical Connections

The diagram below is also shown in Chapter 1.

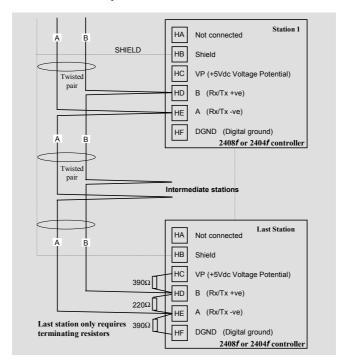

Cable Specifications

Either of the two cable types detailed below can be used. Please note that the cable types A and B, specified below, are NOT related to the wire numbers A and B in the above wiring diagram. Type A is recommended as it allows higher speed and longer cable length.

| | Type A cable | Type B cable |
|---------------------------|--|--|
| Characteristic Impedance: | 135 to 165Ω at a frequency of 3 to 20 MHz. | 135 to 165 Ω at a frequency of > 100 kHz |
| Cable capacitance: | < 30 pF per Metre | typ. < 60 pF per Metre |
| Core diameter: | max. 0.34 mm², corresponds to AWG 22 | max. 0.22 mm², corresponds to AWG 24 |
| Cable type: | twisted pair cable. 1x2 or 2x2 or 1x4 lines | twisted pair cable. 1x2 or 2x2 or 1x4 lines |
| Resistance: | < 110 Ohm per km | - |
| Shielding: | Copper shielding braid or shielding braid and shielding foil | Copper shielding braid or shielding braid and shielding foil |

Maximum Line Length per Segment

| Baud rate (kbit/sec) | 9.6 | 19.2 | 93.75 | 187.5 | 500 | 1500 |
|----------------------|-------|-------|-------|-------|------|------|
| Type A cable | 1200m | 1200m | 1200m | 1000m | 400m | 200m |
| Type B cable | 1200m | 1200m | 1200m | 600m | 200m | - |


Belden B3079A meets cable A specifications, but there are other choices. For more information refer to the 'Profibus Product Guide' produced by the Profibus User Group.

Controller Configuration and Node Address

Having connected the controller to the network, it must be configured for Profibus communications and a node address assigned.

Configuration


In the HA list set Func = Prof.

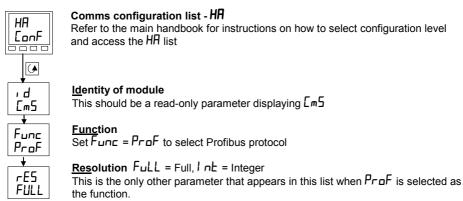

Note: The baud rate is automatically selected by the master.

Assigning a Node Address

Refer to the main handbook for instructions on how to select and change parameters.

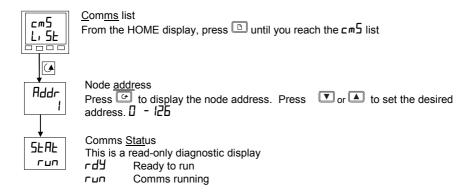

Network configuration

Having wired and configured the controller, the PLC or PC based supervisory package must be configured to set-up the parameters that it will be able to read and write to. This is known as 'network configuration'

The network is configured by importing 'GSD' files into your Master Profibus network configuration software: Refer to the network configuration software documentation for details. 'GSD' is an acronym of a German phrase meaning 'Device Database'.

GSD files for the 2408f and 2404f controllers are created using a Windows based configuration tool. This is separately supplied under ordering code PROF-ENG. A Communications Handbook (part number HA026290ENG), supplied with the configurator, gives all the required information

Two standard GSD files, are supplied on the disc:

EURO2400.GSD standard parameter mapping

EURD2400.GSD standard parameter mapping with 'demand data', which

allows random read/write to any parameter within the


controller.

It is possible to edit the above files or create new files using the Windows configurator. Details are given in the communications handbook.

The Master network configuration software uses the GSD files to produce a further file which is downloaded into your master PLC or PC supervisory package. Once the configuration file has been downloaded, you can set the network running. If all is well, the 'REM' beacon on the controller will start to flash, indicating that the data exchange is proceeding. The 5LFL parameter in the cm5 list will show run. You may then write to Profibus outputs, and read from Profibus inputs as required by your control strategy.

In case of problems, a troubleshooting section is provided on the next page.


Windows configurator

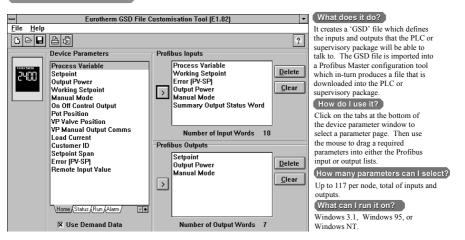

Troubleshooting

No Communications:

- Check the wiring carefully, paying particular attention to the continuity of the A and B connections to the Master. Ensure that the correct terminals have been wired to.
- Access the HA list in configuration level and check that the function (Func) is set to Prof. If not, the controller is not configured for Profibus.
- Check that the Node Address (Addr) in the cm5 list is correct for the network configuration in use.
- Ensure that a Profibus Comms Module is installed in slot H of the 2404/8f. It can be identified by of the legend on the plug-in module casing, and its distinctive shape:



- Ensure that the network is correctly configured and the configuration has been transmitted correctly to the Profibus master.
- Verify the GSD file in use is correct by loading it into the master GSD Configuration tool. This will check the format.
- Verify that the maximum line length for the baud rate in use is not exceeded (see table above). Note that the 2404/8f is restricted to use at a maximum rate of 1.5 Mbaud.
- Ensure that the last device (not necessarily a 2404/8f) in the network segment is correctly terminated (see wiring diagram).
- Ensure that no devices other than those at the end of a segment have termination networks fitted
- If possible, replace faulty device with a duplicate and retest.

Intermittent failure to communicate.

Intermittent flickering of status from rdy to run.

Diagnostic status changing but no alarms present in the controller.

- Verify wiring, paying particular attention to screening.
- The I/O data length may be too long. Some Profibus DP Master implementations can accept no more than 32 input and 32 output words per slave device. Verify by reference to documentation of the Master.
- Verify that the maximum line length for the baud rate in use is not exceeded (see cable specifications). Note that the 2404/8f is restricted to use at a maximum rate of 1.5 Mbaud
- Ensure that the last device (not necessarily a 2404/8) in the network segment is correctly terminated (see wiring diagram).
- Ensure that no devices other than those at the end of a segment have termination networks fitted.
- Verify operation with a duplicate device if possible.

Appendix F RoHS

Restriction of Hazardous Substances (RoHS)

Product group

2400

Table listing restricted substances

Chinese

限制使用材料一览表

| | | | 批削医用1 | 列科 见我 | | | | |
|---------|---|-----------|--------|-----------------|-------------|----------|--|--|
| 产品 | | 有毒有害物质或元素 | | | | | | |
| 2400 | 铅 | 汞 | 镉 | 六价铬 | 多溴联苯 | 多溴二苯醚 | | |
| 印刷线路板组件 | X | 0 | 0 | 0 | 0 | 0 | | |
| 附属物 | 0 | 0 | 0 | 0 | 0 | 0 | | |
| 显示器 | X | 0 | 0 | 0 | 0 | 0 | | |
| 模块 | X | 0 | X | 0 | 0 | 0 | | |
| 0 | 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006 标准规定的限量要求以下。 | | | | | | | |
| X | 表示该有毒体 | | 在该部件的某 | 某一均质材料中的 |]含量超出SJ/T11 | 363-2006 | | |

English

Restricted Materials Table

| Product | Toxic and hazardous substances and elements | | | | | |
|-----------|--|----|----|--------|-----|------|
| 2400 | Pb | Hg | Cd | Cr(VI) | PBB | PBDE |
| PCBA | X | 0 | 0 | 0 | 0 | 0 |
| Enclosure | 0 | 0 | 0 | 0 | 0 | 0 |
| Display | X | 0 | 0 | 0 | 0 | 0 |
| Modules | X | 0 | X | 0 | 0 | 0 |
| 0 | Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006. | | | | | |
| х | Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006. | | | | | |

Approval

| Name: | Position: | Signature: | Date: |
|-------------------|-----------------|-------------------|-------------|
| Martin Greenhalgh | Quality Manager | Henter Greenholsh | 09/128/2007 |

IA029470U470 (CN23172) Issue 1 Feb 07